



# Audi Navigation System plus (RNS-E)

## Quick reference guide



### Dear Audi Driver,

This quick reference guide can be used to easily find information about operating the Navigation System and the integrated multi-media functions. An example for operating each of the functions is included. The menu structure shows which options are available for each of the functions.

However, this quick reference guide is not meant to replace the Operating Instructions, since there you can find more detailed information and notes about operating the system.

### AUDI AG



### Switching system on and off

#### Switching on and off automatically

The system switches on automatically when the ignition is switched on. The system also switches off automatically when the ignition key is removed.

#### Switching on and off manually

If required, you can switch the system on manually by briefly pressing the rotary pushbutton. To switch the system off manually press and hold the rotary pushbutton. If the system has been switched off manually, it will not switch on again automatically when the ignition is switched on.

#### Volume adjustment

Turn the button to adjust the volume as desired.

 


### Overview of system

The system enables you to quickly and easily operate the electronic features of your vehicle from a central control console. The following functions can be operated on correspondingly equipped vehicles:

- RADIO
- CD/TV (CD, MP3 and TV)
- NAME (Directory)
- TEL (Telephone)
- NAV (Navigation)
- INFO (Traffic information)
- CAR (Hardware and software version information)
- SETUP (System settings)

### Operating the system

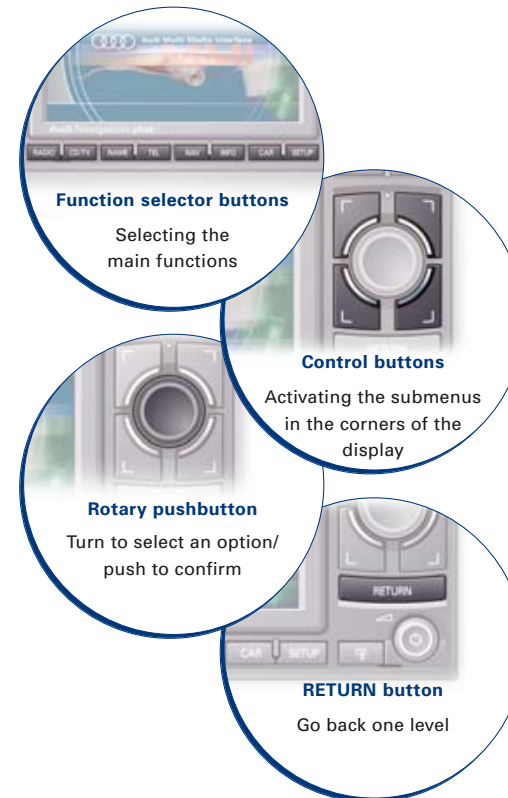

▲ Switching system on and off · Overview of system · Operating the system

## RADIO

Example: How to store a new station.



1. Press the RADIO function selector button.



2. Turn the rotary push-button to mark the desired station. Press the pushbutton to confirm the selection.



3. Press the control button for "Memory".



 
4. Press the rotary push-button.



5. Turn the rotary push-button to select a position for storing. Press the pushbutton to confirm the position.

## RADIO

menu structure

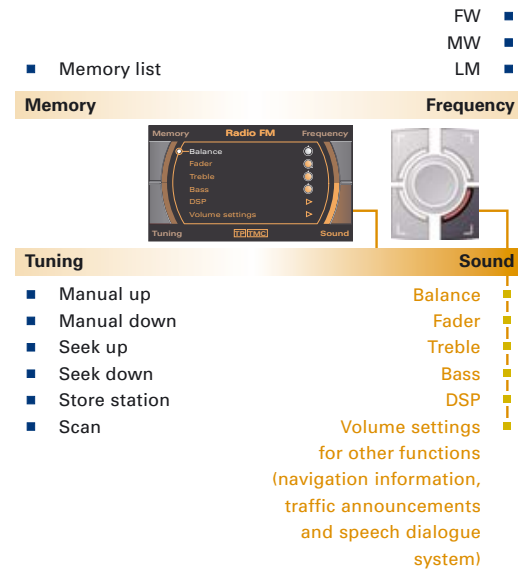

### SETUP Radio - main menu

Press the SETUP button while in the RADIO function.

The following options are available:

- Traffic programme
- Regional stations
- Station reception
- Station display
- Alternative frequency
- PTY filter
- Delete last stations
- Delete stored stations



### Tip:

Press the arrow buttons to switch to the previous/next station.



## CD/TV

Example: How to select an MP3 track.



1. Press the CD/TV function selector button.



2. Press the control button for "Source".



3. Turn the rotary pushbutton to mark MP3. Press the pushbutton to confirm the selection.



4. If applicable, press control button "Drive" to select Card 1 or Card 2.

### Tip:

Press the arrow buttons to select the previous/next track (CD/MP3 mode) or the previous/next channel (TV mode).



## CD/MP3/TV

menu structure

- Teletext page selection

### Teletext (TV)

 
- CD Navigation DVD
- CD Audio
- Memory card 1
- Memory card 2
- CD-ROM
- Unreadable
- Empty

### Drive (MP3)

- Audio-CD
- CD-ROM
- Unreadable
- Empty

### Changer (CD)

### Source (CD/MP3/TV)

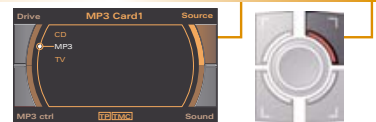

### CD/MP3 control

### Sound (CD/MP3/TV)

- |   |  |
|---|--|
| <ul style="list-style-type: none"> <li>■ Forward</li> <li>■ Rewind</li> <li>■ Next</li> <li>■ Previous</li> <li>■ Shuffle</li> <li>■ Scan</li> <li>■ Name (Details)<sup>1)</sup></li> </ul> | <ul style="list-style-type: none"> <li>■ Balance</li> <li>■ Fader</li> <li>■ Treble</li> <li>■ Bass</li> <li>■ DSP</li> <li>■ Volume settings</li> </ul> |
|---|--|

### TV control

- Manual up
  - Manual down
  - Search up
  - Search down
- (navigation information, traffic announcements and speech dialogue system)

### SETUP CD/MP3/TV - main menu

Press the SETUP button while in the CD/MP3/TV function. The following options are available:

### CD system

- Repeat CD

### MP3 function

- Repeat
- With subdirectories
- Track display
- Genre display

### TV

- Screen
- Videosource
- TV Norm
- AV Norm
- Teletext settings
- Default settings



<sup>1)</sup> MP3 function.

## NAME (Directory)

Example: How to add a new entry to the directory.



1. Press the NAME function selector button.



2. Turn the rotary pushbutton to mark the option "New entry". Press the pushbutton to confirm the selection.



3. Press the rotary pushbutton.



4. Turn and press the rotary pushbutton to select and confirm the characters.



5. Turn the pushbutton to OK and press to confirm the entry.  
6. All other fields can be filled out as described.

*Note:* You must first enter a surname for the new entry in the directory. The entries are stored automatically. If an entry in the directory is stored with an address, you can load the address into the navigation by following the path **Navigation→Memory→Load from directory**.

▲ CD/MP3/TV ▼ NAME - TEL - Speech control system1

## TEL (Telephone)



Which telephone functions are available depends on the equipment installed in your vehicle. A corresponding message will appear in the display when you press the TEL function selector button.

## Speech control system

The speech control function makes it easier to use the telephone while you are driving.

- Press the talk button ①.
- After the **beep**, give e.g. one of the commands listed in the table below. Please refer to your Owner's Manual for a complete list of possible commands.



Multi-function steering wheel

## Volume adjustment

You can adjust the telephone volume by turning the thumbwheel ② on the multi-function steering wheel.

| Commands            | Function  |
|---------------------|---|
| <Help>              | System announces and displays the commands which are currently available. |
| <Enter PIN>         | You can enter the PIN code for the SIM card.                              |
| <Dial number>       | Specify the number you want to dial in a clear voice.                     |
| <Select name>       | The number for an entry stored in the phone book will be dialled.         |
| <Redial>            | The last telephone number will be dialled again.                          |
| <Store name>        | Specify a name and telephone number for a new entry.                      |
| <Delete name>       | You can delete an entry from the speech control phone book.               |
| <Play phone book>   | All entries stored in the speech control phone book will be read out.     |
| <Delete phone book> | You can delete the entire speech control phone book.                      |

*Note:* If your vehicle is equipped with the speech dialogue system please refer to the Operating Instructions for further information.

## Multi-function steering wheel

The multi-function steering wheel enables fast and simple control of selected functions of the system.



| Button/Thumbwheel | Operation                   | Function   |
|-------------------|-----------------------------|--|
| 1                 | Press thumbwheel once/twice | To start/stop station search, forwards   |
| 1                 | Press thumbwheel            | To make, answer or end a call  |
| 1                 | Press and hold thumbwheel   | Fast forward (CD or MP3); to reject an incoming call   |
| 1                 | Scroll down with thumbwheel | To select next station/track of current audio/video source; to scroll down in the phone book   |
| 1                 | Scroll up with thumbwheel   | To select previous station/track of current audio/video source; to scroll up in the phone book |
| 2                 | Press button                | To switch from audio/video mode to telephone mode  |
| 3                 | Press button                | Activating and deactivating the speech control system/speech dialogue system                   |
| 4                 | Scroll up with thumbwheel   | To increase volume   |
| 4                 | Scroll down with thumbwheel | To reduce volume   |
| 4                 | Press thumbwheel            | To repeat last voice guidance cue  |

▼ Multi-function steering wheel

Audi Navigationssystem plus (RNS-E) englisch 5.07

281.562.730.20

## Loading media

There is a DVD drive and two MP3 media slots located behind the display. Press button 1 to open and close the display.



### Loading the navigation DVD

Insert the navigation DVD into the slot 2 as illustrated with the lettering facing upwards. It will be drawn into the slot automatically. You can also play audio CDs and MP3 CDs using the DVD drive.

### Ejecting the navigation DVD

Press button 4 with the display opened.



### Inserting an MP3 memory card

Insert the memory card into one of the slots 3 until it engages. The side with the lettering must face upwards and the missing corner must be at the front.

### Removing an MP3 memory card

To release the memory card, briefly press the card and then remove it from the slot.

▼ Loading media · Map display · NAV · INFO · SETUP · System reset

© 2007 AUDI AG

AUDI AG reserves the right to alter any part of the vehicle, its equipment and technical specifications. No legal commitment can be implied by the information, illustrations or descriptions in this publication. No part of this publication may be reprinted, reproduced or translated without the written permission of AUDI AG. All rights under the laws of copyright are expressly reserved by AUDI AG. Subject to alteration and amendment. Printed in Germany. Concept and layout: Pfriemer GmbH.

## Map display

Up to three alternative routes will be offered when you are using the **route without stopover** mode.



Turn the rotary pushbutton to mark the desired route. Press the pushbutton to confirm the selection.

 
When using the **route with stopover** mode the system will display an overview of the route showing the destination and up to 3 stopovers.



Press the rotary pushbutton to confirm the route suggestion.

| Symbol          | Information  |
|-----------------|--|
|                 | Start position   |
|                 | Destination and stopover location  |
| 103 km          | Route with motorway section (incl. distance)                             |
| 43 km           | Route with toll road (incl. distance)                                    |
|                 | Route with ferry connection  |
|                 | Route with car train   |
|                 | Season-restricted road section   |
|                 | Time-restricted road section   |
| 394 km<br>06:36 | Distance to destination and estimated arrival time (updated continually) |
|                 | Map orientation  |
| 50km            | Map scale  |

You can select and activate/deactivate various settings for the map depiction.

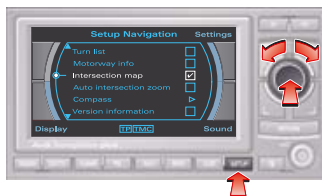

**Changing the map depiction:**  
Press the **SETUP** button. Turn the rotary pushbutton and mark the desired option. Press the pushbutton to confirm the selection.

## NAV (Navigation)

**Example: How to enter a destination and start the route guidance.**




1. Press the NAV function selector button.
2. Turn the rotary pushbutton to mark the option "Town/ZIP". Press the pushbutton to confirm the selection.



3. Turn and press the rotary pushbutton to select and confirm the characters.
4. When OK appears in the display, press the rotary pushbutton to confirm the entry.
5. You can turn/press the rotary pushbutton to select and confirm a town displayed in the list.



6. Turn the rotary pushbutton to mark the option "Street". Press the pushbutton to confirm the selection. Repeat the procedure as described above.

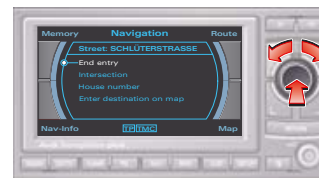

7. Turn the rotary pushbutton to mark the option "Centre (end entry)". Press the pushbutton to confirm the selection.



8. Turn the rotary pushbutton to mark the option "Start route guidance". Press the pushbutton to confirm the selection.


## NAV (Navigation)
 
### menu structure

- Last destinations
- Top categories
- Load from directory
- Store in directory
- Load route
- Store route
- Delete route

Route with/without stopover  
Route list  
Route criteria  
Avoid route from here

### Memory Route

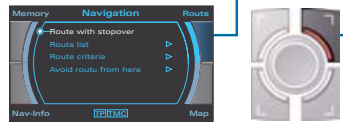

### Nav-Info

- Position data (incl. street and/or town)
- Longitude/latitude coordinates of current position
- Satellites received
- Destination and stopover data
- Estimated time of arrival
- Distance

Zoom  
Map legend menu

### Map

### SETUP Navigation - main menu

Press the SETUP button while in the navigation function.

The following options are available:

- Map colours (day/night)
- Orientation
- Map type
- Voice guidance (navigation directions)
- Map contents
- Delete last destinations
- Turn list
- Motorway info
- Intersection map
- Automatic intersection zoom
- Compass
- Version information
- Demo mode
- Set position/direction



## INFO (Traffic information)

 
Example: How to call up TMC traffic reports.




1. Press the INFO function selector button.



2. Displaying detailed information for traffic report: Turn the rotary pushbutton to mark the desired traffic report. Press the pushbutton to confirm the selection.

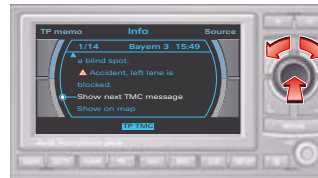

 3. Displaying additional traffic reports: Turn the rotary pushbutton to mark the option "Show next TMC message". Press the pushbutton to confirm the selection.

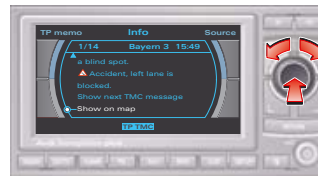


4. Displaying on map: Turn the rotary pushbutton to mark the option "Show on map". Press the pushbutton to confirm the selection.

## INFO (Traffic information)
 
### menu structure

- List of recorded traffic reports

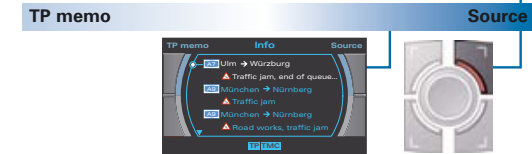

### SETUP Info - main menu

Press the SETUP button while in the INFO function.

The following options are available:

- TP memo timer
- TMC announcement



 
## SETUP (System settings)

### Example: How to set a different menu language.

You can only change this setting when the vehicle is stationary.



1. Press the **SETUP** function selector button while in any of the main functions.

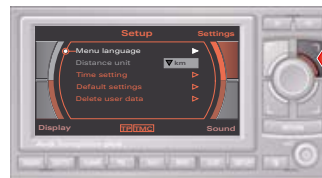

2. Press the control button for "Settings".



3. Press the rotary pushbutton.




4. Turn the rotary pushbutton to mark the desired language. Press the pushbutton to confirm the selection.

## SETUP (System settings)
 
### menu structure

- Menu language
- Distance unit (can be selected when language is set to English)
- Time setting
- Default settings
- Speech dialogue system
- Delete user data

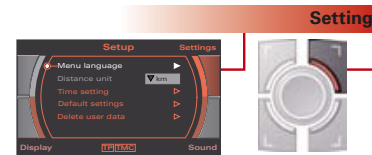

### Display

- Switch off display
- Brightness

### Sound

- Balance
- Fader
- Treble
- Bass
- DSP
- Volume settings for other functions (navigation information, traffic announcements and speech dialogue system)

## System reset

Should the navigation system no longer respond to the controls, you must carry out a system reset (reboot).

Switch off the navigation system using the ON/OFF button. Then press and hold the ON/OFF button until the start screen disappears again in the display. After a few seconds the system will reboot itself.

Once this process is completed the navigation system will be ready for use again.





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>