



# **INSTRUCTION MANUAL**

Download from Www.Somanuals.com. All Manuals Search And Download.

### **INSIDE THIS INSTRUCTION MANUAL**

Important Safety Instructions / Specifications	2
Set-up Information	3
Panel Specifications	.4
Controls and Connections	5-7
Contact Information	.8
Contact Information	8

### IMPORTANT SAFETY INFORMATION

- 1. Read these instructions.
- 2. Follow all instructions.
- 3. Keep these instructions.
- 4. Heed all warnings.
- 5. Do not use the SP-18 near water.
- 6. Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, stoves, or other devices that may produce heat.
- 9. Do not defeat the safety purpose of the polarization or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched, particularly at the plug and the point where it exits the SP-18 amplifier.
- 11. Only use attachments / accessories specified by B-52 Pro-Audio.
- 12. Use only with a cart, stand, bracket or table specified by B-52 Pro-Audio or sold with the SP-18. When a cart is used, use caution when moving the cart / SP-18 combination to avoid injury from-tip over.
- 13. Unplug the SP-18 during lightning storms or when un-used for long periods of time.
- 14. Refer all servicing to qualified personnel. Servicing is required when the SP-18 has been damaged in any way such as when power-cord or plug is damaged, liquid has been spilled, or objects have fallen into the SP-18 cabinet, the SP-18 has been exposed to moisture or rain, does not operate normally, or has been dropped.
- 15. To reduce the risk of fire or electric shock, do not expose the SP-18 to rain or moisture.

### HEED ALL WARNINGS



**WARNING:** To reduce the risk or fire or electrical shock do not expose this equipment to rain or moisture.

### AMPLIFIER SPECIFICATIONS:

- Made In The U.S.A.
- 1200 watt RMS Digital Amplification.
- 800 watts RMS @ 8 Ohms.
- 1200 watts RMS @ 4 Ohms.
- Frequency Range: 30-120Hz (+/- 3db).
- Crossover Frequency: 120 Hz.
- Crossover Slope: 4th Order (24db/octave) LP & HP
- Subsonic Filter: 6th Order (36 db/octave).
- THD: 0.075% @ Rated Power Over Full Bandwidth.
- Nominal Impedance: 8 Ohms
- Sensitivity: 102 dB
- Peak SPL: 132 dB
- Power Consumption @ Idle: Less than 20 watts.
- Power Requirements: 120v<>60Hz<>12a.

### **AMPLIFIER FEATURES:**

- XLR Balanced Inputs.
- XLR Balanced Full-Range Outputs
- XLR Balanced (120 Hz) High-Pass Outputs.
- 0–180 Degree Phase Switch.
- Neutrik Speaker Output.
- Full Thermal & Short Circuit Protection.
- Signal Sensing On/Off Circuitry.

### **CABINET FEATURES:**

- 13-ply, Baltic Birch Construction.
- Black, Scratch Resistant Paint Finish.
- 3" Heavy-Duty Detachable Casters.
- 16 Gauge Perforated Steel Grill.
- Pole-Mount Receptacle.
- Dimensions (W) x (H) x (D): 24" x 24" x 26"
- Weight: 115 lbs

# Setting Up Your SP-18 Subwoofer

The B-52 Pro Audio speakers described in this instruction manual are intended for portable used in which the speakers will be placed directly on the floor, stage or a solid platform. The SP-18 and SP-18S described in this manual should not be suspended or flown. These models are also not intended for fixed installations outdoors or in high-moisture areas. Moisture can damage the subwoofer and can cause corrosion of electrical contacts.

Keep speakers out of extended or intense direct sunlight. The subwoofer spider and surround will prematurely dry out and finished surfaces may fade and be damaged by long-term exposure to intense ultra-violet light.

B-52 Pro-Audio speakers, especially the SP-18, can produce high-levels of energy. When placed on slippery surfaces such as polished wood or smooth tiles, the speaker may move because of its intense bass output. Precautions should be taken to ensure the subwoofer does not fall off a stage or raised surface.

The SP-18 models include a pole-mounting cup to allow mounting of a full-range speaker above the subwoofer. When installing a pole to mount a full-range speaker above the SP-18, be sure to observe the follow precautions:

- Check the pole's specifications to be certain that it is designed to support the weight on the speaker. Observe all safety precautions specified by the stand's/pole's manufacturer.
- Make sure the pole is placed completely within the receptacle cup both on the subwoofer and the full-range speaker.
- Route cables so that performers, production crews and audiences will not trip over them and pull the speaker over.
- Do not attempt to place more than one speaker on a pole designed for a single speaker.
- Do not mount a speaker above the subwoofer in windy conditions.
- B-52 Pro-Audio recommends that you not lift the speaker above the subwoofer alone.

#### Hearing damage, prolonged exposure to excessive SPL

B-52 Pro-Audio speakers, especially the SP-18(S) are capable of producing sound pressure levels (SPL) sufficient to cause permanent hearing damage to performers, production crews or people in the audience. Hearing-protection devices (ear-plugs) are recommended. Caution should be taken to avoid extended exposure to SPL in excess of 90 dBA.

#### Amplifier Module Precautions

Do not attempt to service the SP-18 by yourself. Refer all servicing to a B-52 Pro-Audio Authorized dealer. Service is required when the SP-18 has had liquid spilled on or inside the subwoofer, objects have fallen onto the speaker or it has been damaged in any way, the speaker has been exposed to rain or moisture, does not operate normally or has been dropped.

Keep your SP-18 amplifier away from sources of heat such as a radiator or intense sunlight. Do not cover your SP-18 amplifier with material that may retain heat, such as a blanket or curtain. Be certain that the vents on the panel of the amplifier are clear of all obstructions during operation.


#### WARNING – Shock Hazard:

To reduce the risk of fire or electrical shock, do not expose this unit to rain or moisture. Do not operate your SP-18(S) near a pool or other standing water. Do not bypass or defeat the grounding or polarization means used on the SP-18 amplifier. Make sure all blades on the polarized power plug are fully inserted into the power source. Ensure the power cord is not stretched, pinched or otherwise abused. Ensure the power cord is routed to avoid foot traffic. Your SP-18 amplifier should be cleaned only with a dry cloth.

## **GETTING TO KNOW YOUR SP-18 ACTIVE 18" SUBWOOFER**


### PANEL CONTROLS

- 1) Level Control: Sets the volume of the subwoofer
- 2) Phase Switch: Sets the polarity of the SP-18.
- 3) Power Indicator: The Power indicator lights when the SP-18 amplifier has been turned on and has power.
- 4) Protection: Red LED turns on when distortion is audible in the amplifier output. This indicates that you should turn the amplifier down.
- 5) Right & Left Inputs: These inputs are summed and sent to amplifier's Low Pass filter (120 Hz and below).
- 6) Right & Left Full-Range Outputs: Send stereo full-range signal allowing daisy chaining of additional subwoofers. You do not need to y-cable out of your mixer or audio device to get an additional fullrange signal.
- **7) Right & Left High-Pass Outputs:** Send stereo high-pass signal (120 Hz and above) directly to active, full-range speakers or through a rack mount amplifier to passive speakers.
- 8) External Speaker On/Off Switch: Turns Speakon NL-4 connector (and external subwoofer) on and off. When only using the SP-18, turn this switch off. When an external, non-powered subwoofer (SP-18S) is connected, turn this switch on. NEVER turn switch on or off while amplifier is turned all the way up.
- 9) External Speaker Output: The Speakon NL-4 connector connects the amplifier to an external, non-powered subwoofer (SP-18S). Either pins 1+ and 2+ can be used as the positive connection. Either pins 1or 2- can be used as the Negative Connection. External subwoofer must be 8 Ohms
- **10) ON/OFF Switch:** Turns the SP-18 amplifier on or off. The SP-18 will only turn on when the amplifier detects an audio signal.
- **11) Fuse Holder:** Houses a fast-resetting 12 amp fuse.
- 12) Power Cord Connector: For attachment of the included power cord.

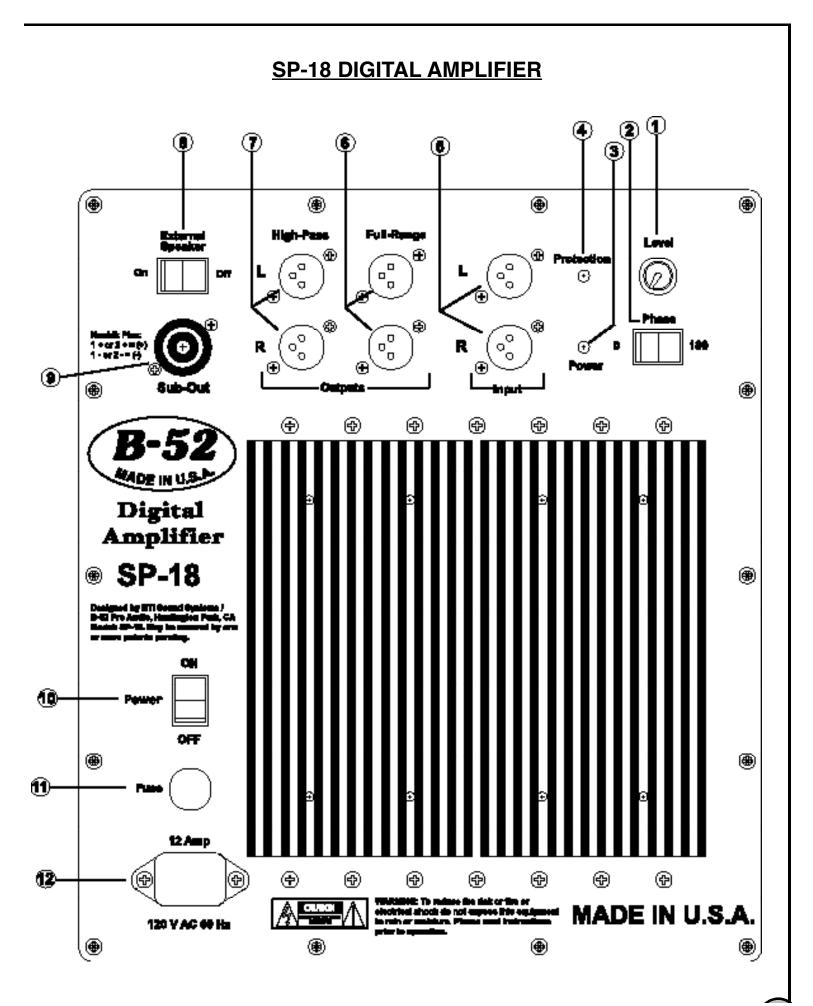


# **Connecting Your SP-18 To Active Full-Range Speakers**

(In addition to the SP-18S - Passive 18" subwoofer)

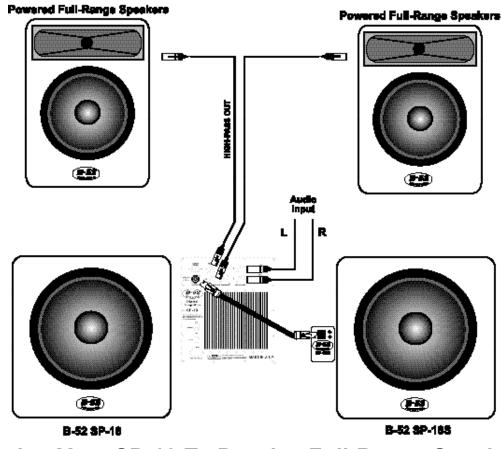

# **Connecting Your SP-18 To Passive Full-Range Speakers**


(As well as the SP-18S - Passive 18" subwoofer)

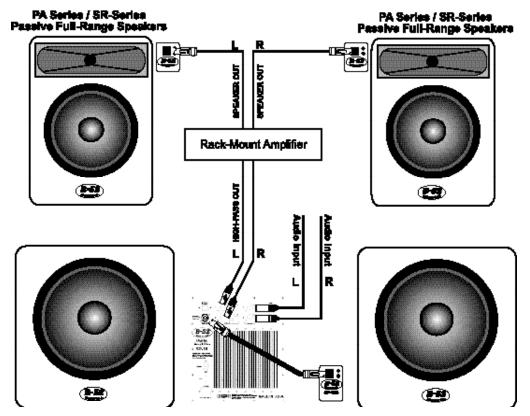

Download from Www.Somanuals.com. All Manuals Search And Download.

### **Daisy-chaining Your SP-18 To Additional SP-18 Subwoofers**

(As well as the SP-18S - Passive 18" subwoofers)

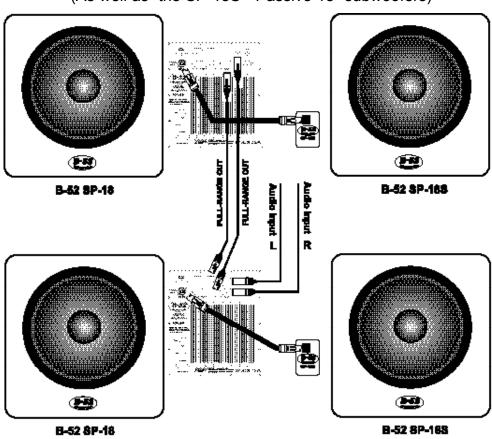

### WARRANTY INFORMATION

Thank you for choosing this B-52 Pro-Audio sound product. B-52 manufactures some of the world's best sounding and most reliable professional speaker systems and components. E.T.I. Sound Systems, Inc., manufacturers of B-52, takes great pride in thoroughly testing each B-52 product prior to shipment. Please read the warranty terms and conditions below and carefully read the provided Limited Warranty Card for additional terms and conditions.

**LOUDSPEAKER & MID-RANGE COMPONENTS:** E.T.I. Sound Systems, Inc. warrants the original purchaser that the B-52 subwoofer will be free from defects in material and workmanship for a period of (5) FIVE YEARS from the original purchase date. A dated sales receipt will establish coverage under this warranty. This warranty will automatically terminate (5) five years after the original sales date. See provided Limited Warranty Card for additional terms and conditions.

**B-52 AMPLIFIER:** E.T.I. Sound Systems, Inc. warrants the original purchaser that the B-52 amplifier will be free from defects in material and workmanship for a period of (2) TWO YEARS from the original purchase date. A dated sales receipt will establish coverage under this warranty. This warranty will automatically terminate (2) two years after the original sales date. If this product is defective in materials or workmanship as warranted above, your sole remedy shall be repair or replacement as provided above. See provided Limited Warranty Card for additional terms and conditions.

**B-52 CABINETS:** E.T.I. Sound Systems, Inc. offers a LIFETIME warranty to the original purchaser that B-52 cabinet's construction will be free from defects in material and workmanship. A dated sales receipt will establish coverage under this warranty. The warranty does not cover service or parts to repair damage caused by neglect, abuse, normal wear & tear and cosmetic appearance of the cabinetry not directly attributed to defects in material or workmanship, or service & repair, modifications to the cabinet which has not be authorized or approved by E.T.I. Sound Systems, Inc. If this product is defective in materials or workmanship as warranted above, your sole remedy shall be repair or replacement as provided above. See provided Limited Warranty card for additional terms and conditions.

**INCIDENTAL OR CONSEQUENTIAL DAMAGE:** In no event E.T.I. Sound Systems, Inc. be liable for any incidental or consequential damages arising out of the use or inability to use of any B-52 product, even if, E.T.I. Sound Systems, Inc. or a B-52 dealer has been advised of the possibility of such damages, or any other claim by any other party. Some States do not allow the exclusion or limitation of consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights that may vary from State to State. See provided Limited Warranty card for additional terms and conditions.


**RETURN PROCEDURES:** In the unlikely event that a defect should occur, follow the procedure outlined below. Defective products must be shipped together with a proof of purchase, freight prepaid and insured to the Authorized B-52 Dealer from whom you purchased the product or directly E.T.I. Sound Systems, Inc. If a product must be returned directly to E.T.I. Sound Systems, Inc. for warranty replacement/repair, a Return Authorization Number (RAN) must be obtained from our Customer Service Department prior to shipping the product. You may obtain RAN by calling 800-344-4ETI.

#### NEVER RETURN THE ENTIRE CABINET - JUST THE DEFECTIVE COMPONENT.

See provided Limited Warranty card for additional terms and conditions.

FOR YOUR PROTECTION: Please complete and mail the Purchase Information Card within (10) ten days of the date of purchase so that we may contact you directly in the event a safety notification is issued in accordance with the 1972 Consumer Product Safety Act. In addition, we ask that you complete the brief questionnaire so me may analyze your answers and in this way, help us evaluate our customer needs. See provided Limited Warranty card for additional terms



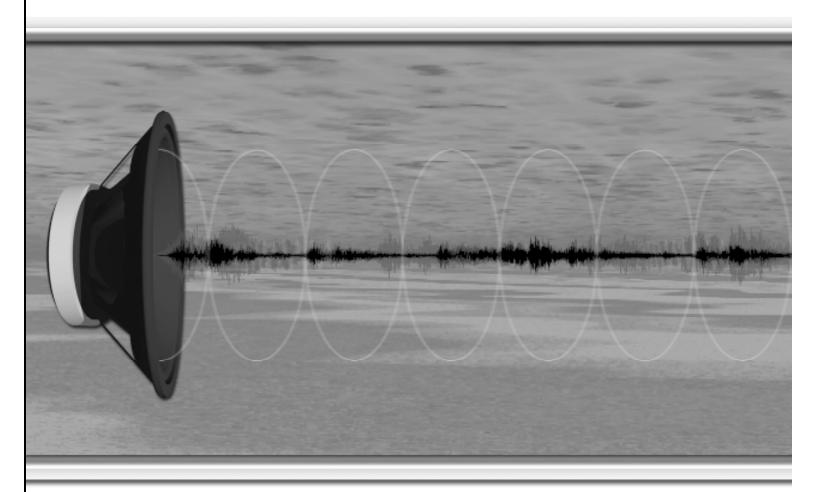

### E.T.I. SOUND SYSTEMS, INC.

3383 Gage Avenue, Huntington Park, CA, 90255 Phone: 323-277-4100 Fax: 323-277-4108 National: 1-800-344-4ETI Internet: www.B-52PRO.com E-mail: info@B-52PRO.com Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com