 


# AUDIOVOX

## AVD300 SLOT-IN DVD Player

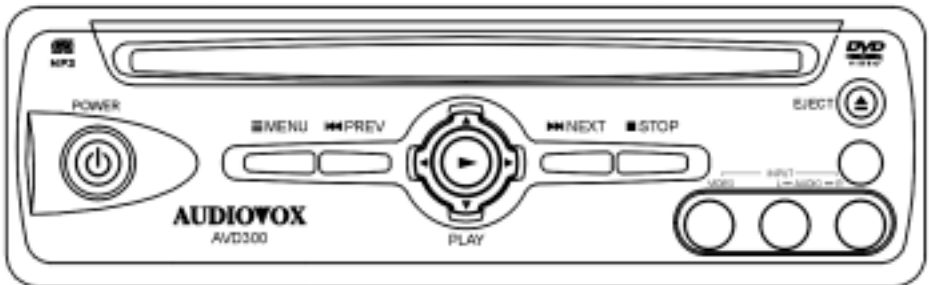

 
## Owner's Manual

## A. Welcome

Thank you for choosing the AVD300 DVD Player. The AVD300 is designed to optimize the enjoyment of your favorite DVDs in the mobile environment. This DVD Player is constructed to provide years of reliable, trouble-free service. Please read this manual thoroughly prior to operating the player and retain it for future reference.

## B. Precautions

### EXPLANATION OF GRAPHIC SYMBOLS

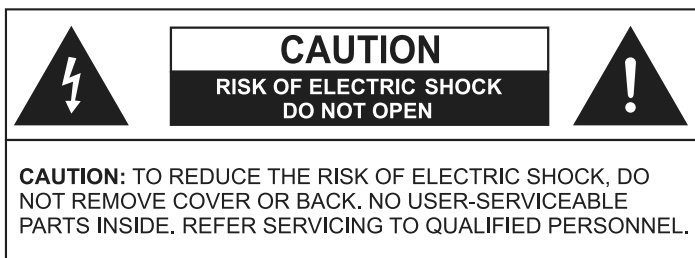

The lighting flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



## WARNING

TO REDUCE THE RICK OF FIRE OR ELECTRIC SHOCK. DO NOT EXPOSE THIS PRODUCTION TO RAIN OR MOISTURE.

## **SAFETY PRECAUTION**

For safety reasons, when changing video media, it is recommended that the vehicle is not in motion, and that you do not allow children to unfasten seat-belts to change video media or make any adjustments to the system. Enjoy your entertainment system but always remember the safety of all passengers remains the number one priority.

## **IMPORTANT NOTICE**

It is unlawful in most jurisdictions for a person to drive a motor vehicle which is equipped with a television viewer or screen that is located in the motor vehicle at any point forward of the back of the driver's seat, or that is visible, directly or indirectly, to the driver while operating the vehicle. In the interest of safety, this system should never be installed where it will be visible, directly or indirectly, by the operator of the motor vehicle.

### ***1. OBJECT AND LIQUID***

Do not push objects of any kind into the system through openings; do not spill or spray liquid of any kind on or in the system (this may result in a fire or electric shock). Do not place anything heavy on the unit. To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material.

### ***2. DISASSEMBLE***

Do not attempt to disassemble the cabinet. There is a risk of electric shock and/or exposure to Laser Radiation. Contact qualified service personnel if your system is in need of repair.

### ***3. CLEANING UNIT***

When cleaning, make sure the system is unplugged from the power source. Do not use any solvents or cleaning materials (liquid, abrasive or aerosol). Clean the DVD player using only a lightly dampened lint free cloth to wipe the unit if it is dirty.

#### **4. DISC**

Do not use irregularly shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction. Do not stick paper, tape or glue on the disc. Do not expose the disc to direct sunlight or heat sources such as hot air ducts. Do not touch the surface of the disc. Handle the disc by its edge. Clean the disc by wiping the disc from the center out with a soft lint free cleaning cloth. Remove the disc from the unit and store it in its case after playing. Some playback operations of discs may be intentionally fixed by software producers. Since this unit plays discs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the discs.

#### **5. Powering the DVD Player**

This system **MUST** be powered from the type of switched (Accessory) power indicated on the marking label (i.e. not directly from the car battery). Power should be applied to the unit when the ignition key is in the Run and/or Accessory positions. Use only the supplied power cable matching this set to avoid electric hazards.

#### **6. Operation**

When the temperature rises dramatically from a very low temperature, moisture may condense inside the AVD300 and cause the DVD player to malfunction. If the AVD300 does not operate properly under these conditions leave the AVD300 turned on for about half an hour until the moisture evaporates.

## C. Contents

1. Main Unit
  2. Remote control with one CR2025 Battery
  3. Power Cable
  4. Two (2) Brackets with four (4) Screws
  5. Owner's Manual
  6. Power Adaptor\* (4-Pin to 2-Pin)  
Cable
  7. DVRCA \* Adaptor for connection to a second monitor
  8. RCA Cables ( Red, Yellow, and White)
- \* For use with 8010730 Accessory Cable

## D. Controls

Main Unit (Refer to Figure 1)

1. Power Button
2. Menu Button
3. Previous Button
4. Play & NAV Up, Down,  
Left, Right Button
5. Next Button
6. Stop Button
7. Video Input Jack
8. Audio L Input Jack
9. Audio R Input Jack
10. Eject Button
11. Remote Control Sensor
12. S-Video Jack
13. Video Output Jack
14. Audio L Output Jack
15. Audio R Output Jack
16. Monitor Port 1
17. Monitor Port 2
18. DC 12V Jack
19. IR Input Jack

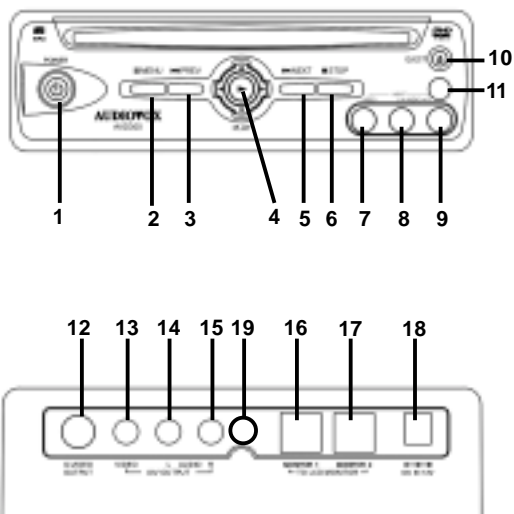 


Figure1

## E. Remote Control View (Refer to Figure 2)

- 1) Power Button
- 2) Display Button
- 3) Angle Button
- 4) Subtitle Button
- 5) Audio Button
- 6) Zoom Button
- 7) Up/Down/Left/Right /  
Enter Buttons
- 8) Menu Button
- 9) Return Button
- 10) A-B Button
- 11) Forward Button
- 12) Reverse Button
- 13) Slow Button
- 14) Stop Button
- 15) Eject Button
- 16) Number Buttons
- 17) Setup Button
- 18) Repeat Button
- 19) Skip- Button (Previous)
- 20) Skip+ Button (Next)
- 21) Play Button
- 22) Pause Button

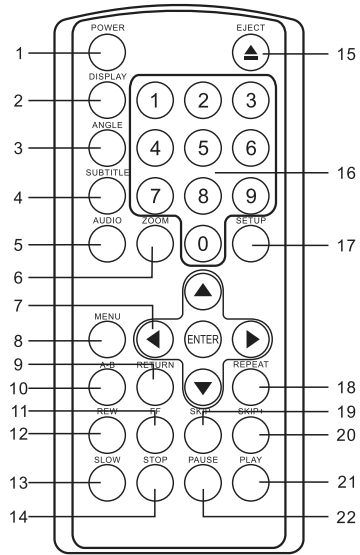 


Figure 2

## F. Connections

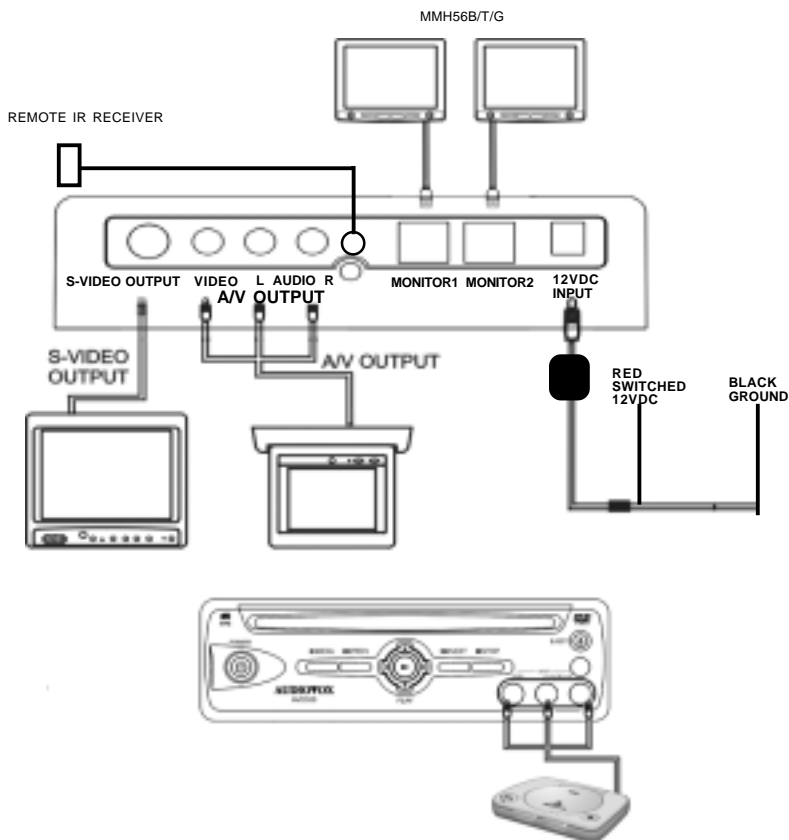 


Figure 3

1. Powering Your DVD Player ( Refer to Figure 3)  
Connect the black wire (-) to the vehicle ground. Connect the red wire (+) to a switched (Accessory) 12VDC source. Plug the other end into the 12VDC input jack on the rear of the unit.
2. Remote IR Receiver ( Refer to Figure 3)  
Plug the 1/8" jack on the remote IR cable into the IR IN jack on the rear of the DVD player. Place the IR receiver anywhere in the vehicle to allow remote control in any location.

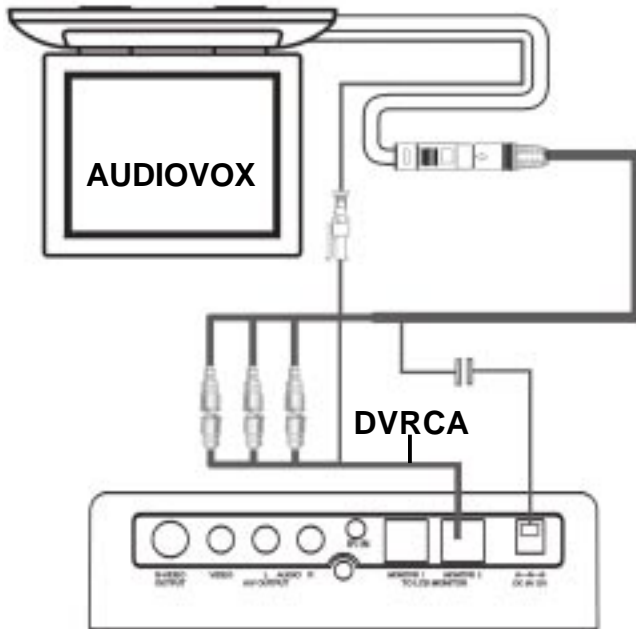 


Figure 4

### 3. Connecting to an Audiovox Overhead Monitor

- a. The AVD300 can be connected to Audiovox Overhead monitors with the supplied adaptors (DVRCA and 4 pin to 2 pin power adapter) when using the Audiovox accessory cable (part number 8010730). Plug in the 3 RCA jacks, white (left audio) to white, red (right audio) to red, and yellow (video) to yellow. Connect the 2 pin IR jacks. Connect the 4 pin to the 2 pin power adapter, 4 pin to the accessory cable and the plug into the AVD300 power jack.

### 4. Connecting to a Monitor

- a. Match the color-coded plugs to the appropriate jacks on the back of the DVD Player A/V OUTPUT jacks: Yellow (video) to Yellow, White (left audio) to White, and Red (right audio) to Red.



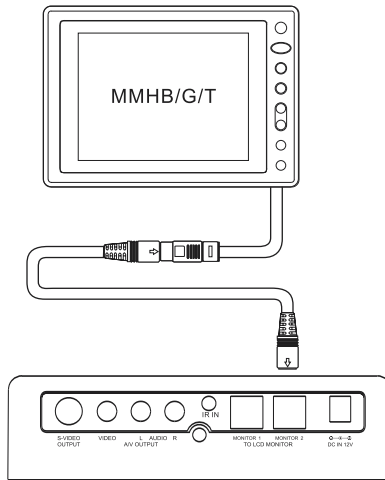 


Figure 5

- b. Connect any of the two monitor ports on the back of the DVD player directly to the Movies To Go headrest hoods Model MMH56 B/T/G. This is plug and play, power, audio, video and IR signals are supplied in one DIN cable.
  - c. If your TV has an S Video input connector, connect the DVD Player using the S-VIDEO connector. This connection will have a better picture. Refer to the owner's manual supplied with the TV to be used.
  - d. Using the supplied adapter (Part Number DVRCA) the monitor port can be connected to any monitor.
5. Connecting an External Source
- a. To connect a video game or another audio/video source, just plug the A/V output jacks of the source into the matching color-coded A/V input jacks on the front of the DVD player. The front inputs take priority over the DVD player.

#### G. Playing a DVD

After connecting power to the unit, press the power button on the main unit momentarily. The power light will increase in brightness. Insert the disc into the slot on the front of the unit, the unit will load the disc and start playing automatically; if there's a disc inside the unit, press the POWER button, the unit will start playing automatically.

## **1. Basic Operation**

POWER	Turn the unit on/off
EJECT	Eject/load the disc
PLAY	Start Playback
SLOW	Play at 1/2, 1/4, or 1/8 times speed
PAUSE	Still Picture
STOP	(1 time) Stop at the present playing point / (2 times) Stop playing
NEXT	Go to the next chapter, track or scene during play back.
PREVIOUS	Go back to the preceding chapter, track or scene during play back.
FORWARD	Scan forward at 2, 4, 6, or 8 times speed
REVERSE	Scan backward at 2, 4, 6, or 8 times speed
UP/DOWN/LEFT	Used for Menu Navigation
RIGHT	Execute item or setting
ENTER	Select item or setting
NUMBERS	Selecting password or other numeric func- tions.
RETURN	Return to the normal display from the screen saver mode.
MENU	Display the root menu of the disc
REPEAT	Repeat playing title, chapter or track
A-B	Repeat a specific portion from point A to point B of the disc.
DISPLAY	Display information (title, chapter, or track, time, etc.)
ANGLE	Change the angles on the scene (Not all DVDs contain this feature)
SUBTITLE	Select the subtitle language and turn it on/off
AUDIO	Select the audio language
ZOOM	Enlarge an image to 1.5, 2, or 4 times the original size.
SETUP	Display the setup menu for selection of vari- ous video and audio functions and exit the setup menu.

 
## 2. MENU

A DVD is divided into sections called titles and chapters. When you play a DVD, a root menu of the disc will appear on the screen of your TV or Monitor. The contents of the menu vary from disc to disc. Press MENU during playing to display the menu, and press ENTER or PLAY to start playing. Some DVDs only allow you to select disc playback options using the DVD menu.

## 3. DISPLAY (Display contents vary from disc to disc.)


### 1) PLAYING TIME AND REMAINING TIME

- a. During playback press 'DISPLAY' to display the current Title Number (1), the total Number of Titles (2), the current Chapter Number (3), the total Number of Chapters (4), and the Playing Time for the title (5). The heading will disappear automatically after 3 seconds if no buttons are pressed.

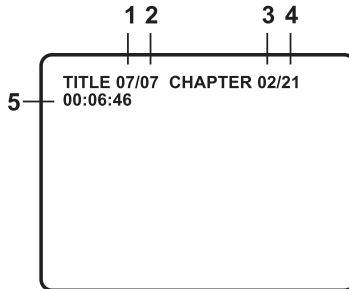


### Title, Chapter Number, and Time Screen Display

 - b. Press 'DISPLAY' again to display the Remaining Time of the title. The heading will disappear automatically in about 3 seconds.

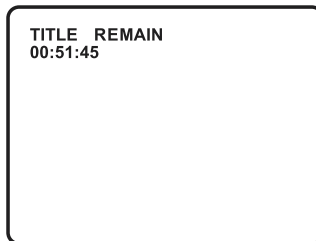


### Title Remaining Time Screen Display

 - c. Press 'DISPLAY' the 3rd time to display the Elapsed Time for the chapter. The heading will disappear automatically in about 3 seconds.

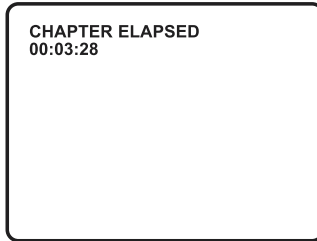

### Chapter Elapsed Time Screen Display

 - d. Press 'DISPLAY' the 4th time to display the Remaining Time for the chapter. The heading will disappear automatically after 3 seconds.

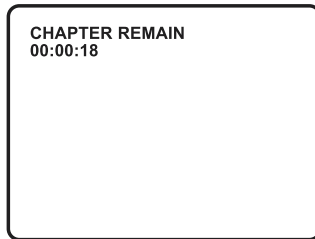


### Chapter Remaining Time Screen Display

- e. Press 'DISPLAY' a 5th time to exit.

## 2) ANGLE

During playback of a disc, press 'ANGLE' to display the available angles for discs containing multi-angles\*, with the current angle number (1) and the total number of angles (2) displaying. Press 'ANGLE' to select another angle, then press again to exit and return to the normal viewing angle. The angle display will disappear automatically if the 'ANGLE' button is not pressed again within 3 seconds.

 
**\*NOTE:** Not all discs contain this feature

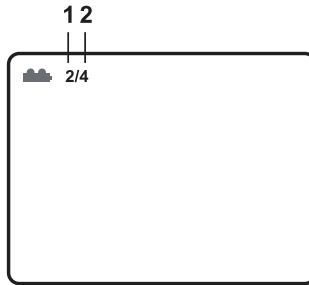

**Angle Screen Display**

### 3) SUBTITLE

 During disc playback press 'SUBTITLE' to select the subtitle language you desire\*, with the current Subtitle Language Number (1) and the total Number of Subtitle Languages (2) displayed. If there are multiple languages press 'SUBTITLE' again to select another subtitle language. To turn subtitles OFF, press the 'SUBTITLE' button until 'SUBTITLE OFF' is displayed. The Subtitle display will disappear automatically if the 'SUBTITLE' button is not pressed again within 3 seconds.

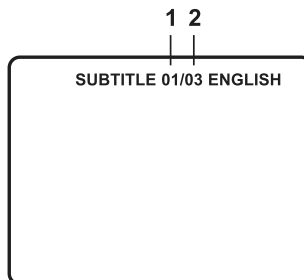


**Subtitle Screen Display**

\*Some DVDs only allow access to this function through the DVD menu.

#### 4) AUDIO

 During playback press 'AUDIO' to select the audio language you desire\*, with the current Audio Channel Number (1) and the total number of Audio Channels (2) displayed. Press AUDIO again to select another audio language. The audio display will disappear automatically if the 'AUDIO' button is not pressed again for 3 seconds.

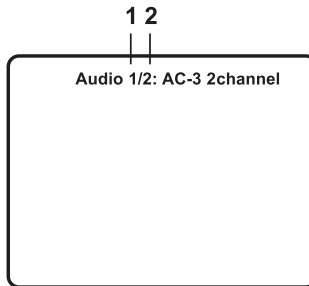


**Audio Language Screen Display**

\*Some DVDs only allow access to this function through the DVD menu.

#### 5) ZOOM

 
During playback press 'ZOOM' to enlarge the picture by 1.5, 2, or 4X with the current zoom multiple (1) displaying. Press 'UP/DOWN/LEFT/RIGHT' to move the picture. Press 'ZOOM' again to select another zoom multiple or until ZOOM OFF is displayed and the picture will return to normal size. The zoom display will disappear automatically if the 'ZOOM' button is not pressed within 3 seconds.

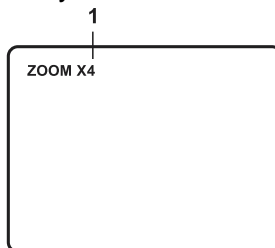

**ZOOM Screen Display**


## 6) A-B REPEAT

 - a. During playback press 'A-B' to set the Starting Point A.

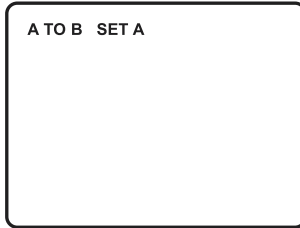


### **A-B Repeat Starting Point Screen Display**

 - b. Press 'A-B' to set the Ending Point B and the player will repeatedly play the part between Point A and Point B.

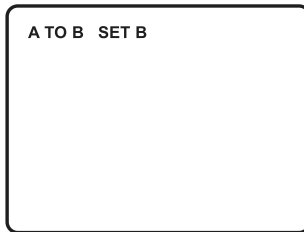

### **A-B Repeat Ending Point Screen Display**

 
- c. Press 'A-B' a 3rd time to Cancel A-B Repeat. Normal playback will resume from Point A.

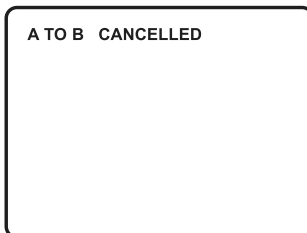

### **A-B Repeat Cancelled Screen Display**


## 7) REPEAT

 - a. During playback press 'REPEAT' once to repeatedly play the current chapter.

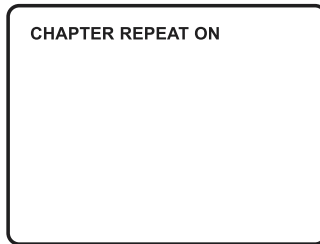


### **Chapter Repeat ON Screen Display**

 - b. During playback press 'REPEAT' again to repeatedly play the current title.

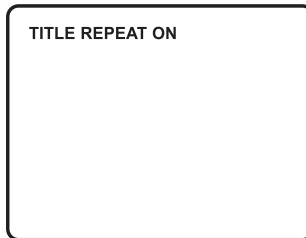

### **Title Repeat ON Screen Display**

 - c. During playback press 'REPEAT' a 3rd time to cancel the repeat playback function and resume normal play back. The repeat display will disappear automatically if the 'REPEAT' button is not pressed again for 3 seconds.

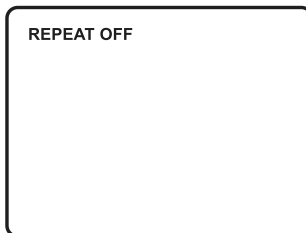


### **Repeat OFF Screen Display**



## 4. PLAYING AUDIO CDS


When playing an audio CD, the DISPLAY Banner appears automatically. It displays the current track and the amount of the time for that track playing, the total amount of time on the disc and the current time running on the disc. Press the DISPLAY button on the remote to display the DISPLAY Banner. The options below show you what happens when you press the DISPLAY button.

 - a. During playback press 'DISPLAY' once and *SINGLE ELAPSED* will appear along with the current track playing and the time of that track.

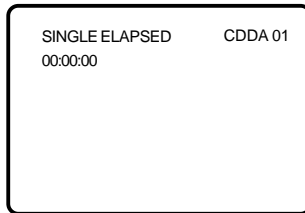


### **SINGLE ELAPSED Screen Display**

 - b. Press 'DISPLAY' 2 twice and *SINGLE REMAIN* appears along with the current track playing the and the amount of time left.

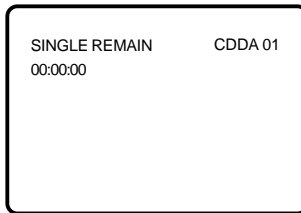


### **SINGLE REMAIN Screen Display**

 - c. Press 'DISPLAY' three times and *TOTAL ELAPSED* appears along with the current track playing and the total time that the CD has been playing.

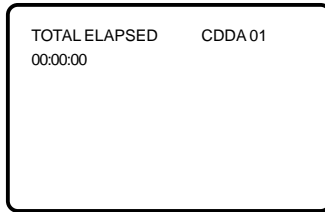

### **TOTAL ELAPSED Screen Display**

 - d. Press 'DISPLAY' four times and *TOTAL REMAIN* appears along with the current track playing and the amount of time remaining on the CD.

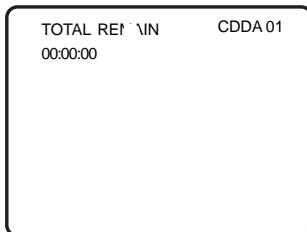

### **TOTAL REMAIN Screen Display**

- e. Press 'DISPLAY' a fifth time and "OFF" will appear momentarily then disappear. The CD time Information will not be displayed.

## **1) USING THE REPEAT FEATURE**

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- *REP-ONE*- repeats the track that is playing.
- *REP-ALL*- repeats the disc that is playing.
- *REPEAT OFF*- resume normal playback.

As you toggle through the options, the repeat option changes. The selected repeat option loops repeatedly until you turn it off.

 
## 5. PLAYING MP3 DISCS

MP3 is a format for storing digital audio. An audio CD-quality song can be compressed into the MP3 format with very little loss of quality, while taking up much less space. CD-R discs that have been encoded in MP3 format can be played on your DVD player.

### SELECTING FOLDERS AND SONGS

When an MP3 disc is inserted in the player, the SMART NAV screen will appear automatically. The SMART NAV screen is used to change folders and songs as well as display Disc TIME and TITLE Information. Songs are played in the order they were saved on to the disc.

1. To begin playback press the PLAY or ENTER button.
2. Once the Disc is loaded press either the UP or DOWN arrow buttons on the Remote Control to navigate through the folder or track list on the right side of the SMART NAV screen.
3. Once the folder you want is highlighted, press 'ENTER' (the folder list shifts to the left side of the screen and the songs in the folder appear on the right). If the disc only contains one folder the song list will remain on the right side.

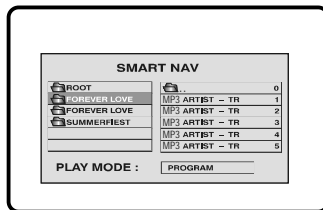

**SMART NAV Screen Display**

4. Press the UP or DOWN Arrow buttons on the Remote Control to navigate through the song list and highlight the song you want. Press 'ENTER' to begin playback of that song.

### SKIPPING SONGS

Use the Next (▶▶) button on the remote control to move to the next song. Use the Previous (◀◀) button to move to the beginning of the currently playing song. Press the button again to move to the previous song.

### 3) USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- *REP-ONE*- repeats the songs that is playing.
- *FOLDER REP*- repeats the folder that is playing.
- *FOLDER*- turns off repeat and returns to regular play mode.

### 4) SELECTING A PLAY MODE

You can choose what order the songs will play on a disc temporarily. The FOLDER play mode is the default. To access the play mode options, press STOP if the disc is playing. Press the right arrow button until the PLAY MODE option is highlighted. Use the up or down arrow to choose an option. The play mode options are:

- *SINGLE*: Play a selected song.
- *REP\_ONE*: Repeats the song that is playing.
- *FOLDER*: Plays the folder in the order the songs were recorded.
- *FOLDER REP*: Repeats the folder that is playing.
- *DISC SCAN*: Plays the first ten seconds of each song on the disc. When the desired track is heard, press play to begin playback of the track.
- *DISC*: Plays the entire disc.
- *DISC REP*: Repeats playback of the entire disc.
- *RANDOM*: Plays the songs on the entire disc in random order.
- *SHUFFLE ON*: Plays the songs in random order (from within the selected folder)
- *PROGRAM-END*: Plays the songs on the disc in the order you have programmed (you must create a playlist to set the order you want the tracks on the disc to play). When you are creating a playlist, this option changes to PROGRAM.

## 5) PROGRAM PLAY

To use the program play option, you must create a playlist of songs in the order you want them to play.

**Note: Once you begin adding songs from a folder to create your play list, you cannot add songs from a different folder.**

- a) Choose the PROG-END option from the PLAY MODE then press Enter to change the option to PROGRAM, PO.
- b) Add songs to the program list by highlighting the song you want to program and pressing ENTER once the song is highlighted. The song you have chosen and the number of songs you have chosen appear at the top of the screen. For example, if you choose the number five song within the folder and it is the first song you have chosen, PROGRAM P01:05 appears.
- c) You can continue to add songs to the list from within the same folder by using the up or down arrow button and then pressing ENTER to add it to the list.
- d) When you are done creating the list, press STOP to end the programming, PROG END will be displayed. Then press PLAY to begin the program play mode.

 
## 6) DELETING THE PLAYLIST

To delete the entire playlist, press STOP while the disc is playing and change to another play mode.

## 7) DISPLAYING THE TIME ELAPSED AND TIME REMAINING


Press the 'DISPLAY' button on the remote to display disc information. The options below show you what happens when you press the 'DISPLAY' button.

- a) Press 'DISPLAY' once, and "CHAPTER ELAPSED" will appear along with the amount of time the song has been playing. The of actual amount of time the disc has been playing, will be displayed on-screen.

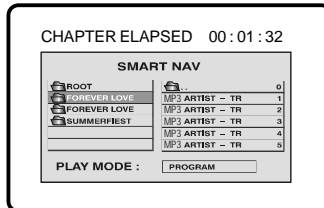

**TIME ELAPSED Screen Display**

 
- b) Press 'DISPLAY' a Second time and "CHAPTER REMAIN" will appear along with the amount of time left in the song that is playing. The amount of time remaining will be displayed on-screen.

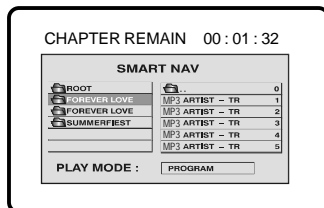

**TIME REMAIN Screen Display**

## 6. **SETUP** (The contents vary from disc to disc.)

 Press 'SETUP' to display the Main screen of the SETUP Menu on the screen. Press 'SETUP' again to exit the SETUP Menu and the unit will resume its last playback or stop mode.

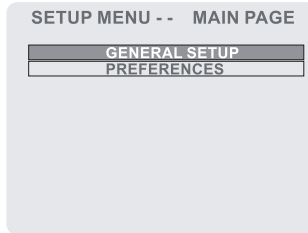

**Main SETUP Menu Screen**

1) Select 'GENERAL SETUP' using the UP/DOWN buttons, then press 'ENTER' to enter the GENERAL Setup screen.



 
**General SETUP Menu Screen**

a. Select TV DISPLAY using UP/DOWN, and then press RIGHT to enter the submenu. Select the TV display mode on the screen using UP/DOWN, and press ENTER to confirm the setting. Press LEFT to return.

\* NORMAL/PS: When the player is connected to a normal TV, and a wide picture is shown on the full screen.


\* NORMAL/LB: When the player is connected to a normal TV, and a wide picture is shown on the screen, with a black strip at both the top and bottom of the screen.

- \* WIDE: When the player is connected to a wide screen TV, a wide picture is shown on the full screen.
- b. Select 'ANGLE MARK' using UP/DOWN, and then press the RIGHT button to enter the submenu. Choose Angle Mark on or off using the UP/DOWN and then press ENTER to confirm the setting. Press the LEFT button to return.

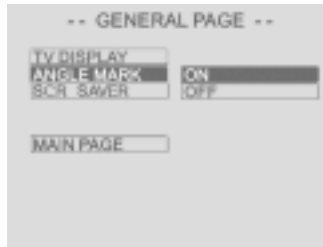

### **ANGLE MARK Screen Display**

 
- \* ON: The screen will show angle mark. (If angle option is available)
- \* OFF: The screen will not display the Angle Mark.
- c. Select SCR Saver using up/down, then press the RIGHT button to enter the submenu. Choose screen saver on or off, then press enter to confirm the setting. When the screen saver on is selected if the same image is displayed for longer than 3 minutes the display will go into screen saver mode, to return to a normal display press the return button.

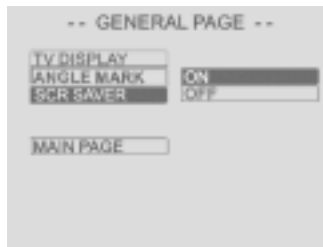

### **SCREEN SAVER Screen Display**




 - d. Select 'MAIN PAGE' using UP/DOWN, and then press ENTER to return to the main page.
- 2) When there's no disc inside the player, select 'PREFERENCES' using UP/DOWN, and then press 'ENTER' to enter the preferences page.

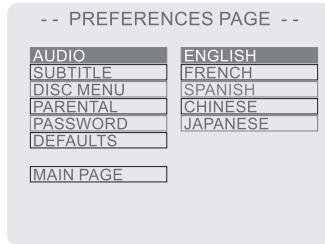


### AUDIO Preference Screen Display

 - a. Select 'AUDIO' using UP/DOWN, and then press 'RIGHT' to enter the submenu. Select the audio language you desire using UP/DOWN, and then press 'ENTER' to confirm the setting. Press LEFT to return.
- b. Select 'SUBTITLE' using UP/DOWN, and then press RIGHT to enter the submenu. Select the desired subtitle language or SUBTITLE OFF using UP/DOWN, and then press 'ENTER' to confirm the setting. Press 'LEFT' to return.

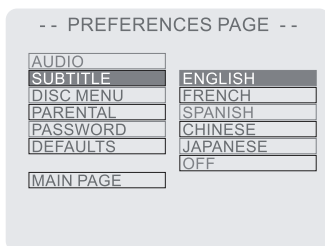

### SUBTITLE Preference Screen Display

 
- c. Select 'DISC MENU' using UP/DOWN, and then press 'RIGHT' to enter the submenu. Select the Disc Menu Language you desire using UP/DOWN, then press 'ENTER' to confirm the setting. Press 'LEFT' to return.

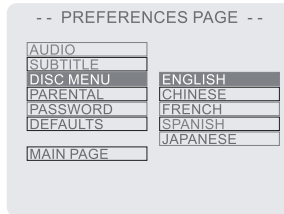

### DISC MENU Preference Screen Display


**Note:** Language and subtitle selection is only available for discs that are recorded in the above listed languages. If not, the player will play and display on the screen the original recorded language contained in the disc.

 - d. Select 'PARENTAL' using UP/DOWN, and then press RIGHT to enter the submenu.

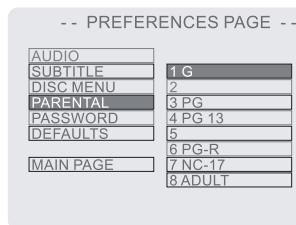

### PARENTAL Preference Screen Display

 Select the parental level you desire using UP/DOWN for discs with lock-out function or multiple rating levels. It is listed from the lowest level (1 Child) to the highest level (8 Adult). Press 'ENTER' to enter the Password Verify Page.

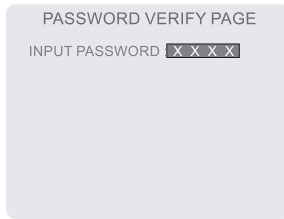


### PASSWORD VERIFY Input Screen Display

Enter a 4 digit password, then press 'ENTER' to confirm the parental level setting.

**NOTE:** For 1st time use, the default password is 3308.

 - e. Select 'PASSWORD' using UP/DOWN, and then press RIGHT to enter the submenu.

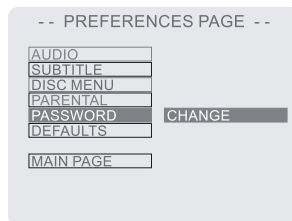

### PASSWORD CHANGE Screen Display

Press 'ENTER' to enter the Password Change Page. Input the Old Password or the Default Password, the New Password, and the Confirmed New Password. Press 'ENTER' to confirm the change.

 


### PASSWORD CHANGE PAGE Screen Display

**NOTE:** The Default Password is **3308**. This password is always effective even after you have selected your own password and changed it. To avoid others from using the default password to set the parental level and change the password, you can record this default password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs can not.


f. Select 'DEFAULTS' using UP/DOWN, and then press RIGHT to enter the submenu. Press ENTER to make the setting return to the factory-set mode.

\*The parental setting is not affected by the default function.

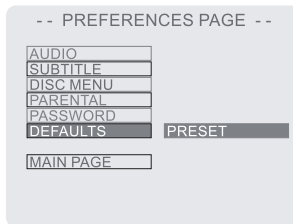

### DEFAULT PRESET Screen Display

 g. Select 'MAIN PAGE' using UP/DOWN, and then press ENTER to return to the main page. Press SETUP to exit the MAIN PAGE

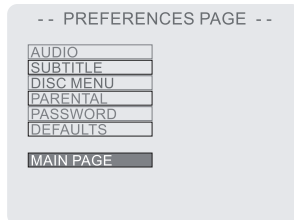

### PREFERENCE MAIN Page Screen Display

## I. Specification

Compatible with disc format	DVD / CD / MP3
Signal format system	NTSC
DVD Video format	Horizontal 720 pixel, vertical 480 pixel (NTSC)
Video output	1.0 Vp-p/75 Ohm
Audio output	1.8 V to 2.2 V
Signal-to-noise ratio	More than 75 dB
Harmonic distortion	Less than 75 dB
Dynamic range	More than 85 dB
Wow and flutter	Beyond measurable Limits
Power source	DC 12 V
Power consumption	Less than 1W in standby mode; and less than 12W when operating
Operating temperature	0°C (32°F) to +40°C (104°F)
Storage temperature	-20°C (-4°F) to +60°C (140°F)
Operating humidity	5% to 95%
Dimensions (W x H x D)	7.45 x 6.70 x 2.05 inches (189 x 170 x 52 mm)
Weight	2.4 lbs (1.1 kg)



## 12 MONTH LIMITED WARRANTY

*Applies to Audiovox Mobile Video Products*

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to tapes, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**U.S.A. :** AEC 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 ● 1-800-645-4994

**CANADA :** CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

128-5495C



For Customer Service  
Visit Our Website At  
[www.audiovox.com](http://www.audiovox.com)  
Product Information, Photos,  
FAQ's Owner's Manuals

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>