

**9-inch Roof-Mount DVD Player
With DVD/CD/MP3 System**



AVXMTG9B/P/S

Audiovox **MTG**

**OPERATION
MANUAL**

This page intentionally left blank.

TABLE OF CONTENTS

Important Notices	2
Congratulations	3
Features	3
Controls and Indicators Diagram	4
Remote Control Operation	6
DVD Basics	10
Loading and Playing Discs	12
Settings and Adjustments	12
Playing JPG Files	16
Playing MP3 Files	17
Source Features	18
Troubleshooting	20
Specifications	22
Notes	23

IMPORTANT NOTICES

An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver only if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in "park" or when the vehicle's parking brake is applied.

When connecting power and ground in a mobile video installation, insure that the ACC wire is fused at the point where it is connected to the vehicle's ACC wiring. Failure to do so can result in damage to the vehicle if a short circuit develops between the vehicle connection point and the mobile video product.

An LCD panel and/or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied must be installed to the rear of the driver seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.

WARNING

Do not use any solvents or cleaning materials when cleaning the video monitor.
Do not use any abrasive cleaners, they may scratch the screen. Use only lightly dampened lint free cloth to wipe the screen if it is dirty.
Lock the LCD screen in fully closed position when not in use.
Before putting on headphones, always adjust the volume setting to OFF or lowest position.
Remember to leave the dome light switch in the off or auto position when the vehicle is unattended, as the dome lights, if left on, can drain the vehicle battery.
Do not put pressure on the screen.
Caution children to avoid touching or scratching the screen, as it may become dirty or damaged

Safety Precautions

For safety reasons, when changing video media, it is recommended that the vehicle is not in motion, and that you do not allow children to unfasten seat-belts to change video media or make any adjustments to the system. System adjustments can be accomplished using the remote control, while seat-belts remain fastened. Enjoy your AUDIOVOX entertainment system but remember that the safety of all passengers remains the number one priority.

Licensed under one or more of the following patents, Patent Numbers 5,775,762, 5,927,784, and 6,678,892.

CONGRATULATIONS

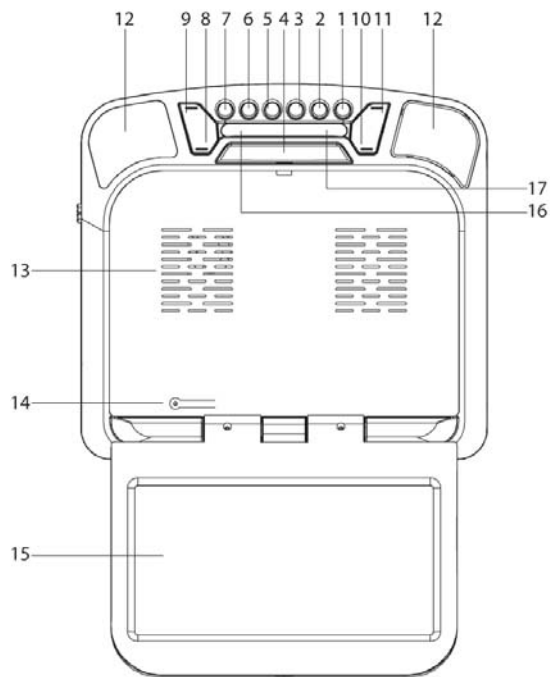
Congratulations on your purchase of the AUDIIOVOX AVXMTG9B/P/S DVD player with Drop-Down Video/Monitor. The AVXMTG9/B/P/S DVD player has been designed to give you and your family many years of video entertainment in the mobile environment. Please read the directions that follow in order to familiarize yourself with the product to ensure that you obtain the best results from your equipment.

FEATURES

- 9" TFT LCD monitor
- Built-in DVD player
- Auto on with disc insertion
- Selectable IR transmit codes
- Multi-lingual OSD (On Screen Display) for control of picture quality and functions
- Audio/Video source inputs
- Dome lights with built-in three way switch
- Last memory for DVD
- Built-in 16 channel frequency wireless FM modulator
- Earphone jack
- Screen mode selection (16:9/4:3)
- Backlight controls
- Day/night picture modes
- AV output
- USB/SD support

CONTROLS AND INDICATORS DIAGRAM

Front View



 
1. EJECT (▲) Button - Press this button to eject discs from the disc compartment.
2. SCREEN MODE (■) Button - Press this button to select Wide (16:9) or Normal (4:3) aspect ratios.
3. FMM Button - Used to select the frequency in sequence rotation: FM OFF,

Ch1 88.1 Mhz,	Ch2 88.3 Mhz,	Ch3 88.5 Mhz,
Ch4 88.7 Mhz,	Ch5 88.9 Mhz,	Ch6 89.1 Mhz,
Ch7 89.3 Mhz,	Ch8 89.5 Mhz,	Ch9 89.7 Mhz,
Ch10 89.9MHz,	Ch11 90.1 Mhz,	Ch12 90.3 Mhz,
Ch13 90.5 Mhz,	Ch14 90.7 Mhz,	Ch15 90.9 Mhz,
Ch16 91.1 Mhz.		
4. SCREEN RELEASE (PRESS) Button - Press this button to release the LCD screen. The screen will drop down slightly. Pivot the screen downward until a comfortable viewing angle is reached.
5. PIC Button - Press to enter the picture adjustment mode. Press to adjust in the following sequence: Brightness, Contrast, Hue, Saturation, Reset.
6. SOURCE Button - Press to select the source menu: DVD/AV1/SD/USB.
7. POWER(⏻) Button - Press this button to turn the system on or off.
8. STOP(■) Button - Press this button to stop playback.
9. PLAY/PAUSE(▶) Button - Press to start playback or pause playing.
10. VOLUME (-) Button - Press this button to decrease the volume or decrease the level of selected picture controls.
11. VOLUME (+) Button - Press this button to increase the volume or increase the level of selected picture controls.
12. DOME LIGHTS - Provides additional interior illumination.
13. Ventilation openings
14. LCD Cut Off Switch - Used to turn off the LCD screen when in the closed position.
15. 9" LCD screen
16. Wireless Headphone Transmitter - Transmits audio to an optional wireless headphone.
17. Infrared Remote Sensor - Allows remote control to operate the unit.

Side Views



1 2



3 4 5 6

1. DVD disc insertion slot - For loading and removing disks. Unit will turn on and load a disk when a disk is inserted. Insert a disk with the label facing up towards the headliner.
2. Disc indicator light - Illuminates green when a disk is inserted. Illuminates red when a disk is not present.
3. Three Position Dome Light Switch:
ON - Turns on the dome lights.
OFF - The dome lights will not turn on in this position.
AUTO - Automatically switches on the dome lights in conjunction with the vehicle's interior illumination.
4. SD Card Slot - Insert SD card for playback of audio/video files.
5. USB Port - Insert USB drive for playback of audio/video files.
6. Headphone jack

Back View



1

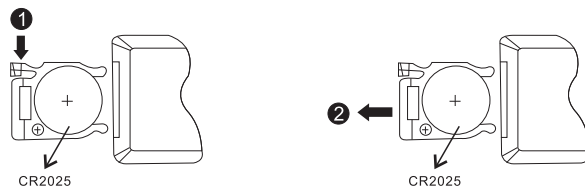
1. Infrared Remote Sensor - Allows remote control to operate the unit from the front seat.
Note: The driver should stop the vehicle when operating the remote control.

REMOTE CONTROL OPERATION

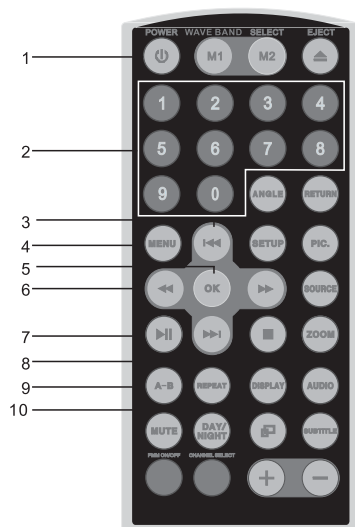
Battery Installation

Before attempting to operate your remote control, install the battery as described below:

1. Using your finger, press the tab (1) down in the direction of the arrow.
2. Slide the battery holder (2) out in the direction of the arrow.
3. Install one CR2025 battery. Make sure that the proper polarity (+ or -) is observed.
4. Slide the battery holder into the remote control until it locks.

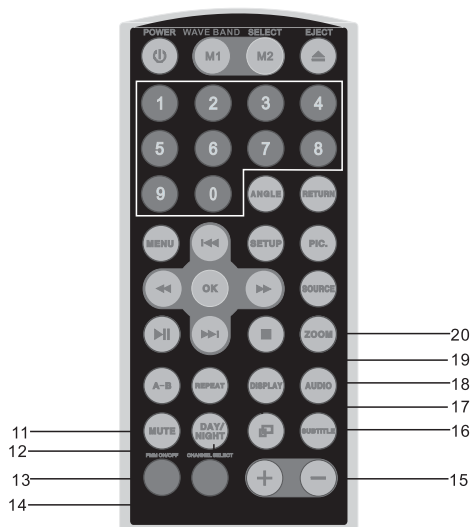


Back View




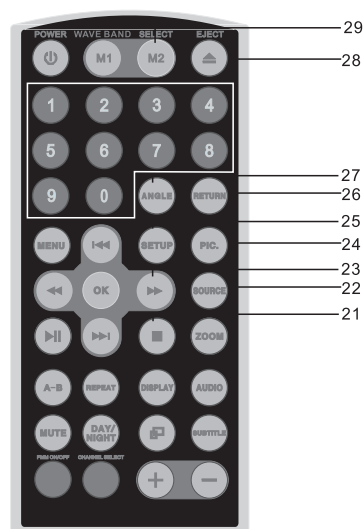
Remote Control Functional Description

1. POWER () Button - Press this button to turn the unit ON and OFF.
2. NUMBER Buttons - Press to enter the numbers 0 to 9 for selection of CD tracks, DVD chapters or password setting.
3. PREVIOUS/CURSOR (/) Button - Go to the previous chapter or track. The cursor is used to select menus on the screen.
4. MENU Button - Press to access the DVD root menu (DVD MODE).
5. OK Button - Used to implement a selected setting or menu option.
6. SCAN BACKWARD/CURSOR (/) Button - Scans backward at 2,4,8,16 times speed. The cursor is used to select menus on the screen.
7. PLAY/PAUSE () Button - Used to start playback or pause playing.
8. NEXT/CURSOR (/) Button - Go to the next chapter or track. The cursor is used to select menus on the screen.
9. A-B Button - Allows the user to repeat the playback from point A to point B.
 Press: DVD Player
 Once Repeat A - Marks the beginning of the section to repeat (set point A).
 Twice Repeat AB - Marks the end of the section to repeat (set point B).
 3 times Repeat Off - Cancels the A-B repeat function.
10. REPEAT Button - Allows the user to repeat a selected title, chapter or track.
 For MP3 disc, press "REPEAT" to repeat playing present file; press it again to repeat playing the folder.



Remote Control Functional Description

11. MUTE Button - Press this button to mute the audio for wireless FMM.
12. DAY/NIGHT Button- This control toggles the unit between " DAY" and "NIGHT" LCD illumination modes. In the "DAY" mode, the LCD backlight intensity is at maximum. In the "NIGHT" mode, the LCD backlight is dimmed to a preset level that is more suitable for low light operation.
13. FMM ON/OFF Button - Turns the wireless FM Modulator on or off.
14. CHANNEL SELECT Button - Selects wireless FM Modulator Frequency.
 Ch1 88.1MHz, Ch2 88.3MHz, Ch3 88.5MHz,
 Ch4 88.7MHz, Ch5 88.9MHz, Ch6 89.1MHz,
 Ch7 89.3MHz, Ch8 89.5MHz, Ch9 89.7MHz,
 Ch10 89.9MHz, Ch11 90.1MHz, Ch12 90.3MHz,
 Ch13 90.5MHz, Ch14 90.7MHz, Ch15 90.9MHz,
 Ch16 91.1MHz
15. VOLUME (-/+) Button - Press to decrease or increase the volume level, or decrease or increase the level of the selected the picture adjustment.
16. SUBTITLE Button - Press to display and select an available subtitle language in DVD mode.
17. SCREEN MODE SELECTION () Button - Press this button to switch between Wide (16:9) or Normal (4:3) aspect ratios.
18. AUDIO Button - Press to display and select an available audio language in DVD mode.
19. DISPLAY Button - Press to display current disc information while the disc is playing.
20. ZOOM Button - Press to change picture size when playing a DVD disc.
Press: DVD player performs:
 Once - Enlarges the picture to 2 times the original size.
 Twice - Enlarges the picture to 3 times the original size.
 3 times - Enlarges the picture to 4 times the original size.
 4 times - Reduces the picture to 1/2 times the original size.
 5 times - Reduces the picture to 1/3 times the original size.
 6 times - Reduces the picture to 1/4 times the original size.
 7 times - Picture returns to the original size.



Remote Control Functional Description

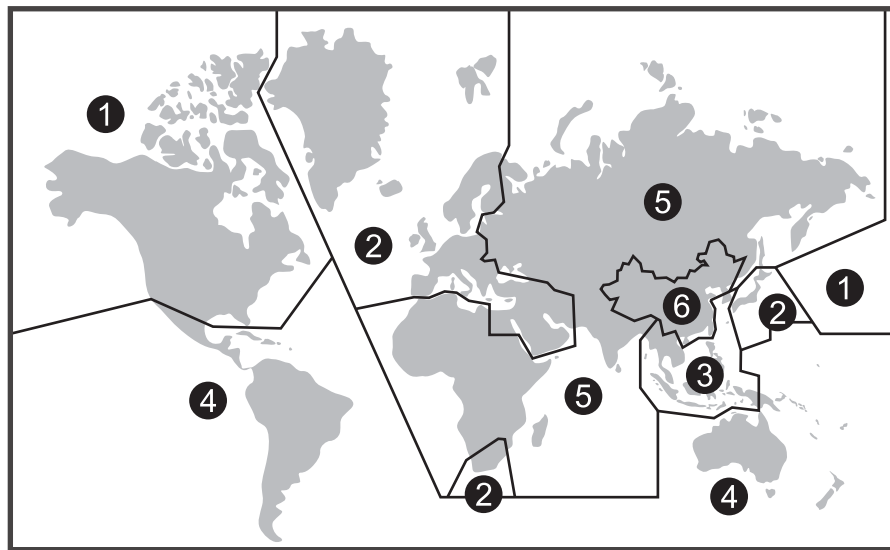
21. STOP (■) Button - Press to stop playback.
22. SOURCE Button - Press to select the source menu (DVD/AV1/SD/USB).
23. SCAN FORWARD/CURSOR (▶▶) Button - Scan forward at 2,4,8,16 times speed. The cursor is used to select menus on the screen.
24. PIC Button - Press this button to enter the picture adjustment mode. Press repeatedly to adjust in the following sequence: Brightness, Contrast, Hue, Saturation, Reset. Once the desired adjustment bar is displayed, use the VOLUME (+)/VOLUME (-) button to adjust the setting. The display will automatically turn off in 6 seconds, or if any other button is pressed.
25. SETUP Button - Press this button to display the setup menu. The setup menu allows the user to change DVD player options such as OSD LANGUAGE, PARENTAL CONTROL etc.
26. RETURN Button:
Press Return once: Go to disc menu.
Press Return twice: Go to movie playback.
27. ANGLE Button - Press this button to display and select different camera angles in DVD mode. Not all discs contain this option.
28. EJECT (▲) Button - Press this button to eject the disc.
29. WAVE BAND Button - Press to change IRT transmitter wave band between M1 & M2.

DVD BASICS

To get the optimum use out of the DVD player, please read this section.

DVD Region Code

The DVD player is preset to a region code at the factory depending on where the unit is sold. DVDs are also coded by region. These region codes must match in order for the disc to play. If the region codes don't match, the disc won't play. This system is set to Region 1 (USA) and will not play discs that have a region code different from Region 1. The system will display "WRONG REGION."



Region 1- USA, Canada

Region 2- Japan, Europe, South Africa, Middle East, Greenland

Region 3- S. Korea, Taiwan, Hong Kong, Parts of South East Asia

Region 4- Australia, New Zealand, Latin America (including Mexico)

Region 5- Eastern Europe, Russia, India, Africa

Region 6- China

Types of Discs Your System Will Play

Your system will play the following types of discs:

- DVD disc - DVD discs that contain video.
- Audio discs - Audio CDs that contain musical or sound content only.
- MP3 discs - A disc that contains audio files (for example, a CD-R with downloaded MP3 files).

This unit is capable of playing most recordable DVD formats. However, due to the variety of disc manufacturers and software, playback can not be guaranteed for every disc.

Disc Compatibility

Before a disc is loaded, make sure that it is compatible with the player. The following discs can not be played with this player:

- MiniDisc
- Laserdisc
- CD-I, CD-ROM, DVD-ROM, Super Audio CD (SACD) or DVD Audio
- Blue-Ray Disc™

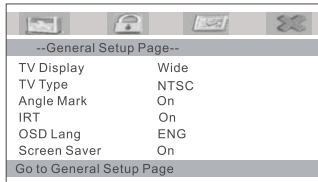
LOADING AND PLAYING DISCS

1. Press the Screen Release (PRESS) button to unlock the LCD screen. The LCD screen will drop down slightly.
2. Pivot the screen downward until a conformable viewing angle is reached. The hinge friction will hold the screen in position while the unit is in use.
3. Press the power (⏻) button on the unit or remote control to turn the unit on.
4. Insert a disc into the disc insertion slot with the label facing up towards the headliner.
Note: The unit will turn on automatically when a disc is inserted.
5. After the unit has been turned on and is displaying a picture, adjust the viewing angle. Pivot the screen to optimize the picture quality.
6. Remember to turn the unit off and pivot the screen to the locked position when not in use.

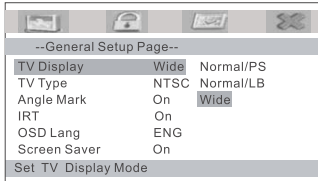
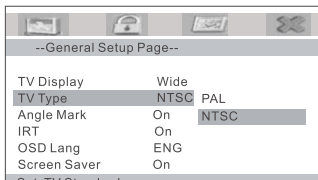
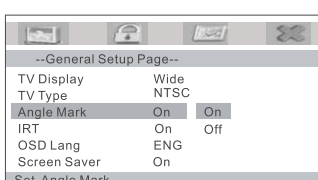
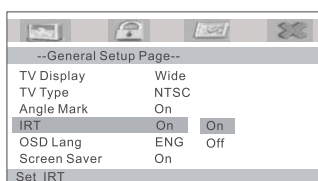
SETTINGS AND ADJUSTMENTS

The setup menu contains features and options that let you customize your DVD player. For example, you can set a language for the On Screen Display (OSD) or control DVD playback content for children.

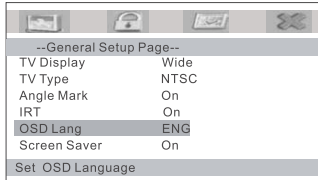
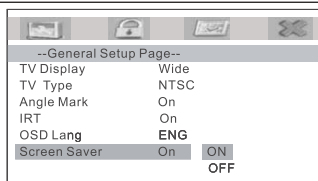
Main Menu

	<ol style="list-style-type: none">1. Press the "SETUP" button. The Main Menu will be displayed on the screen.2. Press the "◀" or "▶" button to highlight the General, Preference or Password setup pages.3. Press the "OK" button to access the selected page.4. Press the "▲" or "▼" CURSOR button to select a menu item.5. Press the "▶" CURSOR button to enter the option submenu.6. Press the "▲" or "▼" CURSOR button to select an option.7. Press the "OK" button to confirm your selection.8. Press the "◀" button to return to the Main Menu or the "SETUP" button to exit.
---	--

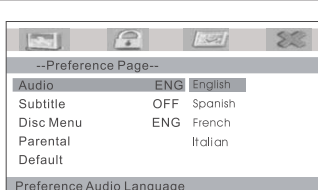
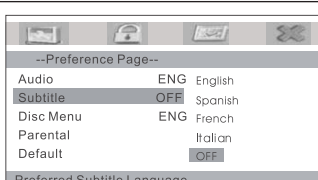
General Setup Page

 <p>--General Setup Page--</p> <table border="1"> <tr><td>TV Display</td><td>Wide</td><td>Normal/PS</td></tr> <tr><td>TV Type</td><td>NTSC</td><td>Normal/LB</td></tr> <tr><td>Angle Mark</td><td>On</td><td>Wide</td></tr> <tr><td>IRT</td><td>On</td><td></td></tr> <tr><td>OSD Lang</td><td>ENG</td><td></td></tr> <tr><td>Screen Saver</td><td>On</td><td></td></tr> </table> <p>Set TV Display Mode</p>	TV Display	Wide	Normal/PS	TV Type	NTSC	Normal/LB	Angle Mark	On	Wide	IRT	On		OSD Lang	ENG		Screen Saver	On		<p>TV Display</p> <p>This function allows you to set the screen display format. Optional Settings: Normal/PS, Normal/LB, Wide The default setting is Wide. Note: This function depends on the aspect ratio with which the DVD disc is recorded.</p>
TV Display	Wide	Normal/PS																	
TV Type	NTSC	Normal/LB																	
Angle Mark	On	Wide																	
IRT	On																		
OSD Lang	ENG																		
Screen Saver	On																		
 <p>--General Setup Page--</p> <table border="1"> <tr><td>TV Display</td><td>Wide</td><td></td></tr> <tr><td>TV Type</td><td>NTSC</td><td>PAL</td></tr> <tr><td>Angle Mark</td><td>On</td><td>NTSC</td></tr> <tr><td>IRT</td><td>On</td><td></td></tr> <tr><td>OSD Lang</td><td>ENG</td><td></td></tr> <tr><td>Screen Saver</td><td>On</td><td></td></tr> </table> <p>Set TV Standard</p>	TV Display	Wide		TV Type	NTSC	PAL	Angle Mark	On	NTSC	IRT	On		OSD Lang	ENG		Screen Saver	On		<p>TV Type</p> <p>This function allows you to select TV type. Optional Settings: PAL, NTSC The default setting is NTSC. Note: For best system performance, the selected setting should remain at NTSC.</p>
TV Display	Wide																		
TV Type	NTSC	PAL																	
Angle Mark	On	NTSC																	
IRT	On																		
OSD Lang	ENG																		
Screen Saver	On																		
 <p>--General Setup Page--</p> <table border="1"> <tr><td>TV Display</td><td>Wide</td><td></td></tr> <tr><td>TV Type</td><td>NTSC</td><td></td></tr> <tr><td>Angle Mark</td><td>On</td><td>On</td></tr> <tr><td>IRT</td><td>On</td><td>Off</td></tr> <tr><td>OSD Lang</td><td>ENG</td><td></td></tr> <tr><td>Screen Saver</td><td>On</td><td></td></tr> </table> <p>Set Angle Mark</p>	TV Display	Wide		TV Type	NTSC		Angle Mark	On	On	IRT	On	Off	OSD Lang	ENG		Screen Saver	On		<p>Angle Mark</p> <p>This function allows you to turn angle mode playback on or off. Angle mode allows you to select different camera angles in DVD playback. Optional settings: On, Off The default setting is Off. Note: The number of angles vary from disc to disc. Not all discs contain this option.</p>
TV Display	Wide																		
TV Type	NTSC																		
Angle Mark	On	On																	
IRT	On	Off																	
OSD Lang	ENG																		
Screen Saver	On																		
 <p>--General Setup Page--</p> <table border="1"> <tr><td>TV Display</td><td>Wide</td><td></td></tr> <tr><td>TV Type</td><td>NTSC</td><td></td></tr> <tr><td>Angle Mark</td><td>On</td><td></td></tr> <tr><td>IRT</td><td>On</td><td>On</td></tr> <tr><td>OSD Lang</td><td>ENG</td><td>Off</td></tr> <tr><td>Screen Saver</td><td>On</td><td></td></tr> </table> <p>Set IRT</p>	TV Display	Wide		TV Type	NTSC		Angle Mark	On		IRT	On	On	OSD Lang	ENG	Off	Screen Saver	On		<p>IRT</p> <p>This function allows you to turn the infrared transmitter (IRT) for wireless headphone operation on or off. Optional settings: On, Off The default setting is On.</p>
TV Display	Wide																		
TV Type	NTSC																		
Angle Mark	On																		
IRT	On	On																	
OSD Lang	ENG	Off																	
Screen Saver	On																		

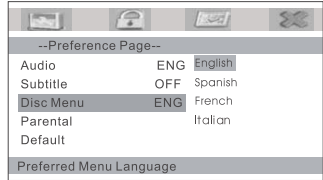
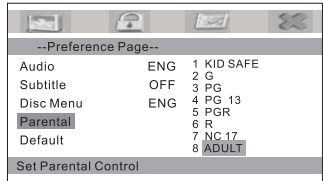
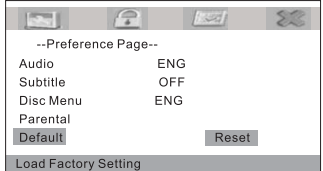
General Setup Page

 <p>--General Setup Page--</p> <table border="0"> <tr><td>TV Display</td><td>Wide</td></tr> <tr><td>TV Type</td><td>NTSC</td></tr> <tr><td>Angle Mark</td><td>On</td></tr> <tr><td>IRT</td><td>On</td></tr> <tr><td>OSD Lang</td><td>ENG</td></tr> <tr><td>Screen Saver</td><td>On</td></tr> </table> <p>Set OSD Language</p>	TV Display	Wide	TV Type	NTSC	Angle Mark	On	IRT	On	OSD Lang	ENG	Screen Saver	On	<p>OSD Language</p> <p>This function allows you to set the OSD menu language. Optional Settings: English, Spanish, French, Italian The default setting is English.</p>
TV Display	Wide												
TV Type	NTSC												
Angle Mark	On												
IRT	On												
OSD Lang	ENG												
Screen Saver	On												
 <p>--General Setup Page--</p> <table border="0"> <tr><td>TV Display</td><td>Wide</td></tr> <tr><td>TV Type</td><td>NTSC</td></tr> <tr><td>Angle Mark</td><td>On</td></tr> <tr><td>IRT</td><td>On</td></tr> <tr><td>OSD Lang</td><td>ENG</td></tr> <tr><td>Screen Saver</td><td>On <input type="checkbox"/> ON <input type="checkbox"/> OFF</td></tr> </table> <p>Screen Saver</p>	TV Display	Wide	TV Type	NTSC	Angle Mark	On	IRT	On	OSD Lang	ENG	Screen Saver	On <input type="checkbox"/> ON <input type="checkbox"/> OFF	<p>Screen Saver</p> <p>This function allows you to turn the screen saver on or off. Optional Settings: On, Off The default setting is On. Note: The DVD player will enter screen saver mode if the unit is inactive for approximately four minutes.</p>
TV Display	Wide												
TV Type	NTSC												
Angle Mark	On												
IRT	On												
OSD Lang	ENG												
Screen Saver	On <input type="checkbox"/> ON <input type="checkbox"/> OFF												


Preference Page

 <p>--Preference Page--</p> <table border="0"> <tr><td>Audio</td><td>ENG</td><td>English</td></tr> <tr><td>Subtitle</td><td>OFF</td><td>Spanish</td></tr> <tr><td>Disc Menu</td><td>ENG</td><td>French</td></tr> <tr><td>Parental</td><td></td><td>Italian</td></tr> <tr><td>Default</td><td></td><td></td></tr> </table> <p>Preference Audio Language</p>	Audio	ENG	English	Subtitle	OFF	Spanish	Disc Menu	ENG	French	Parental		Italian	Default			<p>Audio</p> <p>This function allows an user to select an audio language for DVD playback. The audio language depends on the information available on each disc. Optional Settings: English, Spanish, French, Italian. The default setting is English. Note: You can also change the audio language during playback by pressing the Audio button.</p>
Audio	ENG	English														
Subtitle	OFF	Spanish														
Disc Menu	ENG	French														
Parental		Italian														
Default																
 <p>--Preference Page--</p> <table border="0"> <tr><td>Audio</td><td>ENG</td><td>English</td></tr> <tr><td>Subtitle</td><td>OFF</td><td>Spanish</td></tr> <tr><td>Disc Menu</td><td>ENG</td><td>French</td></tr> <tr><td>Parental</td><td></td><td>Italian</td></tr> <tr><td>Default</td><td></td><td><input type="checkbox"/> OFF</td></tr> </table> <p>Preferred Subtitle Language</p>	Audio	ENG	English	Subtitle	OFF	Spanish	Disc Menu	ENG	French	Parental		Italian	Default		<input type="checkbox"/> OFF	<p>Subtitles</p> <p>This function allows you to select the subtitle language to be shown on the screen. The subtitle language depends on the information available on each disc. Optional Settings: English, Spanish, French, Italian, Off. The default setting is Off. Note: You can also change the subtitle language during playback by pressing the Subtitle button.</p>
Audio	ENG	English														
Subtitle	OFF	Spanish														
Disc Menu	ENG	French														
Parental		Italian														
Default		<input type="checkbox"/> OFF														

Preference Page

 <p>--Preference Page--</p> <p>Audio ENG English</p> <p>Subtitle OFF Spanish</p> <p>Disc Menu ENG French</p> <p>Parental Italian</p> <p>Default</p> <p>Preferred Menu Language</p>	<p>Disc Menu</p> <p>This function allows you to choose the menu language stored on the disc.</p> <p>Optional Settings: English, Spanish, French, Italian</p> <p>The default setting is English.</p> <p>Note: This function is only available for DVD playback.</p>
 <p>--Preference Page--</p> <p>Audio ENG 1 KID SAFE</p> <p> 2 G</p> <p>Subtitle OFF 3 PG</p> <p>Disc Menu ENG 4 PG 13</p> <p>Parental 5 PGR</p> <p> 6 R</p> <p> 7 NC 17</p> <p> 8 ADULT</p> <p>Set Parental Control</p>	<p>Parental</p> <p>This function prevents children from watching unsuitable DVD content. You can limit the content of movie playback from 1. Kid Safe to 8. Adult. The lower the value, the more strict the control. The restriction of viewing disc content by younger viewers may be available on some discs but not others.</p> <p>Optional Settings: 1. KID SAFE; 2. G; 3. PG; 4. PG 13; 5. PGR; 6. R; 7. NC 17; 8. ADULT.</p> <p>The default setting is 8. ADULT.</p> <p>Note: Parental Control features are password protected. The rating level can only be changed when the correct password has been entered.</p>
 <p>--Preference Page--</p> <p>Audio ENG</p> <p>Subtitle OFF</p> <p>Disc Menu ENG</p> <p>Parental</p> <p>Default Reset</p> <p>Load Factory Setting</p>	<p>Default</p> <p>This function allows you to reset all settings to the original factory settings. Select this item and press the "OK" button.</p> <p>Note: This function does not reset the Parental level to the original factory setting.</p>

Password Setup Page

 <p>--Password Setup Page--</p> <p>Password</p> <p>Go To Password Setup Page</p>	<p>Password</p> <p>This option allows you to set a password (four numbers).</p> <p>Note: The default password is 3308. This password is always accepted even after a new password has been entered. To avoid the possibility of others using the default password to change passwords, record this default password in another area and delete it from this manual.</p>
---	--

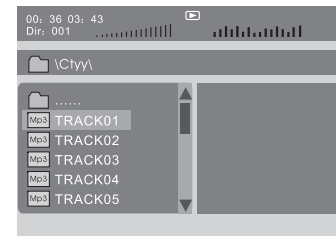
PLAYING JPG FILES

1. Place a JPG disc into the disc insertion slot, the unit will start reading the disc and play.
2. Press the "MENU" button to browse JPG files.
3. Press the "▲" or "▼" cursor button to select a JPG file and press the "OK" button to confirm.
4. Press the "◀" cursor button to rotate the picture counter-clockwise; press the "▶" cursor button to rotate the picture clockwise.
5. Press the "DISPLAY" button when viewing pictures. You can select different refresh modes as follows:
 - a. From top to bottom
 - b. From bottom to top
 - c. From left side to right side
 - d. From right side to left side
 - e. From left top to right bottom
 - f. From right top to left bottom
 - g. From left bottom to right top
 - h. From right bottom to left top
 - i. From horizontal center to both sides
 - j. From vertical center to both sides
 - k. From top and bottom to center
 - l. From right and left to center
 - m. From four window's top side to bottom side
 - n. From four window's left side to right side
 - o. From four edges to center.
6. When viewing files, "∅" may appear when pressing "Angle", "Subtitle", "Audio" or "Title" etc. In this situation, these options are unavailable.
7. When viewing JPG files, press "■", pictures will be displayed in thumbnail mode. Press "▲/▼/◀/▶" or press the "OK" button to select one picture to view.

PLAYING MP3 FILES

MP3 is a format for storing digital audio. An audio CD-quality song can be compressed into the MP3 format with very little loss of quality, while taking up much less space. CD-R discs that have been encoded in MP3 format can be played on a DVD player. The DVD player plays the songs in the order they were burned on to the disc. When playback is started, the elapsed time of the track that is playing will be displayed.

1. Place a MP3 disc into the disc insertion slot, insert an USB drive into the USB port, or insert a SD card into the SD card slot.
2. Press the “▲/▼” cursor button or the “OK” button to choose a MP3 file.
3. Press the “▶||” button or the “OK” button to play the file selected.



SOURCE FEATURES

1. Press the "SOURCE" button on the unit or remote control. The following menu will appear on the screen:

DVD
AV1
SD
USB

2. Press the "▲" or "▼" cursor button to choose an item.

3. Press the "OK" button.

DVD

If a disc is loaded into the unit when the source is set to AV1, SD or USB, the unit will automatically switch the source over to DVD.

Last Memory for the DVD mode: If the unit is turned off and then on, and the DVD disc is not removed, the unit will play the DVD from the point it stopped last time.

At power OFF mode, the unit will turn on automatically when a disc is inserted.

AV1

The unit will accept an audio/video input through the 3 RCA jacks located at the base of the unit. The audio/video device can be a video game system, video camera or other input device.

Note: AV1 sources are available only if they are pre-installed with your video product.

SD

Insert a SD card (compatible with normal SD/MMC/MS) and play the content.

Supported formats: MP3, JPEG, AVI, MPEG I , II etc.

USB

Insert a USB device and play the content.

Supported formats: MP3, JPEG, AVI, MPEG I , II etc.

OVERHEAD DOME LIGHTS

The Dome Lights integrated into the unit are controlled by a three position slide switch. Sliding the switch to the ON position will turn the light ON. The OFF position will prevent the lights from turning ON with the vehicle interior lighting. The AUTO position will allow the lights to turn ON and OFF with the vehicle interior lighting.

Refer to the installation guide for wire connections. Do not leave the vehicle unattended with the dome light switch in the ON position, as this could discharge the battery.

INFRARED REMOTE SENSORS

The unit incorporates two infrared remote sensors which relay signals from the remote control to allow the unit to be controlled simply by pointing its remote control at the remote sensor. The infrared sensor can relay signals from most manufacturer's remote control to its respective component connected to the AV input, in this case, you must use the remote control supplied with the component.

TROUBLE SHOOTING

PROBLEM	SOLUTION
IR remote is inoperative.	<ol style="list-style-type: none">1. Verify that the batteries in the remote are fresh.2. Verify that the infrared remote sensor is not obstructed.
Disc will not play or wrong region is displayed.	<ol style="list-style-type: none">1. Insert a disc with the label side facing up towards the headliner.2. Check the type of the disc you put into the disc tray. This DVD only plays DVD, audio CD, JPEG, and MP3.3. Both the unit and the disc are coded by region. If the regional code doesn't match, the disc can't be played.
No Disc error message appears.	<ol style="list-style-type: none">1. Insert a disc with the label side facing up towards the headliner.
Play starts, but then stops immediately.	<ol style="list-style-type: none">1. The disc is dirty. Clean it.2. The disc is damaged. Try another disc.3. Condensation has formed. Allow player to dry out.
No sound or distorted sound.	<ol style="list-style-type: none">1. Make sure your DVD is connected properly. Make sure all cables are securely inserted into the appropriate jacks.2. If you are using 2-channel IR headphones, make sure you turn on the IR headphone power. Make sure the correct channel (A-B) is selected.3. Make sure the modulator is ON and the proper frequency has been selected.4. Make sure the IR transmitter has been turned on.
Can't advance through a movie.	<ol style="list-style-type: none">1. You can't advance through the opening credits and warning information that appears at the beginning of a movie because the disc is programmed to prohibit that action.

PROBLEM	SOLUTION
The icon (⊗) appears on screen.	<p>The feature or action cannot be completed at this time because:</p> <ol style="list-style-type: none"> 1. The disc's software restricts it. 2. The disc's software doesn't support the feature (for example, angles). 3. The feature is not available at the moment. 4. You have requested a title or chapter number that is out of the range.
No forward or reverse scan.	<ol style="list-style-type: none"> 1. Some discs have sections that prohibit rapid scanning or title and chapter skip. 2. If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.
Picture is distorted.	<ol style="list-style-type: none"> 1. The disc might be damaged, try another disc. 2. It is normal for some distortion to appear during forward or reverse scan.

SPECIFICATIONS

Screen Type:	TFT Active Matrix LCD
Screen Resolution:	640 x 220
Operation Temperature:	32 - 122 °F (0 - 50 °C)
Storage Temperature:	-4 - 158 °F (-20 - 70 °C)
Backlight:	LED
Power Source:	12 VDC
Video Display System:	NTSC/PAL
Headphone Audio Output:	5 mw @ 32 ohms
Video Output:	1.0 Vpp @ 75 ohms



12 MONTH LIMITED WARRANTY

Applies to Movies To Go Mobile Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory/media devices, gaming devices, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Audiovox Electronics Corporation, 150 Marcus Blvd., Hauppauge, New York 11788 • 1-800-645-4994

128-8895



For Customer Service
Visit Our Website At
www.mobile.audiovox.com
Product Information, Photos,
FAQ's Owner's Manuals

© 2010 AUDIOVOX, 150 Marcus Blvd. Hauppauge, NY 11788

128-8884

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>