

D8000XP

PORTABLE 8" LCD MONITOR AND DVD PLAYER



An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in "park" or when the vehicle's parking brake is applied.

An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking brake is not applied must be installed to the rear of the driver's seat where it will not be visible, directly or indirectly, to the operator of the motor vehicle.

Notice:

This Product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Content

A. Introduction	4
B. Cautions and Warnings	4
C. Contents.....	6
D. Powering and Installation	6
E. Installing in a Vehicle.....	7
F. Controls, Indicators and Connectors.....	8
G. Remote Control.....	9
H. Loading and Playing a Disc.....	10
I. Basic Operation.....	10
J. Menu.....	11
K. Display.....	11
L. Playing Audio CDs.....	15
M. Playing MP3 Discs.....	17
N. Playing SD/MMS/MC Card.....	18
O. Using An USB Memory Device.....	19
P. Setup.....	20
Q. Clock and Calendar Display.....	26
R. Connecting to a TV or Another Monitor.....	26
S. Rechargeable Battery Installation and Use.....	27
T. Specifications	29
U. Troubleshooting	30

A. Introduction

Thank you for choosing the D8000XP portable DVD player. The main features include a 8" Wide Screen (16:9 Aspect Ratio) Liquid Crystal Display (LCD) swivel monitor and a DVD player. The unit also contains a 3 in 1 card reader and a USB port. The unit is designed for use with SD/MMC, MS memory cards and USB memory devices. In addition to playing DVDs the unit can display images in slide show mode and serve as a clock or calendar. The unit applies the latest state of the art electronics and is designed for use in hotels, offices or your home. The unit is constructed to provide years of reliable, trouble-free service, and is compact so that you can take it with you anywhere and is designed for quick and easy installation. Please read the entire instruction manual supplied with this product prior to using. The documentation will assist you in installing the system properly to obtain the best equipment performance. Please save this manual for later use.

B. Cautions and Warnings

1. Placement

To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not place the set on an unstable cart, stand, tripod, bracket or table to prevent it from falling. Keep the unit away from strong magnets, heat sources, direct sunlight, excessive dust. If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit. When you move it from a cold to a warm location, wait for about one hour before operating the unit, or remove the disc and leave the unit turned on until the moisture evaporates.

2. Installation

Ensure that the 8" portable DVD player is used in accordance with the instructions and illustrations provided in this manual.

3. Caution

Do not push objects of any kind into the unit through openings; do not spill or spray liquid of any kind on or in the system (this

may result in a fire or electric shock). Do not place anything heavy on the unit. To ensure proper ventilation and proper operation, never cover or block any openings with a cloth or other material. It is hazardous to replace the battery incorrectly. Replace the battery only with the same or equivalent type, and in order to protect the environment, please dispose of the battery properly. Do not use the unit in temperatures higher than 95 degrees Fahrenheit or 35 degrees Celsius.

4. Disassembly

Do not attempt to disassemble the cabinet. There is a risk of electric shock and/or exposure to Laser Radiation. Contact qualified service personnel if your system needs repair.

5. Cleaning Unit

When cleaning, make sure the system is unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the system only.

6. Disc

Do not use irregularly shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction. Do not stick paper, tape or glue on the disc. Do not expose the disc to direct sunlight or heat sources. Do not touch the surface of the disc. Handle the disc by its edge. Clean the disc by wiping the disc from the center out with a cleaning cloth. Remove the disc from the unit and store it in its case after playing. Some playback operations of discs may be intentionally fixed by software producers. Since this unit plays discs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the discs.

7. Regional Coding

Both the DVD player and disc are coded by region. These regional codes must match in order for the disc to play. If the codes don't match, the disc won't play. This unit's code is region 1. DVD's with other regional codes cannot be played in this unit.

C. Contents

1. 1 x 8" LCD Monitor & DVD Player
2. 1 x Remote Control with battery (CR2025)
3. 1 x Audio/Video Cable
4. 1 x USB Adapter Cable
5. 1 x AC to DC Adapter
6. 1 x DC Power Adapter
7. 1 x Instruction Manual
8. 1 x Rechargeable Battery
9. 1 x Strap
10. 1 x Carry bag

D. Powering and Installation

1. *Powering the system indoors* (Refer to Figure 1)

Plug one end of the AC to DC adapter into the DC input jack on the left side of the main unit, then plug the other end into the 110~240V AC power receptacle.

2. *Powering the system in a car*

Plug one end of the DC Power adapter into the DC input jack on the unit, then plug the other end into the vehicle power outlet.

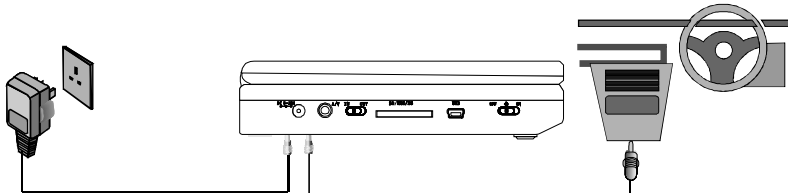


Figure 1

Note: If the DVD player is not going to be used for a long period of time, disconnect the unit from power source.

E. Installing in a Vehicle

Installing the DVD Player onto the seat back in a car

(Refer to Figure 2)

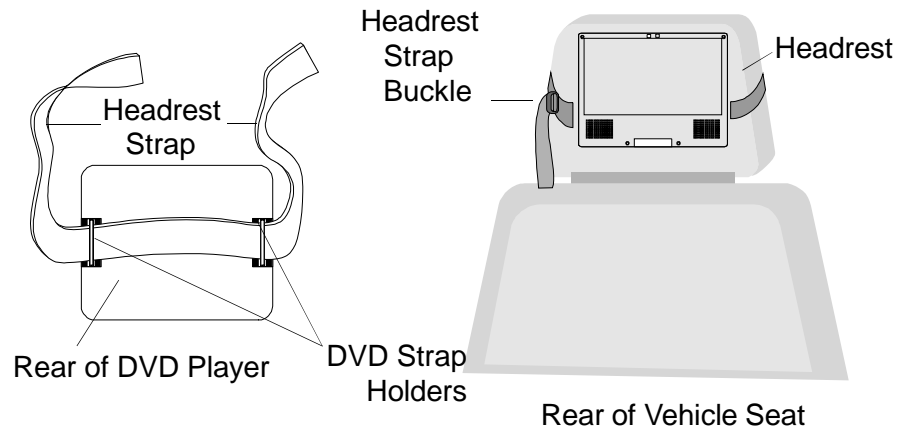


Figure 2

- 1). Position the headrest strap through the two DVD strap holders located on the back of the DVD player.
- 2). Open and rotate the DVD player LCD monitor 180 degrees and fold down as shown.
- 3). Secure the DVD player to headrest using the headrest strap and headrest strap buckle. Adjust the headrest strap until the DVD player is firmly secured to the vehicle headrest.

F. Controls, Indicators and Connectors

1. Unit View (Refer to Figure 3)

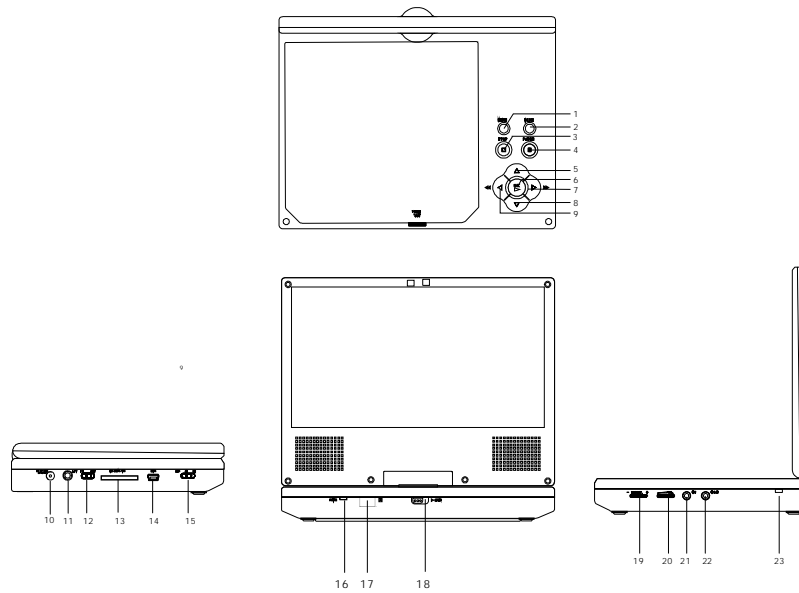


Figure 3

- | | |
|--------------------------------|--------------------------------|
| 1) Menu Button | 13) SD/MMC/MS Card Slot |
| 2) Wide Button | 14) USB Slot |
| 3) Stop Button | 15) Power ON/OFF Switch |
| 4) Pause Button | 16) Power ON LED Indicator |
| 5) Up Button | 17) Remote Control Sensor |
| 6) Play/OK Button | 18) Open Switch |
| 7) Right / Fast Forward Button | 19) Brightness Up/Down Control |
| 8) Down Button | 20) Volume Up/Down Control |
| 9) Left / Fast Reverse Button | 21) Headphone Jack 2 |
| 10) DC Input Jack | 22) Headphone Jack 1* |
| 11) AV Jack | 23) Charge Indicated LED |
| 12) AV in/out SW | |


* Using headphone jack 1 will disable the internal speakers

G. Remote Control

- Pull out the insulating tab to connect the battery. Aim the front of the remote directly at the sensor on the player. If the remote control range gradually decreases the battery probably needs replacing with a new CR2025 or equivalent coin cell type. Instructions to replace the battery are illustrated on the underside of the remote control .
- If the Remote Control is not to be used for a long time, remove the battery to avoid corrosion damage caused by battery leakage.

WARNING: Dispose of the lithium battery in an environmentally responsible manner. Do not dispose of a lithium battery in a fire as the battery will explode! Please observe lithium battery warning on page 5.

- 1) Setup Button
- 2) Up Button
- 3) Skip-Button
- 4) EnterButton
- 5) Reverse/LeftKeypad
- 6) Down Button
- 7) Numeric Buttons
- 8) Display Button
- 9) Zoom Button
- 10) SD/DVD Button
- 11) Skip+ Button
- 12) A-B RepeatButton
- 13) Forward/RightKeypad
- 14) 1/AllRepeatButton
- 15) Stop Button
- 16) Menu Button
- 17) Subtitle Button
- 18) Audio Button
- 19) Play/Pause Button

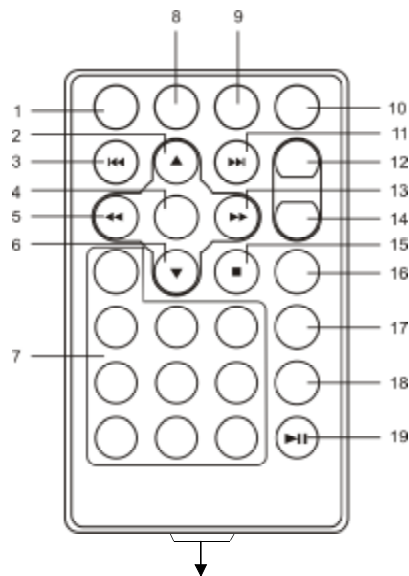

Pull out plastic tab to connect the battery.

H. Loading and Playing a Disc

- a. After connecting power to the unit, power on “DVD player” with the power switch. The power indicator will light.
- b. Open the disc tray by sliding the OPEN switch in the direction of the arrow. Place a disc in the tray with label side facing up.
- c. Close the tray by pressing the area marked “PRESS” .The unit will load the disc and start playing.
- d. Rotate BRIGHTNESS and VOLUME to adjust the LCD’s brightness and the DVD player’s volume.
- e. Press the STOP (■) button during playback. One press allows re-start from the stopping point by pressing the play button. Two presses and play will re-start from the beginning of the disc.

I. Basic Operation

POWER	Turn the unit on/off
OPEN	Remove/ load disc
PLAY	Start Play/Execute item or setting
PAUSE	Press for still picture and again to re-start play.
STOP	Press once to stop and restart at the stop point Press twice to stop and restart at the beginning of the disk.
SKIP+/NEXT	Go to the next chapter, track or scene during play back
SKIP-/PREVIOUS	Go back to the previous chapter, track, scene, photo or song during play back
FORWARD/RIGHT	Scan forward at 2, 4, 8 ,16 or 32 times speed; move right in Menu Navigation
REVERSE/LEFT	Scan backward at 2, 4, 8 ,16 or 32 times speed; move left in Menu Navigation
UP/DOWN	Used to move up or down for Menu Navigation
ENTER	Confirm choice or execute function.
NUMBERS	Select track,chapter or file number.
MENU	Display the main menu of the disc
1/ALL REPEAT	Repeat playtitle, chapter, track or song.
A-B REPEAT	Repeat a specific portion from point A to point B of the disc.

DISPLAY	Display information (title, chapter, track, time, etc.)
SUBTITLE	Select the subtitle language and turn it on/off
AUDIO	Select the audio language
ZOOM	Enlarge an image to 2, 3, 4 ,1/2,1/3 or 1/4 times the original size.
SETUP	Display the setup menu to select and set items, and exit the setup menu.
WIDE	On the player only: change between wide screen and 4:3 picture aspect ratio.


J. Menu

A DVD is divided into sections called titles and chapters. When you play a DVD, a root menu of the disc will appear on the screen of your TV or Monitor. The contents of the menu vary from disc to disc. Press MENU during playback to display the menu. Some DVDs only allow you to select disc playback options using the DVD root menu.

K. Display

1. PLAYING TIME AND REMAINING TIME

- a. During playback press the 'DISPLAY' button to display the current Title Number (1), the total Number of Titles (2), the current Chapter Number (3), the total Number of Chapters (4), and the Playing elapsed Time for the title (5).

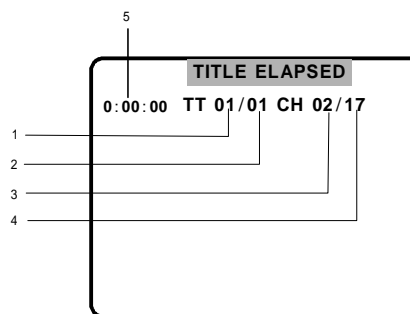

Title, Chapter Number and Time Screen Display

b. Pressing 'DISPLAY' repeatedly will provide the following sequential options below :

 
TITLE ELAPSED: The elapsed time of the title

TITLE REMAIN : The remaining time of the title

CHAPTER ELAPSED: The elapsed time of the chapter

CHAPTER REMAIN: The remaining time of the chapter


DISPLAY OFF: The DVD's time information is removed from view.



2. SUBTITLE

During disc playback press 'SUBTITLE' to select the subtitle language you desire*, with the current Subtitle Language Number (1) and the total Number of Subtitle Languages (2) displayed. If there are multiple languages press 'SUBTITLE' again to select another subtitle language. To turn subtitles OFF, press the 'SUBTITLE' button until 'SUBTITLE OFF' is displayed. The Subtitle display will disappear automatically if the 'SUBTITLE' button is not pressed again within 3 seconds.

* Some DVDs only allow access to this function through the DVD menu

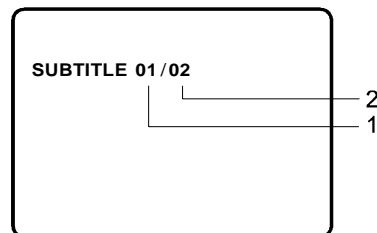


Subtitle Screen Display

3. AUDIO

During playback press 'AUDIO' to select the audio language you desire*, with the current Audio Channel Number (1) and the total number of Audio Channels (2) displayed. Press AUDIO again to select another audio language. The audio display will disappear automatically if the 'AUDIO' button is not pressed within for 3 seconds.

* Some DVDs only allow access to this function through the DVD menu.

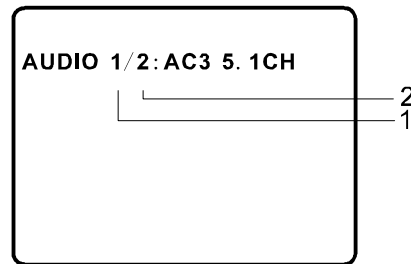


Audio Language

4. ZOOM

During playback press 'ZOOM' to enlarge the picture by 2X, 3X, 4X, 1/2X, 1/3X or 1/4X.


- (1) Press "ZOOM" one time, the picture will be enlarged 2X.
- (2) Press "ZOOM" a second time, the picture will be enlarged 3X.
- (3) Press "ZOOM" a 3rd time, the picture will be enlarged 4X.
- (4) Press "ZOOM" a 4th time, the picture will be enlarged 1/2X
- (5) Press "ZOOM" a 5th time, the picture will be enlarged 1/3X
- (6) Press "ZOOM" a 6th time, the picture will be enlarged 1/4X
- (7) Press "ZOOM" a 7th time, the picture will return to normal size.

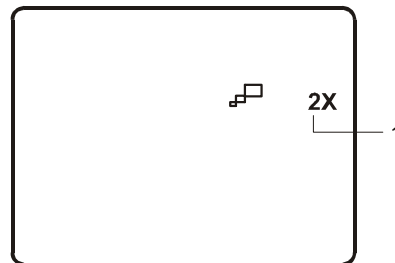

Zoom


5. A-B REPEAT

- a. During playback press 'A-B' to once to set the Starting Point A.

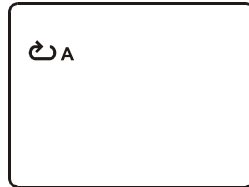


A-B Repeat Starting Point

- b. Press 'A-B' a second time to set the Ending Point B and the player will repeatedly play the part between Point A and Point B.

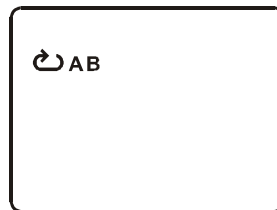

A-B Repeat Ending Point

- c. Press A-B a third time to cancel A-B repeat and resume normal playback.

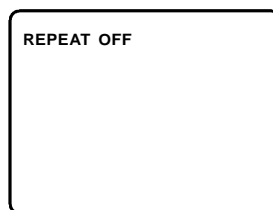

A-B Repeat Off

6. 1/ALL REPEAT

a. During playback press '1/ALLREPEAT' repeatedly to cycle through the repeat modes.


CHAPTER: Repeat the current chapter

TITLE: Repeat the current title

ALL: Repeat all chapters and titles

REPEAT OFF: Resume normal playback


The 'Chapter' repeat display is shown below:

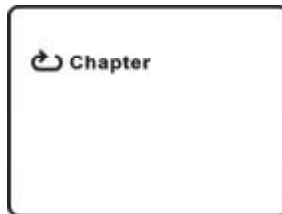

Chapter Repeat


L. Playing Audio CDs

When playing an audio CD press the DISPLAY button repeatedly on the remote to view play time information. The options below are displayed in following sequence.

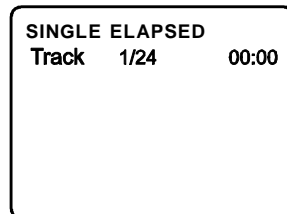

Single Elapsed When Playing Audio CDs


CD Display Mode

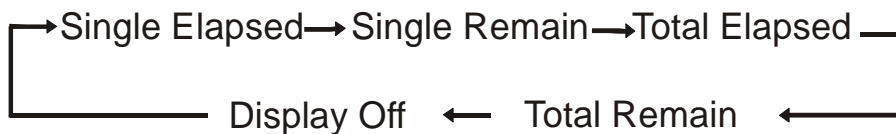

- TOTAL ELAPSED:** The current track playing and the total time that the CD has been playing.
- TOTAL REMAIN:** The current track playing and the amount of time remaining on the CD.
- DISPLAY OFF:** The CD time Information will not be displayed.


1. A-B REPEAT

- a. During playback press 'A-B' once to set the Starting Point A.

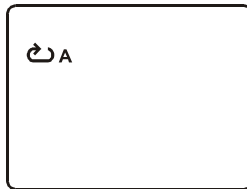


A-B Repeat Starting Point

- b. Press 'A-B' a second time to set the Ending Point B and the player will repeatedly play the part between Point A and Point B.

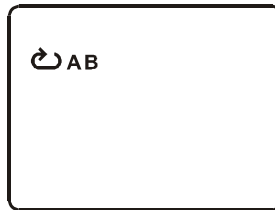

A-B Repeat Ending Point

- c. Press A-B a third time to cancel A-B repeat and resume normal playback.

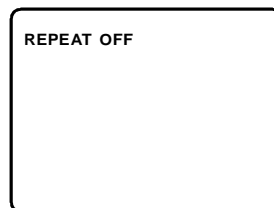

A-B Repeat Off

2. 1/ALL REPEAT

a. During playback press '1/ALLREPEAT' repeatedly to cycle through the repeat modes.

TRACKCHAPTER: Repeat the current track

ALL: Repeat all tracks

REPEAT OFF: Resume normal playback

The 'Chapter' repeat display is shown below:



Track Repeat

M. Playing MP3 Discs

MP3 is a format for storing digital audio. An audio CD-quality song is compressed into the MP3 format with very little loss of audio quality while taking up much less disc space. CD-R /RW discs that have been encoded in MP3 format are compatible with this system.

1. Open the disc tray by sliding the OPEN switch in the direction of the arrow and place a disc into the tray with the label side facing up.
2. Close the tray by pressing the area marked "PRESS" on the disc door.
3. Using the LEFT button highlight the AUDIO icon in the main menu page.
4. Press OK button to automatically play the first song. The audio tracks are displayed on the left side of the screen. Artist information is displayed on the right of the screen when available. Use the UP or DOWN buttons to select the desired track then press the OK button to play.

USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- Repeat One (repeat playback of a song)
- Repeat All (repeat playback of all the songs)
- Repeat Off (normal playback)

As you toggle through the options, the repeat mode changes. The selected repeat mode loops repeatedly until you turn it off.

N. Playing SD/MMC/MS Card / USB disc

- 1). Insert the SD/MMC/MS Card/USB disc into SD/MMC/MS card slot/USB slot.
- 2). Press the SD/DVD Button on the Remote Control to access the SD Menu.

Photo

- 3). Using the cursor buttons move the selection box to "Photo". Press ENTER button to access the Slide Show mode. The photos will automatically display one after another.
- 4). Press ENTER again to access the Pause. The player will display a single image. You can use the PREV. and NEXT button to select a photo.
- 5). Press ENTER three times to enter Digest mode. Thumbnail images of the photos appear in a table. Use the Left and Right button to navigate through the thumbnails.

Audio

- 6). Using the LEFT button highlight the AUDIO icon in the main menu page.
- 7). Press OK button to automatically play the first song. And the audio tracks are displayed on the left side of the screen. Artist information is displayed on the right of the screen when available. Use the UP or DOWN buttons to select the desired track then press the OK button to play.

O. Using An USB Memory Device

- 1). Connect the USB memory device to the USB Adapter Cable female connector.
- 2). Connect the USB Adapter Cable male connector to the DVD player.
- 3). Upon connecting the USB Adapter cable, the main menu page is displayed. When the PHOTO category is selected, if the USB memory device contains image files, the images will be displayed. Refer to steps 3, 4, and 5 above. When the AUDIO category is selected, if the USB memory device contains audio files, the files will be displayed as tracks and played.

P. SETUP

Press 'MENU' on the DVD player or to display the Main Menu on the screen.

1. General Setup Page

- 1) Remove the DVD disc from the player. Use the cursor buttons move the selection box to SETTING and press the ENTER button.
- 2) Press the ENTER button again to access the sub menu.
- 3) Press the ▲ or ▼ button to select the the sub menu.
- 4) Press ►► to enter the sub menu.
- 5) Press the ▲ or ▼ button to select the sub menu and press ENTER to confirm your selection.
- 6) Repeat steps 3-5 for other menus.

NOTE: Press ◀◀ to return the previous menu.

a). TV DISPLAY

The sub menu consists of Normal /PS (pan and scan), Normal /LB (4:3 aspect ratio) and Wide (16:9 Wide Screen).

b). SCREEN SAVER

ON: Enables screen saver

OFF: Disables screen saver

NOTE: The DVD player will enter the Screen Saver mode after approximately five minutes if the same image remains on the screen.

c). LAST MEMORY

The last position memory function is only activated when the disc tray is opened and the last memory function is set to ON.

ON: The unit will return to the last position on the disc.

OFF: The unit will not return to the last position on the disc.

d). FADE OPTION

The fade option controls the transition from one photo to another.

WT	Wipe from top
WLT	Wipe left top diagonal
TCH	Top/Bottom Horizontal Center
TCV	Left/Right Vertical Center
WH	Vertical bars
WV	Horizontal bars
DTC	Fade box
FIFO	Morph to another picture

e). SLIDE WITH MP3

The ON setting will allow an MP3 file to be played while the slide show is displayed. The factory setting is OFF. Select ON or OFF.

f). SLIDE TIME

Select the slide show display time for each photo (3, 5 or 8 seconds). The factory setting is five seconds.


2.Video Setup Page

- 1) Press the ◀ or ▶ button to select "Video Setup Page", Press ENTER to enter the video setup page.
- 2) "Brightness" is highlighted.
- 3) Press the ▲ or ▼ button to select the other menus in the video setup page.
- 4) Press Enter to enter the sub menu.
- 5) Press the ◀ or ▶ button to adjust the quantity and press the ENTER to confirm your selection.
- 6) Repeat steps 3-5 for other menus.

Note: Press **ENTER** to return the previous menu:

- a) Brightness**
- b) Contrast**
- c) Saturation**
- d) Hue**

3.CLOCK PAGE

Use the cursor buttons to move the selection box to CLOCK PAGE () and press the ENTER button.

This page includes:

CLOCK SETTING
ALARM SETTING

ALARM MODE
DATE SETTING

CLOCK SETTING: Allows the time to be set. Select the hours, minutes or AM/PM display. Use the right button to select the hour. Using the UP or DOWN buttons set the hour to the correct time. Repeat for the minutes and AM/PM. Press ENTER to confirm the setting. Press the LEFT button to return to the main menu.


NOTE: If the DVD player power off for more than 10 minutes, the clock , calendar and alarm will have to be reset.

ALARM MODE: Sets the alarm on or off.

ALARM SETTING: Allows the alarm time to be set. Select the hours, minutes or AM/PM display. Use the right button to select the hour. Using the UP or DOWN buttons set the hour to the correct time for the alarm to sound. Repeat for the minutes and AM/PM. Press ENTER to confirm the setting. Press the LEFT button to return to the main menu.

DATE SETTING: Allows the month, date and year to be set. Select the month, date or year display. Use the right button to select the month. Using the UP or DOWN buttons set the month. Repeat for the date and year. Press ENTER to confirm the setting.

3. PREFERENCE PAGE

- 1) Use the cursor buttons to move the selection box to the PREFERENCE PAGE  and press the ENTER button. Press ENTER to enter the preference page.
- 2) Press the ENTER button, "Audio" is highlighted.
- 3) Press the ▲ or ▼ button to select the other sub menus in the preference page.
- 4) Press ►► to enter the sub menu.
- 5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.
- 6) Repeat steps 3-5 for other menus.

NOTE: Press ◀◀ to return the previous menu.

NOTE: Language and subtitle selection is only available for discs that are recorded in different languages. If the selected language is not available, the player will play and display on the screen the original language contained in the disc.

a) AUDIO: Selects the audio language you desire*. Use the UP or DOWN buttons to select another audio language.

* Some DVDs only allow access to this function through the DVD menu.

b) SUBTITLE: Selects the subtitle language you desire*. Use the UP or DOWN buttons to select another subtitle language. To turn subtitles OFF use the UP or DOWN button and set to OFF.

* Some DVDs only allow access to this function through the DVD menu.

c) DISC MENU: Selects the menu language you desire*. Use the UP or DOWN buttons to select another menu language.

* Some DVDs only allow access to this function through the DVD menu.

d) PARENTAL

Select 'Parental' by pressing the ▲ or ▼ button in the preference page. Press ►► to enter the sub menu.

- 1 KID SAFE (Kid safe)
- 2 G (General audiences)
- 3 PG (Parental guidance suggested)
- 4 PG 13 (Parents strongly cautioned)
- 5 PGR (Parents very strongly cautioned)
- 6 R (Restricted)
- 7 NC 17 (No one 17 and under admitted)
- 8 ADULT (Adult)

Select the parental level you desire for discs with lock-out function or multiple rating levels. These are listed from the lowest level (1 Kid Safe) to the highest level (8 Adult). Press ENTER and input 4 digit password, then press ENTER again to confirm the parental level setting.

NOTE: The level of 8 Adult is the factory default.

e) DEFAULT

Select 'DEFAULT' by pressing the ▲ or ▼ button in preference page. Press ►► to enter the sub menu. Press ENTER to make to return to the factory settings.

NOTE: The parental setting is not affected by the default reset function. The default password is **3308**. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record this master password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs cannot.

4. PASSWORD SETUP PAGE

Use the cursor buttons to move the selection box to the PASSWORD SETUP PAGE (🔒). Press ENTER to enter the password page. Press the ◀◀ or ▶▶ button to select.

Press ENTER twice to enter the Password Change Page. Input the Old Password or the Default Password, the New Password and the Confirmed New Password. Press ENTER to confirm the change.

Note: **3308** is the default master password.

5. EXIT SETUP MENU


Use the cursor buttons to move the selection box to the EXIT SETUP MENU (✕). Press ENTER to exit the menu or press the SETUP button.

Q. CLOCK and CALENDAR Display

With no disc inside the player, press "MENU" to display the Main Menu on the screen. Using the cursor buttons move the selection box to "CLOCK" or "CALENDAR". Press the Enter button. The CLOCK or CALENDAR page will be displayed on the screen.

R. Connecting to a TV or Another Monitor

1. You can also connect the DVD player to a TV to enjoy high quality stereo sound and picture on another monitor.
 - a. Position the AV In/Out Switch to "Out" Position.
 - b. Connect one end of the audio/video cable's black 3.5mm jack plug into the unit's AV connector and connect the other end to the AUDIO INPUT connectors on your TV or Monitor through AV adapter cable (white = left channel, red = right channel, yellow=video).

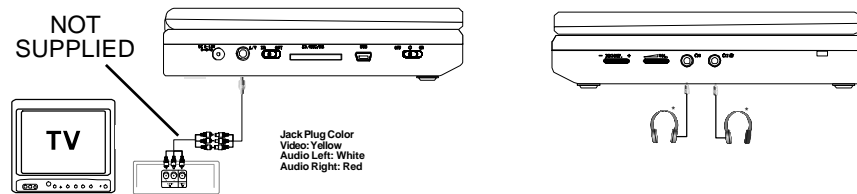

Note: Optional wired headphone may be used with the unit. Simply plug in the headset to either Headphone 1 Jack or Headphone 2 Jack on the right side of the DVD.

Plugging into Headphone Jack 1 disables the internal speakers.

2. You can enjoy the other audio and video source input from AV connector.
 - a. Position the AV In/Out Switch to "In" Position.
 - b. Connect one end of the audio/video cable's black 3.5mm connector into the unit's AV connector, and connect the other end to the AUDIO Output connector on your Camcorder or other DVD through the AV adapter cable(white = left channel, red = right channel, yellow=video).

Note: Please don't connect other AV signal source with the AV connector when the unit is in "Out" Mode.

S. Rechargeable Battery Installation and Use

The DVD player utilizes a set of long-life Li-Polymer batteries to provide for portability. Li-Polymer batteries feature high storage capacity and low level of degradation. The Li-Polymer batteries do not have “Memory Effect” and thus can be recharged safely regardless of whether the battery is fully or only partially discharged. Please fully charge the battery prior to first use.

NOTE: When the DVD player is used with the battery as a power source, ensure that the battery has been charged for at least eight hours prior to connecting it to the DVD player.

Do not short the battery terminals, store the battery in a metal container, or leave the battery in a humid or damp environment. Ideally, store the battery in an airtight container with desiccant or other dehumidifying agent. Each full recharge takes approximately five-hours and one full charge can provide power to the player for up to 3 hours.

Precautions related to Battery Recharge:

1. Once the battery is fully discharged, immediately recharge (regardless of whether you plan to use battery or not) in order to maximize battery life.
2. To charge the battery, please connect the power jack directly into the unit. During recharge, the red indicator will stay on. Once fully recharged, the red light will turn off. At this point you may remove the wall plug and stop charging.

Using and Maintaining your Rechargeable Batteries

1. Please make sure you always use **only** the AC adapter included with the player to recharge your batteries.
2. Recharge efficiency will degrade when environmental temperatures drop below 50°F (10°C) or exceed 95°F (35°C).
3. Please remove battery from the player and store it properly if the player is not to be used for long time. During this period, please recharge the battery at least once every two months to avoid irreparable damage to the battery.

3. Powering the player by battery

Before first use you must fully charge the battery: please see the preceding section about how to charge it.

Installing the Battery Pack:


1. First, make sure the player is in "Power Off" mode and that the AC power supply has been disconnected.
2. Close the display panel.
3. Taking care to align the connector and the guide pegs, push the battery towards the rear of the player until it locks into position. The lock position is indicated by a click. The battery will fit snugly to the player.



Installing the DVD Player Battery

Removing the Battery Pack:

1. First, make sure the player is in "Power Off" mode and the AC adapter supply has been disconnected.
2. Press the release button on the side of battery.
3. Pull the battery away from the player.

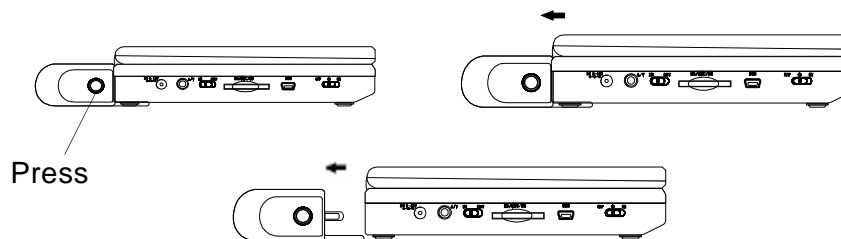

Removing the DVD Player Battery

Low Battery

The DVD player may fail to start up or read the disc if the battery is low. When the battery is very discharged during playback, you may see some picture abnormalities before the picture goes off. If the DVD player loses power move the power switch to 'OFF'.

T. Specifications

Signal system: NTSC

Panel size: 8 inch

Audio frequency response: 20 Hz to 20 kHz

Video output: 1 V_{p-p}/75 Ohm, unbalanced

Audio output: 1.4V_{rms}/10kOhm

Audio S/N: Better than 60 dB

Dynamic range : Better than 85 dB

Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm

Power source: DC 9V,1A

Power consumption: 8 W

Operating temperature: 41~95°F (5~35°C)

Battery Type: Lithium-Polymer

Weight : 3.95lb (0.71 kg)

Dimensions (W x D x H): 7.95 X 6.10 X1.46 inches

202 X155 X37mm

Specifications of product subject to change without notice. Product may vary slightly from that which is shown.

U. Troubleshooting

PROBLEM	SOLUTION
No sound or distorted sound	<ul style="list-style-type: none">• Make sure your DVD is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	<ul style="list-style-type: none">• You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
Picture is distorted	<ul style="list-style-type: none">• The disc might be damaged. Try another disc.• It is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	<ul style="list-style-type: none">• Some discs have sections that prohibit rapid scanning or title and chapter skip.• If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.

Troubleshooting (Cont)

PROBLEM	SOLUTION
IR sensor in operative	<ul style="list-style-type: none">• Verify that the batteries in the remote are fresh.• Verify that the remote sensor eye is not obstructed.• Verify that the infrared transmitter is affixed over the sensor eye of the component to be controlled.
Disc won't play	<ul style="list-style-type: none">• Insert a disc with the label side facing up.• Check the type of disc you put into disc tray. This DVD only plays digital video discs, audio CDs and MP3s.
Play starts, but then stops immediately	<ul style="list-style-type: none">• Both the unit and the disc are coded by region. If the regional codes don't match, the disc can't be played. This DVD is Region Number 1.• The disc is dirty. Clean it.• Condensation has formed. Allow player to dry out.



90 DAY LIMITED WARRANTY

Applies to Audiovox Video Products

AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 days from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory/media devices, gaming devices, discs, speakers, accessories, or electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

U.S.A. : AUDIOVOX ELECTRONICS CORPORATION, 150 MARCUS BLVD, HAUPPAUGE, NEW YORK 11788
I 1-800-645-4994

CANADA : CALL 1-800-645-4994 FOR LOCATION OF WARRANTY STATION SERVING YOUR AREA

128-5556G

© 2007 Audiovox Electronics Corporation



© 2008 Audiovox Electronics Corporation

128-8055A

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>