


# **INSTALLATION MANUAL**

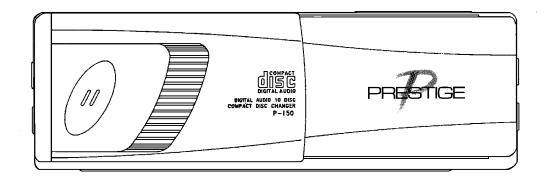


# **COMPACT DISC CHANGER SYSTEM**




**MODEL P-150** 

# **PACKING LIST**


## **MAIN UNIT**

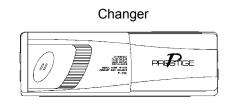

## **INSTALLATION PARTS**

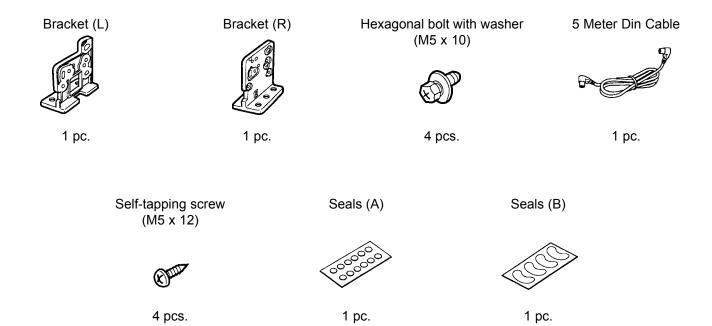

## **OTHER ACCESSORIES**

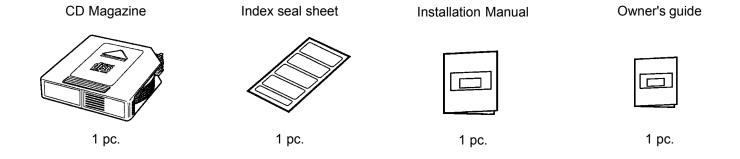


## BEFORE INSTALLING THE UNIT

## **Transport Lock Screws**

The mechanism in the CD changer is "locked" into place during shipment by the transport screws. Be sure to remove the screws prior to installation.

### Caution

After removing the transport lock screws, place the supplied seals (A) over the screw holes. These seals are used to keep dust out of the unit, which could cause a malfunction.

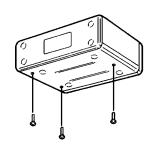

## **Installation and Wiring Precautions**

To prevent a short-circuit,

Be sure to turn off the ignition and remove the negative (-) battery cable, prior to installation. Connect power wires last.

### Note

If the changer is to be installed in a car that is equipped with an on-board drive or navigation computer, do not disconnect the battery cable. If the cable is disconnected, the computer memory may be lost. Under these conditions, use extra caution during installation, not to cause a short circuit.

**2** Do not install the unit in the following locations.

Locations exposed to direct sunlight.

Where hot air is discharged from the car heater.

In areas subject to extreme temperatures.




- Incorrect installation can cause the sound to "skip" when playing a disc. Mount the unit firmly in place, using the supplied brackets and screws.
- **A** Be careful not to damage the car wiring.
- Be sure to use the supplied screws.

Be careful not to snag any wires when tightening screws.

Do not use any of the screws that are part of the brake or steering system, to install the unit.

This unit cannot be installed on its side, end, or upside down. Installation in such positions will cause malfunctioning of the mechanism.

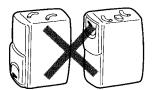






# INSTALLATION

The unit can be installed horizontally, vertically or at a 45° angle. The position of the built-in anti-vibration springs (left and right side), must correspond to the mounting position chosen. If the springs are not set correctly for the type of installation chosen, the anti-vibration compensation will not be effective and vibration may cause the disc to skip.

After setting the built-in anti-vibration springs, place the supplied Seals (B) over the holes. These seals are used to keep dust, which could cause a malfunction, out of the unit.


### HORIZONTAL INSTALLATION

Set the 4 anti-vibration springs to position "H".

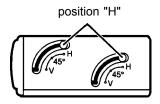


### **VERTICAL INSTALLAITON**

Set the 4 anti-vibration springs to position "V".

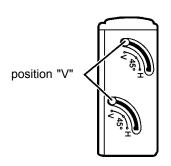


### 45° ANGLE INSTALLATION

Set the 4 anti-vibration springs to position "45°".

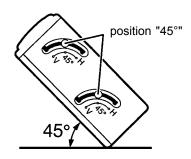


PROCEDURE FOR HORIZONTAL INSTALLATION Attach bracket (L) and bracket (R) to each side of the unit, using the hexagonal bolts with washer base (M5 x 8). Anti-vibration springs position Bracket (L) NOTE: Use seals (A) to cover unused mounting holes on sides of unit. Hexagonal bolt Bracket (R) with washer base (M5 x 8) 2 Determine the mounting location, and drill four mounting holes. Never mount the unit near the fuel tank. Drill holes 4mm in diameter.

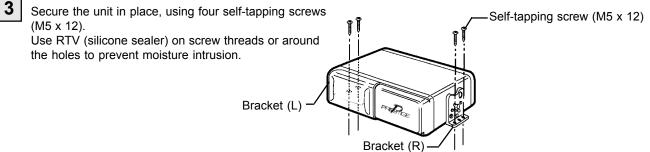

## PROCEDURE FOR VERTICAL INSTALLATION

### Note

If the anti-vibration spring position has been changed and verified for vertical mounting (as shown on page 3), start with step 2.

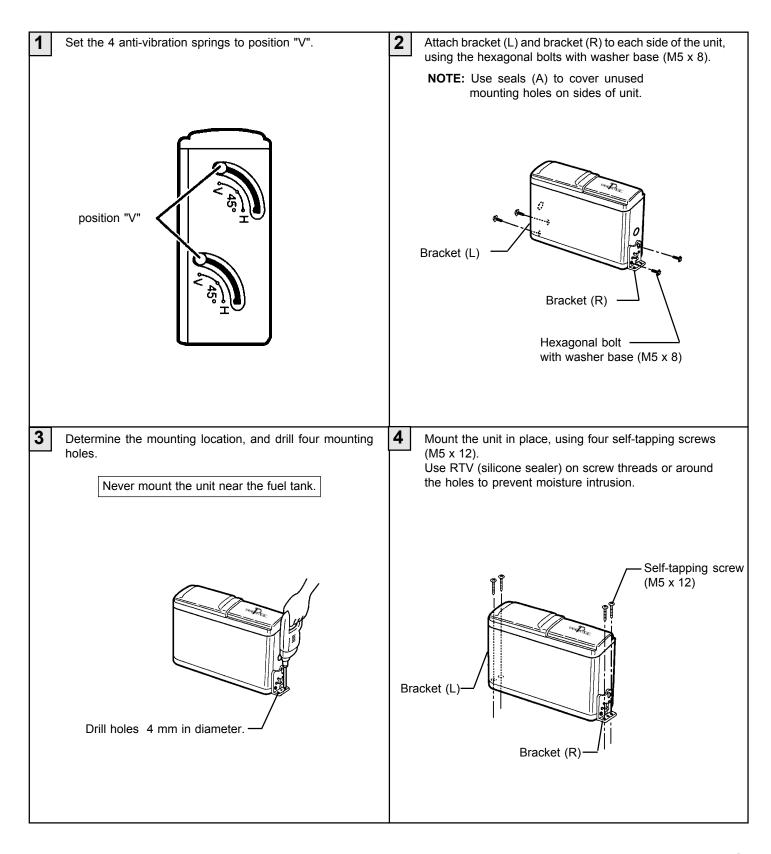


## PROCEDURE FOR 45° ANGLE INSTALLATION

### Note

If the anti-vibration spring position has been changed and verified for 45° angle mounting (as shown on page 3), start with step 2.

Set the 4 anti-vibration springs to position "45°". 2 Attach bracket (L) and bracket (R) to each side of the unit, using the hexagonal bolts with washer base (M5 x 8). NOTE: Use seals (A) to cover unused mounting holes on sides of unit. position "45°" Bracket (L) Bracket (R) Hexagonal bolt with washer base (M5 x 8) 4 Determine the mounting location, and drill four mounting Mount the unit in place, using four self-tapping screws holes.  $(M5 \times 12).$ Use RTV (silicone sealer) on screw threads or around the holes to prevent moisture intrusion. Never mount the unit near the fuel tank. Self-tapping screw (M5 x 12) Drill holes 4mm in diameter. Bracket (L) Bracket (R)

# **VEHICLE WIRING**

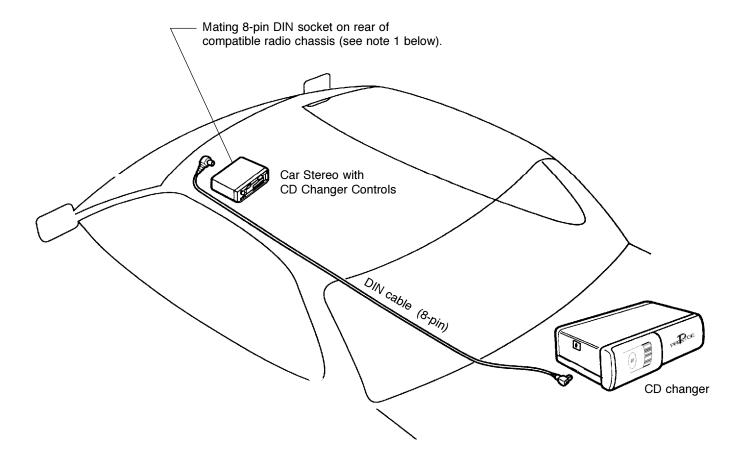

**NOTE:** 1. Check with your Prestige car audio dealer to be sure your stereo is directly compatible with this CD changer.

2. Wiring instructions for use with FM Modulator/ Commander Systems are included with the P-MC3 and P-MCR4 accessories. Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com