

# MODEL APS-15

Owner's Manual • Manuel D'Instructions • Manual Del Sistema  
Active/Passive Operation • Fonctionnement Du Actif/Pasif • Operación Del Activa/Pasiva

## REMOTE CONTROL AUTO SECURITY SYSTEM DU SYSTÈME DE SÉCURITÉ AUTO À COMMANDE À DISTANCE DE SEGURIDAD DE AUTOMÓVILES A CONTROL REMOTO

TABLE OF CONTENTS	TABLE DES MATIERES	INDICE
Features & Options .....1	Fonctions et Options .....6	Características y Opciones .....11
<b>Operating the System</b>	<b>Fonctionnement du Système</b>	<b>Operación del Sistema</b>
Arming the System Active .....2	Armement dy système Actif .....7	Activación del sistema Activa.....12
-Arming the System Passive	-Armement dy système Pasif	-Activación del sistema Pasiva
- Protection while the system is armed	-Protection lorsque le système est armé	-Protección mientras el sistema está activado
Disarming the System .....3	Désarmement du système .....8	Desactivación del sistema .....13
-Intrusion Warning Signals	-Signaux d'avertissement d'effraction	-Señales de advertencia de intrusión
-Valet System Override Switch	-Interrupteur d'invalidation du système/valet	-Interruptor derivante de sistema
Remote Panic Operation .....4	Fonctionnement panique à distance ..9	Operación remota de emergencia..14
System Functions Chart .....5	Fonctions du système .....10	Funciones de sistema .....15



128-4246A  
1 of 20

Rev. A - Warranty revision : "Audiovox West" address deleted. 8-12-94



## Model APS-15 Owner's Manual

### Active / Passive Operation

#### **REMOTE CONTROL AUTOMOTIVE SECURITY SYSTEM**

Congratulations! Your purchase of this state-of-the-art security system expresses a deep concern for the security of your vehicle, its contents, and passengers. To fully appreciate the many functions and safeguards incorporated in this system, please spend a few minutes reading this manual. You may find unexpected features that could mean the difference between “protected” and “fully protected”.

#### **FEATURES AND AVAILABLE OPTIONS:**

- 2 Keychain Transmitters are included
- Instant Arming and Disarming with a Remote Keychain Transmitter
- Power Door Locks can be Locked and Unlocked at the same time with the Optional Power Door Lock Interface
- The Vehicle's Starter can be Disabled whenever the Alarm is Armed (requires an optional relay)
- A Concealed Valet/Emergency Disarm Switch will by-pass the Alarm in the event your Transmitter is lost, or if you wish to deactivate the Alarm for Service Work
- Selectable Active/Passive operation
- Programmable 6 Tone (Multi Tone) Siren Included
- Visual LED Arm / Disarm indicator with Audible “chirp” confirmation
- 6 Function Dash Mounted LED Alarm Status Indicator
- Remote Keychain Panic allows Alarm Activation in Emergencies at distances up to 75 feet from the vehicle
- Intrusion Alert with Dual Zone Monitoring lets you know When and How the Alarm was activated in your absence

### **ARMING THE SYSTEM (CHANNEL 1): ACTIVE**

1. Turn off the engine, exit the vehicle, and close and lock all doors, hood, and trunk.
2. Momentarily depress the button on the keychain transmitter. The siren will "chirp" once, the doors will lock (optional), and the dash mounted LED will begin to slowly flash.

**WARNING !** Excessive pressure on the transmitter button will damage the internal components on the circuit board. All that is required is a light push to the button.

**NOTE:** If the siren "chirped" three times when ARMING, then one of the entry points (hood, trunk, doors) has been left opened. Closing the Hood, trunk, or door will correct the problem, and you **DO NOT** have to disarm the system to make the correction.

### **ARMING THE SYSTEM (CHANNEL 1): PASSIVE**

1. Turn off the engine, exit the vehicle, and close and lock all doors, hood, and trunk.
2. The dash mounted L.E.D. will begin flashing rapidly, indicating that the system is automatically (passive) arming. As an added convenience, the automatic passive arming will not begin until all doors and trunk lid are closed, allowing passengers to exit the vehicle at their convenience.
3. In 30 seconds, you will hear a single, short "chirp" from the siren, indicating the system is ARMED. At this time, the dash mounted L.E.D. will begin to flash slowly, providing a visual indication that the system is fully ARMED.
  - 3A. If the optional door lock interface has been installed, the doors **WILL NOT** automatically lock when the 30 second arming time expires.
4. If you wish to ARM the system immediately, simply press and release the button on the keychain transmitter. The siren will "chirp" once, the doors will lock (optional), and the dash mounted L.E.D. will begin to slowly flash.

### **PROTECTION WHILE THE SYSTEM IS ARMED:**

1. Opening any door, hood, or trunk will cause the alarm to immediately sound. The siren will continue to sound for 60 seconds, then stop and automatically re-arm the vehicle. If the potential thief left a door opened, the siren will sound for four 60 second cycles, then re-arm and ignore the opened door.
2. Whenever the system is armed, the Red dash mounted L.E.D. indicator will slowly flash. This serves as a visual deterrent to the potential thief. The L.E.D. is a very low current bulb, and will not cause the vehicle's battery to drain, even when left unattended for extended periods.
3. If the starter cut relay (optional) is installed, whenever the system is armed, the vehicle's starter will be bypassed. If a thief should choose to ignore the siren, the vehicle can not be started.

### **DISARMING THE SYSTEM (CHANNEL 1):**

1. As you approach the vehicle, press and release the button on the key chain transmitter.  
**WARNING!** Excessive pressure on the transmitter buttons will damage the internal components on the circuit board. All that is required is a light push to the button.
2. The siren will “chirp” 2 times, indicating the system is DISARMED.
  - a) If the door lock interface (optional) is installed, the vehicle’s doors will automatically unlock.
- 3A. ACTIVE: The dash mounted L.E.D. will turn off, and remain off until the system is armed.
- 3B. PASSIVE : Never attempt to disarm the system from a distance that prevents you from opening a door within 30 seconds. Since the system is programmed for passive arming, it will begin to re-arm until a door is opened. Opening the door will suspend the passive arming cycle.

### **INTRUSION WARNING SIGNALS:**

The system will inform you if an intrusion attempt has occurred while you were away from the vehicle. If an intrusion attempt has occurred, the siren will “chirp” 4 times when disarming the system. Enter the vehicle and observe the dash mounted L.E.D. for further information.

1. If the L.E.D. is flashing two times...pause...two times...etc., then an intrusion attempt was made to the hood, trunk, or any optional sensors that were added to the vehicle.
2. If the L.E.D. is flashing three times...pause...three times...etc., then an intrusion attempt was made through one of the vehicles doors.

These intrusion warning indicators are stored in the system’s memory, and will only be erased from memory when the ignition key is turned on.

### **VALET/SYSTEM OVERRIDE SWITCH:**

The “Valet” switch allows you to temporarily bypass all alarm functions, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in the valet mode, all alarm functions are bypassed, however, the remote panic feature and remote door locks (optional) will remain operational. To use the valet mode;

1. Enter the vehicle and turn the ignition key to the “on” position.
2. Move the valet toggle switch to the “on” position. The dash mounted L.E.D. will turn on solid, and remain on as long as the system is in the valet mode.
3. To return to normal operation, move the valet switch to the “off” position any time the ignition is on.

In the event you lose your transmitter, or if the transmitter fails to disarm the system, the valet switch can be used as a system override switch. Open the car door (the alarm **WILL** sound).

Turn the ignition key on, and move the valet switch to the "on" position. The alarm will stop sounding, and the vehicle can now be started.

**NOTE:** Always remember to move the Valet Switch back to the "off" position. This will ensure that the vehicle remains protected at all times.

**REMOTE PANIC OPERATION (CHANNEL 1):**

The arming button on your key chain transmitter also functions as a "panic" switch for instant activation of the alarm in emergency situations. To use the remote panic switch;

1. Press and hold the button on the key chain transmitter for 3 seconds or more. The alarm will immediately sound.
2. To stop the alarm, press and release the button on the key chain transmitter. If the button is not pressed, the alarm will automatically stop after 60 seconds.

**WARNING:** Excessive pressure on the transmitter buttons will damage the internal components on the circuit board. All that is required is a light push to the button.

**APS-15 SYSTEM FUNCTIONS AT A GLANCE (ACTIVE/PASSIVE SYSTEMS)**

ALARM STATUS	DASH LIGHT	SIREN SOUND
DISARMED	OFF	OFF
ACTIVE ARMING	SLOW FLASHING	1 CHIRP
PASSIVE ARMING	RAPID FLASHING FOR 30 SECONDS	1 CHIRP
DISARMING	OFF	2 CHIRPS
TRIGGERED	CONSTANT FLASHING	CONSTANT SOUND
VALET "ON"	CONSTANT ON	BY-PASSED
PANIC "ON"	N/A	CONSTANT SOUND
INTRUSION HOOD/ TRUNK	2 FLASHES/PAUSE 2 FLASHES/PAUSE ETC.	4 CHIRPS WHEN DISARMING
INTRUSION DOORS	3 FLASHES/PAUSE 3 FLASHES/PAUSE ETC.	4 CHIRPS WHEN DISARMING
DOOR, HOOD OR TRUNK LEFT OPEN DELAY EXIT LIGHT ON WHILE ARMING	SLOW FLASHING	3 CHIRPS WHEN ARMING

**Your System Has These Features Activated**

- |                         |                          |                 |                          |
|-------------------------|--------------------------|-----------------|--------------------------|
| No Lock in Passive Mode | <input type="checkbox"/> | Shock Detector  | <input type="checkbox"/> |
| Starter Cut-Out         | <input type="checkbox"/> | Motion Detector | <input type="checkbox"/> |
| Door Lock Interface     | <input type="checkbox"/> | Hardwire        | <input type="checkbox"/> |

Audiovox Corp.,

150 Marcus Blvd.

Hauppauge, N.Y. 11788

Form No. 128-4246A



## 60 MONTH LIMITED WARRANTY

*Applies to control modules, relays, transmitters, sensors and sirens.*

AUDIOVOX CORPORATION (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 60 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station or the Company at the address shown below.

This Warranty does not cover costs incurred for installation, removal or reinstallation of the product, or damage to vehicle electrical systems.

This Warranty does not cover batteries nor apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s).

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 72 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

The Company does not warrant that this product cannot be compromised or circumvented. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**U.S.A. :** AUDIOVOX CORPORATION, 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788 • (516) 231-6051

**CANADA:** AUDIOVOX CANADA LTD., 1070 KAMATO ROAD, UNIT 15, MISSISSAUGA, ONT., CANADA L4W-2W5 • (416) 629-1400

Form No. 128-4117D

**128-4246A**

7 of 20

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>