



Model PRO-9642
Owner's Manual

3 Button Remote Security System

FEATURES:

- ◆ 2 Three Button Programmable RF Transmitters
- ◆ Three Channel Receiver (capable of accepting 4 transmitters)
- ◆ Anti-scan Technology
- ◆ Remote Panic in all modes
- ◆ Protected Valet
- ◆ 7 Function LED - Arm / Disarm / Zone 1 / Zone 2 / Zone 3 / Valet / Arming
- ◆ Intrusion Alert with Memory
- ◆ Audible Arm / Disarm / Defective Zone / Tamper Confirmation
- ◆ Instant Siren Activation
- ◆ Low Current Horn Output
- ◆ True Last Door Arming (hardwire only)
- ◆ Defective Zone By-Pass
- ◆ Hardwire or Voltage Sense Selectable
- ◆ Active or Passive Arming Selectable
- ◆ Programmable Auto Lock On / Off
- ◆ Programmable Auto Unlock On / Off
- ◆ Programmable Door Lock Pulse Duration 1 Second / 3.5 Seconds/1 Sec L/ Dbl. U/L
- ◆ Programmable Active or Passive Door Locks
- ◆ User Programmable Permanent Chirp Delete
- ◆ On Command RF Chirp Delete from Transmitter
- ◆ 6 Tone Multi-Tone Siren
- ◆ RF Inhibit with ignition on
- ◆ Parking Light Flasher

OPTIONS:

- ◆ Single or Dual Stage Shock Sensor
- ◆ Starter Disable
- ◆ Remote Trunk Release
- ◆ Remote Keyless Entry
- ◆ Multiple Vehicle Capable
- ◆ Remote Starter
- ◆ Remote Power Window Roll Up
- ◆ Remote Garage Door Interface

ARMING THE SYSTEM - ACTIVE

1. Turn off the engine, exit the vehicle and close all doors, hood lid, and trunk lid.
2. Press and release the Arm / Lock button on the keychain transmitter.

- Red dash mounted LED begins to flash slowly.
- Parking Lights flash one time.
- Siren and / or Horn sounds one chirp.

If the siren sounds 3 chirps, then you have left a door, trunk, or the hood lid ajar. Simply close the opened entry point to provide full protection. If the siren/horn did not sound when arming, then the chirps have been turned off and you should refer to the section titled "ELIMINATING THE ARM / DISARM CHIRPS" in this manual.

- Doors Lock - Optional

SILENT ARMING - ACTIVE

1. Turn off the engine, exit the vehicle and close all doors, hood lid and trunk lid.
2. Press and hold the Arm / Lock button on the keychain transmitter for 2 seconds.

- Red dash mounted LED begins to flash slowly.
- Parking Lights flash one time.
- Siren/Horn will not sound.

If the siren/horn sounds 3 chirps, then you have left a door, trunk, or the hood lid ajar. Simply close the opened entry point to provide full protection.

- Doors Lock - Optional

ARMING THE SYSTEM - PASSIVE (AUTOMATIC)

1. Turn off the engine, exit the vehicle and close and lock all doors, hood lid, and trunk lid.
 - Red dash mounted LED begins to flash rapidly, indicating 30 second passive arming has begun.

2. Opening any protected entry point during the 30 second passive arming cycle will immediately suspend automatic arming and the 30 second passive arming cycle will re-start when all doors are closed. At the end of the passive arming cycle;

- Red dash mounted LED begins to flash slowly.
- Parking Lights flash one time.
- Siren and or Horn sounds one chirp

If the siren/horn did not sound when arming, then the chirps have been turned off and you should refer to the section titled "ELIMINATING THE ARM / DISARM CHIRPS" in this manual.

- Doors Lock - Optional

Door locking during passive arming is a selectable feature. The alarm can be programmed to allow the doors to lock only when arming using the keychain transmitter and they will not automatically lock during passive arming.

PROTECTION WHILE THE SYSTEM IS ARMED

- Opening any protected door, hood, or trunk lid will cause the alarm to immediately sound. The alarm will continue to sound for 30 seconds, then stop and continue to monitor all

protected entry points. If the thief left a door opened, the alarm will sound for six 30 second cycles, remain armed and ignore that triggered zone.

- Whenever the system is armed, the red dash mounted LED indicator will slowly flash. This serves as a visual deterrent to the potential thief. The LED is a very low current bulb and will not cause the vehicle's battery to drain, even when left unattended for extended periods.
- Whenever the system is triggered, the vehicle's parking lights will flash for the full 30 second alarm cycle, attracting visual attention to the vehicle.
- Optional - Whenever the system is armed, the vehicle's starting circuit will be bypassed. If the thief should choose to ignore the siren/horn, the vehicle can not be started.
- Optional - Any strong impact to the vehicle will cause the alarm to trigger for the full 30 second alarm cycle.
- Optional - Any mild impact to the vehicle will cause the alarm to sound a short series of warning tones.

DISARMING THE SYSTEM

1. As you approach the vehicle, press and release the Disarm / Unlock button on the keychain transmitter.

- Red dash mounted LED turns off.

If passive arming was selected during the installation, then the LED will start flashing rapidly, indicating that the system is re-arming automatically. Open any door to suspend the automatic arming.

- Parking Lights flash two times.

If the parking lights flashed three times, then the alarm was triggered in your absence. Before turning the key on, examine the LED to identify which zone was triggered.

- Siren / Horn sounds two chirps.

If the siren/horn sounds 4 chirps, then the alarm was triggered in your absence. Before turning the key on, examine the LED and refer to the INTRUSION WARNING SIGNALS section of this manual to identify which zone was triggered.

If the siren/horn did not sound when disarming, then the chirps have been turned off, and you should refer to the section titled "ELIMINATING THE ARM / DISARM CHIRPS" in this manual.

- Doors Unlock - Optional

SILENT DISARMING

1. As you approach the vehicle, press and hold the Disarm / Unlock button on the keychain transmitter for 2 seconds.

- Red dash mounted LED turns off.

If passive arming was selected during the installation, then the LED will start flashing rapidly, indicating that the system is re-arming automatically. Open any door to suspend the automatic arming.

- Parking Lights flash two times.

If the parking lights flashed three times, then the alarm was triggered in your absence. Before turning the key on, examine the LED to identify which zone was triggered.

- Siren/Horn does not sound.

If the siren and or horn sounds 4 chirps, then the alarm was triggered in your absence. Before turning the key on, examine the LED and refer to the INTRUSION WARNING SIGNALS section of this manual to identify which zone was triggered.

- Doors Unlock - Optional

WHILE THE SYSTEM IS SOUNDING

If during a triggered state, you wish to shut off the siren without disarming your security system, simply press and release any transmitter button other than the disarm button. This action will turn off the siren yet leave the vehicle fully armed and protected. This feature is particularly useful if you are aware of children playing near your vehicle that may accidentally trigger your security system. In this case you can cancel the siren sounding without disarming your security system.

INTRUSION WARNING SIGNALS

This system will inform you if an intrusion attempt has occurred while you were away from the vehicle. If an intrusion attempt has occurred, the siren/horn will chirp 4 times and the parking lights will flash 3 times when disarming the system. Enter the vehicle and observe the red dash mounted LED to identify which zone was triggered.

- ❶ If the LED is flashing one time...pause...one time...pause...etc., then an intrusion attempt was made to the optional shock sensor, or an accessory triggering device that may have been added to the system.
- ❷ If the LED is flashing two times...pause...two times...pause...etc., then an intrusion attempt was made to a hood or trunk pin switch that was added to the system, or to a light activated entry point if the alarm was installed using the voltage sensing feature.
- ❸ If the LED is flashing three times...pause...three times...pause...etc., then an intrusion attempt was made through one of the vehicle's doors.

These intrusion warning indicators are stored in the system's memory and will only be erased when the ignition key is turned on.

VALET SWITCH

The valet switch allows you to temporarily bypass all alarm functions, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, all alarm functions are bypassed, however the remote panic feature and remote door locks will remain operational. To use the valet mode, the system must first be disarmed either by using your keychain transmitter or by overriding the system, then:

1. Enter the vehicle and turn the ignition key to the on position.
2. Press and hold the valet pushbutton switch until the dash mounted LED turns on solid. The system will remain in the valet mode.

3. To return to normal operation, press and release the pushbutton switch any time the ignition is on.

NOTE : Always remember to return the system to the NON VALET mode after servicing to ensure that the vehicle remains protected at all times.

MANUALLY OVERRIDING YOUR SYSTEM:

USING THE VALET SWITCH MANUAL OVERRIDE

Your Security System can be disarmed without the use of the keychain transmitter. This is necessary, since you will need the ability to operate your vehicle if the transmitter is lost or its battery fails. If your system has been selected for Valet Switch manual override as indicated on the last page of this manual, to bypass the alarm system;

1. Open the vehicle door. The alarm will sound.
2. Turn the ignition key to the on position.
3. Within 5 seconds, press and release the valet pushbutton switch.

The alarm system will stop sounding and enter the (by-passed) mode. You can now start and operate the vehicle normally.

Typically this override mode is used only if the transmitter has become inoperative.

PROGRAMMING THE CUSTOM CODE MANUAL OVERRIDE

Unlike override switches easily found, and defeated, this security system allows the consumer to program a personal override code, offering a higher level of security. To take advantage of this option, programmable feature # 9 must be selected for the Custom Code Option. Consult your installation center for programming details. The system comes from the factory with a pre-programmed override code of 11. To change this default override code, do the following:

1. Disarm the system by use of the transmitter, or by use of the emergency override sequence. Turn the ignition switch to the on position.
2. Within 10 seconds, press and release the valet/override switch, 3 times.
3. Within 10 seconds turn the ignition switch off, on, off, on, off, on. (The siren or horn will beep and the lights will flash one time.)
4. Within 10 seconds, begin to enter your chosen 10ths digit by pressing and releasing the pushbutton switch from 1 up to 9 times.
5. Within 10 seconds of the last entered 10ths digit, turn the ignition switch off then on.
6. Within 10 seconds, begin to enter your chosen units digit by pressing and releasing the pushbutton switch from 1 up to 9 times.
7. Finish by turning the ignition switch to the off position.

If the new code was accepted, the unit will report back the newly entered code, by flashing the LED, first indicating the 10ths digit, pause and then the units digit. The unit will report the new code three times with a one second pause between each code, then the system will begin arming. If the LED flash pattern reports the previously stored code, the new code was not entered correctly. Please repeat steps 1 through 7 above considering the following:

NOTE: Acceptable digits 10ths or units are 1 through 9. The unit will not recognize a 0 (Zero), or no digit entered in any place, units or tenths.

NOTE: If 15 seconds of inactivity expire or if the ignition switch is turned off for more than 5 seconds during any of the above steps, the unit will revert back to the last successfully stored code.

Custom Code Programming Example:

To Change the code from the factory pre-assigned code of 11 to "52" you would do the following:

1. Disarm the system by use of the transmitter, or by use of the emergency override sequence.
2. Turn the ignition switch to the on position.
3. Within 10 seconds, press and release the valet/override switch, 3 times.
4. Within 10 seconds turn the ignition switch off, on, off, on, off, on. (The siren or horn will beep and the lights will flash one time.)
5. Within 10 seconds, begin to press and release the push button switch to set the tenths digit. (As per the example, press and release 5 times to set the tenths digit to 5)
6. Within 10 seconds of the last press of the push-button, turn the ignition switch off then on.
7. Within 10 seconds, begin to press and release the push button switch to set the units digit. (As per the example, press and release 2 times to set the units digit to 2).
8. Turn the ignition switch to the off position. Immediately observe the LED flash pattern.

You will note the LED flashing five times, pause and then flash two times, pause. This pattern will be repeated three times indicating the new code (52) has been accepted and stored in memory.

NOTE: If after step 7, the LED flashes a code other than what was just entered, this indicates that the code has not been changed. You will have to repeat steps 1 through 7 above being certain to note the following:

Acceptable digits 10ths or units are 1 through 9. The unit will not recognize a 0 (Zero), or no digit entered in any place, units or tenths.

NOTE: If 15 seconds of inactivity expire or if the ignition switch is turned off for more than 5 seconds during any of the above steps, the unit will revert back to the last successfully stored code.

MANUALLY OVERRIDING YOUR SYSTEM: USING THE CUSTOM CODE OVERRIDE

Assuming the override code programmed has not been changed, and the default override code of 11 is in the system's memory.

- 1) Enter the vehicle and turn the ignition switch to the on position.

NOTE: The siren will sound.

- 2) Within 5 seconds, press and release the pushbutton switch 1 time.
- 3) Within 5 seconds, turn the ignition switch off then on.
- 4) Within 5 seconds, press and release the pushbutton switch 1 time.
- 5) Turn the ignition switch off then on and start the vehicle.

NOTE: If you have changed the programmed override code then substitute your new code tenths for step 2 above, and units for step 5 above.

ELIMINATING THE NORMAL ARM / DISARM CHIRPS

As explained earlier in the manual, you can eliminate the chirps selectively any time you arm or disarm the system simply by holding the ARM / DISARM button for two seconds. If you find the normal arming and disarming chirps annoying, they can be turned off permanently, eliminating the need to hold the ARM / DISARM button for two seconds. To do this,

1. With the valet switch in the off position, turn the ignition key on then off.
2. Within 10 seconds, press and release the valet pushbutton switch three times.
3. If the chirps were on before you started, then you will hear 2 chirps indicating they have been turned off.

If the chirps were off before you started, then you will hear one chirp indicating they have been turned on.

NOTE: If the siren/horn chirps two times, regardless of the valet switch operation as described above, then the horn and siren chirps have been turned off via programming features 7 and 8. Contact your installation center or Audiovox technical department for information on how to reinstate the chirp feature through programming.

NOTE: Whenever the chirps are by-passed, the 4 chirp intrusion indicator and 3 chirp defective zone indicator will always operate. Since these are important warnings to you that something has happened, they cannot be eliminated.

REMOTE PANIC OPERATION

The Lock or Unlock button on your keychain transmitter also functions as a panic switch for use in emergency situations. To use remote panic,

1. Press and hold the Lock or Unlock button on the keychain transmitter for 3 or more seconds. The alarm will immediately sound.
2. To stop the alarm, press and hold the Lock or Unlock button on the transmitter again for 3 seconds. If the button is not pressed, the alarm will automatically stop after 30 seconds. Also if any transmitter button other than the Lock or Unlock button is pressed and released, the Panic mode will be turned off immediately. The normal function of this transmitter button will be suspended during the Panic sounding period.

NOTE: While in the Panic mode, pressing and releasing the Lock or the Unlock buttons will, if the option is installed, lock and unlock the doors respectively. While in the panic mode, anytime the unlock button is pressed, the panic feature will continue for the allotted 30 seconds, however, the security system will be disarmed allowing the vehicle to start.

ADDITIONAL REMOTE FUNCTION (CHANNEL 3)

This security system has an additional feature that can be connected to a number of different optional accessories. Some of the more common uses for this channel are:

- Remote Trunk Release
- Remote Car Starter
- Remote Window Closure
- Remote Garage Door Interface

To activate the optional accessory, press and hold the option button 2 on the keychain transmitter for 3 seconds.

PRO-9642
SYSTEM FUNCTIONS AT A GLANCE

DASH LED INDICATORS

RAPID FLASHING	=	PASSIVE ARMING
SLOW FLASHING	=	ARMED
OFF	=	DISARMED
ON SOLID	=	VALET MODE
3 FLASH...PAUSE	=	INTRUSION ZONE 3
2 FLASH...PAUSE	=	INTRUSION ZONE 2
1 FLASH...PAUSE	=	INTRUSION ZONE 1

SIREN CHIRP INDICATORS

1 CHIRP *	=	ARM
2 CHIRPS *	=	DISARM
3 CHIRPS	=	ARM / DOOR OPENED
4 CHIRPS	=	DISARM / INTRUSION

* These chirps are optional, and can be de - activated.

PARKING LAMPS

1 FLASH	=	ARM
2 FLASHES	=	DISARM
3 FLASHES	=	DISARM / INTRUSION

Your System Has These Features Activated

- Single Stage Shock Sensor
- Dual Stage Shock Sensor
- Remote Keyless Entry
- Starter Disable when armed
- Auto Lock with ignition key
- Auto Unlock with ignition key
- Passive Arming
- No Lock in passive mode
- Hardwire doors, hood, and trunk
- Siren Activation
- Horn Activation

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>