

# UltraGuard

## Security Systems

# Model PRO 9644aUGH

## Owner's Manual

### 3 Button Remote Security System with Starter Disable

**IMPORTANT !** In order to provide the highest possible level of security to your vehicle, this system is equipped with selectable manual override circuitry. It is possible that you will need to manually override your security system if the transmitter becomes lost, or inoperative due to battery failure. Reading the sections on "**MANUALLY OVERRIDING YOUR SYSTEM**" is necessary to fully understand the procedure required to enable your vehicle in such situations. In addition, the chart on the last page of this manual has a section for the particular features and options installed in your vehicle as well as the override method selected. **Valet Switch manual override is pre-selected from the factory**, however, the system can be configured for "Custom Code" operation. Confirm the override mode selected on the last page of this manual and familiarize yourself with the section on its operation.

#### FEATURES :

- ♦ 2 Three Button Programmable RF Transmitters (capable of accepting 4 transmitters)
- ♦ Separate Lock/Unlock Transmitter Buttons
- ♦ Five Channel Receiver
- ♦ Code Hopping Technology
- ♦ Selectable Manual Override Mode
- ♦ Remote Panic in all modes (Improved)
- ♦ Protected Valet
- ♦ User Programmable Manual Override Code
- ♦ Intrusion Alert with Memory
- ♦ Audible Arm / Disarm / Defective Zone / Tamper Confirmation
- ♦ Instant Siren Activation
- ♦ Starter Disable
- ♦ True Last Door Arming ( hardware only )
- ♦ Defective Zone By-Pass
- ♦ Hardwire or Voltage Sense Selectable
- ♦ Active or Passive Arming Selectable
- ♦ Smart Disarming
- ♦ Programmable Auto Lock On / Off
- ♦ Programmable Auto Unlock On / Off
- ♦ Programmable Door Lock Pulse Duration 1 Second / 3.5 Seconds/1 Sec L/ Dbl. U/L
- ♦ Programmable Active or Passive Door Locks
- ♦ User Programmable Permanent Chirp Delete
- ♦ On Command RF Chirp Delete from Transmitter Or Selectable Through Software
- ♦ 6 Tone Multi-Tone Siren, (And Or),
- ♦ Car Horn Activation for additional alarm response
- ♦ Additional Negative Trigger Input
- ♦ RF Inhibit with ignition on
- ♦ Parking Light Flasher

#### OPTIONS :

- ♦ 7 Function LED - Arm / Disarm / Zone 1 / Zone 2 / Zone 3 / Valet / Arming
- ♦ Remote Trunk Release ( must have electronic trunk release )
- ♦ Remote Keyless Entry ( must have power door locks )
- ♦ Illuminated Entry
- ♦ Multiple Vehicle Capable
- ♦ Headlight Illumination during Arming and or Disarming
- ♦ Remote Starter
- ♦ Remote Power Window Roll Up
- ♦ Remote Garage Door Interface
- ♦ Plug In Electronic Shock Sensor
- ♦ Interior Illumination Upon Disarm

128-6885

1 of 10

### **YOUR " CODE HOPPING " TRANSMITTERS**

The transmitters included with your new security system use the most advanced and secure form of radio frequency transmission available on any current automotive security system. Some of today's sophisticated auto thieves use a device known as a code grabber, which will receive and store the signal from your keychain transmitter, and re-transmit at a later time to disarm your system.

Your anti code grabbing transmitters will change their signal every time the button is pressed, so when a thief grabs then re-transmits your signal, the alarm system *will not* respond.

If your transmitter button is pressed more than fifty times while it is out of range of the vehicle (children playing with your keys), the transmitter will not operate when you return to the vehicle, and will need to be re-aligned to the receiver. To do this, simply press the Lock button two times within a one second time period. The system will now respond to that transmitter each time a button is pressed.

### **ARMING THE SYSTEM - ACTIVE**

1. Turn off the engine, exit the vehicle, and close all doors, hood lid, and trunk lid.
2. Press and release the Lock button on the keychain transmitter.

Red dash mounted LED begins to flash slowly.

Parking Lights flash one time.

Siren Horn sounds one chirp.

If the siren/horn sounds 3 chirps, then you have left a door, trunk, or hood lid ajar. Simply close the opened entry point to provide full protection. If the siren "chirped" three times, sometime after arming, the exclusive delayed dome light learn circuit has been programmed and the system detected a open entry point after the learned delay expired. Again, closing the hood, trunk, or doors will correct the problem and you do not need to disarm the system to make the correction. If the siren/horn did not sound when arming, then the chirps have been turned off and you should refer to the section titled "ELIMINATING THE ARM/DISARM CHIRPS" in this manual.

Vehicles horn beeps one time.

If the horn beeps three times, then you have left a door, trunk, or hood lid ajar. Simply close the opened entry point to provide full protection. If the horn did not sound when arming, then the chirps have been turned off, and you should refer to the section titled " ELIMINATING THE ARM / DISARM CHIRPS " in this manual.

Doors Lock - Optional

Headlight Illumination - Optional

The vehicle's headlights turn on for approximately 30 seconds, illuminating the path as you leave the vehicle.

### **SILENT ARMING - ACTIVE**

1. Turn off the engine, exit the vehicle, and close all doors, hood lid, and trunk lid.
2. Press and hold the Lock button on the keychain transmitter for 2 seconds.

Red dash mounted LED begins to flash slowly.

Parking Lights flash one time.

Siren will not sound.

If the siren "chirped" three times, sometime after arming, the exclusive delayed dome light learn circuit has been programmed and the system detected an open entry point after the learned delay expired. Closing the hood, trunk, or doors will correct the problem and you do not need to disarm the system to make the correction.

Vehicles horn will not beep.

If the horn beeps three times, then you have left a door, trunk, or hood lid ajar. Simply close the opened entry point to provide full protection.

Doors Lock - Optional

Headlight Illumination - Optional

The vehicle's headlights turn on for approximately 30 seconds, illuminating the path as you leave the vehicle.

#### **ARMING THE SYSTEM - PASSIVE ( AUTOMATIC )**

1. Turn off the engine, exit the vehicle, and close and lock all doors, hood lid, and trunk lid.

Red dash mounted LED begins to flash rapidly, indicating 30 second passive arming has begun.

2. Opening any protected entry point during the 30 second passive arming cycle will immediately suspend automatic arming, and the 30 second passive arming cycle will re-start when all doors are closed. At the end of the passive arming cycle;

Red dash mounted LED begins to flash slowly.

Parking Lights flash one time.

Siren sounds one chirp

If the siren did not sound when arming, then the chirps have been turned off, and you should refer to the section titled "ELIMINATING THE ARM / DISARM CHIRPS" in this manual.

Vehicles horn beeps one time.

If the horn did not sound when arming, then the chirps have been turned off, and you should refer to the section titled "ELIMINATING THE ARM / DISARM CHIRPS" in this manual.

Doors Lock - Optional

Door locking during passive arming is a selectable feature. The alarm can be programmed to allow the doors to lock only when arming using the keychain transmitter, and they will not automatically lock during passive arming.

#### **PROTECTION WHILE THE SYSTEM IS ARMED**

Opening any protected door, hood, or trunk lid will cause the alarm to immediately sound. The alarm will continue to sound for 30 seconds, then stop and continue to monitor all protected entry points. If the thief left a door opened, the alarm will sound for six 30 second cycles, remain armed, and ignore that triggered zone.

Whenever the system is armed, the red dash mounted LED indicator will slowly flash. This serves as a visual deterrent to the potential thief. The LED is a very low current bulb, and will not cause the vehicle's battery to drain, even when left unattended for extended periods.

Whenever the system is triggered, the vehicle's parking lights will flash for the full 30 second alarm cycle, attracting visual attention to the vehicle.

- Whenever the system is triggered, the vehicle's horn will beep for the full 30 second alarm cycle, attracting added attention to the vehicle.
- Optional - Whenever the system is triggered, the interior courtesy lights will flash for the full 30 second alarm cycle.
- Whenever the system is armed, the vehicle's starting circuit will be bypassed. If the thief should choose to ignore the siren, the vehicle can not be started
- Optional - Any strong impact to the vehicle's glass will cause the alarm to trigger for the full 30 second alarm cycle.

#### **DISARMING THE SYSTEM**

1. As you approach the vehicle, press and release the Unlock button on the keychain transmitter.

- Red dash mounted LED turns off.  
If passive arming was selected during the installation, then the LED will start flashing rapidly, indicating that the system is re arming automatically. Open any door to suspend the automatic arming.
- Parking Lights flash two times.  
If the parking lights flashed three times, then the alarm was triggered in your absence. Before turning the key on, examine the LED to identify which zone was triggered.
- Siren sounds two chirps.  
If the siren sounds 4 chirps, then the alarm was triggered in your absence. Before turning the key on, examine the LED and refer to the INTRUSION WARNING SIGNALS section of this manual to identify which zone was triggered.  
If the siren did not sound when disarming, then the chirps have been turned off, and you should refer to the section titled " ELIMINATING THE ARM / DISARM CHIRPS " in this manual.
- Vehicle's horn beeps two times.  
If the horn beeps four times, then the alarm was triggered in your absence. Before turning the key on, examine the LED and refer to the INTRUSION WARNING SIGNALS section of this manual to identify which zone was triggered.  
If the horn did not sound when disarming, then the chirps have been turned off, and you should refer to the section titled " ELIMINATING THE ARM / DISARM CHIRPS " in this manual.
- Doors Unlock - Optional
- Two Step Doors Unlock - Optional  
If, when the Unlock transmitter button was pressed and released, only the drivers door unlocked, then you have the two step unlock option installed. Pressing the unlock button a second time will unlock all other doors.
- Headlight Illumination - Optional  
The vehicle's headlights turn on for approximately 30 seconds, illuminating the path to the vehicle.
- Courtesy Lights - Optional  
Interior courtesy lights turn on for 30 seconds, or until the ignition key is switched on.

### **SILENT DISARMING**

1. As you approach the vehicle, press and hold the Unlock button on the keychain transmitter for 2 seconds.

- Red dash mounted LED turns off.

If passive arming was selected during the installation, then the LED will start flashing rapidly, indicating that the system is re-arming automatically. Open any door to suspend the automatic arming.

- Parking Lights flash two times.

If the parking lights flashed three times, then the alarm was triggered in your absence. Before turning the key on, examine the LED to identify which zone was triggered.

- Siren will not sound.

If the siren sounds 4 chirps, then the alarm was triggered in your absence. Before turning the key on, examine the LED and refer to the INTRUSION WARNING SIGNALS section of this manual to identify which zone was triggered.

- Vehicles horn will not beep.

If the horn beeps four times, then the alarm was triggered in your absence. Before turning the key on, examine the LED and refer to the INTRUSION WARNING SIGNALS section of this manual to identify which zone was triggered.

- Doors Unlock - Optional

- Two Step Doors Unlock - Optional

If, when the Unlock transmitter button was pressed and released, only the drivers door unlocked, then you have the two step unlock option installed. Pressing the unlock button a second time will unlock all other doors.

- Headlight Illumination - Optional

The vehicle's headlights turn on for approximately 30 seconds, illuminating the path to the vehicle.

- Courtesy Lights - Optional

Interior courtesy lights turn on for 30 seconds, or until the ignition key is switched on.

### **WHILE THE SYSTEM IS SOUNDING**

If during a triggered state, you wish to shut off the siren without disarming your security system, simply press and release any transmitter button other than the disarm button. This action will turn off the siren yet leave the vehicle fully armed and protected. This feature is particularly useful if you are aware of children playing near your vehicle that may accidentally trigger your security system. In this case you can cancel the siren sounding without disarming your system.

### **INTRUSION WARNING SIGNALS**

This system will inform you if an intrusion attempt has occurred while you were away from the vehicle. If an intrusion attempt has occurred, the siren will chirp 4 times and the parking lights will flash 3 times when disarming the system. Enter the vehicle, and observe the red dash mounted LED to identify which zone was triggered.

- ❶ If the LED is flashing one time...pause...one time...pause...etc., then an intrusion attempt was made to the OPTIONAL shock sensor, or an accessory triggering device that may have been added to the system.
- ❷ If the LED is flashing two times...pause...two times...pause...etc., then an intrusion attempt was made to a hood or trunk pin switch that was added to the system, or to a light activated entry point if the alarm was installed using the voltage sensing feature.
- ❸ If the LED is flashing three times...pause...three times...pause...etc., then an intrusion attempt was made through one of the vehicle's doors.

These intrusion warning indicators are stored in the system's memory, and will only be erased when the ignition key is turned on.

#### **VALET SWITCH**

The valet switch allows you to temporarily bypass all alarm functions, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, all alarm functions are bypassed, however the remote panic feature and remote door locks will remain operational. To use the valet mode, the system must first be disarmed either by using your keychain transmitter, or by activating your personalized manual override code.

1. Enter the vehicle, and turn the ignition key to the on position.
2. Press and hold the valet pushbutton switch until the dash mounted LED turns on solid. The system will remain in the valet mode.
3. To return to normal operation, press and release the pushbutton switch any time the ignition is on.

**NOTE:** Always remember to exit the valet mode. This will ensure that the vehicle remains protected at all times.

#### **MANUALLY OVERRIDING YOUR SYSTEM:**

##### **USING THE VALET SWITCH MANUAL OVERRIDE**

Your Security System can be disarmed without the use of the keychain transmitter. This is necessary, since you will need the ability to operate your vehicle if the transmitter is lost or its battery fails. If your system has been selected for Valet Switch manual override as indicated on the last page of this manual, to by-pass the alarm system;

1. Open the vehicle door. The alarm will sound.
2. Turn the ignition key to the on position.
3. Within 5 seconds, press and release the valet pushbutton switch.

The alarm system will stop sounding and enter the (by-passed) mode. You can now start and operate the vehicle normally.

Typically this override mode is used only if the transmitter has become inoperative.

##### **Programming Your Custom Override Code:**

Unlike override switches easily found, and defeated, this security system allows the consumer to program a personal override code, offering a higher level of security. To take advantage of this option, programmable feature # 10 must be selected for the Custom Code Option. Consult your installation center for programming details. The system comes from the factory with a pre-programmed override code of 11. To change this default override code, do the following:

1. Disarm the system by use of the transmitter, or by use of the emergency override sequence. Turn the ignition switch to the on position.
2. Within 10 seconds, press and release the valet/override switch, 3 times.
3. Within 10 seconds turn the ignition switch off, on, off, on, off, on. (The siren or horn will beep and the lights will flash one time.)
4. Within 10 seconds, begin to enter your chosen 10ths digit by pressing and releasing the pushbutton switch from 1 up to 9 times.
5. Within 10 seconds of the last entered 10ths digit, turn the ignition switch off then on.
6. Within 10 seconds, begin to enter your chosen units digit by pressing and releasing the pushbutton switch from 1 up to 9 times.
7. Finish by turning the ignition switch to the off position.

If the new code was accepted, the unit will report back the newly entered code, by flashing the LED, first indicating the 10ths digit, pause and then the units digit. The unit will report the new code three times with a one second pause between each code, then the system will begin arming. If the LED flash pattern reports the previously stored code, the new code was not entered correctly. Please repeat steps 1 through 7 above considering the following.

**NOTE:** Acceptable digits 10ths or units are 1 through 9. The unit will not recognize a 0 (Zero), or no digit entered in any place, units or tenths.

**NOTE:** If 15 seconds of in activity expire, or if the ignition switch is turned off for more than 5 seconds during any of the above steps, the unit will revert back to the last successfully stored code.

#### **Custom Code Programming Example:**

To Change the code from the factory pre-assigned code of 11 to "52" you would do the following:

1. Disarm the system by use of the transmitter, or by use of the emergency override sequence.
2. Turn the ignition switch to the on position.
3. Within 10 seconds, press and release the valet/override switch, 3 times.
4. Within 10 seconds turn the ignition switch off, on, off, on, off, on. (The siren or horn will beep and the lights will flash one time.)
5. Within 10 seconds, begin to press and release the push button switch to set the tenths digit. (As per the example, press and release 5 times to set the tenths digit to 5)
6. Within 10 seconds of the last press of the push-button, turn the ignition switch off then on.
7. Within 10 seconds, begin to press and release the push button switch to set the units digit. (As per the example, press and release 2 times to set the units digit to 2).
8. Turn the ignition switch to the off position. Immediately observe the LED flash pattern.

You will note the LED flashing five times, pause, and then flash two times, pause. This pattern will be repeated three times indicating the new code (52) has been accepted and stored in memory.

**NOTE:** If after step 7, the LED flashes a code other than what was just entered, this indicates that the code has not been changed. You will have to repeat steps 1 through 7 above being certain to note the following:

Acceptable digits 10ths or units are 1 through 9. The unit will not recognize a 0 (Zero), or no digit entered in any place, units or tenths.

**NOTE:** If 15 seconds of inactivity expire, or if the ignition switch is turned off for more than 5 seconds during any of the above steps, the unit will revert back to the last successfully stored code.

#### **MANUALLY OVERRIDING YOUR SYSTEM:**

##### **USING THE CUSTOM CODE OVERRIDE**

Assuming the override code programmed has not been changed, and the default override code of 11 is in the system's memory.

1. Enter the vehicle and turn the ignition switch to the on position.

**NOTE:** The siren will sound.

2. Within 5 seconds, press and release the pushbutton switch 1 time.
3. Within 5 seconds, turn the ignition switch off then on.
4. Within 5 seconds, press and release the pushbutton switch 1 time.
5. Turn the ignition switch off then on and start the vehicle.

**NOTE:** If you have changed the programmed override code then substitute your new code tenths for step 2 above, and units for step 5 above.

##### **ELIMINATING THE NORMAL ARM / DISARM CHIRPS**

As explained earlier in the manual, you can eliminate the chirps selectively any time you arm or disarm the system simply by holding the Lock or Unlock button for two seconds. If you find the normal arming and disarming chirps annoying, they can be turned off permanently, eliminating the need to hold the transmitter buttons during the arming or disarming function. To do this,

1. Then turn the ignition key on then off.
2. Within 10 seconds, press and release push-button switch three times.
3. If the chirps were on before you started, then you will hear 2 chirps indicating they have been turned off.

If the chirps were off before you started, then you will hear one chirp indicating they have been turned on.

**NOTE:** Whenever the chirps are by-passed, the 4 chirp intrusion indicator and 3 chirp defective zone indicator will always operate. Since these are important warnings to you that something has happened, they cannot be eliminated.

##### **REMOTE PANIC OPERATION**

The Lock or Unlock button on your keychain transmitter also functions as a panic switch for use in emergency situations. To use remote panic,

1. Press and hold the Lock or Unlock button on the keychain transmitter for 3 or more seconds. The alarm will immediately sound.
2. To stop the alarm, press and hold the Lock or Unlock button on the transmitter again for 3 seconds. If the button is not pressed, the alarm will automatically stop after 30 seconds. Also if any transmitter button other than the Lock or Unlock button is pressed and released, the Panic mode will be turned off immediately. The normal function of this transmitter button will be suspended during the Panic sounding period.

**NOTE:** While in the Panic mode, pressing and releasing the Lock, or the Unlock buttons will, if the option is installed, lock and unlock the doors respectively. While in the panic



mode, anytime the unlock button is pressed, the panic feature will continue for the allotted 30 seconds, however, the security system will be disarmed allowing the vehicle to start.

#### **OPTIONAL DEVICE OUTPUT (CHANNEL 3)**

**Controlled By:**  Option Button,  Both Lock & Unlock Button,  Both Option & Lock Button, or Both Option and Unlock Button.

This security system is equipped with an output which will activate when the appropriate transmitter button is depressed for four seconds. Optional devices that may be connected to this channel are:

- Remote Electric Trunk Release
- Remote Car Starter
- Remote Window Closure
- Remote Garage Door Interface

**NOTE:** In addition there may be a second optional feature connected to your system that when the same transmitter button is pressed and released 2 times within 3 seconds (double pressed), the second optional feature will activate. This output is typically used for a remote start option and will likely prevent inadvertent activation of the remote start device if young children are playing with the hand held transmitter.

If your vehicle is not equipped with an electronic trunk release switch, or other option listed, this feature may have been connected to another accessory. Please ask your dealer for further information.

#### **ADDITIONAL REMOTE FUNCTION (CHANNEL 4)**

**Controlled By:**  Option Button,  Both Lock & Unlock Button,  Both Option & Lock Button, or Both Option and Unlock Button.

This security system has an additional feature that can be connected to a number of different optional accessories. Some of the more common uses for this channel are:

- Remote Car Starter
- Remote Window Closure
- Remote Garage Door Interface

To remotely operate the device indicated, momentarily press, or press and hold the appropriate transmitter button(s) as indicated above.

#### **ADDITIONAL REMOTE FUNCTION (CHANNEL 5)**

**Controlled By:**  Option Button,  Both Lock & Unlock Button,  Both Option & Lock Button, or Both Option and Unlock Button.

This security system has an additional feature that can be connected to a number of different optional accessories. Some of the more common uses for this channel are:

- Remote Car Starter
- Remote Window Closure
- Remote Garage Door Interface

To remotely operate the device indicated, momentarily press, or press and hold the appropriate transmitter button(s) as indicated above.

**PRO 9644aUGH  
SYSTEM FUNCTIONS AT A GLANCE**

**DASH LED INDICATORS**

RAPID FLASHING	=	PASSIVE ARMING
SLOW FLASHING	=	ARMED
OFF	=	DISARMED
ON SOLID	=	VALET MODE
3 FLASH...PAUSE	=	INTRUSION ZONE 3
2 FLASH...PAUSE	=	INTRUSION ZONE 2
1 FLASH...PAUSE	=	INTRUSION ZONE 1

**SIREN AND /OR HORN CHIRP INDICATORS**

1 CHIRP *	=	ARM
2 CHIRPS *	=	DISARM
3 CHIRPS	=	ARM / DOOR OPENED
4 CHIRPS	=	DISARM / INTRUSION

\* These chirps are optional, and can be de - activated.

**PARKING LAMP INDICATORS**

1 FLASH	=	ARM
2 FLASHES	=	DISARM
3 FLASHES	=	DISARM / INTRUSION

**Your System Has These Features Activated**

- Remote Keyless Entry
- Illuminated Entry
- Auto Lock with ignition key
- Auto Unlock with ignition key
- Headlight Illumination during arm & disarm
- Passive Arming
- No Lock in passive mode
- Hardwire doors, hood, and trunk
- Custom Code Override
- Valet Switch Override

UltraGuard Security Systems 15600 Roscoe Blvd., Van Nuys, CA 91406

128-6885

**128-6885  
10 of 10**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>