



Model 091BPr

#### Transmitter Programming Guide


This transmitter is designed for use with your upgrade remote start unit and is programmed by using the remote start's program switch in combination with the transmitter button. Although this transmitter can be programmed into any of the Audiovox remote start and or alarm, remote start systems, it will offer limited use and should be used for the remote start upgrade only.

To program this transmitter into your remote start upgrade unit:

- 1) Turn the ignition to the on position
- 2) Press and release the programming switch 3 times
- 3) Press and hold, for 3 seconds, the button of the transmitter you wish to add until the parking light flashes indicating the transmitter has been learned.
- 4) Repeat step 3 for each transmitter up to a total of 4.  
Turn the ignition off to exit the program mode.


**NOTE:** Do not allow more than 15 seconds to lapse between steps or the program mode will be automatically exited and you will have to start over.

128-8707  
1 of 2

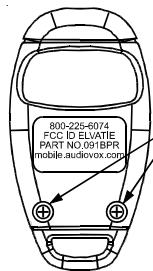

Two #0 Pt Phillips Head Screws

After removing the two #0 point phillips screws shown, pry apart case with the edge of a finger nail or a small common screwdriver. Keep hold of the metal key ring loop to prevent it's loss as it will separate from the transmitter case.

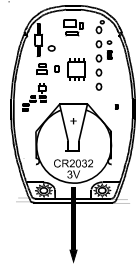


Carefully remove the discharged battery by sliding it out from under the clip in the direction indicated by the arrow in the diagram. Properly dispose of the exhausted battery and insert a new CR2032 taking care to arrange it so that the + is facing up toward the + symbol on the battery clip. Reassemble in the reverse of above.

**This device complies with FCC Rules Part 15 Operation is subject to the following two conditions.**

 - (1) This device may not cause harmful interference and**
- (2) This device must accept any interference that may be received, including interference that may cause undesired operation.**

**NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment**



## ORDER FORM FOR TRANSMITTER 091BP

**Attention: Transmitter Ordering Department**

**Important:** To help us expedite your order, please print all of the information legibly and mail this form and your payment according to the instructions below.

1) Name: \_\_\_\_\_

2) Address: \_\_\_\_\_

3) City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_

4) Telephone Number: (        ) \_\_\_\_\_

5) Total Number Of Transmitters Required: \_\_\_\_\_

Cost Per Transmitter is:                    \$65.00

Multiply By Number Of Transmitters    X

6) Enter Total Amount Enclosed        \_\_\_\_\_

(New York State Residents must include the appropriate sales tax)

7) Method of Payment:

Mastercard     Visa     Check or Money Order (do not send cash)  
Make Checks Payable To Audiovox Corporation

Credit Card Number: \_\_\_\_\_


Credit Card Expiration Date:    \_\_\_/\_\_\_/\_\_\_

8) Mail this form along with your payment to:

**Transmitter Ordering Department**  
**Audiovox Corporation 150 Marcus Blvd., Hauppauge N.Y.**  
**11788**



Credit card purchasers can order additional or replacement transmitters by phone. Simply dial 1 - 800 - 645 - 4994, and follow the instructions from the operator interface.

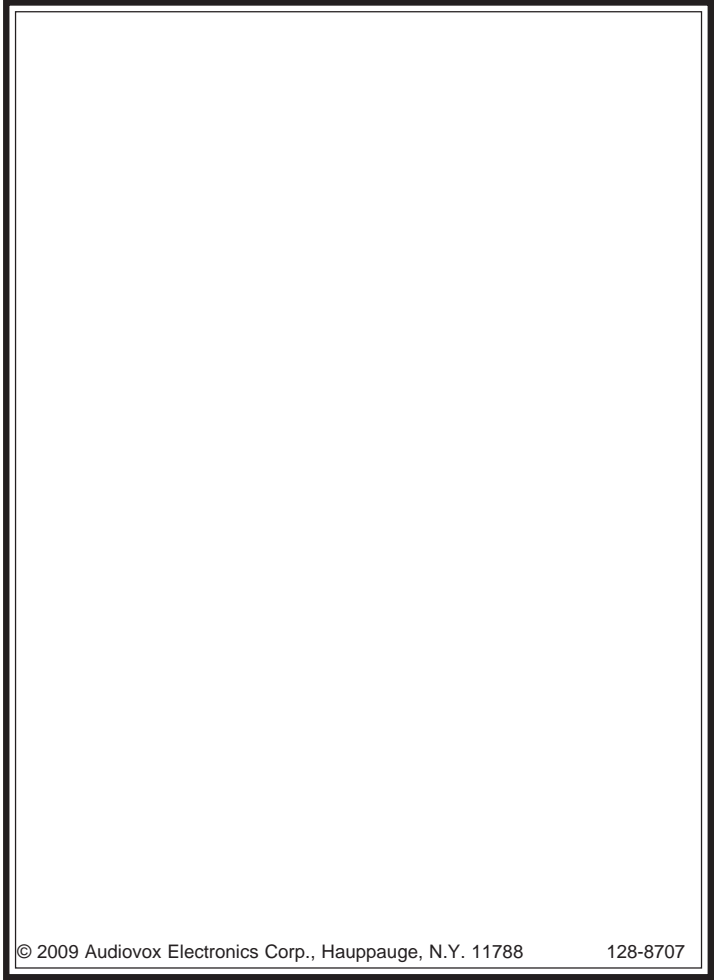

© 2009 Audiovox Electronics Corp., Hauppauge, N.Y. 11788

128-8707

**128-8707**  
**4 of 2**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>