

AUTOPAGE 

RS-610 *Plus*











PROFESSIONAL REMOTE CAR STARTER
&
KEYLESS ENTRY

OPERATIONS MANUAL


THIS PRODUCT IS DESIGNED FOR PROFESSIONAL INSTALLATION ONLY



SYSTEM OPERATIONS

A. 5-BUTTON TRANSMITTER OPERATION


Transmitter Button	System Function	Remark
	Lock Doors & Arm System	
	Panic function	Press and Hold for 3 seconds
	Unlock Doors & Disarm System	
	Two Steps Door Unlock & Disarm System	Press twice within 3 seconds.
	Silent Arming / Disarming	
	Channel 2 (Trunk) Timer Control	Press and Hold for 2 seconds
	Car Locator	
	Activate Remote Start	-----
	Turn Off The Remote Start	
	Side switching button For 2nd Car Operation or Garage Door Opener	Press side button first then press designated button

B. ACTIVE LOCK:


1. Press  button on the transmitter.
2. The horn will chirp once and parking lights will flash once indicating that the system is now active. The vehicle doors will lock upon activating when interfaced with the keyless entry system.

SILENT LOCKING / UNLOCKING: Pressing the  +  buttons together on the transmitter will lock or unlock your system, No chirp sound will be heard, lock / unlock confirmation will be through the vehicles parking lights only.

C. ACTIVE UNLOCK:

1. Press  button on the transmitter.
2. The horn will chirp twice and parking light will flash twice to indicating that the keyless system is now unlocked. The vehicle doors will unlock and dome lights will turn on for 30 seconds.

3. **PATHWAY ILLUMINATION** (See Alarm Feature “I - 2” Programming):
This feature turns the parking light “ON” for 30 seconds upon a unlock signal and for 10 seconds upon the lock signal.

TWO STEPS DOOR UNLOCK: This feature will independently unlock the driver door only when deactivating the system. Pushing the  button a second time within 3 seconds will unlock the entire vehicle.

D. LED DISPLAY:

LED	Function
Off	Disarmed
Slow flash	Armed
On (solid)	Valet Mode

E. CHIRP INDICATOR:

Chirp	Function
1 Chirp	Arm
2 Chirps	Disarm
6 Chirps	Car Locator

F. PARKING LIGHTS:

Parking light	Function
1 Flash	Arm
2 Flashes	Disarm
12 Flashes	Car Locator
Constant On	Under Remote Start

G. DEACTIVATING WITHOUT A TRANSMITTER

The Override function may be used if the remote transmitter is lost or inoperative.

1. Enter the vehicle and turn the ignition switch to 'ON' position.
2. Within 10 seconds push and release the valet switch

If starter disable is installed. You can now start and operate the vehicle normally.

H. VALET MODE:

The valet switch allows you to temporarily bypass all system function, eliminating the need to hand your transmitter to parking attendants or garage mechanics. When the system is in valet mode, and remote start functions are bypassed, however the remote panic feature and remote door locks will remain operational. To use the valet mode, the system must first be deactivated either by using you remote transmitter, or by operating the Manual override sequence.

Enter Valet Mode:




 




1. From the Unlock condition, turn the ignition to "ON" position.
2. Push and hold valet switch for 2 seconds until the LED turns on. The LED will remain on as long as the system is in 'valet mode'.

Exit Valet Mode:

1. Return to normal operation, turn ignition 'on'.
2. Push and hold valet switch for 2 seconds, The LED will turn off indicating the system has exited the valet mode.

I. PANIC FUNCTION: (IF CAR HORN IS INSTALLED)

The transmitter can be used as a remote panic switch to manually trigger the vehicle's horn in case of emergency.

1. Press and hold the  button for 3 second. The horn will immediately sound.
2. During panic mode, the normal function of this transmitter button will be suspended. The  and  buttons can be used to lock and unlock the doors (if the option is installed), however once the  button is pressed, the vehicle's starter disable device, (where installed) will be enabled allowing the vehicle to start.
3. To stop the panic, press and hold the  or  button on the transmitter again for 3 seconds. Also if any transmitter button other than the  or  button is pressed and released, the panic mode will be turned off immediately.
4. If no buttons are pressed, the panic function will stop automatically in 60 seconds.

J. DOME LIGHT CONVENIENCE DELAY & SUPERVISION

This system is a unique feature, which will turn on your vehicle dome light as following: (optional) *Additional installation required.*


1. Upon unlocking, the interior lights will remain on for 30 seconds.
2. If the vehicle is intruded, the interior light will flash for the same duration as the siren.

Note: Turning on the ignition switch or activating the system will turn off the dome light.


K. IGNITION CONTROL DOOR LOCKS. (See Alarm Feature II – 2 Programming).

If the vehicle's door locks have been interfaced to the security system, the system will automatically lock the vehicle's doors when the ignition is turned "ON" and /or unlock the vehicle's doors when the ignition is turned "OFF".

L. TRUNK RELEASE

Press and hold the  button on transmitter for two seconds to remote control the trunk release or other electric devices.

M. CAR LOCATOR

Press the  button twice with 3 seconds to active car locator function. The horn will chirp 6 times. The parking light will flash 12 times, for you to easily locate your car.

REMOTE START OPERATIONS

WARNINGS:

As with any product that performs automatic functions, there are certain safety precautions that you must practice and be aware of.

1. Keep the transmitter out of children's reach.
2. Do not leave anyone in the vehicle while running on remote control.
3. Alert servicing personnel that the vehicle can be started automatically.
4. Do not start the vehicle by remote while it's in an enclosed area or garage.
5. Always apply the parking brake and lock the vehicle as you exit the vehicle.
6. Should the unit malfunction, disconnect the fuse until the problem is corrected.
7. The use and operations of this system is the sole responsibility of the operator.
8. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.

A. TO REMOTE START THE VEHICLE:

When you want to start your vehicle,

1. Press * button on the transmitter.
2. The parking lights will flash to indicate the remote start received the signal.
3. The engine will start approximately 5 seconds.
4. Once the engine is running, after a couple of seconds the parking light will turn on again and climate controls will activate and adjust the vehicles interior temperature to your preset setting.
5. The vehicle will run for 5 to 30 minute cycle and automatically shut down.

NOTE:

The Remote Start Unit will not start the vehicle if any one of the following conditions exists:

1. The hood is opened.
2. The brake pedal is pressed.
3. Move the optional remote start enable toggle switch to OFF position.
(If installed)
4. The gear selector is in any gear other than "PARK" or "NEUTRAL"

(SAFTEY START OPERATION:)

The saftey start feature allows you to press the * button 2 times before the vehicle will remote start or remote shut down. (See Start Feature I-5)

B. TO TURN OFF THE REMOTE START:

When the engine is running (by remote start), if you want to stop it,

1. Press * button on the transmitter.
3. Press the brake pedal

The vehicle will shut down and turn off the parking light to indicate engine stopped.

C. TO OVERRIDE VEHICLE FROM REMOTE START CONTROL:

To operate the vehicle while running on the remote start.

1. Insert the ignition key and turn it to "ON" (not the start) position.
2. Press the brake pedal.

Note: If the brake pedal is pressed before the key is in the ON position, the engine will shut down.

D. TEMPORARY STOP FEATURE:

This feature allows the vehicle to remain running after the key has been removed from the ignition. This feature is useful for occasions when you wish to exit and lock the vehicle for short periods of time, but would like to leave the engine running and the climate control on.

1. Before turning off the engine, press the * button on the transmitter.
The parking lights will come on and the LED will flash 3 times to confirm Temporary Stop feature 'ON'
2. Turn the ignition key to OFF position. (The engine will stay running.)
3. The engine will run until the pre-programmed time elapsed or shut-down input is received.

E. TIMER START:


This unit can be programmed to start and run the engine every 3 hours. The engine will run for the programmed run time and then shut down.

IMPORTANT: Timer Start should be used only in open areas, Never start and run the vehicle in an enclosed space as a garage or carport.

3 hours timer start: This feature is design for an extreme cold climate usage. The system will auto start the vehicle every 3 hours, to prevent engine freezing and hard to start.

A MAXIMUM OF SIX CYCLES CAN OCCUR.

ENTER:

1. Press the * button to remote start the vehicle. As soon as the vehicle is running and the parking lights have turned 'ON'.
2. Immediately depress the  button then press and hold down * button 3 seconds. The parking light will flash (3) times. The horn chirps (3) times. The vehicle is now programmed to start every (3) hours.
3. Press the brake pedal to stop the vehicle running.

Exit the timer start:

Timer start can be exited manually as follows:

1. **Repeat the Enter Steps from above.**

Or

1. Make sure the remote start system is not operating the engine.
2. Turn the ignition on. The LED and parking light will flash (4) times. The horn chirps (4) times.

F. SHUT-DOWN INPUT FOR REMOTE STARTER:

If any of the following conditions exist while the system is operating, the engine will not start or will shut down immediately:

1. The hood is opened.
2. The brake pedal is pressed.
3. Move the optional remote start enable toggle switch to OFF position. (If installed)
4. Engine is over-revved. {"Tachometer checking type" only}
5. The pre-programmed run time (5 /10 / 20 / 30 minutes) has elapsed.
6. Transmitter * button is pressed.
7. The vehicle refused to start running after {3} unsuccessful attempts.

G. DISABLING THE REMOTE START SYSTEM: (If installed)

This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from being remote started accidentally. This feature is useful if the vehicle is being serviced or stored in an enclosed area. To disable the remote start, move the optional remote start enable toggle switch to the OFF position.

NOTES

LIMITED LIFETIME WARRANTY PROVISIONS

(U.S. and Continental U.S. Only)

1. AutoPage, Inc. WARRANTS that this new unit has been thoroughly inspected and tested at the factory prior to delivery. Your AutoPage equipment is guaranteed for "life" to the original purchaser/user of the equipment under the following conditions: If the product proves defective (according to AutoPage's testing) within the first year, the defective unit may be exchanged or repaired free of charge. "Proof of Purchase" (dated sales receipt) must accompany all warranty returns; **otherwise, your return will be rejected and sent back.** After one (1) year, the purchaser should ship the unit prepaid to AutoPage with a money order in the amount of \$20.00 to cover shipping and handling charges. **Note:** The enclosed Warranty Card may be required to receive warranty services.
2. This WARRANTY will be considered void if the equipment has been misused, neglected, improperly serviced, altered, dropped or damaged by water, contrary to the AutoPage OPERATIONS MANUAL. Or, if used with accessories not approved by AutoPage, which may have contributed to the defect. **See note below regarding product installation.**
3. The purchaser's remedies under this WARRANTY shall be limited to the repair or replacement of electronic components only. **THE FOLLOWING IS NOT COVERED:** Damages or deterioration to cases, batteries, covers and cabinets; the cost of repairs, replacement and labor of which shall be borne by the purchaser even if occurring during the WARRANTY period.
4. Any equipment or parts which are claimed to be defective under this WARRANTY must be sent to the AutoPage Service center with "proof of purchase" at the purchaser's expense prior to such return, a Return Authorization Number should be obtained. AutoPage will return the equipment, charges prepaid. Warranty Service can be provided through the dealer where the equipment is originally purchased.
5. Any unexpired WARRANTY shall be applicable to equipment and parts in the possession of the original purchaser only.
6. THIS WARRANTY IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.
7. AutoPage shall not be liable, under the foregoing WARRANTIES or otherwise, for: Any personal injury of any kind to the purchaser, its employees or agents or anyone else whomsoever resulting directly or indirectly from the use or presence of the equipment or parts; Consequential damages of any kind; any inability of the purchaser to use the equipment.

This WARRANTY CARD is for your record. However, AutoPage reserves the right to request you to submit this WARRANTY CARD which must have complete information to receive warranty service. Please keep this card in a secured place.

IMPORTANT NOTE: Any damages to the alarm system resulting from an installation performed by anyone other than a professional installation technician authorized by a dealer of Auto Page will void the product's warranty.

This WARRANTY CARD is for your record. However, AutoPage reserves the right to request you to submit this WARRANTY CARD which must have complete information to receive warranty service. Please keep this card in a secured place.

AUTOPAGE WARRANTY SERVICE CARD

Model: _____

Serial # _____

CUSTOMER TO COMPLETE

DEALER TO COMPLETE

Mr/Mrs/Ms

Your Name (Please Print)

Company Name

Address

Dealer's Address

City, State, Zip Code

City, State, Zip Code

Telephone Number

Dealer's Telephone Number

Year / Make / Model of Vehicle

Date of Installation / Purchase

Dealer's Signature

“Proof of Purchase” which includes the store name and date of purchase must accompany all warranty returns.

It is the purchaser's responsibility to keep this card for any future warranty service.

AutoPage Inc.
1815 West 205th Street
Torrance, CA 90501
310-618-2002



1815 W. 205th Street Suite #101 Torrance, CA 90501

Tel: (310) 618-2002 or (800) 262-2527

www.autopageusa.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>