



# AS-6070 TW

## User Guide

**A note concerning the battery inside the transmitter:**

Depending on the usage of the transmitter, the battery can last anywhere between 3 to 6 months. When the battery is low, it the transmitter will emit two beeps in a repetitive cycle. At that point you should replace your battery with a new one. That is why we recommend that you keep a spare battery somewhere handy such as the glove compartment.

## Table of Contents

Table of Contents .....	2	Driving Off.....	10
Transmitter Part Number and Serial Number of the Remote Car Starter Module.....	3	Using the System.....	10
Introduction .....	3	Arming and Disarming the System .....	10
Using the Remote Control .....	3	Idle Mode .....	10
LCD Remote Functions .....	4	Turbo Mode .....	11
Basic Vehicle Operation .....	4	Valet Mode with the Valet Switch .....	11
Alarm Clock .....	4	Ignition Valet.....	11
Time Adjust Mode.....	4	Start Attempts Indicator (Valet Mode)...	11
Countdown Timer .....	5	“Home Valet™” Mode .....	12
Parking Countdown .....	5	Remote Valet Mode .....	12
Melody Selection .....	5	Panic Mode.....	12
Vibration Mode.....	5	Quick Lockout™.....	13
Power Saving Mode.....	5	Cold Weather Mode.....	13
Remote Control Finder .....	5	Advanced Features: Installation- programmable Options .....	13
Door and Hood Monitoring.....	5	Remote Door Locks .....	13
LCD Transmitter Operation (First Car Control).....	6	Priority Door Access .....	14
Basic Vehicle Operation .....	6	Active or Passive Arming.....	14
Transmitter Mode Selection.....	6	The Starter Kill and the Anti-grind Feature .....	14
Time or Alarm Clock Adjustments .....	6	Shock Sense, Warn-away Sense .....	14
Cold Weather Mode.....	7	Disarmed Notification.....	14
Home Valet™.....	7	Siren or Horn Chirps .....	14
Countdown Timer .....	7	Car Finder.....	15
Parking Countdown .....	7	Siren or Horn Chirp Timing .....	15
Safe Start Mode.....	8	Safe Start.....	15
*Runtime Options (once the car has been remote started) .....	8	Home Valet™.....	15
LCD Transmitter Operation (Second Car Control).....	8	Ignition-controlled Door Locks .....	15
Basic Vehicle Operation .....	8	Ignition Re-lock.....	15
Start and Stop While in Safe Start Mode	8	Secure Lock.....	15
Remote-Starting Your Vehicle .....	8	Turbo Mode .....	15
Setting Your Vehicle Into Ready Mode...	8	Remote Trunk Release.....	15
Remaining In Ready Mode .....	9	Engine Run Time .....	15
Remote-starting .....	9	Multi-car Operation .....	16
Vehicle Presets.....	9	L.E.D. Intrusion Codes.....	16
		Troubleshooting Poor Transmitting Range .....	16

## Transmitter Part Number and Serial Number of the Remote Car Starter Module

The boxes below contain information concerning your transmitter and Remote Car Starter. We entered the part number of your transmitter for you. Should you need to order a new transmitter, you will need to provide the transmitter part number which is printed below. The second box contains the serial number of the Remote Car Starter. Please make sure that the installer has entered the serial number in that box.

Transmitter Part Number: ASTR-LCD-2

Companion Transmitter Part Number: ASTR-2144

The installer must use the space below to write the serial number of the Remote Car Starter and the location of the valet switch:

Serial Number of the Remote Car Starter:

Location of the Valet Switch:


### Introduction

This System is a state-of-the-art remote car starter and alarm combo system. The system is packed with advanced features such as priority access to the driver's door and Car Finder (commodity features), last armed state memory in case of power failure (which ensures that the vehicle remains protected after a power failure recovery) and the Safe Start children safety feature. With many an advanced function, this product will satisfy any one your expectations from high-end commodity and security systems, without neglecting any standard feature commonly offered by entry-level starters.

### Using the Remote Control

Your System is equipped with a 5-button multi-channel remote control. It can operate two independent vehicles equipped with a System (see **Multi-Car Operation** section, later in this Guide, for second-car transmitter functions).

The functions of the transmitter are as follows:

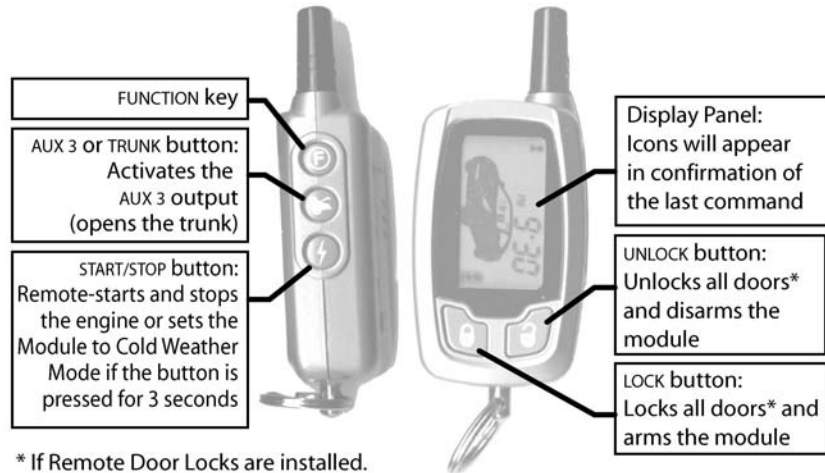

## LCD Remote Functions

The Transmitter offers several command-confirmation and timer features. This section explains some of the key functions available on the Remote Control. Next section gives a summary of the button combinations used to access the functions (see **LCD Remote Operation Tables**).

### Note:

If you wish to exit a function while still in the process of accessing it, simply stop and wait for at least 10 seconds: the Remote Control will return to its normal state.

### Basic Vehicle Operation

The vehicle can be remote-started and stopped using the **START/STOP** (⚡) button. The **TRUNK** (🔒) button will open the Trunk (if this feature is installed on the vehicle). The **LOCK** (🔒) and **UNLOCK** (🔓) buttons will lock and unlock the Doors of the vehicle (if the Remote Door Lock feature is installed on the vehicle) and arm or disarm the Starter Kill (if installed). The **FUNCTION** (Ⓛ) button is used to access all advanced functions of the Remote Control. (Refer to the LCD Operation and Confirmations tables.)


### Alarm Clock

The LCD Remote Control has a built-in Alarm Clock which can be set up using the **F** button. Use the **F** and **🔒** buttons to switch the Alarm Clock on and off (refer to the tables).



### Time Adjust Mode

Use Time Adjust Mode to set the current time on your Remote Control using the **F** button (refer to the tables).


### Countdown Timer

This feature allows set up a countdown of a duration entered by the user in hours and minutes using the  button (refer to the tables).



### Parking Countdown

This version of the Countdown feature is particularly useful for keeping track of parking meter time: the user may quickly set up the countdown in slices of 10 or 30 minutes using the  and  buttons (refer to the tables).



### Melody Selection

The Remote Control allows the user to select which melodies are to be used upon the following events: remote starting of the vehicle, the Alarm, ending of the countdown, entering Cold Weather Mode. Melodies for these various events can be selected using the  button (refer to the tables).



### Vibration Mode

Use this feature to replace audible signals with a vibration signal. Use the  and  buttons to switch Vibration Mode ON and OFF (refer to the tables).


### Power Saving Mode

When set to Power Saving Mode, the Remote Control will cease polling the Remote Starter Module on a regular basis for status information. This will extend battery life. Use the  and  buttons to switch Power Saving Mode ON and OFF (refer to the tables).

### Remote Control Finder

This function allows the user to locate the Remote Control when it has been accidentally dropped near the vehicle. Pressing the Valet Button and holding it down for 3 seconds (or until the Parking Lights flash five times) will cause the Remote Control to start beeping for one minute. The beeping will stop by itself after one minute, or it can be switched off by pressing the Lock () or the Unlock () button on the Remote Control.

### Door and Hood Monitoring

The remote control will warn the user when any sensor zone is either open or under attack:  
If a door is left open, the remote control will beep once and the door will start flashing on the Vehicle icon of the display. After If the door is closed, the remote control will beep a second time and the door image will stop flashing after five seconds.  
If the hood is left unclosed, the remote control will beep once and the hood will start flashing on the Vehicle icon of the display. After If the hood is closed, the remote control will beep a second time and the hood image will stop flashing after five seconds.  
If the alarm detects an intrusion either through a door or through the hood, the alarm will be triggered. This event will be reported on the remote control by the Intrusion Icon () which

will start flashing on the display. This will go on until either the Lock (🔒) or the Unlock (🔓) button is pressed on the remote control.

## LCD Transmitter Operation (First Car Control)

### Basic Vehicle Operation

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
LOCK			1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK			2 Beep	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
TRUNK or AUX 3			1 Beep	Trunk output
START * (see Runtime Options below)			Melody	Starts the engine
STOP		None	Melody	Stops the engine
Light ON		ON for 10 seconds		Press the  button once.

### Transmitter Mode Selection

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
POWER-SAVING MODE	+		Melody	
VIBRATION MODE	+		Vibrates twice	
ALARM CLOCK MODE ON/OFF	+		Melody	Press once to switch the Alarm Clock <b>ON</b> Press twice to switch the Alarm Clock <b>OFF</b>

### Time or Alarm Clock Adjustments

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
TIME ADJUST MODE (HOUR)	for 1 sec		2 BEEPS	button: press for upward adjustment or for switching the function ON. button: press for downward adjustment or for switching the function OFF.
TIME ADJUST MODE (MIN)	1 time			
ALARM CLOCK ADJUST MODE (HOUR)	2 times			
ALARM CLOCK ADJUST MODE (MIN)	3 times			
ALARM CLOCK MUSIC OR POWER ON SELECTION	4 times		5 selections: 1,2,3,4,5	
ALARM CLOCK ADJUST MODE (ON/OFF)	5 times			
REMOTE START ON MELODY SELECTION 2	10 times		5 selections: 1,2,3,4,5	

### Cold Weather Mode

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
TO ENTER COLD WEATHER MODE	⚡		Melody	Press and hold ⚡ for 3 seconds.
TO EXIT COLD WEATHER MODE	⚡	None	Melody	Press and hold ⚡ for 3 seconds
TO ENTER COLD WEATHER MODE IN SAFE START MODE	⚡ X 2		Melody	Press ⚡ twice within 3 seconds. Or: press and hold for 1 second (melody) then press and hold for 3 seconds.
TO EXIT COLD WEATHER MODE IN SAFE START MODE	⚡ X 2	None	Melody	Press ⚡ twice within 3 seconds. Or: press and hold for 1 second (melody) then press and hold for 3 seconds.

### Home Valet™

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
TO ENTER HOME VALET™ MODE	Step 1 :  or Step 2 :  + ⚡ simultaneously within 5 sec.		1 BEEP	Press  or  within 5 seconds, press  + ⚡. The remote control will display the  icon and you will hear 1 beep.
TO EXIT HOME VALET™ MODE	NONE	NONE	NONE	Insert the key in the ignition switch and turn it to the <b>IGNITION ON / RUN</b> position. The icon will disappear.


 


### Countdown Timer

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
COUNTDOWN TIMER ADJUST MODE (HOUR)	6 times			button: press for upward adjustment or for switching the function ON.  button: press for downward adjustment or for switching the function OFF.
COUNTDOWN TIMER ADJUST MODE (MIN)	7 times			
COUNTDOWN TIMER ENDING MELODY SELECTION 1	8 times		5 Selections 1,2,3,4,5	
COUNTDOWN TIMER MODE (ON / OFF)	9 times			







### Parking Countdown

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
FOR PARKING COUNTDOWN: PRESS AND HOLD  THEN PRESS:	⚡ 1 time		Melody	10 MIN COUNT DOWN
	⚡ 2 times		Melody	20 MIN COUNT DOWN
	⚡ 3 times		Melody	30 MIN COUNT DOWN
	⚡ 4 times		Melody	60 MIN COUNT DOWN
	⚡ 5 times		Melody	90 MIN COUNT DOWN
	⚡ 6 times		Melody	120 MIN COUNT DOWN
	⚡ 7 times		Melody	PARKING COUNT DOWN OFF

### Safe Start Mode












FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
START ON SAFE START MODE	 X 2		Melody	Press the  button <b>twice</b> within 3 seconds. <b>Or:</b> Press for 1 second (melody) then press again for 1 second.
STOP ON SAFE START MODE		None	Melody	

### \*Runtime Options (once the car has been remote started)


 


 


FUNCTION	BY PRESSING	ICON	GAS	DIESEL
ENGINE RUNTIME			4 minutes	9 minutes
			15 minutes	20 minutes
			25 minutes	30 minutes

## LCD Transmitter Operation (Second Car Control)

### Basic Vehicle Operation

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
LOCK	 + 		1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK	 + 		2 Beep	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
START	 + 		Melody	Starts the engine
STOP	 + 	None	Melody	Stops the engine

### Start and Stop While in Safe Start Mode

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
START ON SAFE START MODE	 +  X 2		Melody	Press the  and  buttons simultaneously <b>twice</b> within 3 seconds. Press for 1 second (a melody will be heard) then press 1sec and a melody will be heard again.
STOP ON SAFE START MODE	 + 	None	Melody	

## Remote-Starting Your Vehicle

### Setting Your Vehicle Into Ready Mode

This product is designed for vehicles with a **manual** transmission only. In order to start the vehicle by remote, the unit must first be set to Ready Mode. If the unit is not set to Ready Mode, it cannot remote-start the vehicle.

Once the system is set to Ready Mode, the vehicle can be remote-started and stopped at wish. The system will exit Ready Mode if a door or the hood is opened, if the brake pedal is pressed, if the parking brake is disengaged or if the ignition key is turned to the **IGNITION ON (RUN)** position.



#### To set the system to Ready Mode:

1. Ensure that all the doors are closed and that the shifter is in the neutral position.
2. With the engine already running, apply the parking brake and release the brake pedal.  
**Make sure to release the brake pedal.**
3. Within 20 sec. press **LOCK**, **UNLOCK** or **START/STOP** on the transmitter.  
**The parking lights will flash 3 times quickly and remain lit.**
4. Remove the key: the engine will go on running.
5. Exit the vehicle and close the door.
6. Press and hold either:
  - a. **LOCK** to lock the doors and shut down the engine;
  - b. **UNLOCK** to unlock the doors and shut down the engine;
  - c. **START/STOP** to shut down the engine without affecting the doors.

#### Remaining In Ready Mode

Once the vehicle is in Ready Mode you can start and stop the vehicle at wish. However, should any of the following occur, the vehicle will exit Ready Mode – thus eliminating the remote start option until Ready Mode is restored:

- Door opened;
- Hood opened;
- Brake pedal pressed;
- Parking brake disengaged;
- Ignition key turned to the **IGNITION ON (RUN)** position.

Should any of the above occur, Ready Mode will be cancelled.

**Note:** The unit will notify the user that it has exited Ready Mode by giving 3 slow flashes (parking lights).

#### Remote-starting

Press the **START/STOP** button for approx. 1 second. The parking lights will come **ON** and the remote control will play a melody to inform you that the System has received your signal. Approximately 5 seconds later, the engine will start. The remote control will play a second melody to confirm that the vehicle was successfully started. The parking lights will remain **ON** during the pre-programmed run time of the engine.

**Be careful!** It could take up to 10 seconds before you receive the second confirmation (Runtime). If you press any buttons before that, you will not receive the second confirmation.

If the vehicle does not start at the first attempt, the system will shut down, wait a few seconds and try to start the engine again. There will be 3 start attempts before the system gives up.

Once the vehicle is running, the user may select the length of time during which the engine is to go on running.

#### Vehicle Presets

##### Heater & Heated Seat

When leaving the vehicle it is recommended to preset the accessory controls in preparation for the next remote start. Settings for the blower motor (fan), front and rear, as well as heated seats (if equipped) should not be left on **HIGH**. It is recommended to leave the settings on **LOW** or **MEDIUM** instead.

##### Windshield Wipers & Radio & Headlights

Certain vehicles require the radio and / or windshield wiper and / or headlight circuits to become energized while running under remote start. When leaving the vehicle you must ensure that the windshield wiper and headlight switches are **OFF**. Leaving the headlight switch **ON** on certain types

of vehicles could cause them to remain **ON** even after remote starter shut down, resulting in a dead battery.

### Driving Off

With the vehicle running under remote control, press the **UNLOCK** button to disarm and unlock the doors. Enter the vehicle and do the following:


- Turn the ignition key to the **IGNITION ON (RUN)** position. (**Do not turn the key to the CRANK** position while the engine is running. This would cause the starter motor to re-engage.)
- Press the brake pedal to disengage the remote starter unit.

You are now ready to drive off.

## Using the System


### Arming and Disarming the System

#### To disarm the alarm and Starter Kill (if installed) and unlock the doors (if installed):

1. Press and hold the **UNLOCK** button for approx. 1 sec.  
You will hear **two chirps** if the Siren or Horn is so configured.
2. The  icon will light up on the LCD display of the remote control. The parking lights will **flash twice** and the L.E.D. will go out to confirm that the doors have been unlocked and that the Starter Kill (if installed) and the alarm are disarmed.

In Passive Mode, the System will rearm automatically 30 seconds after unlocking unless the key is meanwhile inserted in the ignition switch (see description of **Passive Mode** later in this Guide).

#### To arm the alarm and Starter Kill (if installed) and lock the doors (if installed):

1. Press and hold the **LOCK** button for approx. 1 sec.  
You will hear **one chirp** if the Siren or Horn is so configured.
2. The  icon will light up on the LCD display of the remote control. The parking lights will **flash once** and the L.E.D. will flash slowly to confirm that the doors have been locked and that the Starter Kill feature (if installed) and the alarm are armed.

### Idle Mode

**Convenience feature:** Idle Mode allows you to keep the engine running and the doors locked while you stop, for example, at a convenience store or for a short delivery.

This feature allows you to let the remote starter take over control of the vehicle (i.e. no Key in the Ignition Switch) while the engine is running. For example, if you stop for a delivery or at a convenience store, lock your vehicle and leave it running for the length of a run cycle while you are away. Idle Mode can be activated through the same routine as that used for Ready Mode; at the last step, the **TRUNK** button is pressed instead of the other buttons:

1. Ensure that all the Doors are closed and that the Shifter is in the Neutral position.
2. With the Engine already running, apply the Parking Brake and release the Brake Pedal. **Make sure to release the brake pedal.**
3. Within 20 sec. push **LOCK**, **UNLOCK** or **START/STOP** on the Transmitter. **The parking lights will flash 3 times quickly and remain lit.**
4. Remove the key: the Engine will go on running.
5. Exit the vehicle and close the Door.
6. Press the **TRUNK** button until the system is armed (the doors will be locked if remote door lock is installed).

If the pre-programmed run-time expires or if the user shuts down the engine by remote control, the vehicle will get in Ready Mode.

**Caution!!!** Do not leave children or pets unattended in a vehicle standing in Idle Mode.

### Turbo Mode

If Turbo Mode is configured at installation, it will allow a turbocharger to idle down after the user leaves the vehicle: the unit will take over the vehicle and keep it running for 60 seconds (or until it is shut down by remote control), then shut down the engine and set the System to Ready Mode.

**To activate Turbo Mode, follow all steps of the Ready Mode routine:**

1. Ensure that all the doors are closed and that the shifter is in the neutral position.
2. With the engine already running, apply the parking brake and release the brake pedal.  
**Make sure to release the brake pedal.**
3. Within 20 sec. press **LOCK**, **UNLOCK** or **START/STOP** on the transmitter.  
**The parking lights will flash 3 times quickly and remain lit.**
4. Remove the key: the engine will go on running.
5. Exit the vehicle and close the door.
6. Press and hold either:
  - a. **LOCK** to lock the doors and shut down the engine after 60 sec.;
  - b. **UNLOCK** to unlock the doors and shut down the engine after 60 sec.;
  - c. **START/STOP** to shut down the engine immediately, without affecting the doors (this will by-pass Turbo Mode).

### Valet Mode with the Valet Switch

When your vehicle is in Valet Mode, the remote starter functionalities are disabled. If the vehicle needs to be serviced, or if you park it indoors, the Valet Mode will prevent the engine from being remote-started accidentally.

#### To put the system i n t o Valet Mode:

1. Turn the ignition key to the **IGNITION ON (RUN)** position.
2. Within 3 sec., press the valet button (the L.E.D. will come **ON** solid).

#### To take the system o u t o f Valet Mode:

1. Turn the ignition key to the **IGNITION ON (RUN)** position.
2. Within 3 sec., press and release the valet button (the L.E.D. will come **OUT**).

**Note:** Once Valet Mode is activated, the remote starter and alarm functions will be disabled.

### Ignition Valet

This feature will allow you to remotely put your system into Valet Mode by using the ignition key instead of the Valet button as above. Ignition Valet can be used without a Valet button installed.

#### To put the system i n t o Valet Mode:

- Insert the ignition key into the ignition switch. Within 10 sec., turn the key 5 times successively into the **IGNITION ON / RUN** and **OFF** positions.
- The parking lights will flash three times to indicate that the vehicle is now in Valet Mode. The L.E.D. will come **ON** solid.

#### To take the system o u t o f Valet Mode:

- Insert the ignition key into the ignition switch. Within 10 sec., turn the key 5 times successively into the **IGNITION ON / RUN** and **OFF** positions.
- The parking lights will flash twice to indicate that the vehicle is now in Valet Mode. The L.E.D. will go out.

**Note:** With the Remote Valet activated, the remote starter and alarm functions will be disabled.

### Start Attempts Indicator (Valet Mode)

This reveals start attempts made while the vehicle was in **Valet Mode**. The parking lights will:

- Come ON, go OUT; then
- Flash **twice**.

### “Home Valet™” Mode

If configured at installation, this feature will remotely set the vehicle to a no-remote-start mode: if the vehicle is parked indoors there is no danger of it starting accidentally by remote control.

**Note:** Once the Home Valet Mode is activated, the vehicle will not start by remote.

#### To take the system i n t o Home Valet Mode:

- Press the LOCK or UNLOCK button.
- Within 5 seconds, press the Lock and START/STOP button simultaneously.  
**The transmitter will beep once and the Home Valet icon will start flashing.**  
**The icon will flash until the vehicle exits Home Valet Mode.**

#### To take the system o u t o f Home Valet Mode:

- Turn the ignition key to the IGNITION ON (RUN) position.


The system will warn you if someone attempts to start your vehicle while it stands in Home Valet Mode. The parking lights will:

- Go ON then OFF; then
- Flash **twice**, pause; then
- Flash **twice** again.


### Remote Valet Mode

This feature will allow you to remotely put your system into Valet Mode by using the transmitter instead of the Valet button as above.

#### Getting i n t o Valet Mode

- Hold the UNLOCK and START/STOP buttons simultaneously for 3 seconds.
- **The Parking Lights will flash 3 times.**  
The Transmitter will BEEP once and will display the  icon; the LED will remain on solid.

#### Getting o u t o f Valet Mode

- Hold the UNLOCK and START/STOP buttons simultaneously for 3 seconds.
- The Parking Lights will flash 2 times.  
The Transmitter will BEEP once and the  icon will disappear; the LED will turn off.

#### Note:

With the Remote Valet activated, the remote starter function will be disabled.

### Panic Mode

In an emergency situation, you can activate Panic Mode using the LOCK or UNLOCK button. This will:

- shut down the engine,
- disarm the Starter Kill and
- unlock the doors (with the UNLOCK button)
- activate the activate the siren for 1 minute.
- or lock the doors (with the LOCK button),

**Note:** See the description of the **Starter Kill** option later in this Guide.

#### To activate Panic Mode:

- Press and hold the UNLOCK button for approximately 3 sec. until the sound signal starts and the parking lights flash: this will unlock the doors before the sound signal starts.
- Or press and hold the LOCK button for approximately 3 seconds until the sound signal starts and the parking lights flash: this will lock the doors before the sound signal starts.

Panic Mode will automatically shut down after 1 minute.

**Note:** To stop Panic Mode before the end of its delay, press the **LOCK** or **UNLOCK** button until the sound signal stops.

### Quick Lockout™

(Also called **Secure Panic**.) For fast protection in emergency situations, the system will **LOCK** all doors when you **press the brake pedal while you hear the sound signal**. (**Quick Lockout** is only available when **Panic Mode** has been set off.)

### Cold Weather Mode

When Cold Weather Mode is active, the engine starts every 2 hours and runs for 4 minutes (or for 9 or 20 minutes with diesel engines). **The System must be in Ready Mode in order to enter Cold Weather Mode**. Cold Weather Mode automatically ends after 24 hours.


#### To enter Cold Weather Mode:

- Press and hold the **START/STOP** button for 3 seconds ... until the parking lights flash three times.

**The remote control will play a melody and the  icon will appear on the display.**

#### To exit Cold Weather Mode, do any one of the following actions:

- Open the hood.
- Start the engine by remote.
- Turn the ignition key to the **IGNITION ON (RUN)** position.
- Press the brake pedal.
- Press and hold the **START/STOP** button for 3 sec. (**the parking lights will flash once**).

**When the System exits Cold Weather Mode, the  icon will disappear from the display. Temporary Chirp Delete**

To temporarily disable the chirp confirmations of the siren upon arming and disarming (e.g. in a quiet neighbourhood):

1. Press the **TRUNK** button.
2. Within 3 sec., press the **LOCK** or **UNLOCK** button to arm or disarm without any chirps.

## Advanced Features: Installation-programmable Options

The System was designed with flexibility and OEM integration in mind. With its programmable options, this unit can single-handedly control nearly any electrical system in your vehicle.

**Caution:** The programming of your system should be left to a professional. Changing any one of the settings may affect the operation of your System.

#### The installation-programmable options are as follows:

- Remote Door Locks
- Priority Door Access
- Passive or Active Arming
- Starter Kill / Anti-grind feature
- Shock Sense and Warn-away
- Disarmed Notification
- Siren / Horn Chirps
- Car Finder
- Siren / Horn Chirp Timing
- Safe Start
- Ignition-controlled Door Locks
- Ignition Re-lock
- Secure Lock
- Turbo Mode
- Remote Trunk Release
- Engine Run Time
- Multi-car Operation

### Remote Door Locks

If your System was installed with the Remote Door Locks option, you will have the convenience of remote keyless entry. See section **Arming and Disarming the System**, earlier in this Guide, for further instructions on remote door locking and unlocking.

### Priority Door Access

(Enabled by default.) If the Remote Door Locks option is installed on your vehicle, this safety feature allows you unlock solely the driver's door with a single press of the **UNLOCK** button on the transmitter; upon a second press of the **UNLOCK** button, all the other doors will unlock.

### Active or Passive Arming

(Passive Mode by default.) The alarm and Starter Kill can be configured either to Passive Mode (so as to arm automatically) or Active Mode (so as to require user intervention for arming). By default, your System is configured to **Passive Mode**. In Passive Mode, the alarm and Starter Kill will automatically arm **30 seconds** after the last door is closed. The System will not arm if a door is left open, or if you re-open a door within the 30-second delay.

**Important note:** When the System re-arms automatically or if there is an alarm condition, you can disarm the System by simply pressing the **UNLOCK** button.

### The Starter Kill and the Anti-grind Feature

With this added security feature, the system will prevent your vehicle from starting with the ignition key when the Starter Kill is armed. If your System was installed with the Starter Kill option, one will not be able to start your vehicle with the key unless the system has been unlocked and disarmed first, or put into Valet Mode.

**Note:** If the Starter Kill is installed, your vehicle will benefit from a protection against starter motor damage that could occur after remote-starting the engine should the user, by force of habit, turn the ignition key to the **CRANK** position.

### Shock Sense, Warn-away Sense

(Both enabled by default.) Your System will react to a full shock by triggering the alarm; it can also respond to a lighter shock (30 % of the strength of a full shock) by giving a **warn-away** (without triggering an alarm condition). When the engine is running after a remote start, however, **the System will prevent any alarm condition to be triggered** ; it will still give a warn-away if this feature has not been disabled at installation.

**Note:** After a remote start, although the shock sensor is disabled, all the other alarm-triggering zones, such as the doors or the hood, may still trigger an alarm.

### Disarmed Notification

(Off by default.) This feature will notify the user when the vehicle was left disarmed: after the engine is shut down (with the key removed) and all doors are closed, the siren will chirp once after a 10-sec. notification delay to warn the user that the vehicle was left unprotected. The notification can be avoided by pressing the **LOCK** or **UNLOCK** button on the transmitter. The user will likewise be notified after the System is disarmed using the transmitter.

### Siren or Horn Chirps

(**ON** by default.) The siren will chirp to confirm basic operations on the System:

- By default, upon **locking** the doors the siren will give **one chirp** if no protection zone is active.
- If a **zone is active** as the doors are being **locked**, the siren will give **three chirps**.
- When the doors are being **unlocked**, the siren will give **two chirps** if no intrusion was detected.
- If an **intrusion was detected**, as the doors are being **unlocked** the siren will give **four chirps**.

The system can alternatively be set to:

**Warning Mode:** no chirp during lock/unlock...

- unless a zone is active when locking, in which case there will be 3 chirp upon locking
- or unless the alarm was triggered, in which case there will be 4 chirps when unlocking);

**Open Zone Notification Mode:** 3 warning chirps if a door is left open 10 sec. after arming.

**No Chirp:** the siren will not chirp under any circumstance.

### **Car Finder**

(Enabled by default.) When enabled, the Car Finder option will help you locate your vehicle by generating a pulsating signal through the horn or the siren. To hear the signal, press the **LOCK** and **UNLOCK** buttons simultaneously. This will cause a pulsating signal lasting for the time you keep the buttons pressed.

### **Siren or Horn Chirp Timing**

The duration of the chirps can be adjusted at installation (from 5 to 200 ms).

### **Safe Start**

(Disabled by default.) If this feature is enabled, the user must press the **START/STOP** button 2 times within 3 seconds to remote-start the vehicle. This will eliminate accidental remote starts, e.g. when children are playing with the transmitter.

If **Swap Start Mode** is selected, to remote-start your vehicle press **LOCK** and **UNLOCK** simultaneously. The **AUX 2** output can be activated by pressing the **START/STOP** button.

### **Home Valet™**

(Disabled by default.) If this feature is installed, the user will have the possibility to remotely set the vehicle to a no-remote-start mode. See **Home Valet** section, earlier in this Guide, for full instructions.

### **Ignition-controlled Door Locks**

(Enabled by default.) This is an added security feature. If your System was installed with the Ignition-Controlled Door Locks option, the doors will automatically be locked as soon as the ignition key is turned to the **IGNITION ON (RUN)** position while the brakes are pressed. When the key is turned to the **OFF** position, the doors will automatically be unlocked.

### **Ignition Re-lock**

On Systems of this series, when Ignition-controlled Door Locks are enabled and the ignition key is in the **IGNITION ON (RUN)** position, should any door be unlocked and opened, all doors will be relocked next time the brake pedal is pressed.

### **Secure Lock**

(Disabled by default.) Before it can remote-start your vehicle, the System must first disarm the factory security system. The Secure Lock feature may be required on certain vehicle models with factory security systems that automatically unlock the doors when the security system is disarmed. To keep your vehicle protected when the factory security system is disarmed for a remote start, Secure Lock will relock your doors as soon as the vehicle has started. Once the engine run cycle ends, Secure Lock will rearm your factory security system.

### **Turbo Mode**

(Disabled by default.) When left in Turbo Mode, the System will keep the engine running for 60 seconds before shutting it down. This is to allow a turbocharger to idle down after the user leaves the vehicle. See **Turbo Mode** section earlier in this Guide.

### **Remote Trunk Release**

If your system was installed with the Remote Trunk Release option, you can open your trunk by pressing the **TRUNK** button for 3 seconds on the remote transmitter or by pressing the **TRUNK** button **TWICE** within 3 seconds.

### **Engine Run Time**

(15/20 minutes by default.) If you have a gas engine, your System can be programmed to run the engine for 4, 15, or 25 minutes (15 minutes by default). If you have a diesel engine, the System can be programmed to run the engine for 9, 20, or 30 minutes (20 minutes default).

### Multi-car Operation

This option allows the owner of two vehicles, both equipped with System systems, to control both systems with a single remote control. To control the second vehicle, simultaneously press the **TRUNK** button and the button of the function you wish to use. See the transmitter operation table earlier in this Guide. for full instructions on second car operation.

**Note:** Your remote control must be configured for second car operation by the installer.

### L.E.D. Intrusion Codes

If an intrusion took place while your vehicle was locked and the system was armed, the L.E.D. will provide feedback on the intrusion. The L.E.D. intrusion codes are flashed by the L.E.D. in continuous loops and are as follows:

- 1 flash = power-up reset: battery disconnected and reconnected, or dead battery.
- 2 flash = doors intrusion
- 3 flash = shock sense
- 4 flash = hood intrusion
- 5 flash = panic
- 6 flash = ignition

### Troubleshooting Poor Transmitting Range

Many factors may affect the operating range of the transmitter. Some of these are:

- The condition of the battery in the transmitter.
- The operating environment (for example: downtown radio-frequency noise, airports, cellular phone towers...)
- Metal: any type of metal will affect operating range. This includes the metal in the car.
- The shape of the vehicle can affect range as well; vans in general have an especially poor range.
- The shape of the roof and A-pillars brings about considerable radio-frequency deflection (in this case the signal from the remote control). As a result, the direction in which the vehicle is facing in relation to the remote control can affect the range. Straight on – standing in front of the vehicle – generally gives you the greatest range; the second best performance is from the back. Using the remote control from either side of the vehicle will usually give the lowest range.
- The range will be significantly lower in a crowded parking lot than in open space.
- Always hold the transmitter high, approximately at shoulder height. Holding the transmitter against your chin will also increase your range: your head acts as an antenna.
- The operating range will be somewhat lower on vehicles equipped with an aftermarket or factory alarm.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>