

ProStart™ MG

TWO-WAY LCD REMOTE STARTER SYSTEM
WITH FULL ALARM SYSTEM FOR
MANUAL TRANSMISSION VEHICLES

CT-5460TW User Guide

The Transmitter's Battery:

Depending on the usage, the transmitter's battery can last between 3 to 6 months. When the battery is low, the transmitter will emit two "beeps" in a repetitive cycle. **At that point the batteries should be replaced.** We recommend keeping a spare battery somewhere handy such as inside the glove compartment.

WARNING!

Manual transmission vehicles equipped with a remote starter unit must always be parked with the gearshift lever in the **NEUTRAL** position and the emergency brakes must always be applied.

INDUSTRY CANADA USER NOTICE:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.

FCC USER NOTICE (U.S.A.):

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Table of Contents

Table of Contents	2	Car Finder	8
Introduction	3	Safe Start	9
Remote-Starting Your Vehicle	3	Ignition-controlled Door Locks	9
Remote-starting	3	Ignition Re-lock.....	9
Vehicle Presets	3	Secure Lock	9
Driving Off	3	Turbo Mode	9
Setting Your Vehicle into Ready Mode	3	Remote Trunk Release	9
Remaining in ready mode	4	Engine Run Time.....	9
Using the System.....	4	Multi-car Operation.....	9
Arming and Disarming the System....	4	Missing a Start or a Stop Confirmation ...	9
Idle Mode.....	4	L.E.D. Intrusion Codes.....	11
Turbo Mode.....	5	Troubleshooting Poor Transmitting Range	11
Valet Mode with the Valet Switch	5	Using the Remote Control	12
Ignition Valet.....	5	LCD Transmitter Operation (<i>First Car Control</i>)	12
Start Attempts Indicator (Valet Mode)	6	Basic Vehicle Operation	12
"Home Valet™" Mode.....	6	Transmitter Mode Selection	13
Remote Valet Mode.....	6	Time or Alarm Clock Adjustments ...	13
Panic Mode	6	Cold Weather Mode	14
Quick Lockout™	7	Home Valet™	14
Cold Weather Mode	7	Parking Countdown	14
Temporary Chirp Delete	7	Safe Start Mode	14
Advanced Features: Installation-programmable Options	7	*Runtime (<i>Cannot be programmed. Serves as indication only.</i>)	14
Remote Door Locks.....	7	LCD Transmitter Operation (<i>Second Car Control</i>)	15
Priority Door Access.....	7	Basic Vehicle Operation	15
Active or Passive Arming	8	Start and Stop While in Safe Start Mode	15
The Starter Kill and the Anti-grind Feature	8	Diagnostics – Chirps Table.....	15
Shock Sense, Warn-away Sense.....	8	Diagnostics – Parking Light Flash Table.....	16
Disarmed Notification	8		
Siren or Horn Chirps.....	8		

Introduction

This System is a state-of-the-art remote car starter and alarm combo system. The system is packed with advanced features such as priority access to the driver's door and Car Finder (commodity features), last armed state memory in case of power failure (which ensures that the vehicle remains protected after a power failure recovery) and the Safe Start children safety feature.

Remote-Starting Your Vehicle

Remote-starting

Press the **START/STOP** button for **approx. 1 second**. The parking lights will come **ON** and the remote control will play a melody to inform you that the System has received your signal. Approximately 5 seconds later, the engine will start. The parking lights will remain **ON** during the pre-programmed run time of the engine.

If the vehicle does not start at the first attempt, the system will shut down, wait a few seconds and try to start the engine again. There will be 3 start attempts before the system gives up.

Vehicle Presets

Heater & Heated Seat

When leaving the vehicle it is recommended to preset the accessory controls in preparation for the next remote start. Settings for the blower motor (fan), front and rear, as well as heated seats (if equipped) should not be left on **HIGH**. It is recommended to leave the settings on **LOW** or **MEDIUM** instead.

Windshield Wipers & Radio & Headlights

Certain vehicles require the radio and / or windshield wiper and / or headlight circuits to become energized while running under remote start. When leaving the vehicle you must ensure that the windshield wiper and headlight switches are **OFF**. Leaving the headlight switch **ON** on certain types of vehicles could cause them to remain **ON** even after remote starter shut down, resulting in a dead battery.

Driving Off

With the vehicle running under remote control, press the **UNLOCK** button to disarm and unlock the doors. Enter the vehicle and do the following:

Turn the ignition key to the **IGNITION ON (RUN)** position. (**Do not turn the key** to the **CRANK** position while the engine is running. This would cause the starter motor to re-engage.)

Press the brake pedal to disengage the remote starter unit.

You are now ready to drive off.

Setting Your Vehicle into Ready Mode

This product is designed for vehicles with a **manual** transmission only. In order to start the vehicle by remote, the unit must first be set to ready mode. If the unit is not set to ready mode, it cannot remote-start the vehicle. Once the system is set to ready mode, the vehicle can be remote-started and stopped. The system will exit ready mode if a door or the hood is opened, if the brake pedal is pressed, if the parking brake is disengaged or if the ignition key is turned to the **IGNITION ON (RUN)** position.

1. Ensure that all the doors are closed and that the gearshift lever is in the **NEUTRAL** position.
2. With the engine already running, apply the parking brake and release the brake pedal.
Make sure to release the brake pedal.
3. Within 20 sec. push **LOCK**, or **UNLOCK**.
The parking lights will flash 3 times quickly and remain lit.
4. Remove the key: the engine will continue running.
5. Exit the vehicle and close the door.
6. Press either:
 - a. **LOCK** to lock the doors arm the alarm and shut down the engine or enter turbo mode;
 - b. **UNLOCK** to unlock the doors and shut down the engine or enter turbo mode;
 - c. **START/STOP** to shut down the engine without affecting the doors.

Table 1

Remaining in ready mode

Once the vehicle is in ready mode, you can start and stop the vehicle as desired. However, should any one of the following occur, the vehicle will exit ready mode, thus disabling remote start capabilities until ready mode is restored:

- Door opened,
- Hood opened,
- Brake pedal pressed,
- Parking brake disengaged,
- Ignition key turned to the **IGNITION ON (IGNITION ON / RUN)** position.

Should any of the above occur, ready mode will be cancelled.

Table 2

Using the System

Arming and Disarming the System

To disarm the alarm and Starter Kill (if installed) and unlock the doors (if installed):

1. Press and hold the **UNLOCK** button for approx. 1 sec.
You will hear **two chirps** if the Siren or Horn is so configured.

The icon will light up on the LCD display of the remote control. The parking lights will **flash twice** and the L.E.D. will go out to confirm that the doors have been unlocked and that the Starter Kill (if installed) and the alarm are disarmed.

In Passive Mode, the System will rearm automatically 30 seconds after unlocking unless the key is meanwhile inserted in the ignition switch (see description of **Passive Mode** later in this Guide).

To arm the alarm and Starter Kill (if installed) and lock the doors (if installed):

2. Press and hold the **LOCK** button for approx. 1 sec.
You will hear **one chirp** if the Siren or Horn is so configured.
3. The icon will light up on the LCD display of the remote control. The parking lights will **flash once** and the L.E.D. will flash slowly to confirm that the doors have been locked and that the Starter Kill feature (if installed) and the alarm are armed.

Idle Mode

Convenience feature: Idle Mode allows you to keep the engine running and the doors locked while you stop, for example, at a convenience store or for a short delivery.

This feature allows you to let the remote starter take over control of the vehicle (i.e. no Key in the Ignition Switch) while the engine is running. For example, if you stop for a delivery or at a convenience store, lock your vehicle and leave it running for the length of a run cycle while you are away.

To enable Idle Mode:

1. With the engine running, press the **LOCK** or **UNLOCK** button (to unlock the doors) or the **START/STOP** button on the remote control until the parking lights come on.
2. Remove the key and exit the vehicle. The engine will go on running.
3. Lock the doors if needed.

The engine will go on running until the user re-enters the vehicle or until the expiration of the Engine Run Time .

Caution!!! Do not leave children or pets unattended in a vehicle standing in Idle Mode.

Turbo Mode

If turbo mode is configured at installation, it will allow a turbocharger to idle down after the user leaves the vehicle: the unit will take over the vehicle and keep it running for 60 seconds (or until it is shut down by remote control), then shut down the engine and set the system to ready mode.

To activate turbo mode, follow all steps of the ready mode routine:

1. Ensure that all the doors are closed and that the shifter is in the neutral position.
2. With the engine already running, apply the parking brake and release the brake pedal.

Make sure to release the brake pedal.

3. Within 20 sec. press **LOCK**, **UNLOCK** or **START/STOP** on the transmitter.

The parking lights will flash 3 times quickly and remain lit.

4. Remove the key: the engine will go on running.
5. Exit the vehicle and close the door.
6. Press and hold either:
 - a. **LOCK** to lock the doors and shut down the engine after 60 sec.;
 - b. **UNLOCK** to unlock the doors and shut down the engine after 60 sec.;
 - c. **START/STOP** to shut down the engine immediately, without affecting the doors (This will by-pass turbo mode).

Valet Mode with the Valet Switch

The system can be placed in Valet Mode to disable the remote starting capabilities. If the vehicle needs to be serviced, or if you park it indoors, Valet Mode will prevent the engine from being accidentally started by remote control.

To put the system i n t o Valet Mode:

1. Turn the ignition key to the **IGNITION ON (RUN)** position.
2. Within 3 sec., press the valet button (the L.E.D. will come **ON** solid).

To take the system o u t o f Valet Mode:

1. Turn the ignition key to the **IGNITION ON (RUN)** position.
2. Within 3 sec., press and release the valet button (the L.E.D. will come **OUT**).

Note: Once Valet Mode is activated, the remote starter and alarm functions will be disabled.

Ignition Valet

The system can be placed in Valet Mode to disable the remote starting capabilities. If the vehicle needs to be serviced, or if you park it indoors, Valet Mode will prevent the engine from being accidentally started by remote control.

To ENTER Valet Mode

1. With the key in the Ignition switch, turn the key to the **ON (RUN/IGNITION)** and then **OFF** positions 5 times within 10 seconds.
2. The Parking Light will flash 3 times indicating the Module is now in Valet Mode. The LED will turn **ON** solid.

To EXIT Valet Mode

1. With the key in the Ignition switch, turn the key to the **ON (RUN/IGNITION)** and then **OFF** positions 5 times within 10 seconds.
2. The Parking Light will flash twice indicating the Module is now out of Valet Mode. The LED will turn **OFF**.

Note: With the Remote Valet activated, the remote starter and alarm functions will be disabled.

Start Attempts Indicator (Valet Mode)

This reveals start attempts made while the vehicle was in **Valet Mode**. The parking lights will:

Come **ON**, go **OUT**; then
Flash **twice**.

“Home Valet™” Mode

This safety feature will remotely place the vehicle into a No-remote-start Mode: if the vehicle is parked indoors there is no danger it will start accidentally by remote control or external trigger.

Note: Once the Home Valet Mode is activated, the vehicle will not start by remote.

To enter Home Valet™ Mode:

Press the **LOCK** or **UNLOCK** button.

Within 5 seconds, press the **LOCK** and **START/STOP** buttons simultaneously.

The transmitter will beep once and the home valet icon will start flashing.

The icon will flash until the vehicle exits home valet mode.

To take the system out of Home Valet Mode:


Turn the ignition key to the **IGNITION ON (RUN)** position.

Remote Valet Mode

This feature will allow you to remotely put your system into Valet Mode by using the transmitter instead of the Valet button as above.

Getting into Valet Mode

- Hold the **UNLOCK** and **START/STOP** buttons simultaneously for 3 seconds.
- **The Parking Lights will flash 3 times.**

The Transmitter will BEEP once and will display the  icon; the LED will remain on solid.

Getting out of Valet Mode

- Hold the **UNLOCK** and **START/STOP** buttons simultaneously for 3 seconds.
- The Parking Lights will flash 2 times.

The Transmitter will BEEP once and the  icon will disappear; the LED will turn off.

Note:

With the Remote Valet activated, the remote starter function will be disabled.

Panic Mode

(This option must be programmed)

In an emergency situation, you can activate Panic Mode using the **LOCK** or **UNLOCK** button. This will:

- Shut down the engine.
- Disarm the starter kill
- Unlock the doors (if **UNLOCK** is pressed).
- Activate the horn for 30 seconds.
- Lock the doors (if **LOCK** is pressed).

Note: See the description of the **starter kill** option later in this guide.

To trigger panic mode:

- Press and hold the **UNLOCK** button for **approximately 3 seconds** until the horn starts to sound and the parking lights flash: this will unlock the doors before the horn starts.

OR

- Press and hold the **LOCK** button for **approximately 3 seconds** until the horn starts to sound and the parking lights flash: this will lock the doors before the horn starts.

Panic Mode will automatically shut off after 30 seconds.

Note: If you want to stop panic mode before the 30-second delay, press the **LOCK** or **UNLOCK** button.

Quick Lockout™

(Also called **Secure Panic**.) For fast protection, the system will **LOCK** all doors when you **press the brake pedal while the horn is activated and the system is in Panic Mode**. (Quick Lockout is only available when Panic Mode has been activated.)

Cold Weather Mode

When cold weather mode is active, the engine starts every 2 hours and runs for 4 minutes (or for 9 or 20 minutes with diesel engines). Cold weather mode automatically ends after 24 hours.

To enter cold weather mode:

Press the **FUNCTION** button followed by **START/STOP** button for 3 seconds until the parking lights flash three times. **There will be a beep and the  icon will appear on the display.**

To exit cold weather mode, do any one of the following actions:


Open the hood.

Start the engine by remote.

Turn the ignition key to the **IGNITION ON (RUN)** position.

Press the **FUNCTION** button followed by **START/STOP** button for 3 seconds until the parking lights flash once.

Press and hold the **START/STOP** button for 3 sec. **(the parking lights will flash once).**

When the system exits cold weather mode, the  icon will disappear from the display. To verify whether the system is in cold weather mode:

Verify that the cold weather mode icon is on your remote display.

Temporary Chirp Delete

To temporarily disable the chirp confirmations of the siren upon arming and disarming (e.g. in a quiet neighbourhood):

1. Press the **TRUNK** button.
2. Within 3 sec., press the **LOCK** or **UNLOCK** button to arm or disarm without any chirps.

Advanced Features: Installation-programmable Options

The System was designed with flexibility and OEM integration in mind. With its programmable options, this unit can single-handedly control nearly any electrical system in your vehicle.

Caution: The programming of your system should be left to a professional. Changing any one of the settings may affect the operation of your System.

The installation-programmable options are as follows:

- Remote Door Locks
- Priority Door Access
- Passive or Active Arming
- Starter Kill / Anti-grind feature
- Shock Sense and Warn-away
- Disarmed Notification
- Siren / Horn Chirps
- Car Finder
- Safe Start
- Ignition-controlled Door Locks
- Ignition Re-lock
- Secure Lock
- Turbo Mode
- Remote Trunk Release
- Engine Run Time

Remote Door Locks

If your system was installed with the remote door locks option, you will have the convenience of remote keyless entry.

Priority Door Access

When programmed, this safety feature lets you unlock solely the driver's door with a single press of the **UNLOCK** button on the transmitter; upon a second press of the **UNLOCK** button, all the other doors will unlock.

To **U N L O C K** your doors and **d i s a r m** the system:

1. Press and hold the **UNLOCK** button for approx. 1 sec.
2. The parking lights will flash twice and the LED will turn off to confirm that the doors have been unlocked and that the starter kill feature is disarmed if it was installed.

To **L O C K** your doors and **a r m** the system:

1. Press and hold the **LOCK** button for approx. 1 sec.

2. The parking lights will flash once and the LED will flash slowly to confirm that the doors have been locked and that the starter kill feature is enabled if it was installed.

The horn will give one signal if configured at installation.

Active or Passive Arming

The alarm and starter kill can be configured either to passive mode (so as to arm automatically) or Active Mode (so as to require user intervention for arming). In passive mode, the alarm and starter kill will automatically arm **30 seconds** after the last door is closed. The system will not arm if a door is left open, or if you re-open a door within the 30-second delay.

Important note: When the system re-arms automatically or if there is an alarm condition, you can disarm the system by simply pressing the **UNLOCK** button.

The Starter Kill and the Anti-grind Feature

With this added security feature, the system will prevent your vehicle from starting with the Ignition key when the starter kill is armed. If your ProStart was installed with the starter kill option, you will not be able to start your vehicle with the key unless the system has been unlocked first.

Note: If the Starter Kill feature is installed, your vehicle will benefit from a protection against starter motor damage that could occur after remote-starting the engine should the user, by force of habit, turn the ignition key to the **CRANK** position.

Shock Sense, Warn-away Sense

Your System will react to a full shock by triggering the alarm; it can also respond to a lighter shock (30 % of the strength of a full shock) by giving a **warn-away** (without triggering an alarm condition). When the engine is running after a remote start, however, **the system will prevent any alarm condition to be triggered**; it will still give a warn-away if this feature has not been disabled at installation.

Note: After a remote start, although the shock sensor is disabled, all the other alarm-triggering zones, such as the doors or the hood, may still trigger an alarm.

Disarmed Notification

This feature will notify the user when the vehicle was left disarmed: after the engine is shut down (with the key removed) and all doors are closed, the siren will chirp once after a 10-sec. notification delay to warn the user that the vehicle was left unprotected. The notification can be avoided by pressing the **LOCK** or **UNLOCK** button on the transmitter.

The user will likewise be notified after the System is disarmed using the transmitter.

Siren or Horn Chirps

The siren will chirp to confirm basic operations on the System:

By default, upon **locking** the doors the siren will give **one chirp** if no protection zone is active.

If a **zone is active** as the doors are being **locked**, the siren will give **three chirps**.

When the doors are being **unlocked**, the siren will give **two chirps** if no intrusion was detected.

If an **intrusion was detected**, as the doors are being **unlocked** the siren will give **four chirps**.

The system can alternatively be set to:

Warning Mode: no chirp during lock/unlock...

unless a zone is active when locking, in which case there will be 3 chirp upon locking or unless the alarm was triggered, in which case there will be 4 chirps when unlocking);

Open Zone Notification Mode: 3 warning chirps if a door is left open 10 sec. after arming.

No Chirp: the siren will not chirp under any circumstance.

Car Finder

When enabled, the Car Finder option will help you locate your vehicle by generating a pulsating signal through the horn or the siren. To hear the signal, press the **LOCK** and **UNLOCK** buttons simultaneously. This will cause a pulsating signal lasting for the time you keep the buttons pressed.

Safe Start

If this feature is enabled, it will require the user to press the **START/STOP** button twice within 3 seconds to start the vehicle. This will eliminate accidental remote starts (for example, if there are children playing with the transmitter). To stop the vehicle, the user must press **START/STOP** once.

Ignition-controlled Door Locks

This is an added security feature. If your system was installed with the ignition-controlled door locks option, the doors will automatically be locked as soon as the brake pedal is pressed after the ignition key has been turned to the **IGNITION ON (RUN)** position. When the ignition key is turned to the **OFF** position, the doors will automatically be unlocked.

Ignition Re-lock

Whenever the ignition-controlled door locks are enabled and the ignition key is in the **IGNITION ON (RUN)** position, when the brake pedal is pressed the system will automatically **LOCK** any door that has been unlocked, opened and/or closed.

Secure Lock

Before it can remote-start your vehicle, the module must first disarm the factory security system. The secure lock feature may be required on certain vehicle models with factory security systems that automatically unlock the doors when the security system is disarmed. To keep your vehicle protected when the factory security system is disarmed for a remote start, secure lock will relock your doors as soon as the vehicle has started. Once the engine run cycle ends, secure lock will rearm your factory security system.

Turbo Mode

When left in Turbo Mode, the system will keep the engine running for 60 seconds before shutting it down. This is to allow a turbocharger to idle down after the user leaves the vehicle. See **Turbo Mode** section earlier in this guide.

Remote Trunk Release

If your system was installed with the remote trunk release, you can open your trunk by pressing the **TRUNK** button for 3 sec. on the remote transmitter. Note that the trunk release option will only operate when ignition is **OFF** or if the vehicle is running under remote control.

Engine Run Time

If you have a gas engine, your unit can be programmed to run the engine for 4, 15, or 25 minutes (15 minutes by default). If you have a diesel engine, the module can be programmed to run the engine for 9, 20, or 30 minutes (20 minutes by default).

Multi-car Operation

This option allows the owner of two vehicles, both equipped with similar systems, to control both systems with a single remote control. To control the second vehicle, simultaneously press the **TRUNK** button and the button of the function you wish to use. See the transmitter operation table earlier in this guide for full instructions on second car operation.

Note: Your remote control must be configured for second car operation by the installer.
--

Missing a Start or a Stop Confirmation

If you have not received a start or the stop confirmation after pressing the **START/STOP** button, simply press the **LOCK** button. Pressing the **LOCK** button will refresh the display and will confirm if the vehicle was started or stopped.

The Start Confirmation Was Not Received

If after remote starting the vehicle no confirmation was received, simply press the **LOCK** button, this will refresh the display. If the vehicle was started successfully, the smoke icon and the hourglass icon will appear as well as the run time countdown. Pressing the **LOCK** button will also lock all doors (the lock icon will appear). If the doors were already locked prior to pressing the **LOCK** button, there will be no change in the status of the doors —i.e. the doors will remain locked.

- On models where starter kills were installed, pressing the **LOCK** button will also activate the starter kill.
- On alarm models, pressing the **LOCK** button will also activate the monitoring.

The Stop Confirmation Was Not Received

If after remote stopping the vehicle no confirmation was received —i.e. the display did not return to its basic state— simply press the **LOCK** button, this will refresh the display. If the engine was stopped, the smoke icon and the hourglass icon will disappear and the time will be displayed.

Pressing the **LOCK** button will also lock all doors (the lock icon will appear). If the doors were already locked prior to pressing the **LOCK** button, there will be no change in the status of the doors —i.e. the doors will remain locked.

- On models where starter kills were installed, pressing the **LOCK** button will also activate the starter kill.
- On alarm models, pressing the **LOCK** button will also activate the monitoring.

Multi-Level Features (default state)

Basic Features (press the FUNCTION button 1X)

FUNCTION ➤ LOCK: aux 2
 FUNCTION ➤ START/STOP cold weather

Multi-Car Operation (press the FUNCTION button 2X)

FUNCTION ➤ FUNCTION ➤ LOCK: 2nd car lock
 FUNCTION ➤ FUNCTION ➤ UNLOCK: 2nd car unlock
 FUNCTION ➤ FUNCTION ➤ START/STOP: 2nd car start/stop
 FUNCTION ➤ FUNCTION ➤ TRUNK: 2nd car trunk

Customized Features (press the FUNCTION button 3X)

(May not be compatible with some vehicles)

Your installer can add customized features such as turning on the radio, opening sliding doors, etc.

FUNCTION ➤ FUNCTION ➤ FUNCTION ➤ LOCK: customized feature 1
 FUNCTION ➤ FUNCTION ➤ FUNCTION ➤ UNLOCK: customized feature 2
 FUNCTION ➤ FUNCTION ➤ FUNCTION ➤ START/STOP: customized feature 3
 FUNCTION ➤ FUNCTION ➤ FUNCTION ➤ TRUNK: customized feature 2

By default, the multi-level features are programmed as follows:

- Level 1 (Basic Features)
- Level 2 (Multi car operation)
- Level 3 (Customized Features)

Accessing the Multi-Level Features and Other Transmitter Functions

- To access a Level 1 feature, press and hold the **FUNCTION** button until you hear a “beep”; within three seconds of hearing the “beep”, release the **FUNCTION** button. **5 0 1** will be displayed. This display means that you are now in Level 1. Simply press the corresponding button to access the desired feature.
- To access a Level 2 feature, press and hold the **FUNCTION** button until you hear a “beep” within three seconds of hearing the “beep”, release the **FUNCTION** button and press and release the **FUNCTION** button once more. **5 0 2** will be displayed. This display means that you are now in Level 2. Simply press the corresponding button to access the desired feature.
- To access a Level 3 feature, press and hold the **FUNCTION** button until you hear a “beep”; within three seconds of hearing the “beep”, release the **FUNCTION** button and press and release the **FUNCTION** button two more times. **5 0 3** will be displayed. This display means that you are now in Level 3. Simply press the corresponding button to access the desired feature.
- To access the transmitter functions (clock and alarm adjustments), press and hold the **FUNCTION** button until you hear a “beep”; within three seconds of hearing the “beep”, release the **FUNCTION** button and press and release the **FUNCTION** button three more times. There will be two quick “beeps” indicating that you are now in the transmitter functions adjustment menu. The Hour position will be flashing. Simply press and release the **FUNCTION** button until you reach the desired location and proceed with the adjustment by pressing the **START/STOP** or **TRUNK** buttons.

Your installer can customize the system as to personalize these multi-level features in an order that best suits you. Your options are:

Option 1:		
Level 1 (requires pressing the FUNCTION button 1X)	→	Multi car operation
Level 2 (requires pressing the FUNCTION button 2X)	→	Basic features
Level 3 (requires pressing the FUNCTION button 3X)	→	Customized features
Option 2:		
Level 1 (requires pressing the FUNCTION button 1X)	→	Basic features
Level 2 (requires pressing the FUNCTION button 2X)	→	Multi car operation
Level 3 (requires pressing the FUNCTION button 3X)	→	Customized features
Option 3:		
Level 1 (requires pressing the FUNCTION button 1X)	→	Customized features
Level 2 (requires pressing the FUNCTION button 2X)	→	Multi car operation
Level 3 (requires pressing the FUNCTION button 3X)	→	Basic features
Option 4:		
Level 1 (requires pressing the FUNCTION button 1X)	→	Basic features
Level 2 (requires pressing the FUNCTION button 2X)	→	Customized features
Level 3 (requires pressing the FUNCTION button 3X)	→	Multi car operation

Example: If the multi-level features were set to option 3, the setup would be as follows:

- Level 1 → Customized feature
- Level 2 → Multi car operation
- Level 3 → Basic features

The “Basic features” are now programmed as level 3 and therefore:

- To access the aux. 2 feature, the user needs to press on the **FUNCTION** button three (3) times followed by the **LOCK** button.
- To access cold weather mode, the user needs to press on the **FUNCTION** button three (3) times followed by the **START/STOP** button.

L.E.D. Intrusion Codes

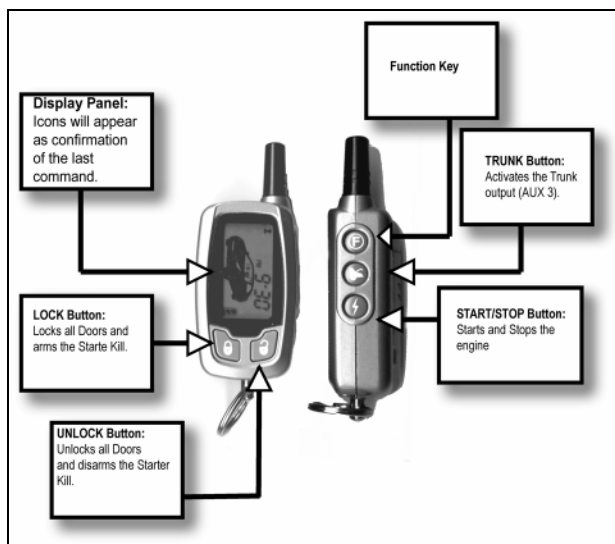
If an intrusion took place while your vehicle was locked and the system was armed, the L.E.D. will provide feedback on the intrusion. The L.E.D. intrusion codes are flashed by the L.E.D. in continuous loops and are as follows:

- | | |
|--|--------------------|
| 1 flash = power-up reset: battery disconnected and reconnected, or dead battery. | 4 flash = hood |
| 2 flash = doors intrusion | 5 flash = panic |
| 3 flash = shock sense | 6 flash = ignition |

Troubleshooting Poor Transmitting Range

- Many factors may affect the operating range of the transmitter. Some of these are:
- The condition of the battery in the transmitter.
- The operating environment (for example: downtown radio-frequency noise, airports, cellular phone towers...)
- Metal: any type of metal will affect operating range. This includes the metal in the car.
- The shape of the vehicle can affect range as well; vans in general have an especially poor range.
- The shape of the roof and A-pillars brings about considerable radio-frequency deflection (in this case the signal from the remote control). As a result, the direction in which the vehicle is facing in relation to the remote control can affect the range. Straight on – standing in front of the vehicle – generally gives you the greatest range; the second best performance is from the back. Using the remote control from either side of the vehicle will usually give the lowest range.
- The range will be significantly lower in a crowded parking lot than in open space.
- Always hold the transmitter high, approximately at shoulder height. Holding the transmitter against your chin will also increase your range: your head acts as an antenna.
- The operating range will be somewhat lower on vehicles equipped with an aftermarket or factory alarm.

Using the Remote Control



Transmitter may not be exactly as shown.

The transmitter offers several command-confirmation and timer features. This section explains some of the key transmitter functions that are available. The following section gives a summary of the button combinations used to access those functions.

Note:

If you wish to exit a function while still in the process of accessing it, simply stop and wait for at least 10 seconds: the transmitter will return to its normal state.

LCD Transmitter Operation (First Car Control)

Basic Vehicle Operation

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
LOCK			1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK			2 Beep	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
TRUNK or AUX 3			1 Beep	Trunk output
START * (see Runtime Options below)			1 beep before engine starts followed by melody when started	Starts the engine
STOP		None	Melody	Stops the engine
Light ON		ON for 5 seconds		Press the button once.

Transmitter Mode Selection

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
POWER-SAVING MODE	+ (+)		Melody	Press unlock first and then press the function button and the lock button simultaneously.
VIBRATION MODE	+		Vibrates 4X	
ALARM CLOCK MODE ON/OFF	+		Melody	Press once to switch the Alarm Clock ON Press twice to switch the Alarm Clock OFF

Time or Alarm Clock Adjustments

 
 

 

User	Transmitter
1. Press and hold the FUNCTION button until a beep is heard	The backlight will turn on the moment the FUNCTION button is pressed.
2. Upon hearing the beep, release the FUNCTION button, 5 0 1 is displayed
3. Press and hold the FUNCTION button once more
4. Release the FUNCTION button when a beep is heard, 5 0 2 is displayed
5. Press and hold the FUNCTION button once more until a beep is heard,
6. Release the FUNCTION button 5 0 3 is displayed
7. At that point, press and hold the FUNCTION button until 2 beeps are heard. The hour setting will start to flash.

Pressing the **FUNCTION** button




 

 

 
 

- 1X Adjust hour (current time)
- 2X Adjust minutes (current time)
- 3X Adjust hour (Alarm)
- 4X Adjust minutes (Alarm)
- 5X ... Melody selection for the ringing of the alarm
- 6X Activate (ON) / Deactivate (OFF) Alarm
- 7X Adjust hour (countdown)
- 8X Adjust minutes (countdown)
- 9X Melody selection for the countdown
- 10X .Activate (ON) / Deactivate (OFF) countdown

- a. Press the button to **increase** the value or to activate or deactivate a function or to toggle through the melodies.
- b. Press the to **decrease** the value or to activate or deactivate a function or to toggle through the melodies.
- c. To save modifications, **do not touch any buttons for approx 10 to 15 seconds**. There will be a beep and the display will return to the time.

 
 
 

 
 
 
 
 
 
 
 
 
 
Cold Weather Mode

Function	Button pressed	Icon	Sound	Instructions /description
To enter cold weather mode	F for 1 sec	501	1 Beep	Press F for 1 second and then press and hold  for 3 seconds.
	 for 3sec		1 Beep	
To exit cold weather mode	F for 1sec	501	1 Beep	Press F for 1 second and then press and hold  for 3 seconds.
	 for 3sec	None		

Home Valet™


 
 

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
TO ENTER HOME VALET™ MODE	Step 1 :  or  Step 2 :  +  simultaneously within 5 sec.		1 BEEP	Press  or  within 5 seconds, press  +  . The remote control will display the  icon and you will hear 1 beep.
TO EXIT HOME VALET™ MODE	NONE	NONE	NONE	Insert the key in the ignition switch and turn it to the IGNITION ON / RUN position. The icon will disappear.

Parking Countdown



Function	By pressing	Icon	Sound	Instructions / description
For parking count down	F +  1 st time		Melody	10 min parking count down mode
	F +  2 nd time		Melody	20 min parking count down mode
	F +  3 rd time		Melody	30 min parking count down mode
	F +  4 th time		Melody	60 min parking count down mode
	F +  5 th time		Melody	90 min parking count down mode
	F +  6 th time		Melody	120 min parking count down mode
	F +  7 th time		Melody	Parking count down off mode

Once the Countdown is activated it will continue counting down until reaching 0:00. If the Timer has not reached 0:00 and you are starting the vehicle, you should reset your Countdown Timer to 0:00 before starting your vehicle as to avoid being startled.

Safe Start Mode

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
START ON SAFE START MODE	 X 2		Melody	Press the  button twice within 3 seconds. Or: Press for 1 second (melody) then press again for 1 second.
STOP ON SAFE START MODE		None	Melody	






 






*Runtime (Cannot be programmed. Serves as indication only.)

FUNCTION	BY PRESSING	ICON	GAS	DIESEL
ENGINE RUNTIME			4 minutes	9 minutes









			15 minutes	20 minutes
			25 minutes	30 minutes

LCD Transmitter Operation (*Second Car Control*)

Basic Vehicle Operation

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
LOCK	 + 		1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK	 + 		2 Beeps	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
START	 + 	 + 	Melody	Starts the engine
STOP	 + 	None	Melody	Stops the engine

Start and Stop While in Safe Start Mode

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
START ON SAFE START MODE	 +  X 2	 + 	Melody	Press the  and  buttons simultaneously twice within 3 seconds. Press for 1 second (a melody will be heard) then press 1sec and a melody will be heard again.
STOP ON SAFE START MODE	 + 	None	Melody	

Diagnostics – Chirps Table

Chirps	Description
1	<ul style="list-style-type: none"> Doors locked, alarm and starter kill armed. Lock confirmation. Entering mode 1 in the programming centre. Disarmed notification
2	<ul style="list-style-type: none"> Doors unlocked, alarm and starter kill disarmed. Transmitter programmed. Entering mode 2 in the programming centre.
3	<ul style="list-style-type: none"> Lock and arm while a zone is left unprotected. Entering mode 3 in the programming centre. Door zone left unprotected.
4	<ul style="list-style-type: none"> Unlock and disarm: an intrusion was detected (in warning chirps mode or full chirps mode). Entering tach-programming mode.
5	<ul style="list-style-type: none"> Siren or horn chirp timing adjustment
Constant up to 30 seconds	<ul style="list-style-type: none"> In horn mode: alarm condition generated by an intrusion, by panic mode or when the system is powered up. the horn will sound for 30 sec.
Constant up to 60 seconds	<ul style="list-style-type: none"> In siren mode: alarm condition generated by an intrusion, by panic mode or when the system is powered up. the siren will sound for 60 sec.

Diagnostics – Parking Light Flash Table

Flashes	Description
1	<ul style="list-style-type: none"> Doors locked, Alarm and Starter Kill armed. End of Run Time. TRUNK button pressed Start signal received by the System. Cold Weather Mode cancelled.
2	<ul style="list-style-type: none"> Doors unlocked, alarm and starter Kill disarmed. Run time cancelled. Exit remote valet. Exit ignition valet Remote start attempt cancelled by remote.
3	<ul style="list-style-type: none"> Entering cold weather mode. Entering remote valet. Entering ignition valet Entering and exiting Ready Mode Entering extended run time
4	<ul style="list-style-type: none"> +12 V where detected on the brake line and cranking was cancelled. Entering tach-programming mode
5	<ul style="list-style-type: none"> New transmitter programmed. Tach programmed.
6	<ul style="list-style-type: none"> A remote start was attempted while a tach or a vacuum signal was detected before cranking.
8	<ul style="list-style-type: none"> Unit reset: occurs when the unit is reset to the factory defaults.
10	<ul style="list-style-type: none"> The hood switch line went to ground during cranking or run time.
1 – pause – 2	<ul style="list-style-type: none"> There was an attempt to start the vehicle while the system was in valet mode.
2 – pause – 2	<ul style="list-style-type: none"> There was an attempt to start the vehicle while the system was in home valet mode.
4 – pause – 3	<ul style="list-style-type: none"> When the vehicle is running: +12 V detected on the Brake Line.
10 – pause – 3	<ul style="list-style-type: none"> When the vehicle is running: the Hood Pin-switch went to ground.
ON solid	<ul style="list-style-type: none"> Cold weather mode: the Brake Pedal is being held down.
ON 2 sec.	<ul style="list-style-type: none"> The Hood is up and the Hood Switch line went to ground. This is step one of the Programming Centre procedure.
ON 3 sec.	<ul style="list-style-type: none"> First press of the START/STOP button under Safe Start.
ON 4 sec.	<ul style="list-style-type: none"> Locking or unlocking a door (with Door pulses configured to 4 sec.)
ON 25 sec.	<ul style="list-style-type: none"> The hood pin-switch has been pressed twice: the unit went into step 1 of the programming centre procedure, and no transmitter activity was detected for 20 seconds. Or the unit went into step 1 of the transmitter programming procedure and no activity was detected for a few seconds. The unit has exited the transmitter programming procedure.
Irregular	<ul style="list-style-type: none"> If the unit gives irregular signals (1 to 10 flashes followed by a pause, followed by further flashes), the system is playing back start failure codes. This occurs when the hood pin-switch is pressed three times.
Constant flashes up to 30 sec.	<ul style="list-style-type: none"> Panic mode triggered with LOCK button, if programmed in passive arming.
Constant flashes up to 60 sec.	<ul style="list-style-type: none"> Panic mode triggered with LOCK button, if in passive mode. <ul style="list-style-type: none"> Panic mode triggered with LOCK and UNLOCK button, in active mode. ON solid when alarm is triggered. Alarm condition generated by an intrusion, by panic mode.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>