

IMPORTANT SAFETY GUIDELINES FOR USERS



For safe and efficient operation of your DEFINITY Wireless Business System WT, observe these guidelines.

Your WT is a radio transmitter and receiver. When the battery is installed, the WT is on and it receives and also sends out radio frequency (RF) energy. The WT operates in the frequency range of 1920-1930 MHz. Your handheld WT uses the digital TDMA mode; the power is transmitted in bursts at a 100 Hz pulsed repetition rate. The peak envelope transmit power is 100 mW or less.

Exposure to Radio Frequency Energy

The design of your WT complies with the latest safety levels from the Institute of Electrical and Electronic Engineers (IEEE) and the American Standards Institute (ANSI) with respect to human exposure to RF energy. Of course, if you would like to limit RF exposure even further, you may choose to control the duration of your calls.

Cardiac Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation distance of six inches be maintained between a handheld WT and a pacemaker to avoid potential interference with a pacemaker.

These recommendations are consistent with the independent research by and recommendations of wireless technology research.

- Always keep the WT more than six inches from the pacemaker whenever the battery is in the WT.
- Do not carry the WT in a breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.

If you have any reason to suspect that interference is taking place, take the battery out of your WT immediately.

Hearing Aid Compatibility

Most electronic equipment, such as equipment in hospitals, is shielded from RF energy. However, RF energy from WTs may affect some electronic equipment.

Although the DEFINITY Wireless Business System WT is compatible with inductively coupled hearing aids, you should consult your physician or hearing aid manufacturer to determine if your hearing aid is adequately shielded from external RF energy. The operation of inadequately shielded medical devices may be adversely affected when a portable WT is operating in close proximity.

Prepared by
BCS Product
Documentation Development
Lucent Technologies
Middletown, NJ 07748-9972

555-232-104
Comcode 108478413
Issue 4
May 1999




Lucent Technologies
Bell Labs Innovations

Lucent Technologies
Bell Labs Innovations



DEFINITY® Wireless Business System 9601 Wireless Terminal (WT)

Quick Reference

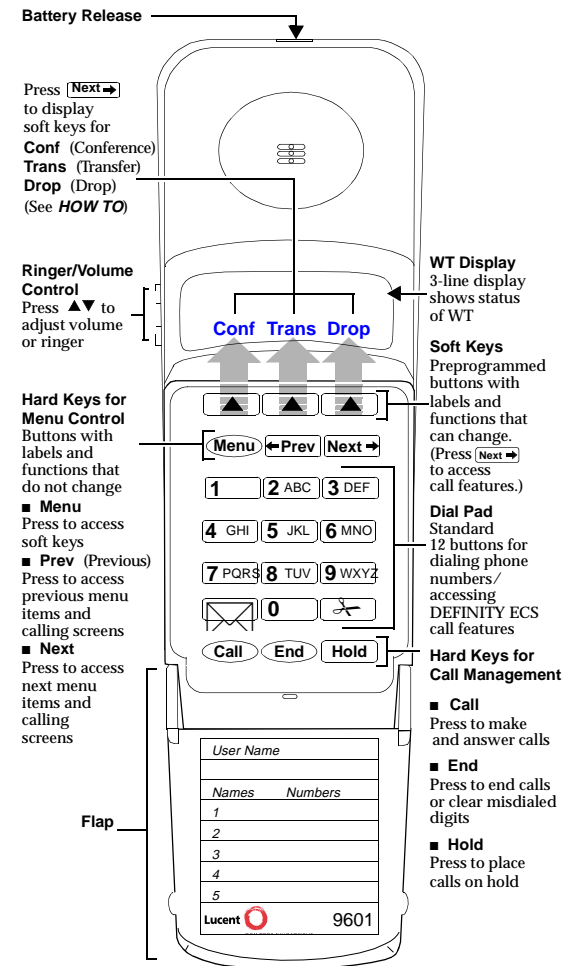

Operating the DEFINITY Wireless Business System 9601 Wireless Terminal

HOW TO:


- **Adjust Ringer and Warning/Notification Tones**
 - When you are not on a call, press and hold ▲▼ (higher or lower).
- **Adjust Receiver Volume**
 - Press **Call**.
 - Press ▲▼ (higher or lower) to adjust volume of earpiece.
- **Make a Call**
 - Dial the telephone number of the party.
 - Press **Call**.
- **Answer a Call**
 - Press **Call** when the handset rings.
- **Clear Misdialed Digits**
 - Press **End**.
- **Conference a Call**
 - Advise the active party that you are initiating a conference.
 - Press **Next** to display the **Conf** soft key (if not already displayed).
 - Press the **Conf** soft key.
 - Dial the telephone number of the next party.
 - Press the **Conf** soft key to conference the two calls together on one call appearance. (The screen displays “CONFERENCE.”)
- **Drop a Call**
 - Press **Next** to display the **Drop** soft key (if not already displayed).
 - Press the **Drop** soft key.
- **End a Call**
 - Press **End**.
- **Hold a Call**
 - Press **Hold**.
 - Press the soft key below the flashing indicator to return to the call.
- **Transfer a Call**
 - Advise the caller that you are transferring the call.

- Press **Next** to display the **Trans** soft key (if not already displayed).
- Press the associated **Trans** soft key.
- Dial the transfer number.
- Press the **Trans** soft key to complete the transfer process.

- **Mute the WT**
 - From the calling screen, press either **Prev** once or **Next** twice.
 - Press the **Mute** soft key.
- **Unmute the WT**
 - Ensure that “Mute” is flashing.
 - Press the **Mute** soft key.
- **Activate/Deactivate Silent Mode**
 - Press **Menu**.
 - Press **Next**.
 - Press the **Silent** soft key.
 - Press the **Yes** soft key.
- **Create an Initial Lock Password**
 - Press **Menu**.
 - Press the **Lock** soft key.
 - Press the **Yes** soft key.
 - Enter a 4-character password (choosing from 0 through 9).
 - Press **End** to clear misdialed digits.
 - Reenter the password for verification.
- **Lock the WT**
 - Press **Menu** (unless you are already on the “lock” screen).
 - Press the **Lock** soft key.
 - Enter the correct password. Press **End** to clear misdialed digits.
- **Change the Lock Password**
 - Press **Menu**.
 - Press the **Lock** soft key.
 - Press the **Change** soft key.
 - Enter the old password. Press **End** to clear misdialed digits.
 - Enter the new password. Press **End** to clear misdialed digits.
 - Reenter the password for verification.

- **Delete a Lock Password**
 - Press **Menu**.
 - Press the **Lock** soft key.
 - Press the **Del(ete)** soft key.
 - Enter the old password. Press **End** to clear misdialed digits.
- **Unlock the WT**
 - Press **Menu**.
 - Enter the correct password. Press **End** to clear misdialed digits.

Battery Charger

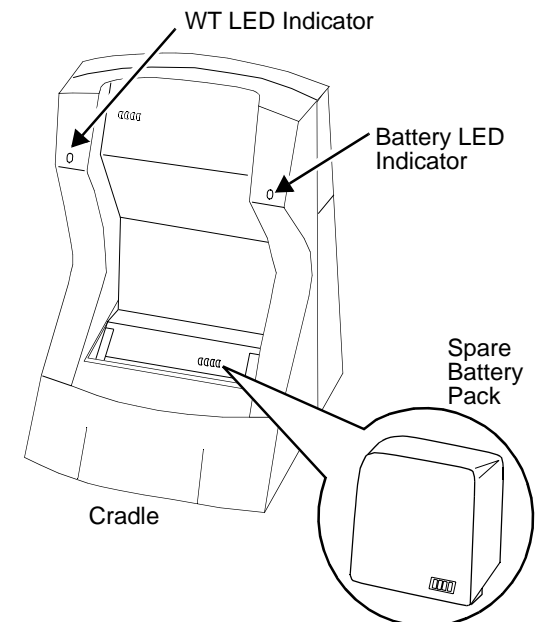

LED Indicators	Charge Status
Yellow	Rapid Charge
Green	Slow Charge
Blinking Green	Evaluation and Standby Mode
Red	Battery Fault (Reseat battery.)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>