


OPERATING INSTRUCTIONS

The Monarch® 9465™ Four-Station Battery Charger charges from one to four 7.4V lithium-ion batteries for the following printers:

- ◆ Sierra Sport2™ 9460™
- ◆ Sierra Sport3™ 9433™
- ◆ Monarch® Pathfinder® Ultra® *Silver* 6032™
- ◆ Monarch® Pathfinder® Ultra® *Gold* 6037™
- ◆ Monarch® Pathfinder® Ultra® *Platinum* 6039™

Note: You must charge a battery before using it.

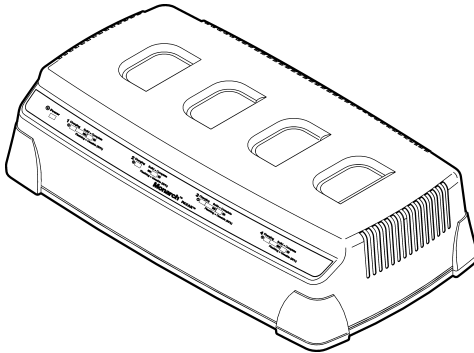

WARNINGS


- ◆ Use only a Monarch-qualified battery.
- ◆ The battery could be damaged or explode if placed on a different charger.
- ◆ Do not throw the battery in the trash. Dispose according to your local regulations.
- ◆ Do not disassemble, short-circuit, heat above 80°C, or incinerate the battery. It may explode.
- ◆ Follow the operating and storage limit specifications listed at the end of these instructions. Otherwise, the battery may permanently lose its charge capacity.



Connecting the Power Supply

To connect the power supply:


1. Plug one end of the power supply into a wall electrical outlet.
2. Plug the other end of the power supply into the back of the charger.

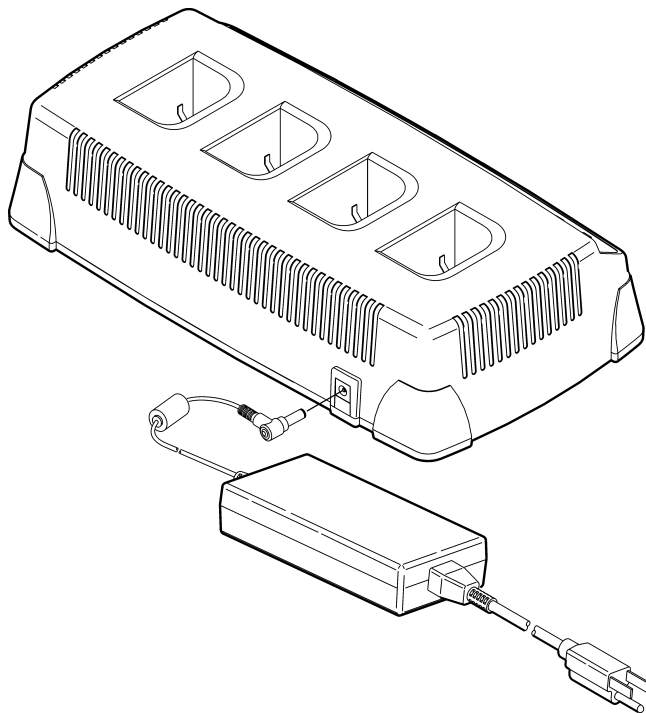

The Power LED is on when the charger is set up and plugged in.

Charging a Battery

To charge a battery, insert the battery into the charger as shown. Charging time can take up to three hours. It takes approximately two hours to reach the 80% level (where it is now usable). To reach 100%, it takes approximately one hour more.

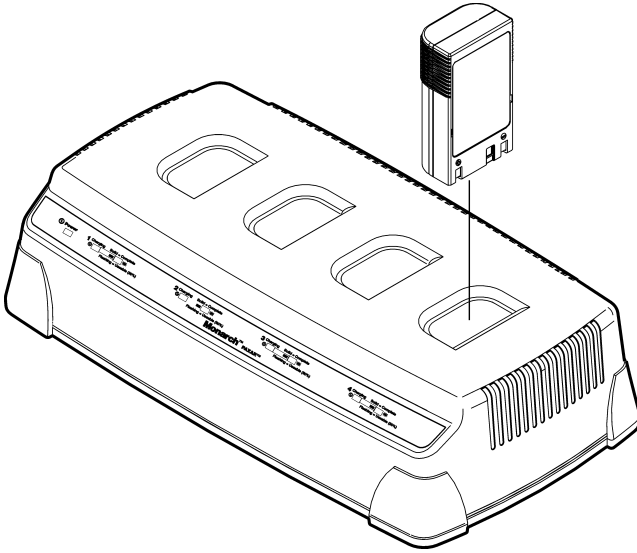

Reading the Display

Once the charger is plugged into an electrical outlet, the *Power LED* is on (solid). There are four charging stations and each has its own set of LEDs.

Ⓜ Power



Ⓜ Charging



Solid = Complete



Flashing = Useable (80%)

Charging LED – flashes when you insert the battery; is solid while charging; and is off when charging is complete.

Complete LED – flashes when the battery is 80% charged and is solid when the battery is 100% charged.

Troubleshooting

When an error occurs, the Charging and Complete LEDs blink together. In this case, repeat the charging process. If the error still occurs, repeat the process with a new battery. If there is a problem after the second repeat charge, call Service.

In between charges, remove the battery, wait for the lights to stop flashing, then re-insert the battery.

Specifications

Operating Limits:

Temperature	32°F to 104°F (0°C to 40°C)
Humidity	5% to 90% non-condensing

Storage Limits:

Temperature	-40°F to 158°F (-40°C to 70°C)
Humidity	5% to 90% non-condensing

Charger

Length:	11.8" (300.0 mm)
Width:	6.25" (158.75 mm)
Height:	2.75" (70.0 mm)
Input:	12 to 16 VDC/50W
Weight:	4.55 lbs. (2.06 kg)

Power Supply

Input:	Universal switching power supply, 85 to 264 VAC, 50/60 Hz.
Output:	12 VDC/80W max

Visit www.paxar.com for sales, service, supplies, information, and telephone numbers for our locations throughout the world.

Toll Free:

1-800-543-6650 (In the U.S.A.)

1-800-363-7525 (In Canada)

4 Operating Instructions

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>