


# Models Pro EXW 4/0I, EX 4/0I Parts List

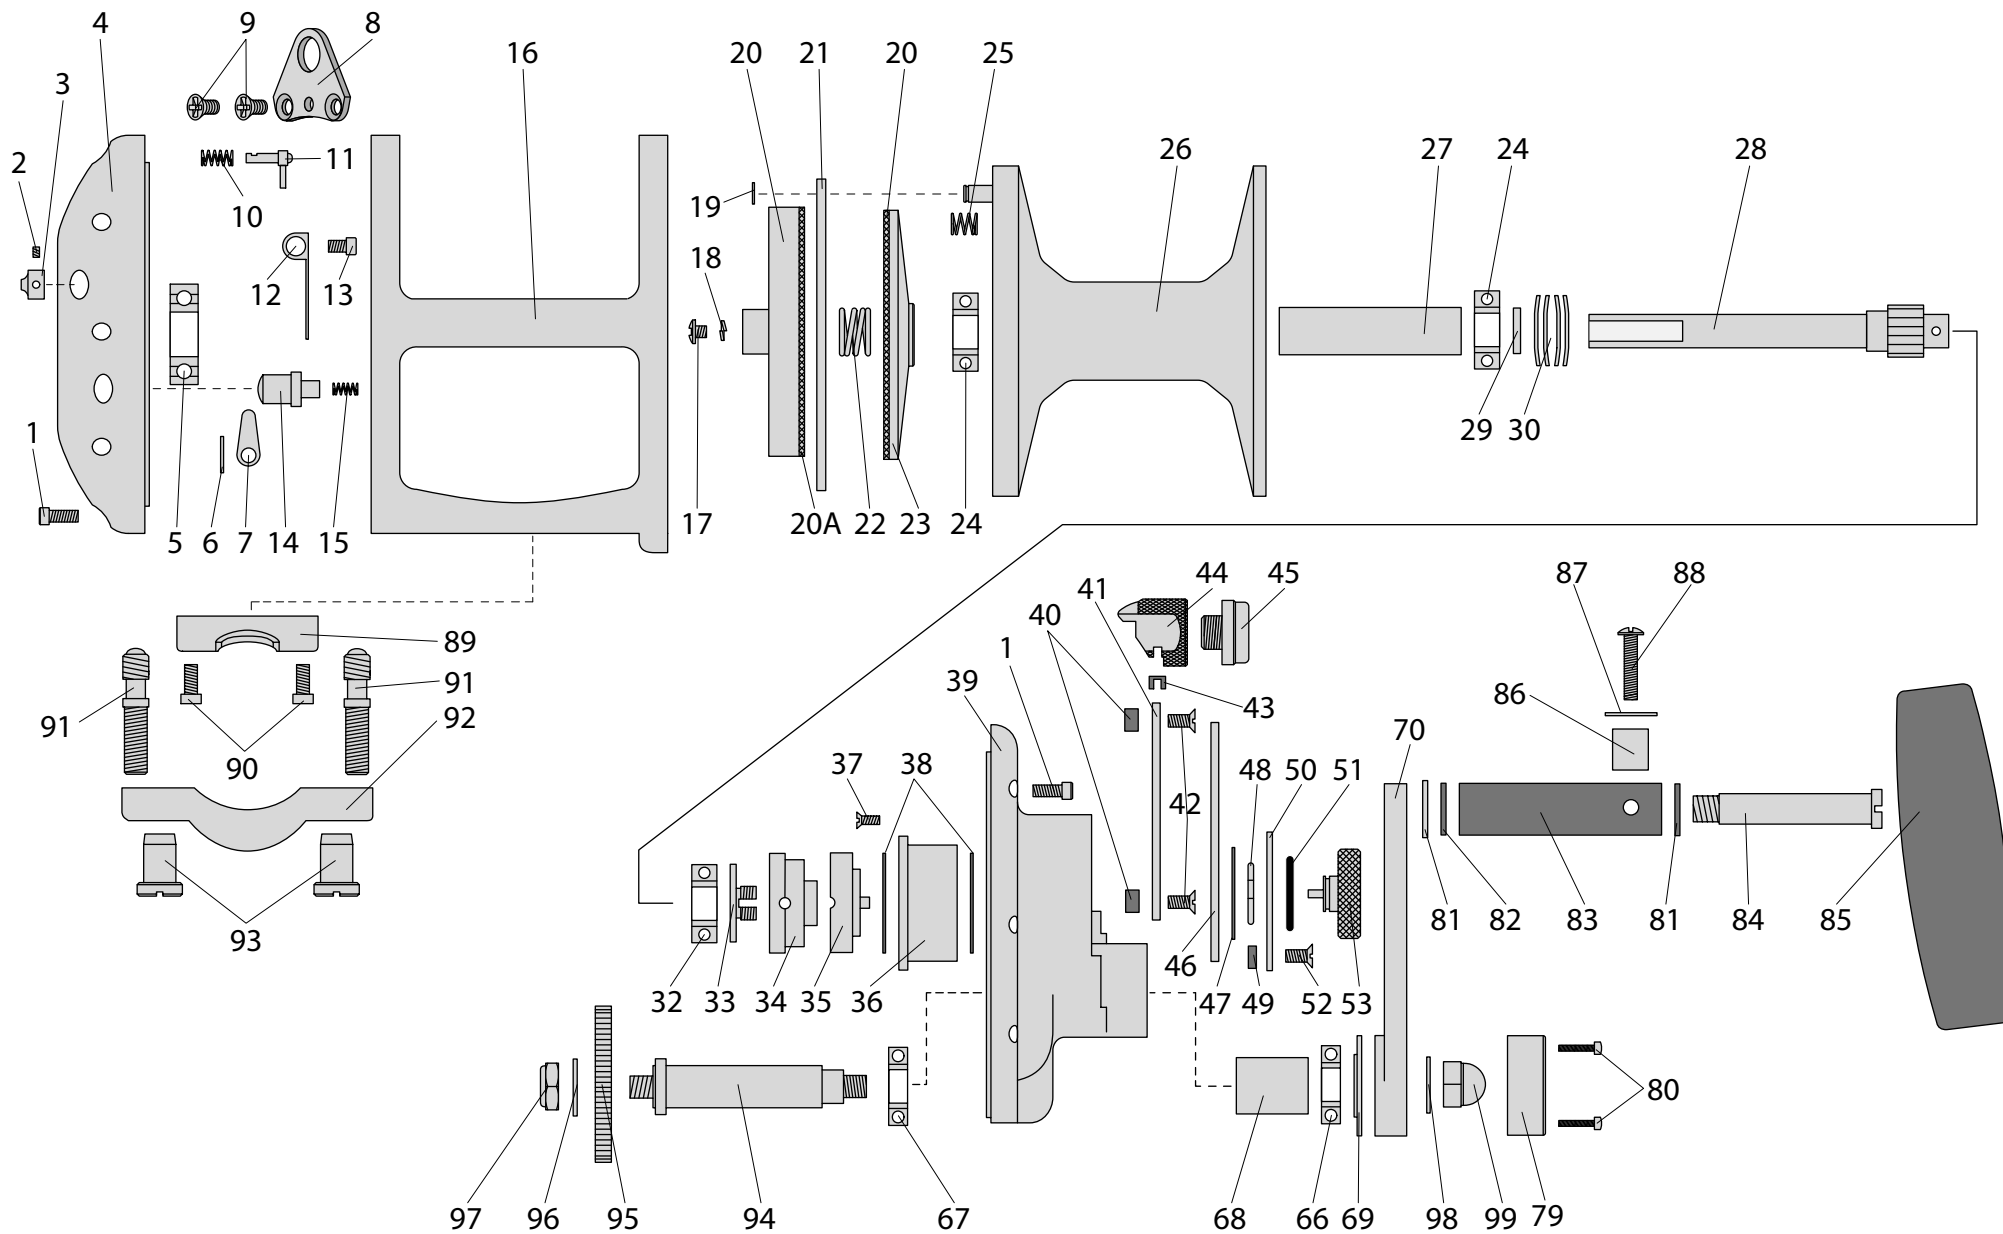

1 - End Housing Screw (16 req.)	EXW402-001	38- Cam Housing Washer (2 req.)	EXW402-038	75- Release Arm Spring	EXW402-075
2 - Clicker Knob Screw	EXW402-002	39- End Housing	EXW402-039	76- Spring Pin	EXW402-076
3 - Clicker Knob	EXW402-003	40- Spacer (3 req.)	EXW402-040	77- Release Arm	EXW402-077
4 - End Cap Housing	EXW402-004	41- Slide Plate	EXW402-041	78- Push Knob	EXW402-078
5 - End Cap Bearing	EXW402-005	42- Plate Screw (3 req.)	EXW402-042	79- Crank Arm Cover	EXW402-079
6 - Under Dog Washer (2 req.)	EXW402-006	43- Knob Slide	EXW402-092	80- Cover Screws (2 req.)	EXW402-080
7 - Dog (2 req.)	EXW402-007	44- Drag Knob Head	EXW402-044	81- Crank Arm Washer	EXW402-081
8 - Harness Lag (2 req.)	EXW402-008	45- Drag Knob Nut	EXW402-092	82- Handle Stem Washer (2 req.)	EXW402-082
9 - Screws (8 req.)	EXW402-009	46- Drag Arm	EXW402-046	83- Handle Stem	EXW402-083
10- Clicker Spring	EXW402-010	47- Teflon Washer	EXW402-047	84- Shoulder Bolt	EXW402-084
11- Clicker	EXW402-011	48- Preset Button C-Clip	EXW402-048	85- Handle	EXW402-085
12- Dog Spring (2 req.)	EXW402-012	49- Plate Washer	EXW402-049	86- Lock Screw Nut	EXW402-086
13- Spring Screw (2 req.)	EXW402-013	50- Cover Plate	EXW402-050	87- Lock Screw Washer	EXW402-087
14- Spool Stop Knob	EXW402-014	51- O-Ring	EXW402-051	88- Handle Lock Screw	EXW402-088
15- Stop Knob Spring	EXW402-015	52- Cover Plate Screw (3 req.)	EXW402-052	89- Rod Mount	EXW402-089
16- Body	EXW402-016	53- Preset Knob	EXW402-053	90- Mount Screw (4 req.)	EXW402-090
17- Left Break Screw	EXW402-017	54- Stop Nut	EXW402-054	91- Rod Mount Bolt (2 req.)	EXW402-091
18- L/B Lock Washer	EXW402-018	55- Left Washer	EXW402-055	92- Rod Mount Clamp	EXW402-092
19- Brake Disc Pin E-Clip (3 req.)	EXW402-019	56- Low Speed Gear	EXW402-054	93 -Clamp Nut (2 req.)	EXW402-093
20- Left Brake	EXW402-020	57- Center Washer	EXW402-055		
21- Disc Brake	EXW402-021	58- High Speed Gear	EXW402-058		
22- Brake Retracting Spring	EXW402-022	59-Right Washer	EXW402-059		
23- Right Brake	EXW402-023	60- Shaft Fork	EXW402-060		
24- Spool Bearing (2 req.)	EXW402-024	61- Fork Spring	EXW402-061		
25- Brake Pin Spring (3 req.)	EXW402-025	62- Pusher	EXW402-062		
26- Spool	EXW402-026	63- Pusher Spring	EXW402-063		
27- Spool Tube	EXW502-027	64- Drive Shaft	EXW402-064		
28- Spool Shaft	EXW502-028	65- Pusher Washer	EXW402-065		
29- Spacer Washer	EXW502-029	66- Pusher E-Clip	EXW402-066		
30- Belleville Washers (4 req.)	EXW502-030	67- Drive Shaft Bearing (2 req.)	EXW402-067		
31- Low Speed Pinion Gear	EXW502-031	68- Drive Shaft Tube	EXW402-068		
32- Gear Bearing	EXW502-032	69- Drive Shaft Washer	EXW402-069		
33- Preset Nut	EXW502-033	70- Crank Arm	EXW402-070		
34- Male Cam	EXW502-034	71- Washer	EXW402-071		
35- Female Cam	EXW502-035	72- Push Pin E-Clip	EXW402-072		
36- Cam Housing	EXW502-036	73- Crank Arm Nut	EXW402-073		
37- Cam Housing Screw (2 req.)	EXW502-037	74- Lock Plate	EXW402-074		

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>