



1 - Main Housing	JX6/3-001	16 - Spool Spring	JX6/3-016	32 - Washer RT	JX6/3-032	47 - Pin Screw (2 req.)	JX6/3-047	61 - Crank Arm	JX6/3-061	76 - Knob Washer (optional)	JX6/3-076
2 - Gear cover	JX6/3-002	17 - Brake Bearing	JX6/3-017	33 - Fork	JX6/3-033	48 - End Housing Screw (3 req.)	JX6/3-048	62 - Crank Arm Washer	JX6/3-062	77 - Spring Washer	JX6/3-077
3 - Cover Screw (2 req.)	JX6/3-003	18 - Brake Disk	JX6/3-018	34 - Fork Spring	JX6/3-034	49 - Drive Shaft Tube	JX6/3-049	63 - Push Knob E-Clip	JX6/3-063	78 - Lock Washer	JX6/3-078
4 - Spool Shaft	JX6/3-004	19 - Antireverse Gear	JX6/3-019	35 - Pusher	JX6/3-035	50 - Drive Shaft Washer	JX6/3-050	64 - Crank Arm Nut	JX6/3-064	79 - Nut	JX6/3-079
4A-Shaft Shoulder	JX6/3-004A	20 - Disk Ring	JX6/3-020	36 - Pusher Spring	JX6/3-036	51 - Male Cam	JX6/3-051	65 - Posh Knob	JX6/3-065	80 - Knob Cap	JX6/3-080
4B-Shaft Pin	JX6/3-004B	22 - Large Pinion Gear	JX6/3-022	37 - Drive Shaft	JX6/3-037	51A-Male Cam Pin (2 req.)	JX6/3-051A	66 - Lock Plate	JX6/3-066	81 - Knob Cap Screws	JX6/3-081
5 - Belleville Washers (4 req.)	JX6/3-005	23 - Small Pinion Gear	JX6/3-023	38 - Pusher Washer	JX6/3-038	52 - Lever Arm	JX6/3-052	67 - Release Arm Spring	JX6/3-067	82 - Clicker Pin	JX6/3-082
6 - Pusher Bushing	JX6/3-006	24 - Pinion Bearing	JX6/3-024	39 - Pusher E-Clip	JX6/3-039	53-Female Cam	JX6/3-053	68 - Spring Pin	JX6/3-068	83 - Pin Support	JX6/3-083
7 - Spool Bearing	JX6/3-007	25 - Drive Shaft Stop Nut	JX6/3-025	40 - Drive Shaft Bearing (2 req.)	JX6/3-040	54 - Handle Knob	JX6/3-054	69 - Release Arm	JX6/3-069	84 - Pin Washer	JX6/3-084
8 - Spool Tube	JX6/3-008	25A-Stop Nut Pin	JX6/3-025A	41 - End Housing	JX6/3-041	55 - Knob Screw	JX6/3-055	70 - Push Knob Cover	JX6/3-070	85 - Clicker Spring (2 req.)	JX6/3-085
9 - Clicker Gear Retainer Ring	JX6/3-009	26 - Connection Arm	JX6/3-026	41A-Dog Pin	JX6/3-041A	56 - Teflon Washer (2req.)	JX6/3-056	71 - Cover Screws (2 req.)	JX6/3-071	86 - Clicker Arm	JX6/3-086
10 - Clicker Gear	JX6/3-010	27 - Friction Ring	JX6/3-027	42 - Dog Washer	JX6/3-042	57 - Drive Washer	JX6/3-057	72A- Handle Shaft Washer	JX6/3-072A	87 - Pin-E-Clip	JX6/3-087
11 - Spool	JX6/3-011	28 - Washer LF	JX6/3-028	43 - Dog	JX6/3-043	58 - Preset Washer	JX6/3-058	72-Handle Knob Shaft	JX6/3-072	88 - Rod Mount	JX6/3-088
12 - Brake Pad	JX6/3-012	29 - Drive Gear SML	JX6/3-029	44 - Dog Cover Screw (2 req.)	JX6/3-044	59 - Preset Spring	JX6/3-059	73 - Handle Shaft Bearing	JX6/3-073	89 - Rod Mount Screws	JX6/3-089
14 - Spool Bearing	JX6/3-014	30 - Washer MDL	JX6/3-030	45 - Dog Cover	JX6/3-045	60A- Preset Knob Detent	JX6/3-060A	74 - Handle Knob	JX6/3-074	90 - Rod Mount Clamp	JX6/3-090
15 - Spool Spring Washer (2 req.)	JX6/3-015	31 - Drive Gear LRG	JX6/3-031	46 - Stop Pin (2 req.)	JX6/3-046	60- Preset Knob	JX6/3-060	75 - Handle Tube	JX6/3-075	91 - Clamp Screws	JX6/3-091

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>