



1 - Main Housing	LX4.6-001	15 - Spool Spring Washer (2 req.)	LX4.6-015	31 - Dog	LX4.6-031	46 - Drive Washer	LX4.6-046	59 - Knob Washer (optional)	LX4.6-059
2 - Gear cover	LX4.6-002	16 - Spool Spring	LX4.6-016	32 - Dog Cover Screw (2 req.)	LX4.6-032	47 - Preset Washer	LX4.6-047	60 - Spring Washer	LX4.6-060
3 - Cover Screw (2 req.)	LX4.6-003	17 - Brake Bearing	LX4.6-017	33 - Dog Cover	LX4.6-033	48 - Preset Sprin	LX4.6-048	61 - Lock Washer	LX4.6-061
4 - Spool Shaft	LX4.6-004	18 - Brake Disk	LX4.6-018	34 - Stop Pin (2 req.)	LX4.6-034	49A - Preset Knob Detent	LX4.6-049A	62 - Nut	LX4.6-062
4A-Shaft Shoulder	LX4.6-004A	20 - Antireverse Gear	LX4.6-020	35 - Pin Screw (2 req.)	LX4.6-035	49 - Preset Knob	LX4.6-049	63 - Knob Cap	LX4.6-063
4B-Shaft Pin	LX4.6-004B	21 - Disk Ring	LX4.6-021	36 - Handle Knob	LX4.6-036	50 - Crank Arm	LX4.6-050	64 - Knob Cap Screws (2 req.)	LX4.6-064
5 - Belleville Washers (4 req.)	LX4.6-005	22 - Pinion Gear	LX4.6-022	37 - Knob Screw	LX4.6-037	51 - Crank Arm Washer	LX4.6-051	65 - Clicker Pin	LX4.6-065
6 - Pusher Bushing	LX4.6-006	23 - Pinion Bearing	LX4.6-023	38 - End Housing Screw (3 req.)	LX4.6-038	52 - Acorn Nut	LX4.6-052	66 - Pin Support	LX4.6-066
7 - Spool Bearing	LX4.6-007	24 - Drive Shaft	LX4.6-024	39 - Drive Shaft Tube	LX4.6-039	53 - Locking Plate	LX4.6-053	67 - Pin Washer	LX4.6-067
8 - Spool Tube	LX4.6-008	25 - Connection Arm	LX4.6-025	40 - Drive Shaft Washer	LX4.6-040	54 - Locking Plate Screws (2 req.)	LX4.6-054	68 - Clicker Spring (2 req.)	LX4.6-068
9 - Clicker Gear Retainer Ring	LX4.6-009	26 - Friction Ring	LX4.6-026	41 - Male Cam	LX4.6-041	55A - Handle Shaft Washer	LX4.6-055A	69 - Clicker Arm	LX4.6-069
10 - Clicker Gear	LX4.6-010	27 - Friction Washer	LX4.6-027	42 - Male Cam Pin (2 req.)	LX4.6-042	55 - Handle Knob Shaft	LX4.6-055	70 - Pin E Clip	LX4.6-070
11 - Spool	LX4.6-011	28 - Drive Gear	LX4.6-028	43 - Female Cam	LX4.6-043	56 - Handle Shaft Bearing	LX4.6-056	71 - Reel Foot	LX4.6-071
12 - Brake Pad	LX4.6-012	29 - Drive Shaft Bearing (2 req.)	LX4.6-029	44 - Lever Arm	LX4.6-044	57 - Handle Knob	LX4.6-057	72 - Reel Foot Screw	LX4.6-072
14 - Spool Bearing	LX4.6-014	30 - End Housing	LX4.6-030	45 - Teflon Washer (2 req.)	LX4.6-045	58 - Knob Bearing	LX4.6-058	73 - Clamp	LX4.6-073
								74 - Clamp Screws (2 req.)	LX4.6-074

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>