



1 - Main Housing	MXJ5.8-001	15 - Spool Spring Washer (2 req.)	MXJ5.8-015	30 - End Housing	MXJ5.8-030	45 - Teflon Washer (2 req.)	MXJ5.8-045	58 - Knob Washer	MXJ5.8-058
2 - Gear cover	MXJ5.8-002	16 - Spool Spring	MXJ5.8-016	31 - Dog	MXJ5.8-031	46 - Drive Washer	MXJ5.8-046	59 - Spring Washer	MXJ5.8-059
3 - Cover Screw (2 req.)	MXJ5.8-003	17 - Brake Bearing	MXJ5.8-017	32 - Dog Cover Screw (2 req.)	MXJ5.8-032	47 - Preset Washer	MXJ5.8-047	60 - Lock Washer	MXJ5.8-060
4 - Spool Shaft	MXJ5.8-004	18 - Brake Disk	MXJ5.8-018	33 - Dog Cover	MXJ5.8-033	48 - Preset Spring	MXJ5.8-048	61 - Nut	MXJ5.8-061
4A - Shaft Shoulder	MXJ5.8-004A	19 - N/A	MXJ5.8-019	34 - Stop Pin (2 req.)	MXJ5.8-034	49A - Preset Knob Detent	MXJ5.8-049A	62 - Knob Cap	MXJ5.8-062
4B - Shaft Pin	MXJ5.8-004B	20 - Antireverse Gear	MXJ5.8-020	35 - Pin Screw (2 req.)	MXJ5.8-035	49 - Preset Knob	MXJ5.8-049	63 - Knob Cap Screws	MXJ5.8-063
5 - Belleville Washers (4 req.)	MXJ5.8-005	21 - Disk Ring	MXJ5.8-021	36 - Handle Knob	MXJ5.8-036	50 - Crank Arm	MXJ5.8-050	64 - Reel Foot	MXJ5.8-064
6 - Pusher Bushing	MXJ5.8-006	22 - Pinion Gear	MXJ5.8-022	37 - Knob Screw	MXJ5.8-037	51 - Crank Arm Washer	MXJ5.8-051	65 - Reel Foot Screws	MXJ5.8-065
7 - Spool Bearing	MXJ5.8-007	23 - Pinion Bearing	MXJ5.8-023	38 - End Housing Screw (3 req.)	MXJ5.8-038	52 - Acorn Nut	MXJ5.8-052	66 - Pin Washer	MXJ5.8-066
8 - Spool Tube	MXJ5.8-008	24 - Drive Shaft	MXJ5.8-024	39 - Drive Shaft Tube	MXJ5.8-039	53 - Locking Plate	MXJ5.8-053	67 - Clicker Spring (2 req.)	MXJ5.8-067
9 - Clicker Gear Retainer Ring	MXJ5.8-009	25 - Connection Arm	MXJ5.8-025	40 - Drive Shaft Washer	MXJ5.8-040	54 - Screws	MXJ5.8-054	68 - Clicker Arm	MXJ5.8-068
10 - Clicker Gear	MXJ5.8-010	26 - Friction Ring	MXJ5.8-026	41 - Male Cam	MXJ5.8-041	54A - Handle Shaft Washer	MXJ5.8-054A	69 - Pin E Clip	MXJ5.8-069
11 - Spool	MXJ5.8-011	27 - Friction Washer	MXJ5.8-027	42 - Male Cam Pin (2 req.)	MXJ5.8-042	54 - Handle Knob Shaft	MXJ5.8-054	70 - Rod Mount	MXJ5.8-070
12 - Brake Pad	MXJ5.8-012	28 - Drive Gear	MXJ5.8-028	43 - Female Cam	MXJ5.8-043	55 - Handle Shaft Bearing	MXJ5.8-055	71 - Rod Mount Screws (2 req.)	MXJ5.8-071
14 - Spool Bearing	MXJ5.8-014	29 - Drive Shaft Bearing (2 req.)	MXJ5.8-029	44 - Lever Arm	MXJ5.8-044	56 - Handle Knob	MXJ5.8-056	72 - Rod Mount Clamp	MXJ5.8-072
						57 - Knob Bearing	MXJ5.8-057	73 - Clamp Screws	MXJ5.8-073

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>