


B&K Components, Ltd.

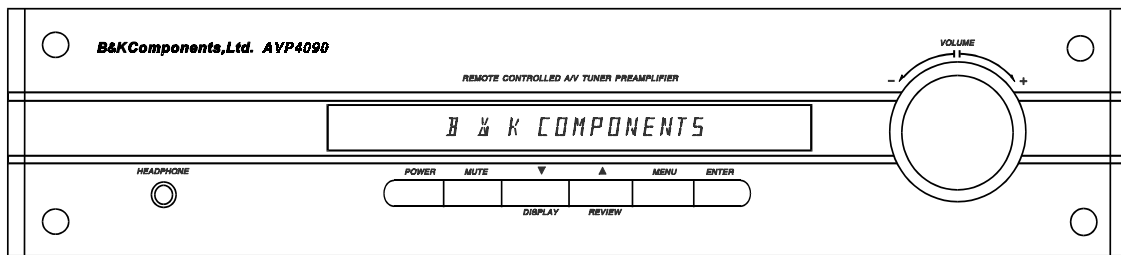

## AVP 4090 Owner's Manual

B&K Components, Ltd.

P/N 11056

---

---

## Acknowledgments

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", "AC3", and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. © 1992-1997 Dolby Laboratories, Inc. All rights reserved. DTS® is a registered trademark of Digital Theater Systems, L.L.C., Motorola®, 'Powered by Motorola'™ name and logo are trademarks of Motorola, Inc.

© **Copyright 1996**

All Rights Reserved.

**B&K Components, Ltd.** 2100 Old Union Road, Buffalo New York 14227-2725

☎ (716)656-0023 **FAX** (716)656-1291

# Table of Contents

Safety precautions	page 3
Features	page 4
Display	page 5,7
Front panel view	page 6
Front panel description	page 6 - 7
Rear panel view	page 8
Rear panel description	page 8 - 11
Remote control	page 12 - 13
Setup	page 14
Factory reset	page 15,35
Making the connection	page 16
Audio only	page 16
Audio/video source	page 16
Video monitor	page 17
VCR	page 17
Tape player	page 17
Digital	page 9,18,24,34
Surround setup	page 19
Channel mode	page 19
Bass management	page 20
Delay	page 20
Surround modes	page 21
Speaker calibration	page 22, 25
Setup procedure	page 22 - 26
Using presets	page 26
Recall preset	page 26
Save preset	page 27
Rename preset	page 28

Tuner functions	page 30
AM/FM Band	page 30
Tuning/Seek	page 30
Direct Frequency Input	page 30
FM Stereo/Mono	page 31
Save a station preset	page 31
Recall a station preset	page 32
Auto program station presets	page 33
Advanced operations	page 34 - 36
Star operation	page 34
Troubleshooting	page 36
Specifications	page 37 - 38
Audio	page 37
Video	page 37
Tuner	page 37 - 38
Care and cleaning	page 38
Warranty	page 39
Accessories included: Power cord, Manual, Remote control, 4 AAA batteries	



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



## **SAFETY PRECAUTIONS**

### **PLEASE READ BEFORE INSTALLING**

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

*The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user of the presence of uninsulated “**dangerous voltage**” within the product’s enclosure that may be sufficient magnitude to constitute a risk of electric shock to you.*

*The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.*

**Caution:** *To prevent the risk of electric shock, do not remove cover. No user-serviceable parts inside. Refer servicing to qualified service personnel.*

**If an outdoor antenna is connected to the antenna input, be sure the antenna system is grounded to provide some protection against voltage surges and built up static charges. Keep outdoor antenna away from power lines.**

- Turn preamplifier ‘off’ when plugging in or unplugging source cables!!!
- The AVP4090 is equipped with raised feet so that continuous ventilation can be maintained. They also help to reduce acoustic feedback into the preamplifier and provide a measure of protection against scratching any surface the unit might be resting on. **Do not alter or remove them.**
- Do not stack anything on top of the preamplifier (processor, source, etc).
- Do not stack the preamplifier on top of an amplifier.
- Always connect the AVP power cord to an unswitched AC outlet for normal operations.
- Mistaking **SEND, RCV, CTRL OUT, or IR IN** connectors for audio/video inputs or outputs may damage your preamplifier or other components.

# Features

## Overview


Your new AVP series preamplifier from B & K Components, Ltd., is a versatile audio/video control center with an internal AM/FM tuner. The AVP preamplifiers are designed to not only sound sensational, but also to be an attractive, easy-to-use addition to your audio/video system. Although you already have a good idea of your preamplifier's features, we'd like to take a moment to point out certain highlights. Following that, the rest of this section describes the front panels display and controls, remote control and rear panel features.

- **Latest technology audio design** - With B & K, you're assured that the basic design foundation of your preamplifier provides excellent quality, fidelity, and a sound so true to life, that it sounds as if your system is a sound stage.
- **Remote control and front panel operation** - A straightforward remote control and intuitive front panel design will let you operate your AVP preamplifier easily, whether you prefer the hands-on front panel or the easy remote control operation.
- **AM/FM stereo tuner with 20 station presets per band** - The internal AM/FM stereo tuner with digital Phase Locked Loop tuning technology and automatic programming let you preset up to 20 AM and 20 FM stations.
- **Multiple inputs** - The AVP provides 6 analog audio, 6 digital audio, and 4 video inputs, enabling a variety of system configurations. To select and control the inputs, you can use either the remote control or the front panel. The analog audio inputs include CD, TAPE, DVD/VLD, V1, V2, and TV-V3. The digital inputs include CD, TUNER, DVD/VLD, V1, V2, and TV-V3. The video inputs include DVD/VLD, V1, V2, and TV-V3.  
\*Note: The FX/NC input is the internal Surround Sound Processor. You cannot use this input from the back panel.
- **Multiple outputs** - Multiple audio and video outputs are provided. The audio outputs include buffered, fixed level, V1, V2, and TAPE. The PRE-OUT variable level output features an extra pair of connectors. Surround Sound Processor variable level audio outputs include FRONT L, FRONT R, REAR L, REAR R, CENTER1, CENTER2, SUB1, and SUB2. The video outputs include V1, V2, MON1, and MON 2.

- **A/V presets** - Your AVP comes equipped with built in preset memories that when selected set up your AVP for you. You can also make changes to settings (such as volume and balance levels, etc.) and save your preferences in your own custom preset. You can save up to 10 A/V presets in each “bank” and recall them easily with the remote control. Recalling a preset while the preamplifier is off, automatically turns on the preamplifier.
- **Two preset “banks”** - Your AVP features two preset “banks”, where the collection of presets are saved. In each bank, you can save up to 10 different presets, which translates into 20 different presets you can configure and recall at any time.
- **Customized input and A/V preset names** - You can use this feature to assign a name to a preset, input, or the turn on message.
- **Controlling external systems or components** - The CTRL OUT output on the preamplifier is rated 12 VDC @ 15 mA continuous. This feature lets you define the output to turn on an external system (such as a B & K amplifier) or related component (such as special room lighting effects).
- **Full compatibility with most custom installed IR control systems** - The IR IN input on the rear panel lets you integrate the AVP into an infrared system such as a repeater. This input may also be used for future custom installation technologies.

## **Display**

The AVP display is a 16 character, alphanumeric fluorescent display. The display will look similar to the examples below:

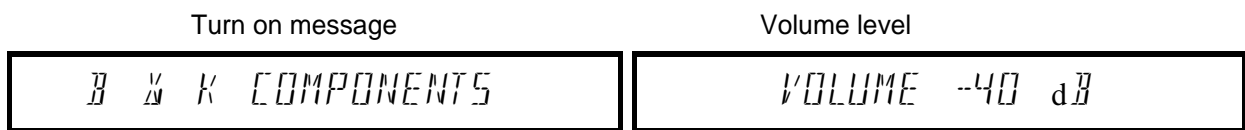


## **Display on/off**

The AVP display can be turned off to minimize its prominence in low light conditions. Pressing the DISPLAY button alternates the display between on and off.

When the display is turned off, it shows two dots ( - - ) while it is idle. When remote control or front panel activity is detected, the display will turn on and stay on for approximately 20 seconds, after this time it will return to the two dot display.

## Front panel view

The figure below shows the front panel controls and features. Input selection or changes to other settings using the front panel controls requires selecting the appropriate MENU options and using the ▼ or ▲ button to change the settings.

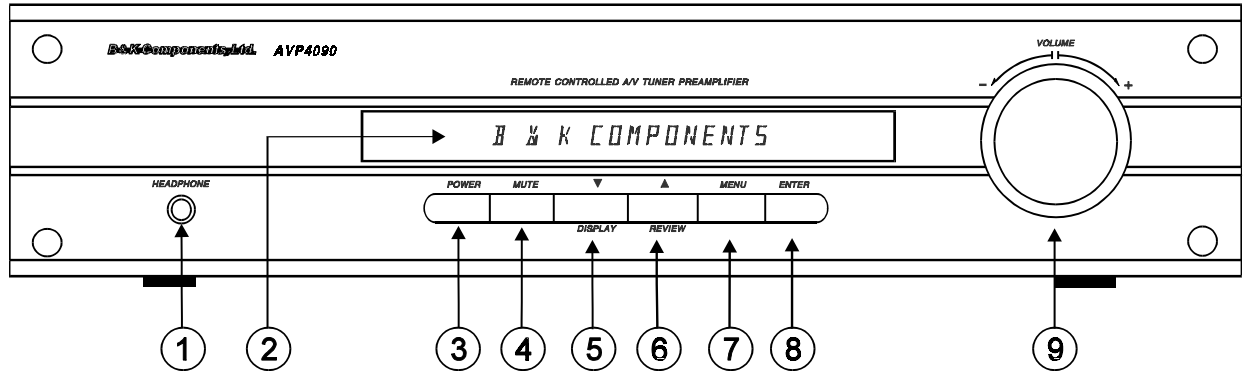

1. Headphone jack
2. Display
3. Power button
4. Mute button
5. Display / ▼ button
6. Review / ▲ button
7. Menu button
8. Enter button
9. Volume control

## Front panel description

### 1. Headphone Jack -

Stereo headphones having a standard ¼ inch binaural plug can be connected to the headphone output. The preamplifier must be on, in Direct mode, and the amplifier off for proper sound.

### 2. Display -

The AVP display is a 16 character alphanumeric fluorescent display. Displays current mode of preamplifier and any changes being performed. Displays a single dot when preamplifier is in the off condition.

### 3. Power button -

Turns the AVP series preamplifier on or off.

### 4. Mute button -

Suppresses sound output from the system. The display will show a 'm' at the right side of the display.



## **5. Display / ▼ button -**

Lets you turn the front panel display on or off. When used in combination with MENU, it will change that options setting. In TEST it selects the previous channel. When used in combination with MODE, it selects the previous surround mode.

## **6. Review / ▲ button -**

Presents a series of displays showing the current settings of the preamplifier. When used in combination with MENU, it will change that options setting. In TEST it selects the next channel. When used in combination with MODE, it selects the next surround mode.

## **7. Menu button -**

Displays a list of menu options, used with ▼/▲ to change the options and settings.

## **8. Enter button -**


Confirms a selection or displays current setting of an option.

## **9. Volume control -**

For controlling system volume. Turning the volume control clockwise increases the volume level, counterclockwise decreases the volume level. When the preamplifier is in mute, turning the volume up will unmute the preamplifier, turning the volume down will lower the volume but not unmute the preamplifier.

# Rear panel view

The AVP back panel is organized into groups of inputs and outputs for audio and video as shown below.

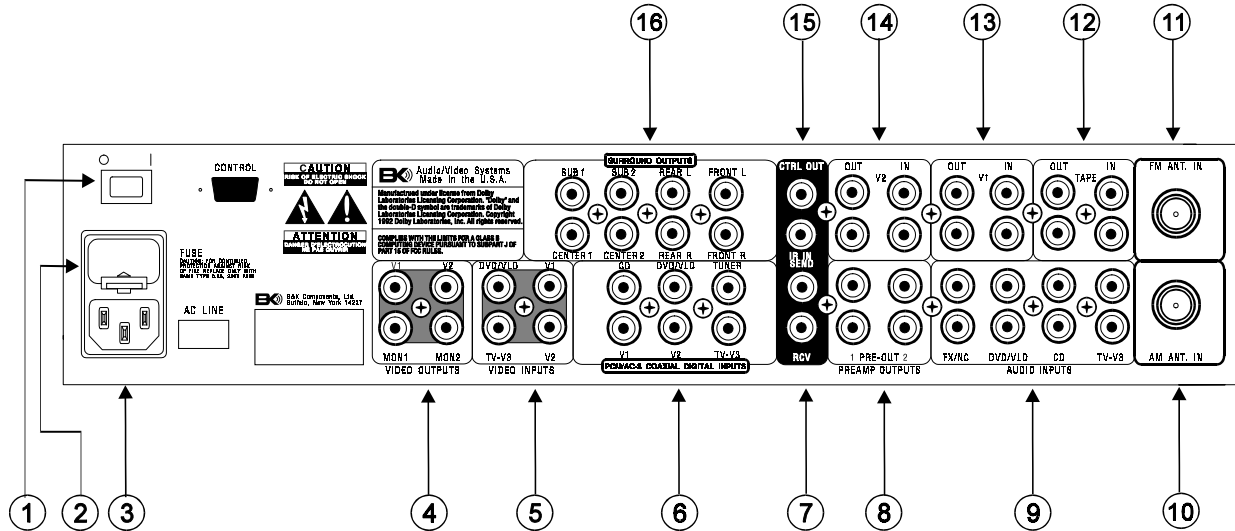

- |                        |                            |
|------------------------|----------------------------|
| 1. Power switch        | 9. Analog audio inputs     |
| 2. AC fuse holder      | 10. AM antenna input       |
| 3. AC input receptacle | 11. FM antenna input       |
| 4. Video outputs       | 12. Tape loop              |
| 5. Video inputs        | 13. V1 loop                |
| 6. Digital inputs      | 14. V2 loop                |
| 7. Send/RCV jacks      | 15. CTRL OUT / IR IN jacks |
| 8. Preouts             | 16. Surround outputs       |

## Rear panel description

### 1. Power switch -

For switching AC power to the AVP preamplifier. Off = O, On = I. The rocker must be in the on (I) position for the preamplifier to operate.

### 2. AC fuse holder -

Holds the AC Line fuse. Replace only with 0.5 A (½ A) 250 V fast blow fuse.

### 3. AC input receptacle -

For attaching the supplied AC power cord to the preamplifier.

#### 4. Video outputs -

Outputs labeled MON1, MON2, V1, and V2. Provides composite video output to a TV, monitor, or VCR for viewing or recording the video signal.

#### 5. Video inputs -

Inputs labeled TV-V3, V2, V1, and DVD/VLD used to connect the A/V source to provide the video signal that the preamplifier can switch between.

#### 6. Digital inputs -

Inputs labeled V1, V2, TV-V3, TUNER, DVD/VLD, and CD used to connect a digital audio signal from your source to the AVP preamplifier. The incoming signal may be either a PCM or AC-3 signal, you configure the input (in the setup menu) according to your system needs. These inputs are coaxial only.

#### **PLEASE NOTE:**

The DIGITAL inputs on the AVP4090 will only accept an Industry Standard Consumer Audio **DIGITAL** input signal. (See setup procedure in this manual)

When you connect a Dolby Digital source to an AVP with Dolby Digital, the signal **must** be an Industry Standard Consumer Audio **DIGITAL** signal into the AVP4090.

Laserdisc players normally have an Industry Standard Consumer Audio RF Dolby Digital signal. This type of Dolby Digital signal requires a Dolby Digital RF demodulator to be placed between the player and the AVP4090. This converts the RF Dolby Digital signal, out of the laserdisc, to a Dolby Digital DIGITAL signal. This signal can then be processed by the AVP4090 digital inputs.

#### 7. SEND/RCV inputs -

**Not currently used. For future applications.**

8. **PRE-OUTS** - Provides variable level audio output for sending to a power amplifier or other audio component. They carry the same signal as the FRONT L and FRONT R outputs.

#### 9. Analog audio inputs -

Line level inputs for connecting your audio components to the system (DVD/VLD, CD, and TV-V3).

#### 10. AM antenna input -

Connection for the AM antenna. 75 Ohms.

### **11. FM antenna input -**

Connection for the FM antenna. 75 Ohms.

### **12. Tape Loop -** Connections for the audio of a tape deck.

**TAPE OUT-** Provides a fixed level, buffered audio output for sending to a tape player. Connect the TAPE OUT from the AVP to the TAPE IN on the tape player.

**TAPE IN -** Accepts audio output from a tape player. Connect the TAPE IN from AVP to the TAPE OUT on the tape player.

### **13. V1 loop -** Connections for the audio of a VCR designated as VCR 1.

**V1 OUT -** Provides a fixed level, buffered audio output for sending to a VCR. Connect the V1 OUT on the AVP to the AUDIO IN on the VCR.

**V1 IN -** Accepts audio output from a VCR. Connect the V1 IN on the AVP to the AUDIO OUT on the VCR.

### **14. V2 loop -** Connections for the audio of a VCR designated as VCR 2.

**V2 OUT -** Provides a fixed level, buffered audio output for sending to a VCR. Connect the V2 OUT on the AVP to the AUDIO IN on the VCR.

**V2 IN -** Accepts audio output from a VCR. Connect the V2 IN on the AVP to the AUDIO OUT on the VCR.

**15. CTRL OUT -** Output that allows you to remotely control external devices. This output is rated 12 VDC @ 15 mA continuous. The output goes high (12 VDC) when the preamplifier is turned on, and low (0 VDC) when the preamplifier is turned off. This output works with the B&K amplifiers to remotely turn them on and off (amplifiers with the control feature). Connect the CTRL OUT on the AVP to the CTRL IN on the amplifier.

**15. IR IN -** Accepts input from external IR receptors. Connect your IR repeater to IR IN to control the AVP preamplifier when the front IR receiver is blocked (by cabinet door).

## 16. Surround outputs -


Outputs for your surround system. These variable level outputs are provided with the Surround Sound Processor option for sending signal to the power amplifiers as follows.

- FRONT L -** Provides an audio output signal for sending to the input channel of the power amplifier for the front left speaker.
- FRONT R -** Provides an audio output signal for sending to the input channel of the power amplifier for the front right speaker.
- REAR L -** Provides an audio output signal for sending to the input channel of the power amplifier for the rear left speaker.
- REAR R -** Provides an audio output signal for sending to the input channel of the power amplifier for the rear right speaker.
- SUB 1 & 2 -** Provides an audio output signal for sending to the input channel of the power amplifier for a passive subwoofer or the input of a powered subwoofer.
- CENTER 1 & 2 -** Provides an audio output signal for sending to the input channel of the power amplifier for the center speaker.


# Remote control

The B & K A/V system remote control is specially designed to streamline functions. Although you can choose to use a universal remote, we think you will agree that the remote shown below is simple and easy to learn.

Most buttons on the remote control are duplicated through the front panel. This means it's easy to operate the preamplifier, whether you prefer using the remote control or the hands on approach from the front panel. We recommend using the remote control for simplicity. Use the table below to familiarize yourself with the remote controls functions.

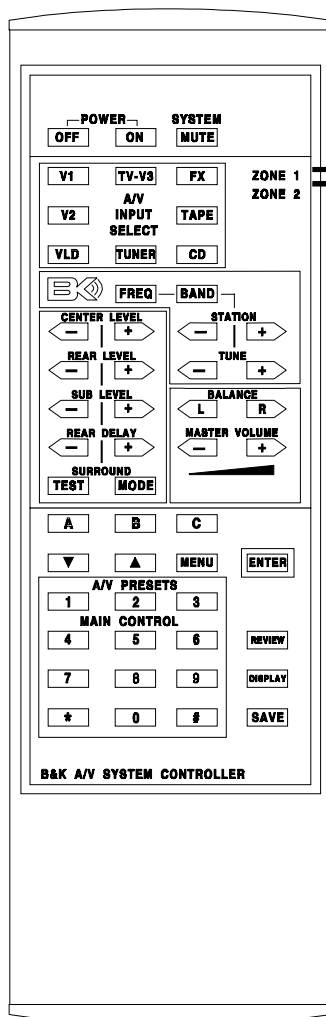

Button:	Function:
POWER OFF	Turns power and CTRL OUT off
POWER ON	Turns power and CTRL OUT on
SYSTEM MUTE	Suppresses sound output
V1	Selects audio/video from component V1
TV-V3	Selects audio/video from component TV-V3
FX	Lets you select between the standard Direct mode or the last used surround mode
V2	Selects audio/video from component V2
TAPE	Selects audio from component TAPE
VLD	Selects audio/video from component VLD
TUNER	Selects internal TUNER
CD	Selects audio from component CD
FREQ	Lets you directly tune in a station frequency by specifying it with the numeric keypad
BAND	Selects AM or FM frequency band
STATION +/-	Selects station preset by moving up (+) or down (-)
TUNE +/-	Manually tune a station by moving the frequency up (+) or down (-)
BALANCE L/R	Adjusts left/right level balance for front and rear channels (inactive for Pro Logic and Dolby Digital modes)
MASTER VOLUME -/+	Lets you decrease (-) or increase (+) the volume on all channels

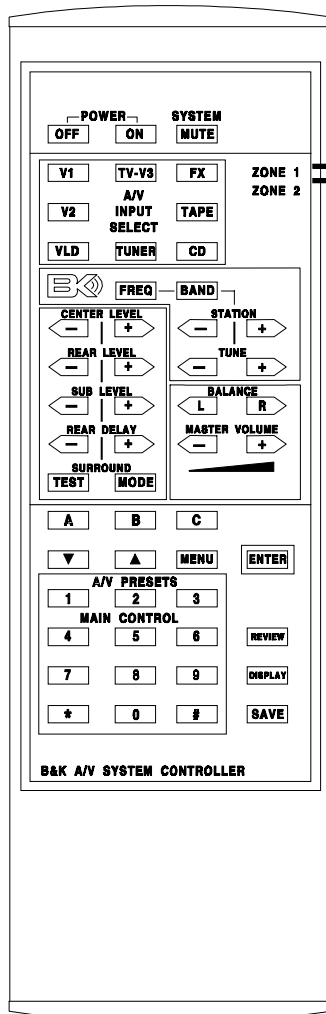

Button:	Function:
CENTER LEVEL -/+	Lets you decrease (-) or increase (+) the center channel volume
REAR LEVEL -/+	Lets you decrease (-) or increase (+) the surround volume
SUB LEVEL -/+	Lets you decrease (-) or increase (+) the subwoofer volume
REAR DELAY -/+	Lets you decrease (-) or increase (+) the rear channel delay time
SURROUND TEST	Lets you calibrate speakers using the built in test noise signal
SURROUND MODE	Lets you select any surround mode
A	Lets you specify "bank A" when recalling or saving an A/V preset
B,C	Not used ( for future applications)
▼/▲	Lets you select previous/next option
MENU	Displays a list of menu options; use ▼/▲ to change option settings
ENTER	Confirms a selection; when used while a menu option is displayed, displays current setting
NUMBERS 0-9	Lets you select an A/V preset when followed by ENTER; when used in combination with FREQ, lets you enter station frequency
* (star)	Used for advanced operations in conjunction with the numeric key pad (0-9)
# (pound)	Not used (for future applications)
REVIEW	Presents a series of displays showing the current settings (repeatedly pressing REVIEW steps faster)
DISPLAY	Lets you turn the front panel display on or off
SAVE	Lets you save either an A/V preset or station preset; press SAVE then either numeric buttons 0-9 for saving an A/V preset, or use STATION -/+ to save a station preset, press ENTER to save your selection
ZONE 1 / ZONE 2	Set to "ZONE 1" for AVP4090

# Setup

It's tempting to just plug in your new AVP and have great sound pour out. Before you do that, take a few minutes to plan out how you want the preamplifier to fit into your audio/video system. If you haven't already done so, ask yourself the following questions:

- What source components do I want to connect to my preamplifier? (CD, VCR, etc.)
- What components do I want my preamplifier to send output to?
- What equipment in my system will be receiving and displaying the audio and video? (TV monitor, Audio amplifier, etc.)

The answers to your questions determine how many cables you need to connect to the back of the AVP. For example, if you want your preamplifier to access a CD player, VCR, and Laser Disc player, then output the result to a TV monitor and stereo speaker, you will end up with multiple connections. On the other hand, if your source component is a VCR and your output component is your TV monitor and speaker, you will need less connections. Whatever your audio/video system configuration, good preplanning equals great sound. Keep these recommendations in mind.

- ◆ Keep the cables between audio sources and video sources separate.
- ◆ To provide the best tuner reception, make sure the antenna is at least several feet away from the AVP and any other equipment that may produce high frequency interference such as PC's, CD players, halogen lamps, etc.
- ◆ Before you begin connecting equipment, decide what types and lengths of interconnects are required for all your components to work well together. You should also plan the paths for all interconnects. Remember, use high quality connections to maintain high quality audio and video.
- ◆ The type of cable you use, the length of the cable run, and obstacles in the cable's path (doorways, furniture, walkways, etc.) are also factors to think about. To really optimize your system, talk to your dealer about cable products available, to decide which one's right for you.
- ◆ List all components in your system. Be sure to indicate which jack on the rear panel of the AVP each component will be connected to. It's a good idea to also note the length of the cable for each component's connection and describe how it should be routed, or you could draw your routing scheme below your list. As a shortcut, you can assign a number to each cable, write the number on a label



and attach it to the cable near both ends. This makes it easy to identify.

- ◆ To ensure maximum safety, keep all cables out of high traffic areas (hallways or doorways) and away from equipment that radiates power, including amplifiers, power cords, heaters, etc.
- ◆ If you might expand your audio/video system later, keep these ideas in mind as you plan current cable runs.

### **Factory reset**

Reset the AVP before you start. Plug in the power and turn the AVP on. When the display shows:



VLD DIRECT

Press the \* (star) then 9 then 8 and the display will show:



STAR 98

The AVP will turn off and back on. Then it will cycle through the three title messages and then off again. The AVP is now reset to factory defaults. You can perform this procedure anytime you need to reset the preamplifier to the factory defaults. **All your presets will be erased.** Do not interrupt the cycle, do not press any buttons on the remote or preamplifier face plate. If you accidentally press a button, you will have to repeat the reset procedure.

Turn the preamplifier **ON** and the display will show:



VLD DIRECT

You can now program the preamplifier to your desired setup.

## Making the connection

Take a look at the back panel of the AVP. You will notice that the RCA-type audio input and output connectors are identified by colors. Red for right channel and white for the left channel audio. Composite video input and output connectors are identified by yellow. Digital inputs are identified by orange. The surround outputs are identified by black. The audio inputs and outputs start at the center of the back panel and continue to the right. The video inputs and outputs are near the left side of the back panel.

### ***Audio only equipment***

The procedure listed is for connecting a CD player to the AVP analog inputs.

1. Attach one end of the audio interconnect cable to the left audio output on the CD player, then attach the other end to the white left CD audio input on the AVP.
2. Attach one end of the audio interconnect cable to the right audio output on the CD player, then attach the other end to the red right CD audio input on the AVP.

### ***Audio / Video source***

The procedure listed is for connecting a DVD/VLD player to the AVP analog inputs. Use the same instructions for connecting other audio / video sources to the TV-V3 input.

1. Attach one end of the audio interconnect cable to the left audio output on the DVD/VLD player, then attach the other end to the white left DVD/VLD audio input on the AVP.
2. Attach one end of the audio interconnect cable to the right audio output on the DVD/VLD player, then attach the other end to the red right DVD/VLD audio input on the AVP.
3. Attach one end of the composite video interconnect cable to the video out on the DVD/VLD player, then attach the other end to the yellow video input on the AVP labeled DVD/VLD.

## ***Video monitor***

To add a video monitor to the system.

1. Attach one end of the composite video interconnect cable to the video input on the monitor, then attach the other end to the yellow video output on the AVP labeled MON1 or MON2 (both MON1 and MON2 perform the same function).

## ***VCR connection***

The procedure listed is for connecting a VCR player to the V1 analog input on the AVP. Use the same instructions for connecting another VCR to the V2 analog input.

1. Attach one end of the audio interconnect cable to the left audio output on the VCR, then attach the other end to the white left V1 IN on the AVP.
2. Attach one end of the audio interconnect cable to the right audio output on the VCR, then attach the other end to the red right V1 IN on the AVP.
3. Attach one end of the composite video interconnect cable to the video out on the VCR, then attach the other end to the yellow video input on the AVP labeled V1.

This connects the VCR to the AVP for viewing tapes. Now complete this procedure to make recordings through the AVP. Recordings can only be made from analog sources.

4. Attach one end of the audio interconnect cable to the left audio input on the VCR, then attach the other end to the white left V1 OUT on the AVP.
5. Attach one end of the audio interconnect cable to the right audio input on the VCR, then attach the other end to the red right V1 OUT on the AVP.
6. Attach one end of the composite video interconnect cable to the video in on the VCR, then attach the other end to the yellow video output on the AVP labeled V1.

## ***Tape connection***

1. Attach one end of the audio interconnect cable to the left audio output on the Tape deck, then attach the other end to the white left TAPE IN on the AVP.
2. Attach one end of the audio interconnect cable to the right audio output on the Tape deck, then attach the other end to the red right TAPE IN on the AVP.
3. Attach one end of the audio interconnect cable to the left audio input on the Tape deck, then attach the other end to the white left TAPE OUT on the AVP.

4. Attach one end of the audio interconnect cable to the right audio input on the Tape deck, then attach the other end to the red right TAPE OUT on the AVP.

### ***Digital connection***

The AVP preamplifier is equipped with six coaxial digital inputs. The digital inputs will accept either a standard PCM digital input or a digital Dolby Digital input. If you wish to use a source that has a TOSLINK output, you must convert it to coax. If you wish to use a laserdisc player that has a RF Dolby Digital output, you must convert it to a digital Dolby Digital signal.

**The B & K DT-1 will do both conversions for you.**

To connect a digital input to the AVP, simply connect a coax cable from the digital output on your source (CD, DVD/VLD...etc.) to the appropriate orange digital input on the AVP (CD, DVD/VLD...etc.).

In the **SETUP** menu, select digital on for the appropriate source, to enable the digital input (CD DIGITAL ON, VLD DIGITAL ON...etc.).

To connect a digital Dolby Digital (AC-3) signal (**NOT RF**) to the AVP, simply connect a coax cable from the Dolby Digital output on your source to the appropriate orange digital input on the AVP (normally DVD/VLD). This output **MUST** be a digital output and **NOT RF**.

In the **SETUP** menu, select digital on **or** digital AC-3, to enable the digital input. The digital input will automatically switch to Dolby Digital if it is set to ON and a Dolby Digital signal is present. The AVP will default back to PCM when the Dolby Digital signal stops for more than 30 seconds. Setting the digital to AC-3 will only allow a Dolby Digital signal to be accepted.

To set an input for DTS only, select DIGITAL DTS. This will only allow DTS material to be processed from the input. No advanced star operations will operate.

## Surround setup

Always set up and calibrate your speakers immediately after connecting your preamplifier to your system. You need to set up the speakers to achieve the best, most accurate performance from your preamplifier. This is important because the preamplifier needs to “know” your speaker configuration to control your current system. Any time you change your speaker configuration, you should perform setup and then calibration on your preamplifier.

When you are setting up your speakers, your preamplifier gives you several options to help you maximize your audio/video system. Since every system is unique, you can choose from menu options and try different combinations until the sound is exactly the way you want it.

### ***Channel mode explanation***

<b>Channel</b>	<b>Mode/Option</b>	<b>Description</b>
Left / Right	Large	80 Hz high pass filter off. Do not sum bass to subwoofer. Full range to front left and right.
	Small	80 Hz high pass filter on. Sum bass to subwoofer. Filters bass frequencies from front channels and sends it to the subwoofer (fc = 80 Hz @12 dB/Oct).
Center	Large	80 Hz high pass filter off. Do not sum bass to subwoofer. Full range to center channel.
	Small	80 Hz high pass filter on. Sum bass to subwoofer. Filters bass frequencies from the center channel and sends it to the subwoofer (fc = 80 Hz @12 dB/Oct).
	None	No center channel output. Use if you do not have a center channel speaker.
Surround	Large	80 Hz high pass filter off. Do not sum bass to subwoofer. Full range to rear left and right.
	Small	80 Hz high pass filter on. Sum bass to subwoofer. Filters bass frequencies from rear channels and sends it to the subwoofer (fc = 80 Hz @12 dB/Oct).
	None	No rear channel output. Use if you do not have rear channel speakers.
Subwoofer	Yes	Sends output to the subwoofer (fc = 80 Hz @24 dB/Oct).

Channel	Mode/Option	Description
	No	No subwoofer. Sends all bass frequencies to the front left and right channels including the LFE channel. Removes SW BASS MENU.

### ***Bass Management***

*Note: LFE = Low Frequency Effects channel (or .1 channel)*

Option/mode	Description
Bass Normal	LFE on. Bass frequencies and LFE are sent to the appropriate channels.
Bass LFE Off	LFE off. Removes the LFE channel from the bass management summing circuitry.
SW Bass Normal	Adds bass to the subwoofer for any channel set to SMALL. Example: If the front speakers are set to SMALL, the bass frequencies go to the subwoofer, not the front speakers.
SW Bass Ultra	Allows for all channels to be summed to the subwoofer regardless of SMALL/LARGE speaker settings.

### ***Delay settings***

CTR DELAY - Center channel delay. The center channel has a variable delay that may be set from 0 ms to 5 ms.

SUR DELAY - Surround channel delay. The surround channel delay is variable between 0 ms to 15 ms for Dolby Digital and 15 ms to 30 ms for Pro Logic. When changing the surround delay setting, only the Dolby Digital setting will be displayed. The Pro Logic setting is automatically 15 ms higher than the Dolby Digital setting.

*Example:* If the surround delay is set at 0 ms, the Pro Logic delay is automatically 15 ms.

If the surround delay is set at 5 ms, the Pro Logic delay is automatically 20 ms.

### Surround mode explanation

<b>SURROUND MODES</b>	<b>CHANNELS ON †</b>	<b>DELAY RANGE</b>	<b>NOTES †</b>
DOLBY SURROUND	LF,RF,C,LR,RR SUB	0 - 15 ms or 15 - 30 ms	AC-3 Mode-All speakers are full range. Dolby Pro Logic- Rear left and right are mono surround and sent through the delay.
3 STEREO	LF,RF,C,SUB	0 ms	Rear left and right signals mixed with front left and right.
3 STEREO HALL	LF,RF,C,LR,RR SUB	0 - 15 ms or 15 - 30 ms	Rear left and right are mono surround and sent through the delay.
STEREO	LF,RF,SUB	0 ms	Stereo listening mode.
STEREO F/R	LF,RF,LR,RR SUB	0 ms	Front left is sent to the rear left and front right is sent to the rear right. SUB is the front left and right signals summed.
STEREO HALL	LF,RF,LR,RR SUB	0 - 15 ms or 15 - 30 ms	Same as 3 STEREO HALL with no center channel.
DIRECT	LF,RF,SUB	0 ms	Direct mode is the same as Stereo mode except the 2 channel output signal is pre-processor for analog sources.(True Stereo bypass if using analog inputs)
DTS	LF,RF,C,LR,RR, SUB	0 ms	★ DTS Mode-All speakers are full range. You must have all speakers in your system to properly use this mode.

† Output configurations for each mode are limited by the speaker setup in the **SETUP** menu.

★ The DTS mode is only a 5.1 channel surround setup. You must have all channels to properly use this mode. Example: If you are missing the center channel speaker the system will not send the information to the front left or right, the sound will simply be lost.

## **Speaker calibration**

Always calibrate your speakers after you have performed setup. Surround calibration is different from adjusting balance levels. When you calibrate, you equalize volume levels on **all** channels with a final goal of ensuring that the volume is the same on each one. When you adjust balance, you turn the volume up or down on **specific** channels because the sound you are hearing seems either too loud or too soft.

Calibration is more than equalizing the volume levels on all channels. When you are calibrating your speakers, variables such as the shape of the room, how furniture is arranged, as well as anything that influences the acoustics of the room such as carpeting, curtains, sound panels, etc. must be considered. You should always calibrate by sitting where you normally sit to watch movies or listen to music. This is your ideal listening position. Once in this position, adjust the volume of each channel to match the others. You can do this by listening to each speaker and making adjustments. To verify equal decibel levels (dB), you can use a sound-pressure level meter.

Do not use calibration to “boost” or “cut” a channel. For example, if you want to increase the level of the subwoofer for effect, adjust the level using the **SUB LEVEL +** button on the remote **after** you have completed calibration for equal levels.

## **Setup procedure**

Turn the preamplifier on. The display should read VLD DIRECT if this is the first time the preamplifier is turned on and set up.

Press the **MENU** button and the display shows:



SETUP


Press **ENTER**, the display shows:



LEFT/RIGHT LARGE

You can toggle between the LARGE and SMALL modes by pressing ▲ or ▼.

Press **ENTER**, the display shows:

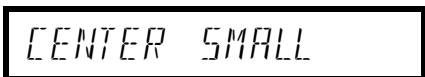

CENTER SMALL

You can toggle between the LARGE, SMALL, and NONE modes by pressing ▲ or ▼.



Press **ENTER**, the display shows:

SURROUND SMALL

You can toggle between the LARGE, SMALL, and NONE modes by pressing ▲ or ▼.

Press **ENTER**, the display shows:

SUBWOOFER YES

You can toggle between YES and NO modes by pressing ▲ or ▼.

Press **ENTER**, the display shows:

BASS NORMAL

You can toggle between BASS NORMAL and BASS LFE OFF modes by pressing ▲ or ▼.

Press **ENTER**, the display shows:

SW BASS NORMAL

You can toggle between SW BASS NORMAL and SW BASS ULTRA modes by pressing ▲ or ▼.

Press **ENTER**, the display shows:

CTR DELAY 0 mS

You can increase center delay to 5 ms by pressing the ▲, or decrease back to 0 again by pressing ▼.

Press **ENTER**, the display shows:

SUR DELAY 0 mS

You can increase surround delay to 15 ms by pressing the ▲, or decrease back to 0 again by pressing ▼.

Press **ENTER**, the display shows:

VLD DIGITAL OFF

You can toggle between OFF, ON, AC-3, and DTS modes by pressing ▲ or ▼. This holds true for the CD, V1, V2, TV, and TNR digital settings.

*Digital off-* Selects the corresponding AUDIO L/R analog input for Pro Logic Surround Processing.

*Digital on-* Selects the corresponding digital input for PCM Pro Logic Surround Processing. If Dolby Digital is detected, Dolby Digital surround processing is automatically used.

*Digital AC-3-* Selects the corresponding digital input for Dolby Digital Surround Processing. PCM signals are not processed in this mode.

*Digital DTS-* Selects the corresponding digital input for DTS 5.1 Surround Processing. No other signals are processed in this mode.

Press **ENTER**, the display shows:

CD DIGITAL OFF

Press **ENTER**:

V1 DIGITAL OFF

Press **ENTER**:

V2 DIGITAL OFF

Press **ENTER**:

TV DIGITAL OFF

Press **ENTER**:

TNR DIGITAL OFF

Press **ENTER**, the display shows:

VLD LEVEL 0.0

You can increase to +6.0 dB by pressing the ▲, or decrease to -6.0 dB by pressing ▼. This holds true for the CD, V1, V2, TV-V3, TUNER, and TAPE level settings. The level controls are for matching the input levels of all your sources coming into the preamplifier.

Press **ENTER**:

C0 LEVEL 0.0

Press **ENTER**:

V1 LEVEL 0.0

Press **ENTER**:

V2 LEVEL 0.0

Press **ENTER**:

TV-V3 LEVEL 0.0

Press **ENTER**:

TUNER LEVEL 0.0

Press **ENTER**:

TAPE LEVEL 0.0

The surround calibration is next. Adjust the levels with the **MASTER VOLUME +/-** buttons. You have a range of -12.0 to +12.0 in 0.5 dB increments. Equalize the volume level of all the channels by adjusting the calibration of each individual speaker until they all have the same volume from your ideal listening position. You can move from channel to channel by pressing the **▲** and **▼** buttons or the **ENTER** button.

Press **ENTER**, the display will show:

LEFT 00.0

Press **ENTER**:

CENTER 00.0

Press **ENTER**:

RIGHT 00.0

Press **ENTER**:

R SURROUND 00.0

Press **ENTER**:

L SURROUND 00.0

Press **ENTER**:

SUBWOOFER 00.0

Press **ENTER**, the display shows:



You have completed the setup procedure. Remember, you have to perform the calibration procedure every time you change your speaker configuration.

## Using presets

There are 20 A/V presets provided. Presets "0" through "9" are selected using the numeric buttons on the remote (0-9). Pressing the "A" button first allows you to select bank "A" presets, "A0" through "A9", using the same numeric buttons (0-9).

 
The preprogrammed audio/video presets let you instantly select any of the audio/video sources along with volume level and surround mode settings. You can customize the presets, even the preset name, for ease of operation.

### **Recall a preset**

Using the remote control, press a number on the keypad to display the preset name. Pressing "A" selects "bank A". Once you press a preset number, you can then press ▲ or ▼ to step through all the preset names. If the AVP is off, pressing a preset number will turn the preamplifier on, and pressing **ENTER** will select that preset.

Keypad number	Display shows	Keypad number	Display shows
0	0 MUSIC VIDEO	5	5 PLAY RADIO
1	1 PLAY CD	6	6 WATCH V2
2	2 WATCH VLD	7	7 PLAY TAPE
3	3 WATCH V1	8	8 WATCH SPORTS
4	4 WATCH TV	9	9 TV SIMULCAST

Select the desired preset then press **ENTER** to recall. The display will show (if you selected preset #1):

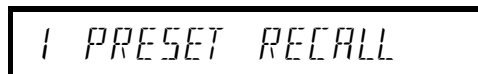

## Save a preset

A preset will save the following information in a preset for you:

Master volume, selected input, input mode (analog, PCM, Dolby Digital, or DTS), surround mode, rear volume, subwoofer volume, center channel volume, delay setting, and display status of on or off.

To save a preset, press the **SAVE** button, followed by the preset number you wish to overwrite (0-9 or A0-A9), then **ENTER**.

Example: If you want to save a setup for the preset 1 (CD), first recall the preset by pressing **1** then **ENTER**.

Select the desired surround mode by pressing the **MODE** button until the desired mode is displayed.

STEREO FRNT REAR

Next set the desired volume level:

VOLUME -21 dB

Now save the preset by pressing **SAVE**:

SAVE

Press **1**:

1 PLAY CD

Press **ENTER** to select and overwrite the displayed preset:

1 PRESET SAVED


Your settings are now saved under preset 1 and any time you select this preset your settings will be recalled.

Follow the same procedure for the other presets.

## Rename a preset


Once you save your own custom preset, you can rename it to make it easy to remember for the next time you want to use those same settings. For example, suppose you saved your favorite settings for watching a movie in A/V preset 2, and you'd like to rename the preset to "WATCH MOVIE".

Using the remote control, press **MENU** until the display shows:




CUSTOMIZE TITLES

Press **▲** or **▼** until the display shows



2 PRESET TITLE


Press **ENTER** to select renaming this title. The display will show the current A/V preset name:

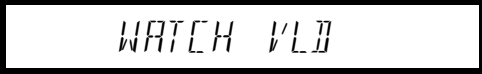

WATCH VLD

The display shows a flashing cursor "\_" at the character you are currently editing. Pressing **▲** or **▼** changes the character, pressing **ENTER** accepts (or skips) the blinking character.

Continue the steps above until you achieve:



WATCH MOVIE

Pressing **ENTER** at the last character completes the renaming session and exits.



SAVED

The presets are independent for each "bank" allowing you to save different names in each "bank". The character set you have available for renaming is shown below.

A - Z	0 - 9	/	-	+	?	&	space
A-Z	0-9	/	-	+	?	&	

You can also rename the six input titles and the power on title using the same procedure and character set above.

## Tuner functions

After selecting TUNER, the internal AM/FM tuner features are controlled as follows:

For Controlling:	Use Buttons:	Description:
AM/FM Band	BAND	Alternates between AM and FM bands.
Tuning/Seek	TUNE +/-	Adjusts tuning frequency.
Direct Frequency Entry	FREQ then number keypad (0-9)	To directly enter a station frequency.
FM Stereo/Mono	MENU then ▲	Manually select between stereo and mono reception.
Save a Station Preset	SAVE, STATION +/-, then ENTER	To save a desired station to memory. There are 20 presets per band.
Recall a Station Preset	STATION +/-	To recall a saved station.
Auto-program Station presets	MENU then ENTER	Allows the AVP to program the Station memory for you.

### *Tuner Operation*

**AM/FM Band -** Changing band is accomplished by simply pressing the BAND button. It will toggle the tuner between the FM and AM band.

**Tuning/Seek -** Adjusts the tuners frequency to tune in a desired station. Pressing **TUNE** once steps frequency manually while pressing and holding momentarily engages “seek”.

### **Direct Frequency Entry -**

To enter a station’s frequency directly into the tuner. Press the **FREQ** button on the remote. The message ENTER FREQUENCY will appear on the display. Enter the numbers of the desired station frequency using the numeric keypad (0-9).

*Example:* Press **FREQ** , then **9 6 9**. The dot “.” is automatic. Display will show:

The image shows a rectangular digital display with a black border. The text inside is 'FM ST 96.90 01' in a monospaced font. 'FM' is on the left, 'ST' is in the middle, '96.90' is on the right, and '01' is on the far right.

### FM Stereo/ Mono-

FM stereo is automatically selected when tuning a station. If you choose to manually set it, press **MENU** until the display shows:



FM STEREO/MONO

Now press **▲** to change mode. You can toggle from stereo to mono by repeatedly pressing the **▲** button.


### Save a station preset -

To save a station preset, tune the AVP to the desired station you wish to save. You may use either method listed prior.

Press the **SAVE** button followed by the **STATION + (or -)** button until the display shows the preset number where you want to save this frequency at. The station preset number is the two digits at the right hand side of the display. When saving, the AVP will still show the current frequency saved in each particular preset that you are about to overwrite. The new frequency will not be accepted until **ENTER** is pressed.

Press **ENTER** to save at desired preset number.

*Example:* Display shows frequency to save:

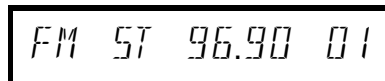

FM ST 96.90 01


Ignore 01 digits right now.

Press the **SAVE** button, the display reads:



SAVE

Press the **STATION +** button, the display reads:

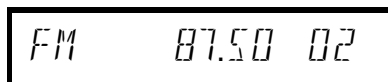

FM 87.50 02

Now look at the two right most digits. They tell the station preset number to save your selection under. Continue pressing the **STATION + (or -)** button until the desired number is displayed (01-20).

Press the **ENTER** button to select the station preset number and save your station. The display should read (assuming you picked preset 01):



STATION 01 SAVED

The display should now look like this:

FM ST 96.9 01

You have now saved the station into the preset 01.

There are two tuner A/V presets you can also save. These presets are the A/V preset numbers 5 and A5. If you do not save these presets the AVP will always pick the default frequency of 87.50 MHz when you press 5 (or A5) and ENTER.

Bring your favorite station up on the display:

FM ST 96.9 01

Set the desired volume level:

VOLUME -15 dB

Set the desired mode (example: stereo front to rear):

STEREO FRNT REAR

Note: You may use any mode you wish.

Press **SAVE**, **5**, then **ENTER**, and the display shows:

5 PRESET SAVED

You have now saved your favorite station under A/V preset **5**. You may follow the same procedure for the preset **A5**.

#### Recall a Station Preset -

Simply press the **STATION +/-** buttons until your desired station is displayed.

#### Auto-program Station Presets -

Select the band you wish to auto-program (AM or FM).

Press **MENU** until the display shows:

AUTO PGM TUNER

Then press **ENTER**. The display will read:

ARE YOU SURE ?

Press **ENTER** again to confirm.

The AVP will now search the band and program the first 20 strongest stations it receives into the 20 preset memories for that band.

*Remember to connect an antenna to the AVP for proper tuner operation.*

# Advanced operations

## Star (\*) operations

The AVP has incorporated some new ways to change the mode of the source inputs. In the standard **SETUP** menu, the digital modes of VLD, CD ,V1 ,V2 ,TV-V3, and TUNER are set globally and are not affected as presets are recalled. Now with the **\***(star) operations described below, you can override the setup mode to another digital input mode. You can also save the new mode in an A/V preset for later recall. What does all this mean? It means you can have presets for more than one digital mode of the same input source.

For example, you can save one CD preset that uses the standard L,R analog inputs in direct, and save another CD preset that uses the digital input with PCM stereo. Depending on what you want to hear at the time, you can select the appropriate preset without having to go through the **SETUP** menu and surround mode changes again.

It should be noted that only the **DIGITAL ON** mode, when set in the **SETUP** menu, allows the AVP to automatically switch over to Dolby Digital Surround Processing when an Dolby Digital digital input is detected. This feature also provides automatic switching back to PCM 30 seconds after an Dolby Digital signal is no longer present. Overriding the digital mode to **DIGITAL OFF** or **DIGITAL DTS** defeats the automatic sensor.

## Procedure

First select the preset you wish to change. We will use preset 1 for this example but the same holds true for all presets 0-9 and A0-A9.

Press **1**, then **ENTER** to recall preset 1.



1 PRESET RECALL

Set the input mode by selecting one of the following:

KEYSTROKE	MODE
<b>*</b> (star) then 1 then 0	DIGITAL OFF
<b>*</b> (star) then 1 then 1	DIGITAL ON
<b>*</b> (star) then 1 then 2	DIGITAL AC-3
<b>*</b> (star) then 1 then 3	DIGITAL DTS

Save the setup to preset 1 by pressing **SAVE**, then **1**, then **ENTER**.

The new setup will be saved for preset 1. You can save digital off for preset 1 and digital on for preset A1 if you wish. This would allow you to have two different sources into the CD inputs, one digital and one analog.

These star operations do not change the digital settings in the **SETUP** menu. They are temporary changes to the mode of the input selected. When the AVP is powered off and then on, the input will default back to the **SETUP** menu status (Unless a preset was selected to turn on the AVP).

**NOTE:** The star functions (\*10,\*11 \*12,\*13) will not work if the digital input is set to DTS in the **SETUP** menu.

### ***Other star (\*) operation***

Star 98 will reset the preamplifier back to the factory presets. This is a master reset for the preamplifier and will erase everything that was programmed into the system memory.


### ***Factory reset***

Reset the AVP before you start. Plug in the power and turn the AVP on. When the display shows:



VLD DIRECT

Press the \* (star) then 9 then 8 and the display will show:



STAR 98

The AVP will turn off and back on. Then it will cycle through the three title messages and then off again. The AVP is now reset to factory defaults. You can perform this procedure anytime you need to reset the preamplifier to the factory defaults. **All your presets will be erased.** Do not interrupt the cycle, do not press any buttons on the remote or preamplifier face plate. If you accidentally press a button, you will have to repeat the reset procedure.

Turn the preamplifier **ON** and the display will show:



VLD DIRECT

You can now program the preamplifier to your desired setup. This is the same procedure as shown on page 15.

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
No sound, display will not light	<ol style="list-style-type: none"> <li>1. Power cord not plugged in.</li> <li>2. Power off at AC source.</li> <li>3. Power switch off.</li> <li>4. AC power inlet fuse blown or faulty. **</li> </ol>	<ol style="list-style-type: none"> <li>1. Reconnect power cord.</li> <li>2. Check power at plug.</li> <li>3. Turn power switch on.</li> <li>4. Check for shorts or overloading.</li> </ol>
No sound, display on.	<ol style="list-style-type: none"> <li>1. Preamplifier in mute</li> <li>2. Volume control to minimum.</li> <li>3. Wrong source selected.</li> <li>4. Wrong source mode selected.(analog/digital)</li> <li>5. Line stage to amp. cables loose or faulty.</li> <li>6. Source to line stage cables loose or faulty.</li> </ol>	<ol style="list-style-type: none"> <li>1. Unmute preamplifier.</li> <li>2. Increase volume.</li> <li>3. Select source.</li> <li>4. Select proper mode. (page 24,34)</li> <li>5. Tighten, repair, or replace cable.</li> <li>6. Tighten, repair, or replace cable.</li> </ol>
Loud hum or buzz on one or more channels	<ol style="list-style-type: none"> <li>1. Poor ground connection in interconnect cables.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check all connectors and repair as necessary.</li> </ol>
Surround sound does not sound correct.	<ol style="list-style-type: none"> <li>1. Recordings are not Pro Logic.</li> <li>2. Recordings are not Dolby Digital.</li> <li>3. Surround processor not in correct mode.</li> </ol>	<ol style="list-style-type: none"> <li>1. Play a Pro Logic recording.</li> <li>2. Play a Dolby Digital recording.</li> <li>3. Select proper surround processor mode.</li> </ol>

**\*\*Note:** If unit continues to blow power inlet fuses, **DO NOT USE A HEAVIER FUSE!!**, have it serviced.

# Specifications

## Audio Specifications

Frequency Response (+3 dB):	20 Hz - 100 kHz	Unprocessed
	20 Hz - 100 kHz	Processed
Input Sensitivity:	63 mV	
Maximum Output Level:	9 V R.M.S.	
Total Harmonic Distortion:	Less than .02%	Unprocessed
	Less than .05%	Front
	Less than .12%	Rear
	Less than .05%	Subwoofer
Signal to Noise Ratio:	89 dB, CCIR 2k Weighted, max level	
Input Impedance:	50k Ohms	
Output Impedance:	221 Ohms	
Noise Test Reference Level:	-12.5 dB	
Surround Outputs non-inverting	8	
Audio Inputs	6	
Audio Outputs (extra L & R) non-inverting	2 sets	

## Video Specifications

Frequency Response (-3,-3 dB):	20 Hz - 10 MHz
Buffered Input Impedance:	75 Ohms
Buffered Output Impedance:	75 Ohms
Maximum Input Level:	2 V R.M.S.
Maximum Output Level:	2 V R.M.S.
Video Inputs / Outputs	4 / 4

## Tuner Specifications

### **FM Section** ;De-emphasis 75 $\mu$ sec \*

Frequency Range:	87.50 - 107.90 MHz in 50 kHz steps
Total Harmonic Distortion:	Less than 0.25%
Frequency Response (-1,-3 dB)	20 Hz - 15 kHz
Capture Ratio:	2 dB
IHF (Usable) Sensitivity:	12 dBf
Mono/Stereo Sensitivity:	15/35 dBf
Alternate Channel Selectivity:	65 dB
Signal to Noise Ratio:	70 dB, A Weighted
Antenna Input Impedance:	75 Ohms

## **AM Section \***

Frequency Range:	520 - 1620 kHz in 10 kHz steps
Total Harmonic Distortion:	Less than 0.3%
Sensitivity:	28 dBf
Selectivity:	30 dB

\* USA and Canada versions.

Other versions have 50  $\mu$ sec De-emphasis with 50 kHz tuning steps for FM and 9 kHz tuning steps for AM.

Digital Inputs	6
Line Voltage	120/220/240 VAC switchable
Replacement fuse	Line fuse - 0.5 A / 250 V fast blow
Shipping weight	20 lb
Dimensions	width            17 inches height 3¾ inches depth            12 inches

## ***Care and cleaning***

Under normal use, the preamplifier will not require any special care. Over time you may wish to clean the exterior of the unit by wiping it with a damp cloth to remove any dirt or dust that accumulates on it. Do not let any liquid enter the preamplifier thru the vents in the top cover.

You may clean the connectors on the back panel with isopropal alcohol annually.

# Limited Warranty

B&K Components Ltd., referred to herein as B&K, warrants your B&K equipment against all defects in material and workmanship for a period of five years from the date of purchase. This warranty applies only to the original purchaser and only to equipment in normal residential use and service. Defective equipment must be returned to B&K, prepaid, accompanied by sufficient payment to cover the cost of return shipping and handling, and will be repaired or replaced at the discretion of B&K whose decision as to the method of reparation will be final.

This warranty shall not apply to any equipment which is found to have been improperly installed, incorrectly fused, misused, abused, or subjected to harmful elements, used in any way not in accordance with instructions supplied with the unit, or to have been modified, repaired or altered in any way without the expressed, written consent of B&K. This warranty does not apply to the cabinet, the remote controller, or appearance items such as the faceplate, control buttons, or display lenses, nor does it cover any expenses incurred in shipping the unit to and from the manufacturer's service depot.

No warranty, implied or otherwise created by State law shall extend beyond the terms of this warranty and B&K shall not be liable for any incidental or consequential damage arising out of a defect in material or workmanship of the unit during the terms of this warranty or thereafter. Some States do not allow the exclusion or limitation of incidental or consequential damages and the foregoing exclusions may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from State to State.

No agent, representative, dealer or employee of B&K has the authority to increase or alter the obligations or terms of this warranty.

**B&K Components Ltd.**

---

## RETURNING EQUIPMENT

No equipment may be returned to B&K Components Ltd. Without a RETURN AUTHORIZATION. Should you find it necessary to return equipment to B&K, for any reason, a RETURN AUTHORIZATION (R.A.) number must be issued by B&K in respect of the equipment being returned. You may request an R.A. number by calling B&K at the numbers below. We ask that you provide the following information at that time.

1. Your name, address, and phone number.
2. The model and serial number of the equipment being returned.
3. A description of the problem being experienced.

Your call will be referred to a Technical Service Representative who will work with you to resolve the problem. If it is determined that the unit must be returned for repair, an R.A. number will be issued.

Customer service hours are 10:00am to 12:00pm and 1:00pm to 4:00pm.

**B&K Components Ltd.** 2100 Old Union Road, Buffalo New York 14227  
1-800-543-5252 or 1-716-656-0023



**B&K Components, Ltd.**  
**2100 Old Union Road**  
**Buffalo, New York 14227**  
**716-656-0023**

*LIST YOUR UNIT INFORMATION HERE*

*MODEL #* \_\_\_\_\_

*SERIAL #* \_\_\_\_\_

*DEALER NAME* \_\_\_\_\_

\_\_\_\_\_

*DEALER PHONE #* \_\_\_\_\_

*SALES PERSON* \_\_\_\_\_

*DATE PURCHASED* \_\_\_\_\_

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>