


Read all instructions **BEFORE** assembly and **USE** of product.  
**KEEP INSTRUCTIONS FOR FUTURE USE.**

**baby trend**<sup>®</sup>

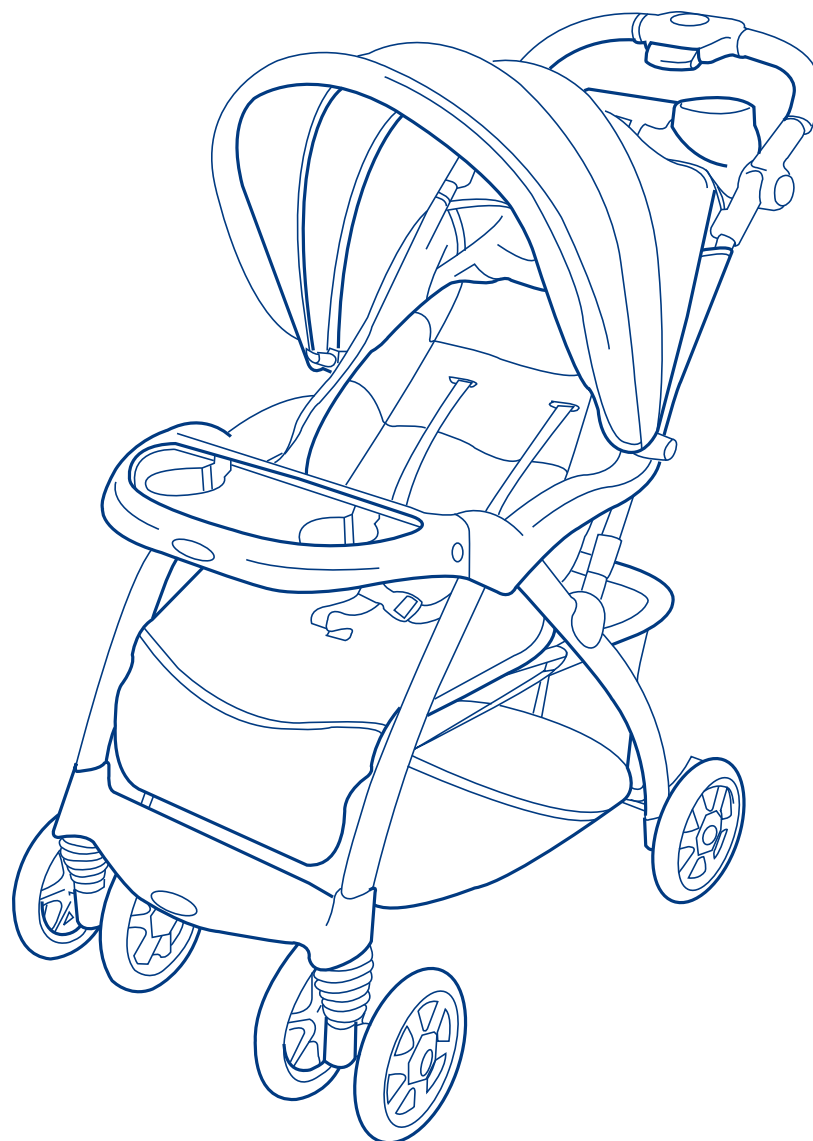


**MODEL # 1866CT**

## ***Safari Babies Travel System***

### ***Instruction Manual***

## WARNINGS

 **WARNING:** Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

 **WARNING:** Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the seat belt and insure that the child is properly positioned according to these instructions.

 **WARNING:** Never leave child unattended.

- \* Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- \* The maximum weight that can be carried in the basket is 5 lbs. The maximum weight that can be carried in the Parent Tray is 3 lbs. Excessive weight may cause a hazardous unstable condition to exist.
- \* Be certain the stroller is fully erect and latched in the open position before allowing the child near the stroller.
- \* The maximum weight capacity of this stroller is up to 45 pounds additional weight will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- \* DO NOT use the stroller on stairways or escalators.
- \* Never allow your stroller to be used as a toy
- \* To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- \* Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed
- \* Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.


*Please: If you experience any difficulty with the use of our product or have a question regarding these instructions, please contact our Customer Service Department at (800) 328-7363 between the hours of 8:00 am and 4:30 pm Pacific Coast Time. Please do not return to the store as once it is returned it cannot be resold and the materials and energy used to make it are wasted.*

To Contact Us:

**Baby Trend, Inc.**  
**1567 S. Campus Ave.**  
**Ontario, CA 91761**

**Customer Service Hot Line**  
**(800) 328-7363**  
**8:00 a.m. to 4:30 p.m. Pacific Standard Time**

# PARTS

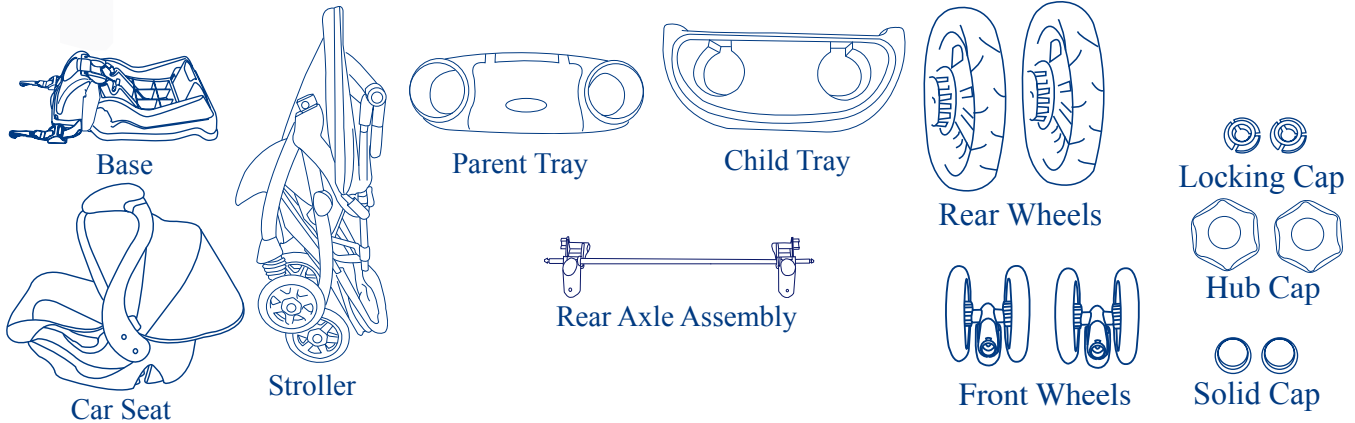

**TO ENSURE SAFE OPERATION OF YOUR STROLLER, PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

## TO ASSEMBLE STROLLER

- \* Remove stroller from box. The front wheels, rear wheels, and child tray, and parent tray need to be installed prior to use.
  - \* To attach the front wheels, slide the red unlock mechanism and squeeze the stroller handle while pulling backward on the stroller to unfold. See figures 1 and 2.
  - \* Lean the stroller backwards so that it rests on the handle and rear frame tubes and the front wheel tubes are pointing upward. Position the front wheel assembly at the front tube such that the hole in the swivel assembly will slide onto the front tube. Please see figure 3. Push each front wheel assembly onto the front tube being careful that wheel assembly locks onto the front leg. Pull on the wheel assembly to ensure that it is securely attached to the stroller. Please see figure 3.
  - \* Lean the stroller forward to rest on the front wheels. Assemble the rear wheels as follows:
    1. Slide the rear axle assembly onto the rear stroller legs until they lock into place. Please see figure 4.
    2. Slide each wheel onto the rear axle and secure in place with the Locking Cap. Snap the solid cap over the Locking Cap. Snap the Hub Cap onto the wheel. Please see figure 5. Please see figure 6 for order assembly.
- Pull on each wheel to ensure that each is firmly attached to the axle.
- \* Ensure that the wheels are firmly locked into place. Do Not use the stroller if the wheels are not locked into place, but rather contact our customer service department immediately at (800) 328-7363, between the hours of 8:00am and 4:30pm PCT, for assistance.

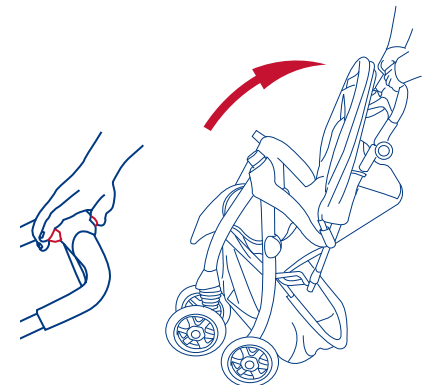


Figure 1.

Figure 2.

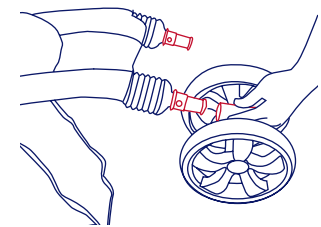


Figure 3.

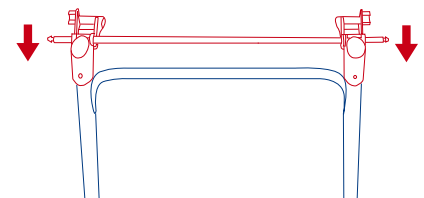


Figure 4.

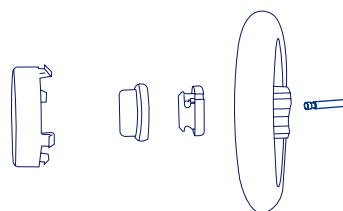


Figure 6.

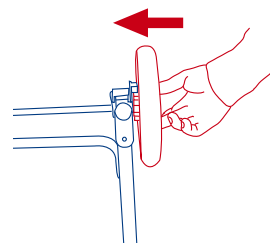


Figure 5.

- \* To attach the front child tray, push the angled tray onto the post at the end of the right armrest, while pressing downward on the snap button, until locked into place. Please see figure 7. Rotate the tray downward until latched onto the left armrest. Please check that the snap button comes through and securely latches the tray in place. Please see figure 8.
- \* To remove front child tray, press inward on the left side tray release button and rotate upward on the tray. Please see figure 9. Please note that you may remove the tray completely by depressing the snap button on the right side as shown in figure 10 while pulling forward on the tray. Please see figure 7.
- \* To install the canopy slide the male ends of the canopy into the female slots on the stroller frame. Please see figure 11. To open the canopy push forward on the front frame tube of the canopy. Please see figure 12.
- \* The stroller handle has multiple positions. To adjust the handle to your desired position, press in both round buttons at each end of the handle. Please see figure 13.
- \* To attach the parent tray line up the parent tray slots with the corresponding slots on the stroller frame, slide down until it locks into place. Check to make sure the parent tray is secure before using. Please see figure 14
- \* To remove the parent tray, locate the locking tabs under the tray, pull outward on the locking tabs and lift up to remove. Please see figure 15

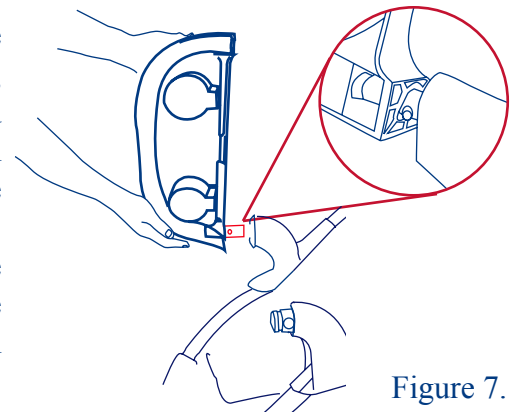


Figure 7.

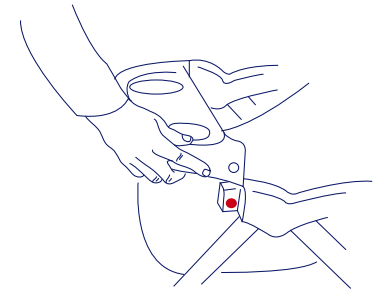


Figure 8.

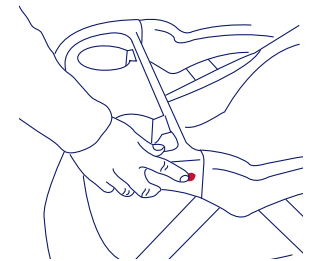


Figure 9.

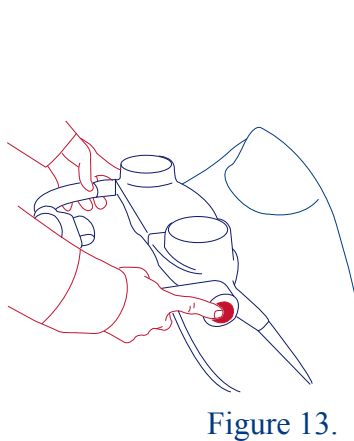


Figure 13.

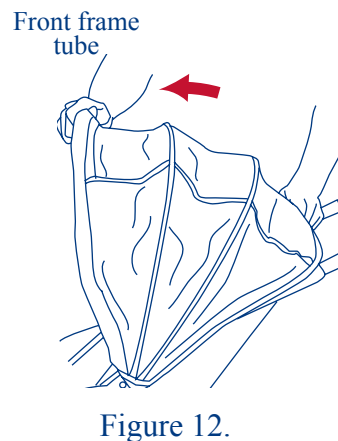


Figure 12.

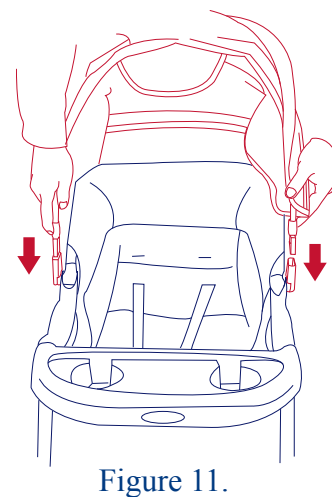


Figure 11.

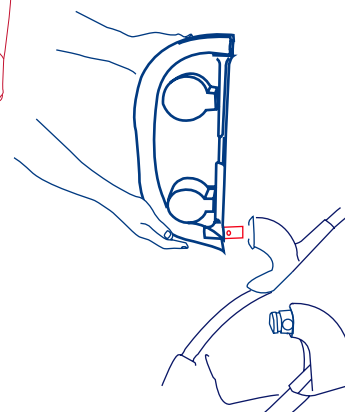


Figure 10.

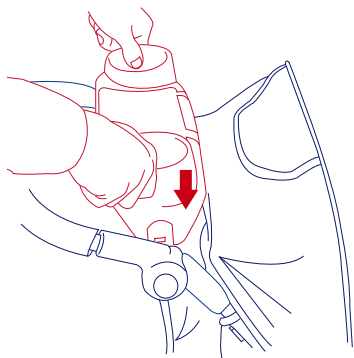


Figure 14.

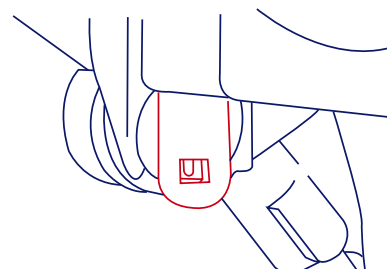


Figure 15.

## TO SECURE THE CHILD

- The shoulder straps of the 5-point harness have 3 attachment positions. Select the position that places the shoulder strap level with, or below the top of the child's shoulder. To access the harness pull apart seat pad. Please see figure 16.
- Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders. Please see figure 17.

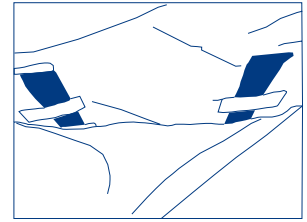


Figure 16.

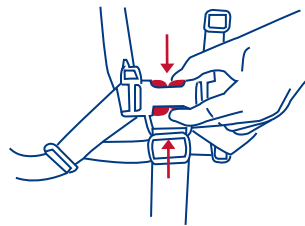


Figure 18.

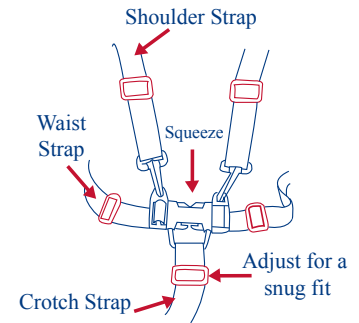


Figure 17.

- To release, apply pressure to both sides of each male clip until the clip is released. See figure 18. This process requires a moderate amount of effort so as to prevent an accidental release by your child.

**⚠ WARNING:** Avoid serious injury from falling or sliding out. Always use the safety harness.

**⚠ STRANGULATION HAZARD:** Child can strangle in loose straps. Never leave child in seat when straps are loose or undone.

# ATTACHMENT OF THE BABY TREND INFANT CAR SEAT

- \* To attach the Baby Trend Infant Car Seat, recline the seat all the way back. Please see figure 19
- \* **Check that the front child tray is firmly attached to the stroller armrests.** Make sure that the car seat locks into the front child tray. Then turn tabs on stroller frame to lock the front of the car seat into the stroller. See figure 20.
- \* Position the Infant Car Seat, facing toward the rear of the stroller, so that the seat shell goes into the front tray and latches into place. Please see figure 21. **Check that the Infant Car Seat is firmly locked onto the front tray before using.**
- \* To remove the Infant Car Seat, squeeze the release handle located at the foot-end of the seat and carefully lift upward on the seat. Please see figure 23.

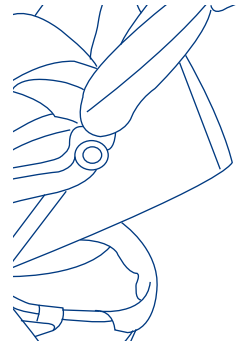


Figure 19.

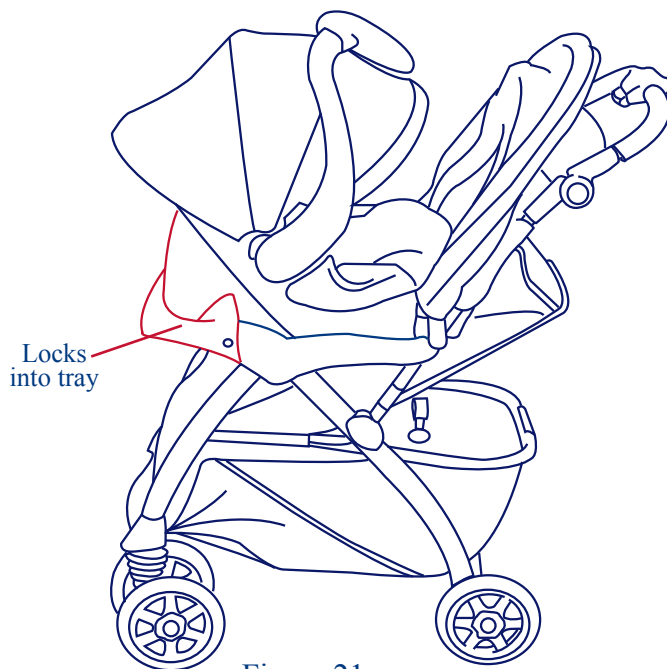


Figure 21.

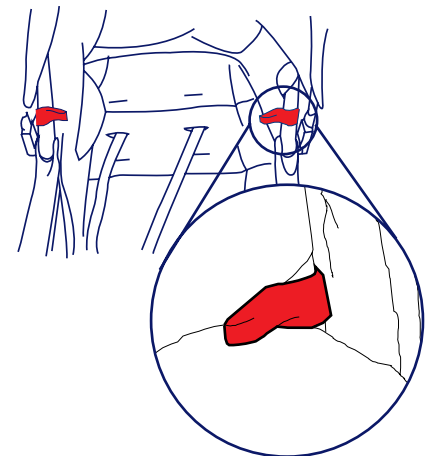


Figure 20.

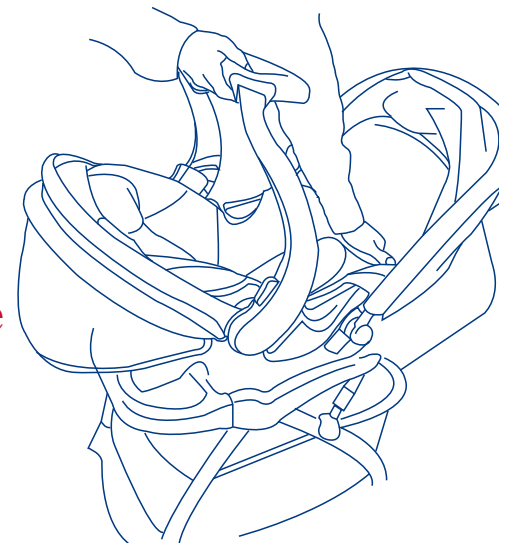


Figure 22.

**⚠ WARNING:** Failure to follow these car seat attachment instructions could result in serious injury or death.

## SEAT BACK POSITIONING

**⚠ WARNING:** The upright position should be used only for a child that is at least 6 months old.

- \* The seat has a multiple position recline that is controlled by a cord and spring loaded adjuster behind the seat. To recline the seat, pull back on the loop of the adjuster. Please see figure 23. To place the seat back in a more upright position, grab the adjuster with one hand and pull the cord to the desired position with the other hand. See figure 24. The cord will lock automatically.

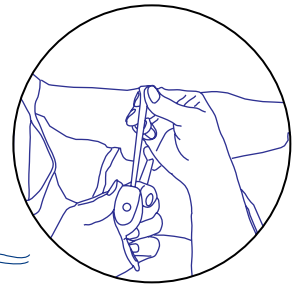


Figure 23.

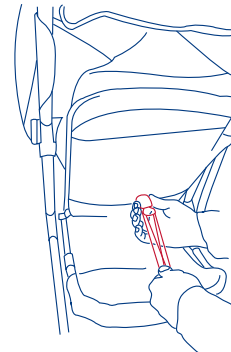


Figure 24.

## BRAKES

**⚠ WARNING:** Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

- \* To engage brakes, apply light downward pressure to the brake lever located on each rear wheel. The stroller may require slight forward or rearward movement in order to line up the teeth on the brake with each wheel brake cluster. See figure 25. Check that the stroller will not move and that the brakes are properly applied. To release, gently lift up on the brake lever.

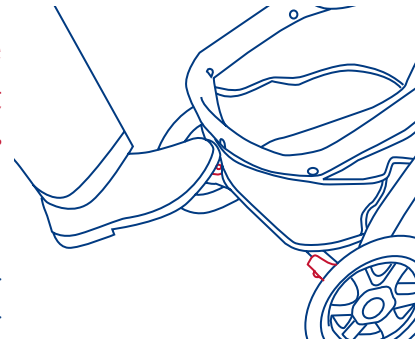


Figure 25.



## CANOPY

- \* To open the canopy, push forward on the front frame of the canopy. To close canopy, pull the front edge toward the rear of the stroller until folded. Always fold the canopy prior to folding the stroller frame. Please see figure 26.

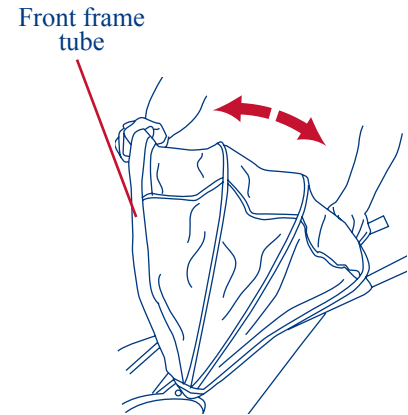


Figure 26.

**CAUTION: Read the following section completely before folding your stroller!**

## TO FOLD STROLLER

- \* Close the canopy as described in the canopy section. **NOTE: For an easier fold place the seat in the furthest recline position. Also you must flip the carseat support tabs to the outside of the stroller frame before folding.** To fold the stroller slide the red fold lock with your thumb while squeezing the large red fold button in the center of the handle and push forward on the handle. Please see figure 27. Once the stroller begins to fold, release the red handle and push forward on the handle until the stroller is folded. Please see figure 28. To stroller will automatically lock when folded correctly, and will stand freely in the folded position.

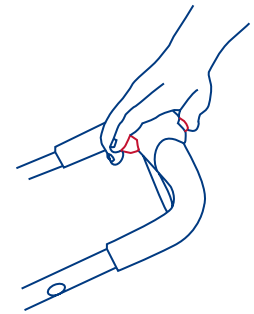


Figure 27.

**⚠ WARNING: Failure to follow these folding instructions could result in serious injury or death.**

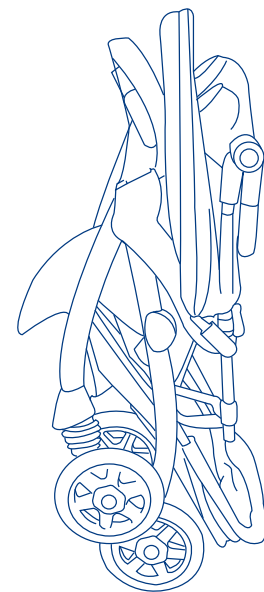


Figure 28.



## TO UNFOLD STROLLER

- \* To unfold the stroller slide the red fold lock with your thumb while squeezing the large red fold button in the center of the handle and push down on the handle.

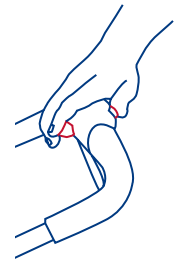


Figure 29.

**⚠ WARNING:** Failure to follow these folding instructions could result in serious injury or death.

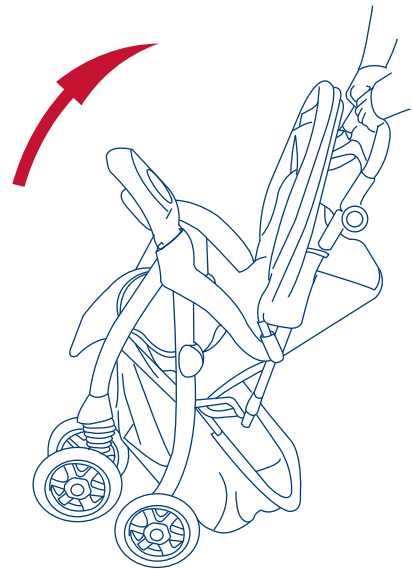


Figure 30.

## CLEANING SEAT PAD

- \* To clean the seat pad, use warm water, soap and a sponge, and let air dry.



**IF YOU EXPERIENCE ANY DIFFICULTY IN USING THIS PRODUCT,  
PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT (800) 328-7363  
BETWEEN THE HOURS OF 8:00AM AND 4:30PM PACIFIC COAST TIME FOR ASSISTANCE.**



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>