

SAFETY INSTRUCTIONS



CAUTION:

WARNING:





PRO MIXER

Professional 3-channel DJ Mixer with BPM Counter

- ▲ Intelligent dual auto-BPM counter
- ▲ Super-smooth dual-rail "Ultraglide" crossfader with up to 500,000 life cycles
- ▲ Three dual input stereo channels with gain and 3-band kill EQ (-32 dB)
- ▲ One channel additionally switchable to studio-grade ULN microphone input
- ▲ Manual talkover function
- ▲ PFL function with master/PFL mix option
- Peak-hold level meter with dedicated PFL bargraph
- ▲ Master, booth and tape outputs
- ▲ BNC gooseneck lamp socket
- Gold-plated cinch sockets for excellent audio quality
- Super-rugged construction ensures long life, even under the most demanding conditions
- ▲ Manufactured under ISO9000 certified management system

FOREWORD



TABLE OF CONTENTS

1. INTRODUCTION	4
2. CONTROL ELEMENTS	5
3. SPECIFICATIONS	7
4. WARRANTY	8

1. INTRODUCTION

This manual first describes the terminology used, so that you can fully understand the DX626 and its functions. Please read the manual carefully and keep it for future reference.

1.1 Before you begin

If the unit is damaged, please do NOT return it to BEHRINGER, but notify your dealer and the shipping company immediately. Otherwise claims for damage or replacement may not be granted.



WARNING!

We would like to point out that high volume may damage your hearing and/or your headphones. Please turn the MASTER control all the way to the left before turning on the device. Always make sure that the appropriate volume is set.

2. CONTROL ELEMENTS

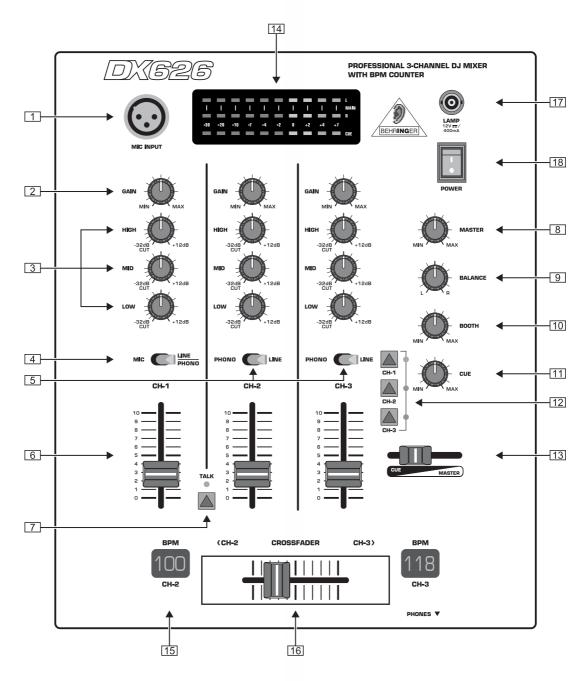


Fig. 2.1: The PRO MIXER DX626's front panel

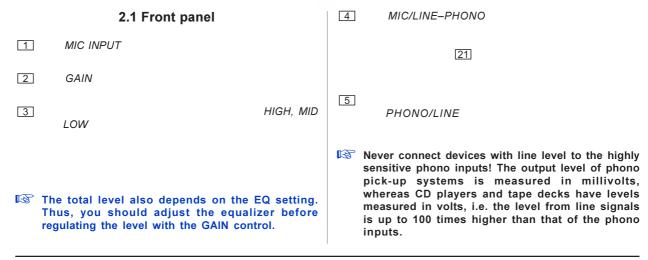
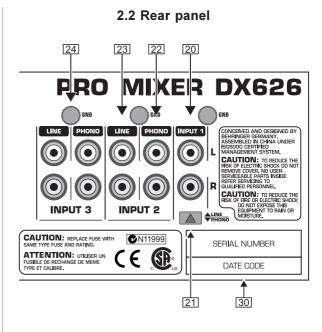




Fig. 2.2: Headphones connector

19

19 **HEADPHONES**



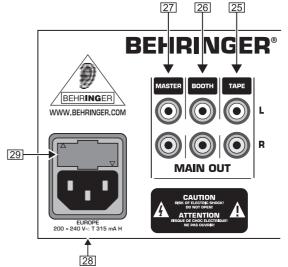


Fig. 2.3: The DX626 rear connectors

4

20 INPUT 1

21 PHONO/LINE

PHONO 22

23 LINE

24 GND

25 TAPE

		1 110 11111 111 111 111
26	воотн	3. SPECIFICATIONS
		AUDIO INPUTS
27	MASTER	
	Always turn the power amps on last to avoid inrush currents that can easily damage your speakers. And, to avoid sudden and unpleasant surprises for your ears, make sure there is no signal at the DX626 before turning on the power amps. To be sure, slide all the faders to the bottom and switch all controls to zero.	AUDIO OUTPUTS Ω
റ്റരി	all controls to zero.	EQUALIZER (+/-8 dB)
28		
		TALKOVER BUTTON (MIC)
29		LAMP (BNC)
		GENERAL
30	SERIAL NUMBER	POWER SUPPLY
		T 500 mA H T 315 mA H DIMENSIONS/WEIGHT
		BEHRINGER makes every effort to ensure the highest standard of quality. Necessary modifications are carried out without notice. Thus, the specifications and design of the device may differ from the information

given in this manual.

4. WARRANTY § 1 WARRANTY CARD/ONLINE REGISTRATION § 2 WARRANTY § 5 WARRANTY TRANSFERABILITY § 3 RETURN AUTHORIZATION NUMBER **BEFORE** § 6 CLAIM FOR DAMAGES § 4 WARRANTY REGULATIONS § 7 OTHER WARRANTY RIGHTS AND NATIONAL LAW

8

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com