

BKK 2152

Blender

User Manual

BEKO

Download from [Www.Somanuals.com](http://www.somanuals.com). All Manuals Search And Download.

Read this manual prior to initial operation of the product!

Dear Customer,

We hope that your product, which has been manufactured in modern facilities and passed through a strict quality control procedure, will give you very good results.

We advise you to read through this manual carefully before using your product and keep it for future reference.

The User Manual will help you use your machine in a fast and safe way.

- Read the User Manual before installing and starting your product.
- In particular, follow the instructions related to safety.
- Keep this User Manual within easy reach for future reference.
- Also read all additional documents supplied with this product.

Remember that this User Manual is also applicable for several other models. Differences between models will be identified in the manual.



This product has been produced in environmentally friendly, modern facilities

CONTENT

1 Safety Warnings **2-3**

2 Technical Aspects Of Your Machine **3**

3 Using Your Machine **4-5**

4 Maintenance and Cleaning **5**

1 Safety Warnings

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including the following:

 
- Read all instructions carefully, even if you are familiar with the appliance.
- To protect against the risk of electric shock **DO NOT IMMERSE** the appliance, Cordset or Plug in water or other liquid.
- To clean, wipe exterior with a damp cloth.
- Close supervision is necessary when any appliance is used by or near children. Never leave an appliance unattended when in use.
- Switch off and remove the plug from the power outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp plug and pull from power outlet. Never pull cord.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Return the complete appliance to your nearest authorised service facility for examination, electrical repair, mechanical repair or adjustment.
- If operated on wood furniture, use a protective pad to prevent damage to delicate finishes.
- The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
- Do not overfull.
- Do not let cord hang over edge of a table, counter, or touch hot surface.
- Avoid touching hot surfaces, use handles and knobs.
- Do not operate or place any part of this appliance on or near any hot surface (such as a gas or electric burner, or in a heated oven).
- Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- When using the extension cord with your appliance make sure the extension cord is correctly wired and rated for its use.
- This product is intended for household use only.
- Do not attempt to repair the appliance yourself; instead, take it your nearest Service Centre or Authorised Service Agent for repair.
- Handle carefully the sharp blades especially during removing and emptying the container and during cleaning.

Attention

Before using your product, read carefully the following operating instructions. It is suggested that you keep these instructions in safe place.

Check whether the voltage indicated on the base of the product is the same as the voltage in your home.

2 Technical Aspects Of Your Machine

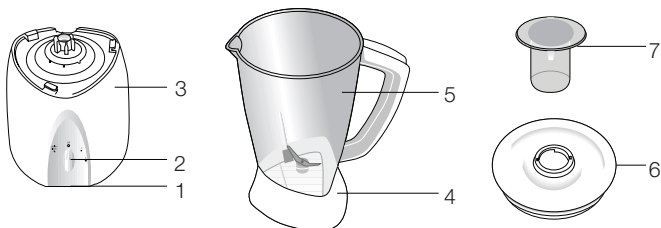

- 1- Cord Windins System
- 2- Control Button (pulse-0-I-II)
- 3- Motor Housing
- 4- Washable Blade Assembly
- 5- Plastic Container Jug Max. Capacity : 1500 ml.
- 6- Lid
- 7- Small Lid

Voltage / Frequency : 220-240 V ~ 50/60 Hz

Isolation Class :

Motor Isolation Class : B

Power : 600 W max.

Values stated on the markings of the product or in the printed documents accompanying the product are obtained in the laboratory on basis of the relevant standards. These values may change according to the usage and ambient conditions of the product. Power values are tested 240 V.

3 Using Your Machine

How to Use:

Before first use, wash the Jar Assembly in warm sudsy water, rinse and dry well. Blending is a very fast process. The motor drives the cutter at high speed to ensure that through blending is achieved. Make sure that whenever you use blender it is standing on a flat, clean, dry surface. Before starting to blend check that the jar assembly is firmly in place on the motor base.

Operation:

With the motor unit resting on a flat dry surface and jar assembly firmly sitting in place, put the foods to be blended into the jar.

Please note that the jar should be locked on to the main unit by holding the washable blade assembly not the jar handle.

- Use the measuring scale on the jar as a guide and, to avoid having the food overflow, restrict the quantity to no more than 1500 ml. at any one time. Place lid and lid insert on jar assembly.

Attention

Do not operate the appliance continuously more than 30 seconds. Do not operate the appliance when empty.

- Ensure the blender is switched OFF "O" and plug power cord into a power outlet. Turn blender switch to either setting for a few seconds. Switch OFF "O" and check the food. Blending is a fast process. Take care not to over blend.
- Use the PULSE setting for greater control in short blending jobs. Switch must be held in PULSE position for blender to run. Blender will stop as soon as switch is released. Use the PULSE setting to prevent over blending of foods.
- If you wish to add ingredients whilst blending, liquids can be added through the hole in the lid insert, or the lid insert can be removed to allow dry foods to be added through the larger hole. DO NOT operate the blender without the lid and lid insert in place.



Figure 1



Figure 2

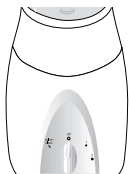 


Figure 3



Figure 4



Figure 5

4 Maintenance and Cleaning

Wash the blender jar and its associated parts in warm sudsy water after each use. Dry all parts thoroughly before storing. These parts are not dishwasher safe. Powdered cleaners and abrasive pads will damage the surface of the parts. Remove stubborn soil by soaking and wiping with soft cloths and mild liquid cleaners. NOTE: NEVER IMMERSE THE BASE ASSEMBLY IN ANY LIQUID. To clean the base, wipe clean with a damp cloth. Allow to dry thoroughly before re-using or storing. To prolong the life of blender always:

 
- 1-Use it on a flat dry surface.
- 2-Have the lid in place when blending.
- 3-Switch OFF "O" before you scrape food down the inside of the jar with a long handled spatula.
- 4-Make sure there is something in the jar each time you switch "ON". The cutter bearing may be damaged if run on "No-load".
- 5-Cut cooked meats into one

centimeter squares before adding into the jar.

6-Remember that a blender cannot process raw meat.

7-Ensure that the food being blended is not too thick or heavy for the motor to handle. If it seems to be having difficulty, either add a little liquid through the lid or switch OFF "O", remove the lid and scrape the mixture down towards the blade with a soft rubber spatula.

8-Please DO NOT use the jar for storing foods or beverages.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>