

BEKO

Instruction Manual

19"/22" LCD TV

Model 19WLM550DHID/22WLM550DHID



English Version

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire or electric shock, do not expose this equipment to rain or moisture.



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



**CAUTION: TO AVOID THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



This symbol is intended to alert the user to avoid the risk of electric shock, do not disassemble this equipment by anyone except a qualified service personnel.



This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure

IMPORTANT SAFETY INSTRUCTIONS

To prevent any injuries, the following safety precautions should be observed in the installation, use, servicing and maintenance of this equipment. Before operating this equipment, please read this manual completely, and keep it nearby for future reference.



- Do not place the equipment on any uneven or unstable carts, stands, tables, shelves etc.. The equipment may fall, causing serious injuries to children or adults and serious damage to the equipment itself.
- Use only a cart or stand recommended by the manufacturer. This equipment and recommended cart or stand should be handled with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and recommended cart or stand to overturn.



- Do not disable the 3-wire grounding type plug. The grounding pin on the 3-prong plug is an important feature. Removing the grounding pin will increase the risk of damaging the equipment. If you can not fit the plug into the electrical outlet, contact an electrician to install a grounding outlet.
- Always operate this equipment from the type of power source indicated on the rear of the serial/model plate.



- Never overload wall outlets and extensions.
- Use and handle the power cord with care.
- Do not place any heavy objects on the AC power cord.
- Do not pull the AC power cord. Do not handle the AC power cord with a wet hand.
- Do not touch the power cord and antenna cable during lightning.
- When the equipment has not been used for a long period of time, unplug it from the wall outlet.



- Do not place, use or handle this equipment near water.
- Never expose the equipment to liquid, rain, or moisture. Seek for service if any of the above is spilled into the equipment.



- Do not expose the equipment to extreme temperatures or to direct sunlight, the equipment may overheat and can be damaged.
- Do not install the equipment near any heat sources such as radiators, heat registers, stoves, or any other apparatus that might produce heat.

IMPORTANT SAFETY INSTRUCTIONS



- Do not attempt to service the equipment yourself.
- Opening and removing the covers may expose you to dangerous voltage or any other hazards and may void your warranty. Refer service from qualified personnel.



- Do not place or drop any other objects on top.
- Do not insert anything into the ventilation holes of your equipment. Inserting any metal or flammable objects may result to fire or electric shock.



- Do not place the equipment on uneven or unstable carts, stands, tables, shelves etc.. The equipment may fall, causing serious injuries to children or adults and serious damages to the equipment itself.
- Always place the equipment on the floor or on a surface that is sturdy, level, stable and strong enough to support the weight of the equipment.



- Do not block any ventilating openings, leave an open space around the equipment.
- Never place the equipment :
 - on a bed, sofa, rug, or any other similar surfaces;
 - too close to drapes/curtains/walls, in a bookcase, built-in cabinet, or any other similar places that may cause poor ventilation.



- Always remove the cord from the outlet before cleaning the equipment.
- Never use cleaners, harsh or abrasive chemicals or solvents on the equipment. Clean only with a dry, soft, lint-free cloth.

CONTENT

PREPARATION	5
Features	5
Package Contents	6
TV	7
Front View	7
Rear View	10
Remote Control	11
USING THE FEATURES	13
Watching your TV	13
Wide-Screen Mode	14
First Time Installation	15
Picture	16
Sound	17
Setup	18
Timer	22
Function	22
DTV Channel List Options	24
DTV Setup	25
EPG	27
DVD SETUP Menu.....	28
SPECIFICATION	30
GUARANTEE	31

PREPARATION

Congratulations on the purchase of your new High Definition Compatible Television. In order to maximize the potential of this television, you must use it in conjunction with a High Definition Signal Source, utilizing a proper High Definition receiving unit (often referred to as a "set-top" box). Only "true" High Definition transmitted video will yield optimum picture quality. Please contact your cable or satellite provider for more information on how to receive High Definition programming.

Features

■ Various Audio/Video terminals for external equipment connection

- 1 set of Composite video input terminal
- 1 set of S-VIDEO input terminal
- 1 set of HDMI input terminal
- 1 set of VGA input terminal
- 1 set of SCART terminal

■ Component Video Inputs

- Offer the best video quality for DVD (480i/480p), and digital set-top-box (HD1080i, 720p) connections.

■ High-Definition Multimedia Interface (HDMI)

- This interface can accommodate a copy-protected digital connection (HDCP) to other digital set-top boxes that have compatible interface.

Package Contents

 
Once you open the box, make sure all of the following contents are included. If missing any items, please return this product to the original place of purchase.



TV



Remote control/
AAA batteries

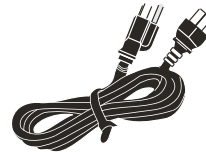

Power Cord

 


Instruction Manual

These items are all you need to set up and operate the TV in its basic configuration.

*Most devices (VCRs, DVD player, etc.) come with the necessary cable for connection. If you want to set up a complex system, you may need to buy extra cable, connector, etc.


Front View

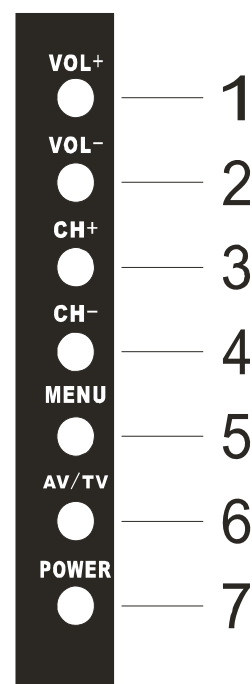8
9

ITEM	DESCRIPTION
1 VOL+	Volume up/right orientation
2 VOL-	Volume down/left orientation
3 CH+	TV channel up/up orientation
4 CH-	TV channel down/down orientation
5 MENU	MENU/ENTER
6 AV/TV	Select the input signals
7 POWER	Power On/Off (Standby)
8 LED	The LED light indicates when the TV is activated
9 IR	Infrared Receiver

DVD


 
Front View

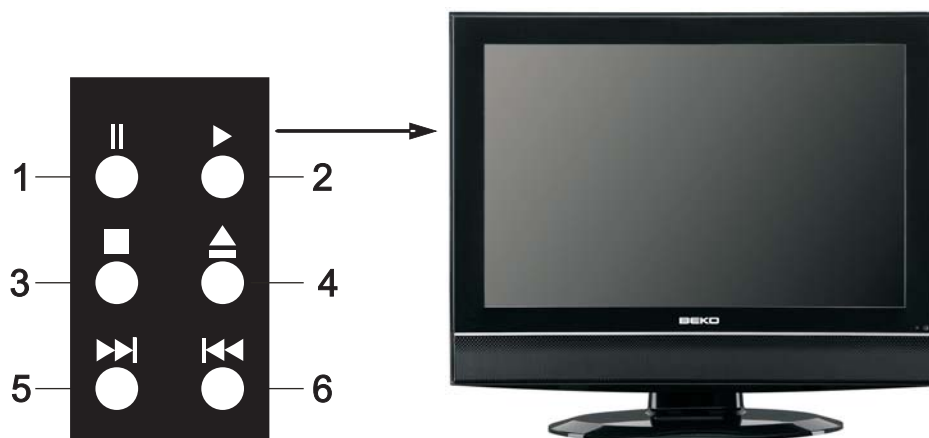

ITEM

1		DVD Pause
2	▶	DVD Play
3	■	DVD Stop
4	▲	DVD Open/Close
5	▶▶	DVD Next
6	◀◀	DVD Previous

  
Rear View

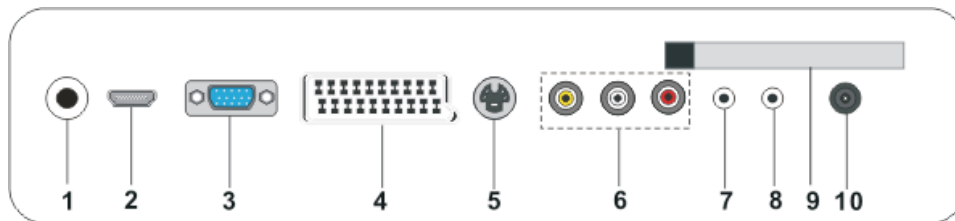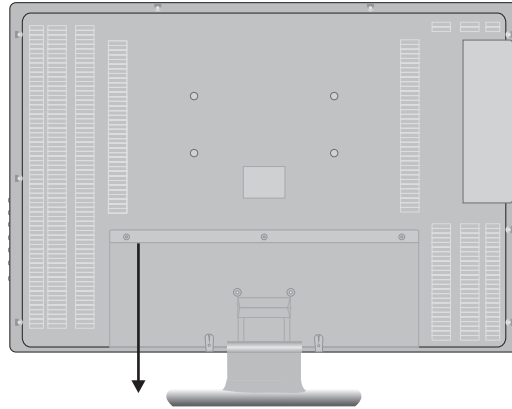

ITEM	DESCRIPTION
1 DC 12V IN	Power input interface (12V DC).
2 HDMI	Connects to a digital set-top box or other devices with a HDMI interface.
3 VGA	Used to connect a video signal from a personal computer.
4 SCART	Connects to the SCART input jacks of the audio or video equipment.
5 S-VIDEO	Connects to the S-VIDEO input jacks and Audio input jacks on your video equipment.
6 CVBS	Connects to the composite A/V input outputs jacks on your video equipment.
7 PC Audio	Connects to the sound-output port of a personal computer.
8 Earphone out	Earphone out interface.
9 CI	CI slot
10 RF (75 Ω)	The RF input that connects to your VHF/UHF antenna or cable.

Remote Control

 - 1 **POWER**
Turns the TV on and into standby mode .
- 2 **MUTE**
Mutes and restores your TV sound.
- 3 **0-9, -/--**
0-9: TV channel number select or Teletext page number select.
-/--: One bit, two bit or three bit TV channel select.
- 4 **↺**
Return your latest program.
- 5 **NICAM**
NICAM/GERMAN Stereo server select.
- 6 **ASPECT**
Selects from the following modes settings:
Auto, 4:3, 14:9, 16:9, Subtitle, FullScreen, Zoom1, Zoom2.
(See Page 14 for details)
- 7 **VOL+/-**
Volume up/down.
- 8 **CH+/-**
Channel up/down.
- 9 **DISPLAY**
Displays the source and channel's information .
- 10 **▲▼◀▶ ENTER**
Allows you to move, select and setup the OSD options.
- 11 **EXIT/DVD SETUP**
Exit from the current menu./Brings up DVD SETUP menu to the screen (DVD Mode).
- 12 **LCD MENU**
Displays the OSD menu (on screen display).
- 13 **PMODE**
Select picture mode.
- 14 **SMODE**
Select sound mode.
- 15 **INPUT**
Source select.
- 16 **SLEEP**
Sets the TV sleep time.
- 17 **▶▶ ■ ▶▶ ◀◀ ▶▶ ◀◀ ▶▶**
▶▶ : DVD Play/Pause.
■ : DVD Stop.
▶▶ : DVD Open.
◀◀ : DVD Previous.
▶▶ : DVD Next.
◀◀ : DVD Forward.
▶▶ : DVD Backward.

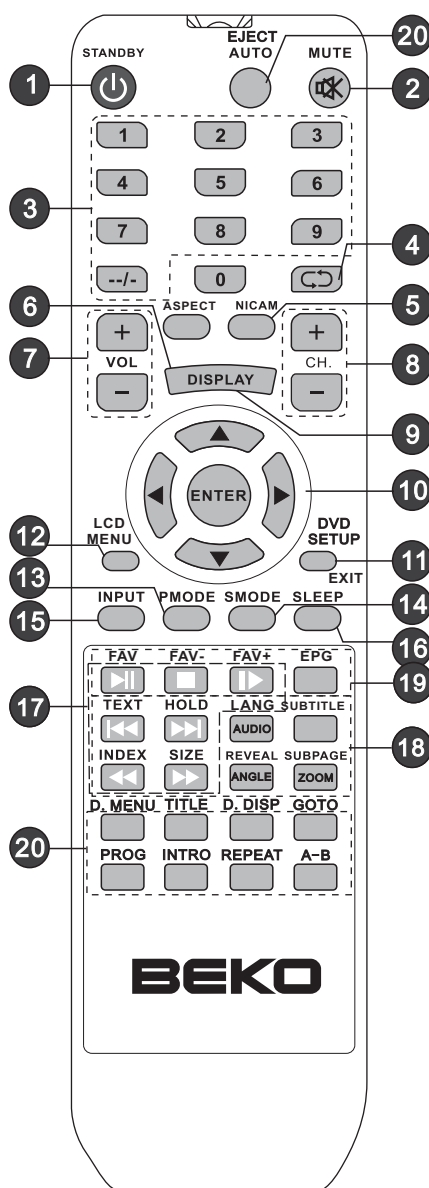

Remote Control

18 TEXT, HOLD, LANG/AUDIO, SUBTITLE, INDEX, SIZE, REVEAL/ANGLE, SUBPAGE/ZOOM

TEXT: Switch to Teletext with text mode.

HOLD: Toggle hold on or off for current display page.

LANG/AUDIO: To show the list of audio languages available for the current channel. Just in DVB mode/Select AUDIO mode (in DVD mode).

SUBTITLE: To switch the dialogue at the bottom of the screen.

INDEX: Refer to index page.

SIZE: Change display size.

REVEAL/ANGLE: Reveal/hidden the hidden words. /No use.

SUBPAGE/ZOOM: Sub coded page access. /Enlarge or reduces the main picture size (in DVD mode).

19 FAV, FAV-/FAV+, EPG

FAV: Press to display FAV menu.

FAV-/FAV+: Source decrease fav channel.

EPG: Press to show the Electronic Program Guide menu.

20 D. MENU, TITLE, D. DISP, GOTO, PROG, INTRO, REPEAT, A-B

D. MENU: Bring up the DVD menu to the screen.

TITLE: Brings up the DVD menu to the screen.

D. DISP: Display the DVD's information.

GOTO: Goto the files/time period that you want to play.

PROG: Change the display effect/edit the playing order.

 
INTRO: No use.

REPEAT: Select repeat mode.

A-B: Repeat from A to B.

21 AUTO/EJECT

Auto adjust (PC mode)/DVD open.

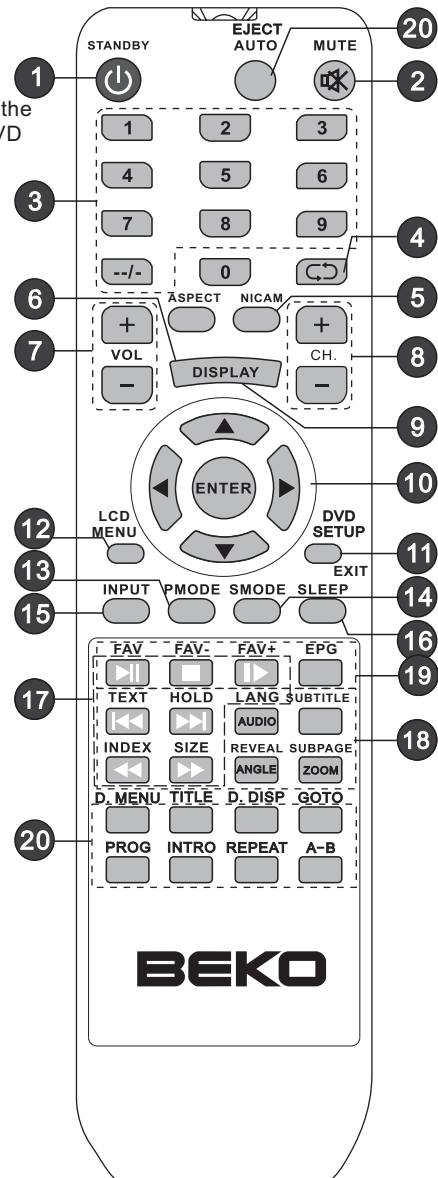


Installing the batteries in your remote control

- 1** Pull the tab of the back cover and pull up on the cover to open the battery compartment of the remote control.



 - 2** Insert two AAA size batteries. Make sure to match the (+) and (-) ends of the batteries with the (+) and (-) ends indicated in the battery compartment.

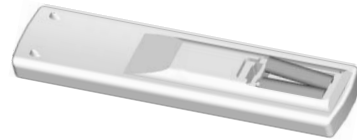

- 3** Align the lower tabs of the back cover to the remote control and snap the cover into place.

 


Note :

Do not use caustic cleaners(porcelain, stainless steel, toilet, or oven cleaner, etc...). You may cause damage to your remote control.

Effective range


Your remote control can be activated from up to the TV 5m away, if pointed directly in front of the device.

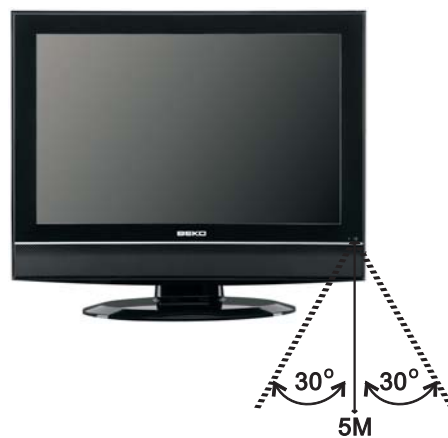

Using the Features

Watching your TV

 If the TV does not display any picture, please check all the connections.

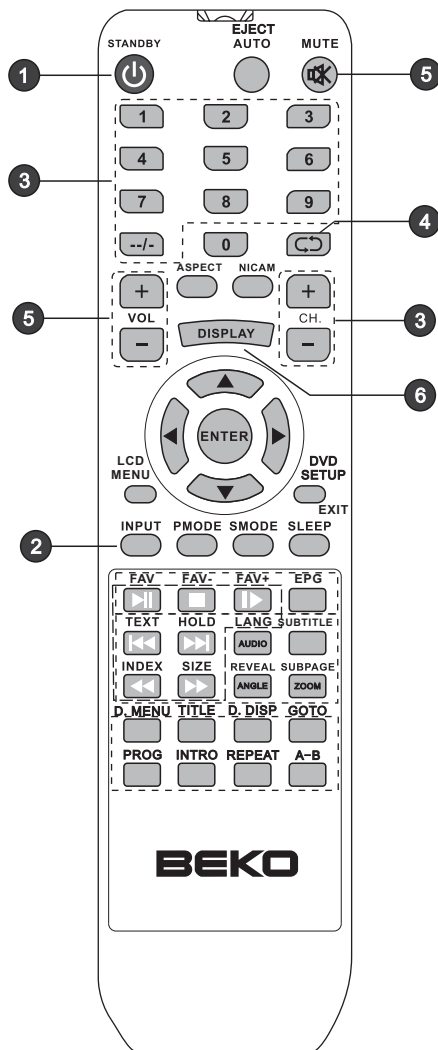

- 1** Press the **POWER** button to turn your TV on.
- 2** Press the **INPUT** button to enter TV mode.
- 3** Press the **CH +/-** button to change channel number, or use the **0-9 & +/-** buttons to select a channel. The one/two digit numbers can be set by pressing **+/-** button.
- 4** Press the **↔** button to alternate back and forth between the current and previous channel.
- 5** Press the **VOL +/-** button to adjust the volume. Press the **MUTE** button to turn the sound off. Press again to turn the sound on.
- 6** Press the **DISPLAY** button to display the information such as the channel and channel label.

Note: Select the menu language before operating the TV (see page 15, **LANGUAGE**).

Wide-Screen Mode

Wide-Screen mode allows you watch the broadcasts with various picture format in wide screen mode. Press the **ASPECT** button repeatedly to toggle through the following wide mode settings.



16:9

When watching 4:3 image, the original image will stretch horizontally to a 16:9 image to fill the screen.



14:9

You can enjoy the picture format of 14:9 or general TV program with the 14:9 mode.



Zoom1

 
The original image will extend the 1.25:1 image to fill the screen.



4:3

When watching 4:3 image, the original image will be unchanged and there will be vertical bars on the side of the screen.

Press the **ASPECT** button to select repeatedly modes settings as follows:



Note: You can only select 4:3 and 16:9 (Wide) in RGB[PC], HDMI mode only. You can only select 4:3, 16:9 (Wide) and Zoom in RGB[DTV], HDMI[DTV], Component [DTV] mode only.

First Time Installation



If this is the first time you open the TV and there is no programs in the TV memory, the first time installation menu will appear in the picture.

Country

 
Press ▲/▼ button and then use ◀/▶ to select the country.

Language

Press ▲/▼ button and then use ◀/▶ to select the OSD language.



After setting the items, select OK to finish the first time installation, or select Cancel to exit this menu.

Press **OK** :

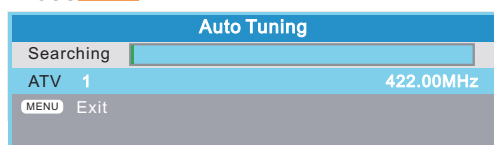


You can press LCD-MENU button to stop auto tuning and close the OSD menu.

  You can press LCD-MENU button to stop auto tuning and close the OSD menu. Begin auto tuning in DTV channel.

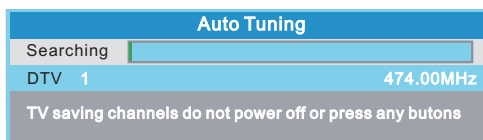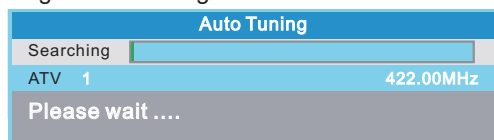


 If there is no program after auto tuning, the suggestion will appear on the screen.

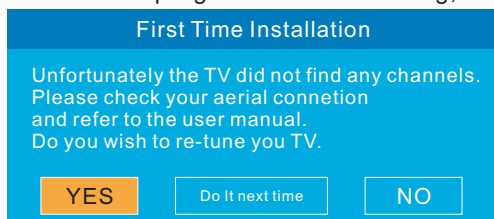

If you cancelled the first time installation, it will remind you whether to set the first time installation next time

 Press **Cancel** :

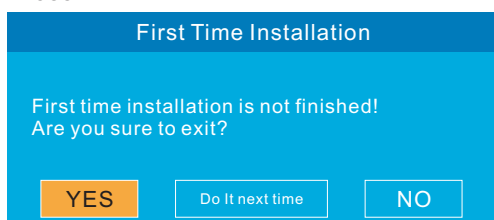

PICTURE menu options

Press **MENU** button on the front panel or **LCD-MENU** on the remote control to display the main menu.



1. Press ◀/▶ button to select **PICTURE** in the main menu
2. Press ▲/▼ button to select the option that you want to adjust in the **PICTURE** menu.
3. Press ◀/▶ button to adjust.
4. When you are satisfied with your adjustment, press the **LCD-MENU** button to return the previous menu or press the **EXIT** button to exit the main menu.

Picture Mode

Select picture mode in **PICTURE** menu. (Available picture mode: Standard, Movie, Sport, Mild, Game.) If you change the value of Contrast, Brightness, Colour, Tint, Sharpness or Colour temperature on the picture menu, the picture mode will be changed to "Personal" automatically. You may select the picture mode directly by pressing **PMOD** button.

TIPS: You can press PMOD button on the remote control to select the **Picture Mode** directly.

Contrast

Press ▲/▼ button and then use ◀/▶ to adjust the contrast of the picture.



After adjusting the value you want, press **LCD-MENU** button to return to the preview MENU.

Brightness

Press ▲/▼ button and then use ◀/▶ to adjust the brightness of the picture.

Colour

Press ▲/▼ button and then use ◀/▶ to adjust the colour saturation.

NOTE: this option is invalid in PC mode, and it will be shown in gray

Tint

Press ▲/▼ button and then use ◀/▶ to adjust the tone of colour when your system is in NTSC.

Sharpness

Press ◀/▶ to select the sharpness mode of your TV. (Available Sharpness Mode: Normal, Sharp, Sharpest, Softest, Soft.)

 
Colour temperature

Select an optimum colour temperature mode to suit your eyes for viewing among Normal, Warm and Cold.

NOTE: This option is available only in PC mode.

DNR (Digital Noise Reduction)

If the broadcast signal received is weak, you can select the DNR option to reduce the video noise level between Off, Low, Mid and High.

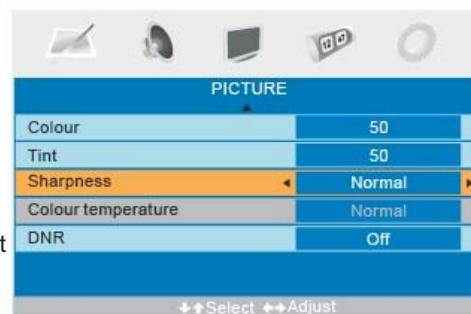

SOUND menu options

Press **MENU** button on the front panel or **LCD-MENU** on the remote control to display the main menu.



1. Press ◀/▶ button to select **SOUND** in the main menu
2. Press ▲/▼ button to select the option that you want to adjust in the **SOUND** menu.
3. Press ◀/▶ button to adjust.
4. When you are satisfied with your adjustment, press the **LCD-MENU** button to return the previous menu or press the **EXIT** button to exit the main menu.

Volume

Press ▲/▼ button and then use ◀/▶ to adjust the sound level.



After adjusting the value you want, press **LCD-MENU** button to return to the previous MENU.

Sound Mode

Select Sound Mode in **SOUND** menu. (Available sound mode: Personal, Voice, Music, Theatre.)

If you change the value of Bass and Treble on the Sound menu, the sound mode will be changed to "Personal" automatically.

You may select the sound mode directly by pressing **S.MODE** button.

TIPS: You can press **S.MODE** button on the remote control to select the Sound Mode directly.

Bass

Press ▲/▼ button and then use ◀/▶ to increase or decrease the level of the lower-pitched sounds.

Treble

Press ▲/▼ button and then use ◀/▶ to increase or decrease the level of the higher-pitched sounds.

Treble

Press ▲/▼ button and then use ◀/▶ to increase or decrease the level of the audio output between left and right speakers.

SETUP menu options

Press **MENU** button on the front panel or **LCD-MENU** on the remote control to display the main menu.

NOTE: **SETUP** menus are different for different input sources, if the input source is selected **HDMI/VGA** and there are no relative input signal, **SETUP** menu will be unavailable.

SETUP menu of TV input:



1. Press ◀/▶ button to select **SETUP** in the main menu
2. Press ▲/▼ button to select the option that you want to adjust in the **SETUP** menu.
3. Press ◀/▶ button to adjust.
4. When you are satisfied with your adjustment, press the **LCD-MENU** button to return the previous menu or press the **EXIT** button to exit the main menu.

 
Country

This option allows you to select the country.


Auto Tuning

This option allows you to tune the channels that can be received automatically.

Note: Before you perform Auto Tuning, you must choose the country where you are by selecting Country option.

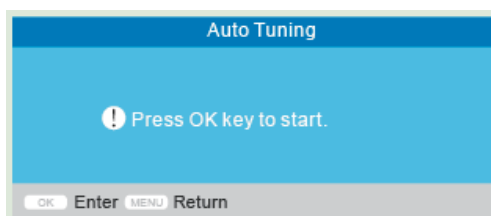

Press **OK** key to start.

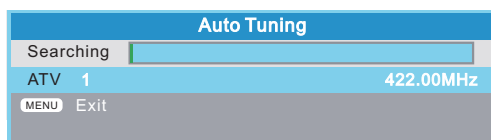 


You can press **LCD-MENU** button to stop auto tuning and close the **OSD** menu.

Manual Tuning

This option allows you to perform Manual Tuning.

 NOTE: Before you perform Manual Tuning, you must choose the country where you are by selecting Country option.

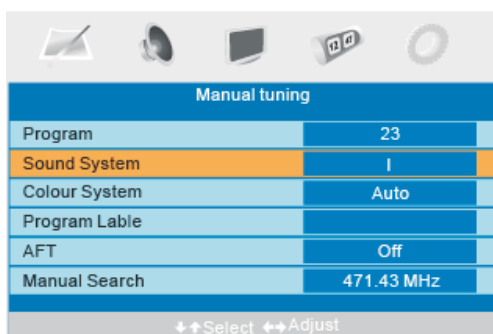

1. Press ◀/▶ button to select **Manual Tuning** in the setup menu
2. Press ▲/▼ button to perform your selection, the menu of **Manual Tuning** will display on the screen.

Program

The current program number. Press ◀/▶ upper or lower program.

Sound System

Press ◀/▶ to select a corresponding sound system, such as I, DK, BG.

Colour System

Press ◀/▶ to select a corresponding colour system, such as Auto, PAL, SECAM.

Program Label

This option allows you to label a channel, you can also relabel the programs have been labeled.

1. Select a channel you want to be labeled.
2. Press ◀/▶ to select **Program Labeled** in the **SETUP** menu.
3. Press ▲/▼ to perform your selection, the menu of **Program Label** will display as below.



4. Press the numeric buttons to input the numbers directly or press ▲/▼ to select the letters.
5. Press ◀/▶ to move the cursor.
6. Press **ENTER, LCD-MENU** or **EXIT** button to confirm and return to previous menu.

AFT (Auto Fine Tune)

Due to weak signals or a wrong antenna configuration, some of the channels may not be tuned to the best reception condition. AFT function allows you to fine tune channel selected (the frequency of channel is around the value in **Manual Search** option).

Manual Search



This option has two functions:

1. Set the frequency of channel for AFT option.
2. Press ▶ button for 3+ seconds and it will start auto tuning from this frequency.

Program Edit

This function allows you to sort the TV programs according to your preferences, as following:

 


1. Press ▲/▼ to select **Program Edit** in the **SETUP** menu.
2. Press ◀/▶ to enter into the sub menu, a channel list will display.
3. Press ▲/▼ to select the channel in the list which you would like to sort.
4. Press ▶ to perform your selection.
5. Press ▲/▼ to select the location you would like to place the channel.
6. Press ◀ to perform your selection.
7. Press **LCD-MENU** to return to the previous menu or press **EXIT** to exit.

● Favorite: Press green button on remote control to select the favourite programs.



Press **FAV** button to open the **Favorite List**, you can open your favourite programs then Press ▲/▼ to select the channel you want to watch.

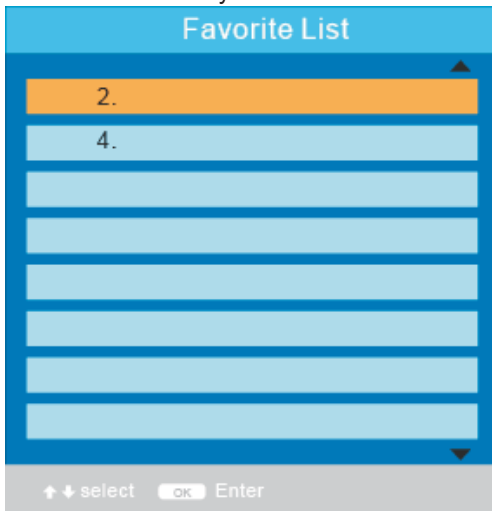

● Skip: Press yellow button on remote control to select which programs you want to skip. Press yellow button again this program will unlock.



● Favorite: Press blue button on remote control to lock the programs. Press blue button again this program will not be skipped.



ATV Menu

SETUP menu of **VGA** input(for setting the PC picture position):

 


SETUP menu of **HDMI** input(for setting the HDMI picture position):



Timer menu options

Press **MENU** button on the front panel or **LCD-MENU** on the remote control to display the main menu.

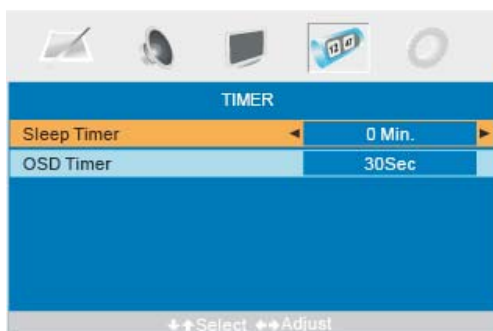

1. Press ◀/▶ button to select **TIMER** in the main menu
2. Press ▲/▼ button to select the option that you want to adjust in the **TIMER** menu.
3. Press ◀/▶ button to adjust.
4. When you are satisfied with your adjustment, press the **LCD-MENU** button to return the previous menu or press the **EXIT** button to exit the main menu.

Sleep Timer

 
Select the sleep time to put automatically the TV in standby mode. Timer can be selected as 0min, 15min, 30min, 45min, 60min, 75min, 90min, 105min, 120min. Also you can select the sleep time by pressing **SLEEP** button repeatedly.

OSD Timer

You can select the time when the OSD display on the screen such as: 5sec, 10sec, 15sec, 20sec, 25sec, 30sec.

Function menu options

Press **MENU** button on the front panel or **LCD-MENU** on the remote control to display the main menu.

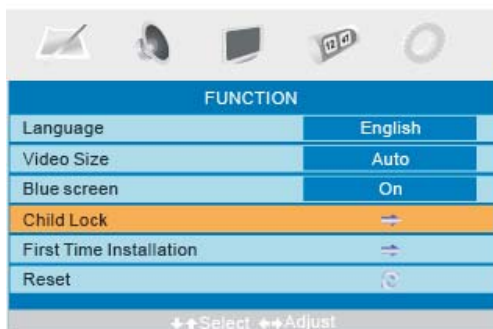

1. Press ◀/▶ button to select **FUNCTION** in the main menu
2. Press ▲/▼ button to select the option that you want to adjust in the **FUNCTION** menu.
3. Press ◀/▶ button to adjust.
4. When you are satisfied with your adjustment, press the **LCD-MENU** button to return the previous menu or press the **EXIT** button to exit the main menu.

Language

Press ◀/▶ to select the OSD language.

Video Size

This option allows you to select the screen display mode which best corresponds to your viewing requirements.

NOTE: The available aspect mode may be different in different input signal.

Blue Screen

This option allows you to select the blue background on or off. If on, the screen background will turn blue very weak or no signal condition.

ATV Menu

 
Child Lock

Press **ENTER** or ► button to set the child lock.

You need to enter the PIN code if the **Child Lock** is set "on", and the default PIN code is empty, you can press **ENTER** button directly to enter.



TIPS: The superuser's (administrator's) password is 4711.

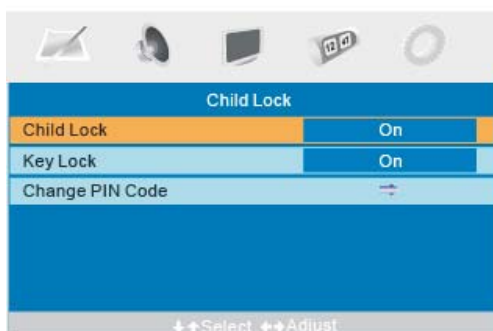

Child Lock

 
Press **ENTER** or ► button to set the child lock.

Key Lock

Press **ENTER** or ► button to set the key lock.

Change PIN Code

Press **ENTER** or ► button to set the Change PIN Code.

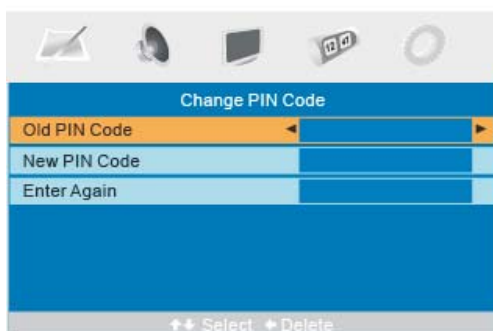

Old PIN Code

Press 0~9 buttons to enter the correct old PIN code, you can not change the PIN code if you entered a wrong PIN code.

New PIN Code

Press 0~9 buttons to enter the new PIN code you want.

Enter Again

Press 0~9 buttons to enter the PIN code you entered in the New PIN Code menu again to confirm the new PIN code.

First Time Installation

 
Press ► button to open the First Time Installation menu, and the operation of this menu is in page 13.

Reset

Press **ENTER** or ► button to reset the TV to the factory default.


Channel List options

Press ENTER button to open the Channel List, then press ▲/▼ to select the channel you want to watch.

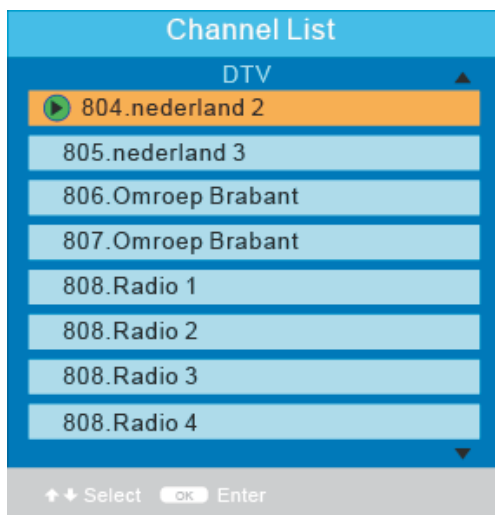

Favorite List options

 
Press FAV button open the Favorite List, then press ▲/▼ to select the channel you want to watch.

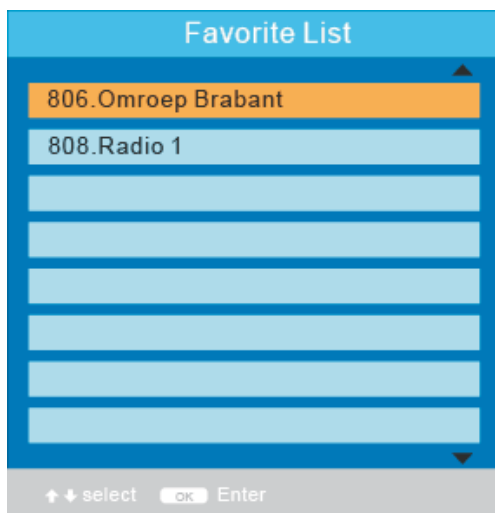

Channel Search options



 1. Press ◀/▶ button to select **SETUP** in the main menu
2. Press ▲/▼ button to select your option what you want to adjust in the **SETUP** menu.
3. Press ◀/▶ button to adjust.
4. When you are satisfied with your adjustment, press the **LCD-MENU** button to return the previous menu or press the **EXIT** button to exit the main menu.

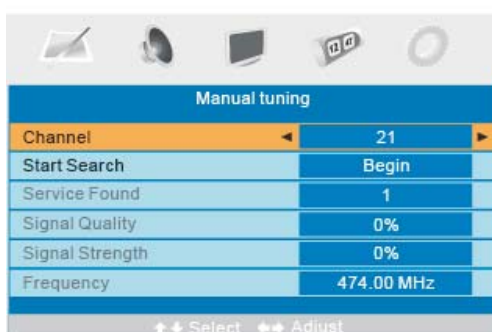

Press ▲/▼ button to select Manual Search, Press ENTER or ▶ button to set the Manual Tuning.

Channel

The current channel number. Press ◀/▶ to select the upper or lower channel, Press 0~9 to select the channel directly.

Start Search

To select whether to start searching in begin/searching/finished.

Service Found

The services be found.

Signal Quality

The signal quality of current channel.

Signal Strength

 
The signal strength of current channel.

Frequency

The frequency of current channel.


Program Edit

This function allows you to edit the DTV programs according to your preferences, as following:

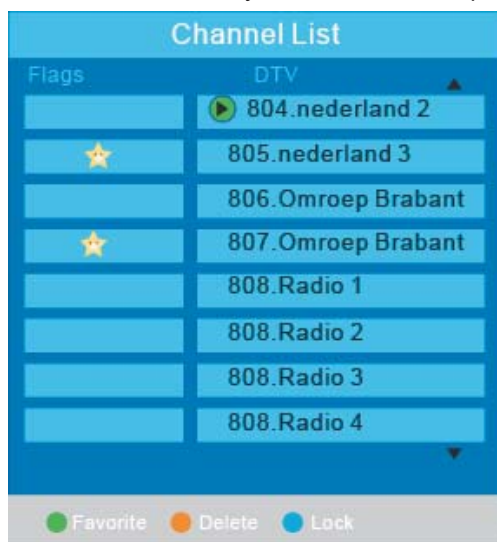

Common Interface

 If you have inserted the CI card to the TV, you can see the information of the it.

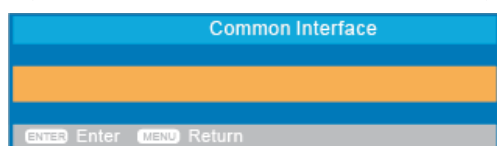

EPG Menu

EPG(Electronic Programme Guide) options

Use EPG button on the remote control to display the EPG menu directly as below:



Press ◀/▶/◀/▶ to navigate the menu.

Press **EPG** button again to exit EPG.

Press **yellow/blue** button to select advance day.

Press **OK** button to set the reminder function.

Press ◀/▶/◀/▶ to select the program you want to televise. Press OK button. When this program begins to play, you will be reminded.

 


DVD SETUP Menu

1. Input mode: DVD.
2. Press **DVD-SETUP** key, show the main menu.
3. Press ◀/▶ to chose items that are going to be set up. Then pres ▲/▼ to enter the setup menu.
4. Press ▲/▼ to move the highlight to the items that is to be setup. Press **ENTER** for confirmation or press ◀/▶ to the setup menu.
5. Press ▲/▼ to adjust items.
6. Press ▲/▼ to **EXIT SETUP**, then press **ENTER** or press **DVD-SETUP** key to exit setup menu.

Notice: *The system automatically change to the pause mode after enter the setup menu.*

General

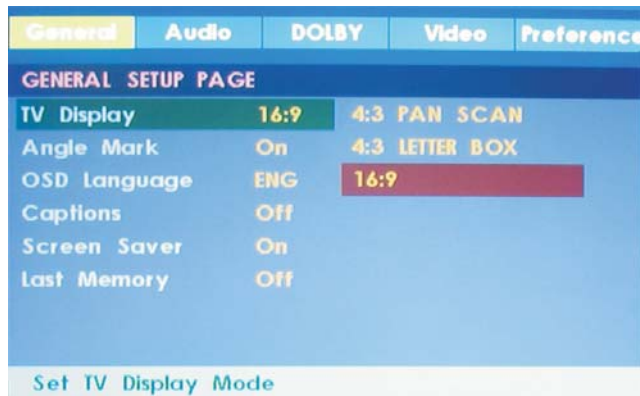

TV Display: Set TV Display mode.

Angle Mark: Set Angle Mark.

OSD Language: Set OSD Language.

Captions: Captions.

Screen Saver: Screen Saver.

Last Memory: Set Last Memory.

Audio

 


Downmix: Set Downmix mode.

DOLBY



DYNAMIC: Screen display as following.

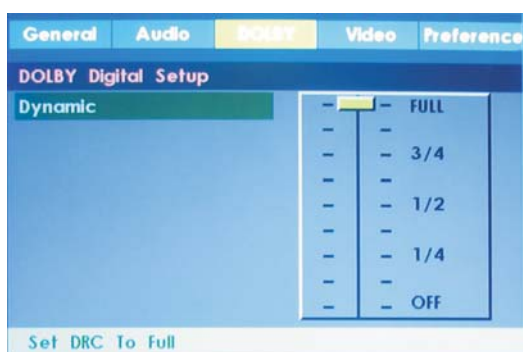

Video



Sharpness: Adjust the sharpness of the picture.

Brightness: Adjust the Brightness of the picture.

Contrast: Adjust the Contrast of the picture.

Preference



Audio: Set Audio language.

Subtitle: Set Subtitle language.

Disc: Set Disc language.

Parental: Set Parental control.

Password: Change Password.

Default: Load factory setting.

SPECIFICATIONS

Panel System	19 inch LCD panel	22 inch LCD panel
Display Resolution	1440(H)×900(V)	1680(H)×1050(V)
Television System	PAL I,D/K, B/G SECAM D/K, B/G	
Inputs/Output		
HDMI input	1	1
VGA input	1	1
SCART input	1	1
S-VIDEO input	1	1
CVBS input/AUDIO(L/R)	1	1
PC AUDIO	1	1
Earphone out	1	1
CI slot	1	1
OSD language	English, French, Spanish, German, Italian, Portuguese	
Speaker Out	2×3W	
Power supply	DC 12V	
Power Waste	<48W	<60W

GUARANTEE

1 Your Television Guarantee

Your new television is guaranteed against the cost of breakdown repairs for twelve months from the date of the original purchase.

1.1 What is Covered?

- All repairs necessary as a result of faulty materials, defective components or manufacturing defect.
- The cost of all functional replacement parts, excluding remote control batteries.
- The labour costs of an approved repairer to carry out the repair.
- You may be offered a replacement instead of repair under guarantee. Your dealer will advise you.

1.2 What is Not Covered?

- Transit or delivery damage.
- Accidental damage.
- Misuse, or abuse.
- Cabinet or appearance parts, including knobs and flaps.
- Remote control batteries.
- Repairs or replacements required a result of unauthorised repairs or installation that fails to meet the requirements contained in the user instruction book.
- Repairs or replacements to product installed or used on commercial or non-household premises.

1.3 Important Notes

- The product is guaranteed for domestic household use only.
- The guarantee will be void if the product is installed or used in commercial or non-household premises.
- The product must be correctly installed and operated in accordance with the instructions contained within the Operating Instructions Booklet provided with the product.
- The guarantee is given only within the boundaries of the United Kingdom and the Republic of Ireland.
- The guarantee is not transferable if the product is resold.
- Beko Plc disclaims any liability for incidental or consequential damages.
- The guarantee does not in anyway diminish your statutory or legal rights.

BEKO^{Plc}

Beko House, Caxton Way, Watford, Herts, WD18 8UF, Tel: 0845 600 4911

Website: www.beko.co.uk

GUARANTEE



HOW TO OBTAIN SERVICE

Congratulations on your choice of a Beko colour television. Your new television has been designed and manufactured to the highest quality standards to give you many years of use. To get the best out of it, please take a few moments to read the instruction book.

Your television is supplied with a full 12 months guarantee, covering parts and labour. Should you require service under guarantee, simply call the number below (**see note for small screen sets).

0845 600 4911

Our service receptionist will ask you for your product model number, your retailer's name, and the date of purchase when you call. It will assist you if you complete the box at the bottom of this page when you take delivery of your television so that the information is readily available should you need it. If it is necessary for an engineer to visit your home he will normally be there within 48hrs of receipt of your call (excluding Bank Holidays) or at your earliest convenience.

Before telephoning for service please check the trouble shooting guide in the instruction book as often minor problems are easily identified and resolved by following the instructions contained there in. Service visits where there is no fault with the product could incur a charge even through the product is under guarantee.

Service is also available on the above number after the guarantee period has expired. The cost of any repairs outside of the guarantee period is payable to the engineer at the time of visit.

Please complete the box below for ease of reference later.

Model Number _____ Serial Number _____
Date of Purchase _____ Place of Purchase _____

Please keep your purchase receipt. The engineer will need to see it should you require service under the 12-month Guarantee.

****Special Note:** In home repair service is not available on models with a screen size of 21" or under. You should contact your retailer for advice and assistance on these models.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>