

BKK 2105

Kettle

User Manual



BEKO

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.


Please read this user manual first!


Dear Customer,

Thank you for preferring a Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Explanation of symbols

Throughout this user manual the following symbols are used:

	Important information or useful hints about usage.
--	--

	Warning for hazardous situations with regard to life and property.
--	--



This product has been produced in environmentally friendly, modern facilities



CONTENTS

1 Important instructions for safety and environment 4-10

- 1.1 General safety 4
- 1.2 Compliance with WEEE regulation and disposal of the waste product . 10
- 1.3 Package information 10

2 Your kettle 11

- 2.1 Overview 11
- 2.1.1 Controls and parts 11
- 2.1.2 Technical data 11

3 Operation 12-13

- 3.1 Preparation 12
- 3.2 Operation 12

4 Cleaning and care 14-15

- 4.1 Cleaning 14
- 4.2 Descaling 14
- 4.3 Storage 15

1.1 General safety

- Do not use the appliance outdoors or in the bathroom.
- Operate the appliance with its original base. Do not use the base for any other purpose.
- Do not use the appliance with damp or wet hands.
- Before using of the appliance for first time, clean all parts which come into contact with water carefully. Please see details in the “Cleaning and Care” section.
- Prevent damage to the power cord by not squeezing, bending or rubbing it on sharp edges. Keep the cord away from hot surfaces and open flames.
- Never use the appliance in or near to combustible, inflammable places and materials.
- Operate the appliance with delivered parts only.
- Operate the appliance with its original base. Do not use the base for any other purpose.
- Always use the appliance on a stable, flat, clean and dry surface.

1

Important instructions for safety and environment

- Hold the appliance by the handle only. There is a danger of burns. Avoid contact with hot surfaces as well as with the emitting steam.
- Position the lid so that the hot steam is directed away from you.
- Do not open the lid while the water is boiling. Be careful while you are opening the lid after the water has boiled. The steam which comes out of the kettle is very hot.
- Make sure that when using the kettle, the lid always remains closed properly.
- Never fill the kettle above the maximum level indicator. If it is overfilled, then boiling water may splash out.
- Do not fill the kettle below the minimum level indicator.
- Never operate the appliance without any water inside it.
- Do not fill the kettle when it is fitted on its base.

1

Important instructions for safety and environment

- Our BEKO Household Appliances meet applicable safety standards, thus if the appliance or power cord is damaged, it must be repaired or replaced by the dealer, a service centre or a similarly qualified and authorized service person to avoid any dangers. Faulty or unqualified repair work may cause danger and risks to the user.
- Make sure that that there is no danger that the power cord could be accidentally pulled or that someone could trip over it when the appliance is in use.
- Check if the mains voltage on the rating label corresponds to your local mains supply. The only way to disconnect the appliance from the mains is to pull out the plug.
- Do not use the appliance with damp or wet hands.
- For additional protection, this device should be connected to a household faulty current protection switch with no more than 30 mA.

1

Important instructions for safety and environment

- Do not immerse the appliance, base, power cord or power plug in water or in other liquids and do not clean parts in dishwasher.
- Disconnect the power plug after using the appliance, before cleaning the appliance, before leaving the room or if a fault occurs. Do not disconnect the plug by pulling on the cord.
- Use a grounded outlet.
- Prevent damage to the power cord by not squeezing, bending or rubbing it on sharp edges. Keep the cord away from hot surfaces and open flames.
- Do not use an extension cord with the appliance.
- Never use the appliance if the power cord or the appliance is damaged.
- Dry the appliance before connecting it to mains supply.
- Do not use the appliance for anything other than its intended use. The kettle is designed for boiling water. Do not use the kettle to heat any other liquids or tinned, jarred, bottled food.

1

Important instructions for safety and environment

- This appliance is intended to be used in household only. It is not designed for professional use in:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels, and other residential type environment
 - bed and breakfast type environment.
- Do not leave the appliance unattended as long as it is in use. Extreme caution is advised when the appliance is being used near children and people with limited physical, sensory or mental capabilities.
- Keep all packaging materials away from children.
- Always keep the appliance and its cord out of reach of children aged less than 8 years.

1

Important instructions for safety and environment

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

1

Important instructions for safety and environment

1.2 Compliance with WEEE regulation and disposal of the waste product



This product does not contain harmful and forbidden materials described in the “Directive on the Restriction of the Use of Certain Hazardous Substances in Waste Electrical and Electronic Equipment” (WEEE) issued by the T.R. Ministry of Environment and Urbanization. Complies with the WEEE Directive.

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose of the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Please consult your local authorities to learn the nearest collection point. Help protect the environment and natural resources by recycling used products. For children’s safety, cut the power cable and break the locking mechanism of the loading door so that it will be non-functional before disposing of the product.

1.3 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

2 Your kettle

2.1 Overview



2.1.1 Controls and parts

1. Filter (inside)
2. Lid
3. Lid release button
4. On / Off switch
5. Handle
6. Water level indicator
7. Base
8. Power cord storage

2.1.2 Technical data



This product conforms to the European directives 2004/108/EC, 2006/95/EC, 2009/125/EC and 2011/65/EU.

Power supply : 230 V~, 50 Hz

Power : 2200 W

Technical and design modifications reserved.

All declared values on the product and on the printed leaflets are picked up after laboratory measurements performed according to related standards. These values may differ upon usage and ambient conditions.

3 Operation

3.1 Preparation

1. Before using of the appliance for first time, clean all parts which come into contact with water carefully (See 4.1).
2. Completely roll out the power cord from the power cord storage (8) on the bottom. Pass the power cord through the slot on the base (7).
3. Fill the kettle with water.
4. Set the kettle on its base (7). Make sure that the kettle is sitting in an upright position and that it is sitting on the base correctly and in a stable position.
5. Pour out the hot water and rinse the kettle with water. This will remove any remaining manufacturing residues from the inside of the kettle.
6. Clean kettle well before initial use and discard water of first two boiling cycles.

3.2 Operation

1. Push the lid release button (3) on the kettle to open the lid (2).
 - The lid (2) opens automatically.
2. Fill the water tank with water.



Do not place the kettle on the base (7) while filling it with water.

3. Close the lid (2) until it clicks into place.
4. Place the water tank on the base (7). Make sure that it is sitting in an upright and stable position.
5. Insert the plug into the wall socket.
6. Press down On / Off switch (4).
 - Power on indicator illuminates and heating process begins.



Lid (2) should always be closed during the heating process; otherwise the kettle will not switch off automatically.

3 Operation

- After a few minutes, the water will start to boil. The kettle switches off automatically and On / Off switch (4) moves upwards.



If you want to stop the heating manually, push the On / Off switch (4) upwards. Power on indicator (4) goes off.

- Disconnect the plug from the wall socket.
- Take the kettle from the base (7). Only hold it by the handle (5).



WARNING: Do not open the lid (2) as hot water could splash out. Make sure that no water splashes onto the base (7).

- Pour the water from the spout to the cup or glass you want to use.



Let the kettle cool down between each heating process.

4 Cleaning and care

4.1 Cleaning



WARNING: Never use petrol, solvents or abrasive cleaners, metal objects or hard brushes to clean the appliance.

1. Turn the appliance off and disconnect it from the wall socket.
2. Let the appliance cool down completely.
3. Use a damp soft cloth and a little mild cleanser to clean the exterior of the appliance.
4. The filter (1) can be removed for cleaning purposes. To do this:
5. Press the release downwards and take out the filter (1).
6. Depending on the level of lime build-up, clean the filter (1) with water and a little lemon juice or white vinegar. Use a soft brush.
7. Insert the filter (1) again from above until it clicks into place.



WARNING: Never put the appliance, base (7) or power cord (8) in water or any other liquid.

4.2 Descaling

Descaling extends the life of your kettle. Descaling period depends on the water hardness of your area.

1. Fill the kettle with water, up to three quarters of the maximum level.
2. Add white vinegar or citric acid in the kettle up to the maximum level.
3. Boil the solution (refer to operation section).
4. After the kettle has switched off, unplug the appliance.
5. Leave the solution in the kettle for a few hours.
6. Pour out the solution and rinse the inside thoroughly.
7. Fill the kettle with clean water and boil the water.
8. Empty the kettle and again rinse it with water.

4 Cleaning and care



If there is still some scale, repeat the procedure.



 
You can also use a descaler which is appropriate for utensils. If you use a descaler, please follow the instructions of that descaler.



WARNING: If you do not descale the kettle after a long time you use it, the bottom at the inside of the water tank fully gets covered with scales of lime and the appliance will not work again. In that case, it requires to be repaired by a service centre.

4.3 Storage

- If you do not plan to use the appliance for a long period of time, please store it carefully.
- Make sure the appliance is unplugged and completely dry.
- Wind up the power cord (8) around the power cord storage (8) on the bottom of the base (7).
- Store the appliance in a cool, dry place.
- Make sure the appliance is kept out of the reach of children.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>