

BKK 2132 K

Household Steam Iron

User Manual

BEKO

Read this manual prior to initial operation of the product!

Dear Customer,

We hope that your product, which has been manufactured in modern facilities and passed through a strict quality control procedure, will give you very good results.

We advise you to read through this manual carefully before using your product and keep it for future reference.

The User Manual will help you use your machine in a fast and safe way.

- Read the User Manual before installing and starting your product.
- In particular, follow the instructions related to safety.
- Keep this User Manual within easy reach for future reference.
- Also read all additional documents supplied with this product.

Remember that this User Manual is also applicable for several other models. Differences between models will be identified in the manual.



This product has been produced in environmentally friendly, modern facilities



CONTENTS

1 Safety Warnings **2**

2 Technical Aspects Of Your Machine **3**


3 Hints For Ironing **4-8**

4 Maintenance And Cleaning **9**

1 Safety Warnings

For safety purpose you should read these instructions carefully before using the iron for the first time.

DO'S

 
 
 
 
1. Check the mains voltage stated on the iron.
2. Unwind and straighten the power cord before use.
3. Switch on the iron by turning the Temperature Dial in clockwise direction; pilot light glows.
4. Turn the Temperature Dial to the middle point of 1 dot, 2 dots, 3 dots or maximum setting.
5. Switch off the iron by turning the Temperature Dial in anti-clockwise direction when it is not in use, even for a short period of time. Turn the Temperature Dial to °•Min° position.
6. Disconnect the iron from mains supply outlet when filling or emptying water.
7. Remove the water remained in the water tank.
8. Use the Self-Cleaning function at least once a month.
9. Switch off the steam function by moving the steam control knob to  position when it is not in use, even for a short period of time.
10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

DO NOT'S

1. Do not allow children touch the

- iron or the power cord when ironing.
2. Do not leave the iron unattended when it is connected to a mains supply outlet.
3. Do not use an extension power cord set unless competent authority has approved it.
4. Do not add perfumed, vinegar or other chemical liquids into the water tank; they can damage the iron seriously.
5. Do not immerse the iron in water or any other liquid.
6. Do not use the iron when it is damaged or it works improperly.
7. Do not roll the power cord around the iron for storage until it has cooled down completely.
8. Do not attempt to open the cabinets or dismantle any parts from the iron; there is no serviceable part inside.

2 Technical Aspects Of Your Machine

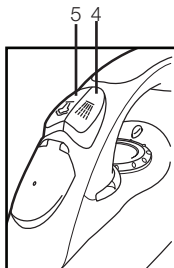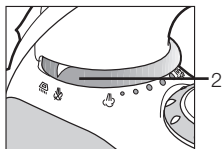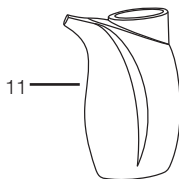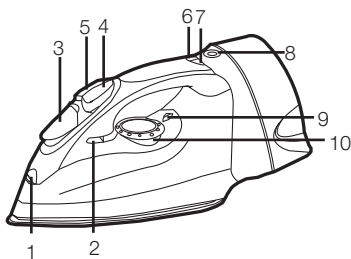

- | | |
|-------------------------------------|-----------------------------|
| 1- Spray Nozzle | 7- Auto-shut off indicator |
| 2- Steam Control/Self-Cleaning Knob | 8- Cord storage Button |
| 3- Water Inlet Cover | 9- Temperature Dial Pointer |
| 4- Spray Button | 10- Temperature Dial |
| 5- Burst Of Steam Button | 11- Filling Beaker |
| 6- Pilot Light | |







Voltage/Frequency	: 220 - 240 V ~ 50/60 Hz
Power	: 1850 - 2200 W
Soleplate	: PTFE Non stick coated
Isolation class	: I


All declared values on the product and on the printed leaflets are picked up after laboratory measurements performed according to related standards. These values may differ upon usage and ambient conditions.

3 Hints For Ironing


1. Sort out the articles to be ironed according to the type of fabric. This will minimize the frequency of temperature adjustment for different garments.
2. Test ironing a small area on the backside or inside the garment if you are unsure about the type of fabric. Start with a low temperature and increase gradually.
3. Wait for about three minutes before ironing heat sensitive fabrics. Temperature adjustment needs certain time to reach the required level no matter it is higher or lower.
4. Delicate fabrics such as silk, wool, velour, etc. are best ironed with an ironing cloth to prevent shine marks.
5. You may need a few times of press to activate the spray, burst and vertically burst function.

Read The Garment Labels and follow the manufacturer's ironing instructions that are often shown by symbols similar to the follows:

Temperature Control Setting		
 	 	 
<ul style="list-style-type: none">. Acetate. Elastsne. Polyamide. Polypropyl-ene	<ul style="list-style-type: none">. Cupro. Polyester. Silk. Triacetate. Viscose. Wool	<ul style="list-style-type: none">. Cotton. Linen

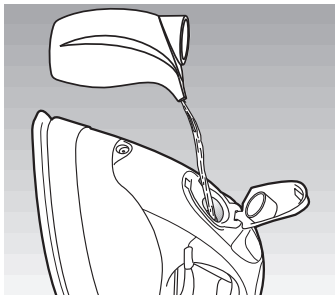 

How To Fill Water

 
1. Disconnect the iron from mains supply outlet.
2. Move the Steam Control/Self-Cleaning Knob to  position.
3. Release the Water Inlet Cover
4. Fill water through the water inlet hole.
5. Fill up to the 'Max' level marked on the side of water tank.

Note:


Do not use chemically descaled water or any other liquids.

First Time Ironing

1. Remove any protective films or stickers from the sole plate and the cabinet.
2. Grasp the cord and slowly pull out to the length you desired (See How to use the Cord storage features)
3. Fill the water tank. (See How To Fill Water)
4. Connect the iron to a suitable mains supply outlet.

5. Turn the Temperature Dial in clockwise direction to maximum position; pilot light glows.
6. Pilot light goes off when the required temperature is reached.
7. Move the Steam Control/Self-Cleaning Knob to  position; steam starts coming out from the holes in the sole plate.
8. Begin first time ironing with an old towel.
9. When the water tank is empty and there is no more steam produced; the preparation work is completed. The iron is now ready for proper use.

 Spraying

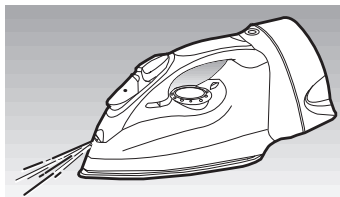

1. This function can be used any time and is not affect any setting.
2. Fill the water tank as described in How To Fill Water.
3. Aim the nozzle to the garment.
4. Press the Spray Button.

Note: It may be necessary to press the spray button a few times to start this function.

Dry Ironing

1. Connect the iron to a suitable mains supply outlet.
2. Turn the Temperature Dial in clockwise direction; select '•' (1

 
dot), '••' (2 dots) or '•••' (3 dots) according to the recommendation of garment label.


3. Pilot light glows indicating the iron is switched on.
4. When the required temperature is reached; pilot light goes off. The iron is ready for use.
5. Move the Temperature Dial in anti-clockwise direction to 'Min'; the iron is switched off.
6. Disconnect the iron from mains supply outlet.
7. When the iron gets cool completely, store it vertically in a safe place

Steam ironing


1. Fill the iron as described in How To Fill Water.
2. Connect the iron to a suitable mains supply outlet.
3. Turn the Temperature Dial in clockwise direction to '•••' (3 dots) setting. (For optimum steam quality, do not use 1 dot or 2 dots setting for steam ironing)
4. Pilot light glows indicating the iron is switched on.
5. Pilot light goes off when the required temperature is reached.
6. The iron is ready for use.
7. Move the Variable Steam Control/Self-Cleaning Knob to give the desired amount of steam.
8. Turn the Temperature Dial in anti-clockwise direction to 'Min'; the iron is switched off.
9. Disconnect the iron from mains supply outlet.
10. When the iron gets cool completely, store it

vertically in a safe place.

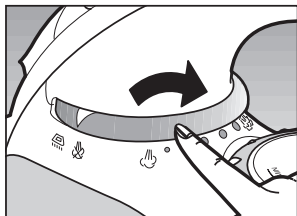

Note: Set the Steam Control Knob to  position after use.

 Burst of Steam

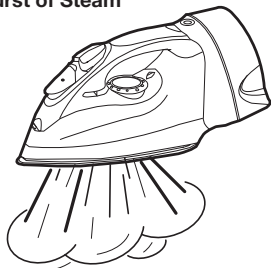


This function provides extra amount of steam to remove stubborn wrinkles.

1. Fill the iron as described in the section of How To Fill Water.
2. Turn the Temperature Dial to '•••' (3 dots) setting.
3. Pilot light glows indicating the iron is switched on.
4. Pilot light goes off when the required temperature is reached.
5. The iron is ready for use.
6. Press the Burst Of Steam Button.
7. Steam will shoot from the holes of the soleplate into the fabric being

ironed and removing the wrinkles.
8. For stubborn wrinkles, wait a few seconds before pressing the Burst of Steam Button again. Most wrinkles can be removed within three presses.

Note: It may be necessary to press the burst of steam button a few times to start this function. For optimum steam quality, do not operate the Burst Of Steam more than three times in succession.

 Burst of Steam in Vertical Position

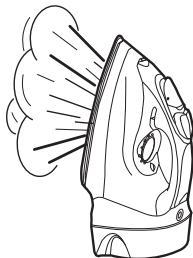

Warning: Do not apply steam on any clothes or fabrics that are being worn by human or pets. Temperature of steam is very high.

This function provides extra amount of steam to remove wrinkles on delicate garments in hanging position, hanging curtains, or other hanging fabrics.

1. Fill the iron as described in the section of How To Fill Water.
2. Turn the Temperature Dial to 'Max' setting.
3. Pilot light glows indicating the iron is switch on.

4. Pilot light goes off when the required temperature is reached. The iron is now ready for use.
5. Hold the iron between 15 and 30 centimeters away from the garment.
6. Press the Burst of Steam Button once.
7. Steam will penetrate into the garment removing the wrinkles.
8. For Stubborn wrinkles, wait a few seconds before pressing the Burst Of Steam Button again.
9. Most wrinkles can be removed within three presses.

Note: It may be necessary to press the burst of steam button a few times to start this function. For optimum steam quality, do not operate the Burst Of Steam more than three times in succession.

 
Build-in Anti-scale System


The build-in anti-scale cartridge is designed to reduce the build-up of limescale which occurs during steam ironing. This will prolong the working life of your iron.

Note: The anti-scale cartridge will not completely stop the natural process of limescale build-up.

Self-Cleaning

This function removes the scales and minerals built up in the Steam Chamber. The iron will remain in the best condition if this function is performed at least once a month or more regularly depending on the hardness of the water used.

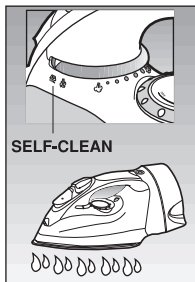


1. Fill the iron as described in How To Fill Water; fill the water tank up to half.
2. Place the iron on a surface in upright standing position.
3. Connect to a mains supply outlet.
4. Turn the Temperature Dial in clockwise direction to 'Max' setting.
5. Pilot light glows indicating the iron is switched on.
6. Pilot light goes off when the required temperature is reached.
7. Wait for one more cycle; pilot light glows and goes off.
8. Turn the Temperature Dial in anti-clockwise direction to 'Min'.
9. Disconnect the iron from mains supply outlet.
10. Hold the iron horizontally over a sink.
11. Pull and hold the Steam Control/Self-Cleaning Knob to  (Descaling) position.
12. Steam and boiling hot water will drain from the holes on the soleplate washing away the scales and minerals that have built up inside the Steam Chamber.
13. Gently move the iron back and

- forth until the water tank is empty.
- When Self-Cleaning is complete, release the Steam Control/Self-Cleaning Knob.
 - Rest your steam iron back on its heel rest and allow to fully cool down.
 - Wipe the soleplate with a cold damp cloth.

Caution: Keep skin/body away from the hot water.

 Anti-Drip feature

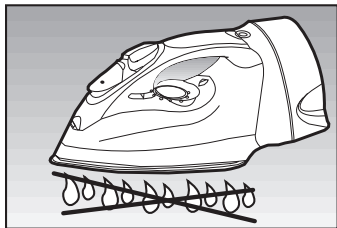

- Anti-drip system, which is designed to prevent water escaping from the soleplate when the iron is too cold automatically.
- During use, the anti drip system may emit a loud clicking sound, particularly during heat-up or whilst cooling down. This is perfectly normal and indicates that the system is functioning correctly.

Automatic cord reel Features:

This iron have equipped with Cord storage feature for convenient storage of the power cord. Grasp the cord and slowly pull out the length that you need for pressing. When

you need to store the iron, grasp the plug with one hand and push the button on the top cord storage device to recoil the cord. Be careful not let the snap back towards your body

Auto Shut-off Features:

The Auto shut-off feature will operate automatically when the iron is unattended and it is connected to a mains supply outlet.

Auto shut-off in horizontal

- The iron will switch off automatically at 30 seconds if the iron is immobile in the ironing position (horizontal).
- Auto shut-off indicator light blinks, indicating the iron is Auto-Off mode
- Simply moving the iron, the iron will back on.

 
Auto-shut off in vertical

- The iron will switch off automatically between 5 to 10 minutes if the iron is left on its heel rest position (vertically).
- Auto shut-off indicator light blinks, indicating the iron is Auto-Off mode
- Simply moving the iron, the iron will back on.

Note: The iron will take about 60 seconds to reach its previous soleplate temperature.


4 Maintenance And Cleaning


Draining The Water

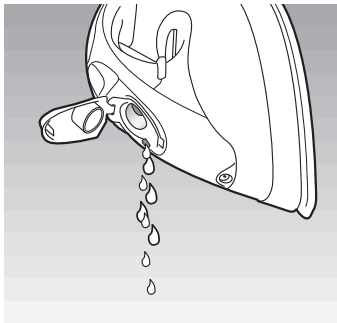

to remove the deposits on the sole plate.

Never use any abrasive, vinegar or descaling agents to clean the iron.

1. Move the Steam Control/Self-Cleaning Knob to  position.
2. Disconnect the iron from the mains supply outlet.
3. Hold the iron upside down and gently shake it to remove any remaining water out of filling hole.
4. When the iron get cool completely, store it vertically in a safe place.

 
Note: Set the Steam Control Knob to  position before storing the iron.

Cleaning The Iron

1. Disconnect the iron from the mains supply outlet.
2. Use a dampened cloth or non-scratching cleaner to remove any deposits on the sole plate or the cabinets.

Note:

Never use sharp or rough objects



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>