

bifinett

KH 1380

Operating instructions



Operating instructions

Technical data

- Mains voltage 230 V - 50 Hz
- Nominal power 1.380 W
- Interior volume 18 litres
- Temperature range 100° C to 250° C

Warning and safety information

Please read the operating instructions carefully before using the device and keep them for future reference. All warnings and safety information should be followed carefully.

Attention: Never try to open the casing of the oven or repair the device yourself if it is defective. This oven does not contain any parts which can be maintained or repaired by the user. Maintenance and repairs may only be carried out by qualified personnel.


Warning!

- Please make sure there are no easily inflammable parts in the vicinity of the oven when it is in use (e.g. tea towel, oven gloves etc.). Never dry fabrics or objects above or in the oven. These items could cause a fire!
- If the oven and / or the mains cable are damaged, do not use the device, have the device repaired by a qualified electrician.
- Do not subject the device to dampness or rain, spray or dripping water. It might catch fire and you may receive an electric shock. Therefore this oven may not be used in the open. In addition, no objects filled with liquid such as vases should be positioned on top of the oven.
- As the casing and glass of the oven get very hot during use, please use an oven glove or similar to open the door of the oven.
- Please allow the oven to cool down before you transport it or use it again.
- Never leave the oven unattended whilst using it.
- Please make sure that the oven is out of the reach of children at all times.

Electricity supply

- When using the oven with the mains, please adhere to the operating instructions and the technical data and instructions on the device.
- Also remove the mains cable from the socket using the plug, do not pull the cable itself.
- Never touch the device, the mains cable and the plug with wet hands as you could receive an electric shock.
- Treat the mains cable carefully, do not bend or squash the cable. In general, the cable should not be positioned on the floor so that it can be trodden on or people can trip over it.
- Do not use an extension cable.
- If your electrical grill and oven is not being used for a longer period of time, please disconnect it from the mains. Even if the device is switched off but the plug is still connected to the mains socket, it is still connected to the electricity supply.

Operating elements

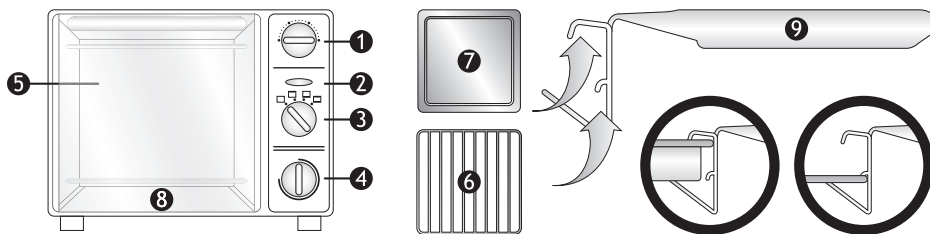

1. Temperature control
2. Control light
3. Function switch
4. Timer
5. Glass door with handle
6. Grill rack
7. Baking tray
8. Crumb collection tray
9. Handle for grill rack and baking tray

Variable temperature control between 100° C and 250° C
Lights up during operation
Selector switch for

- OFF
- Upper heat
- Lower and upper heat
- Lower heat

Set the required baking and grilling times between 0 and 60 min.

Positioning the device

- Position the device on a solid, level, heat resistant surface and ensure that there is sufficient ventilation around the device. The distance between the back of the device and the wall should be a minimum of 10 cm, the space between the top of the device and any shelves or other objects should also be 10 cm and there should be a gap of 5 cm between the sides of the device and any walls or objects. This means that the device may not be positioned in cupboards or similar places.
- When selecting a suitable base for your grill and oven, please note that the feet of the grill can leave marks on the base you have chosen.
- Do not position the device in the immediate vicinity of water, e.g. sinks, washing bowls or in damp cellars.

Starting up the device

1. Unpack your new electrical grill and oven as well as all accessories.
2. Before using the device for the first time, the device and all accessories must be cleaned to remove all packing residues. Simply clean the accessories in hot water with a little washing up liquid and then dry thoroughly.
3. Wipe down the casing of the device with a damp cloth and then dry it carefully.
4. Once the inside and outside of the device are completely dry, plug the mains plug into the wall socket.
5. Now switch the device on without any accessories or food. Leave the door of the device completely open.
6. Set the temperature control (1) to 250° C, and using the function selector switch (3) select upper heat, lower heat or upper and lower heat.
7. Set the timer (4) to 15 minutes.

Note: As the heating elements have been greased slightly, a slight odour may come from the device when it is switched on for the first time. This is perfectly normal and disappears after a short period of time.

8. Once the device has switched off automatically, return the function switch (3) to the OFF setting.
9. Pull the mains plug out of the socket and wait until the device has cooled down. Clean the inside of the device with a damp cloth and dry it again.

Operation

Grilling and baking

1. Remove the grill rack (6) and the baking tray (7) from the oven. If necessary, cover the grill rack with baking paper or brush oil or butter on the baking tray.
2. Place the food you wish to bake or grill on the rack (6) or the baking tray (7) and push it into one of the rails. Please make sure that there is sufficient space between the food to be grilled or cooked and the interior wall and heating elements of the device.

Close the door of the oven whilst cooking.

Important notice on grilling: When grilling using the grill rack (6), the glass door must remain open a little bit. If you close the door it clicks into this position just before it closes completely.

3. Select the temperature required using the temperature selector switch (1.). When you are grilling, always select the highest temperature (250° C).
4. Then, using the function switch (3) select either upper heat (e.g. for browning), lower heat (e.g. for cake) or upper and lower heat (e.g. for pizza).

When grilling, always select upper heat.

5. Set the required cooking / baking time using the timer (4). The maximum period for baking or grilling is 60 minutes. The control light (2) shows that the device is on.

If the cooking / baking time you require is less than 25 minutes, please set the timer to 60 minutes first and then move it back to the required baking / grilling period. If you wish to preheat the oven, add this time to the actual cooking time / baking time. The switch moves in an anti-clockwise direction towards zero.

6. After the set period of time has expired, the device switches off automatically. If you wish to switch the device off before the set time has expired, turn the timer back into the OFF position. A ringing tone can be heard and the control light switches off. **Note:** After the device has switched itself off, the timer still runs for a short time.
7. To remove the grill rack / baking tray (7), always use the handle (9) included in delivery. To remove the grill rack, you must hook the little hook of the handle into the rack from above (see Fig.). To remove the baking tray from the device, you must hook the large hook of the handle to the edge of the baking tray (see Fig.).
8. After using the grill / oven, switch the function switch (3) back to OFF and allow the device to cool down before cleaning it or using it again.

Note: If your grill / oven has reached the temperature you have set, the heating elements / fan switches off occasionally to maintain the set temperature, they turn on again as required.

Cleaning

Attention: Before cleaning the device always remove the mains plug from the socket.

Your new electrical grill and oven has self-cleaning inside walls. Whilst the device is operational, the walls are cleaned automatically.

However, if despite this, the occasional food remains etc. have stuck to the walls, remove them with a slightly damp cloth. If necessary, mild washing up liquid can also be used.

Never use other (domestic) cleaning agents or sharp or pointed objects to remove dirt. You could damage the device and its specially coated interior walls.

 
Never immerse the device into water when cleaning it - you could receive an electric shock!
Before using the device again after you have cleaned it, please make sure that it is completely dry. Always leave the door open after cleaning.

Declaration of conformance

We, Kompernaß Handelsgesellschaft mbH, Burgstr. 21, D-44867 Bochum, Germany, declare this appliance to be in conformance with all applicable international standards, safety requirements and the EC Directives.

No. of appliance/Type: KH 1380

Bochum, 30.11.2002



Hans Kompernaß
- Manager -



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>