



----- Cut here to remove. Do Not Tear! -----

COPPER SPUR UL2 AND UL3 SETUP INSTRUCTIONS

1. Remove contents of stuff sack and lay tent body flat on ground.
2. Assemble the two poles: A hubbed pole and a short, straight pole.
3. Insert the tips of the hubbed pole into the grommets at the four corners of the tent.
CS2: the shorter pole sections from the hub, that form the smaller "v" correspond to the green webbing at the foot (narrower end) of the tent. The larger "v" section corresponds to the black webbing at the head of the tent. **CS3:** the hubbed pole has equal length pole sections so the pole tips may be inserted at either end.
4. Attach the plastic clips on the tent body to the hubbed pole frame that is now standing.
5. Place the straight pole across the top of the ridge pole already set up. This pole has round clear pieces on it that you will slide into the "u" shaped clips above the doors on the tent body.
6. Drape the fly over the tent body, without clipping the buckles yet, matching the green and black webbing straps on the fly with those on the corners of the tent body.
7. Insert the tips of the cross-pole into the webbing pockets located above the doors on the underside of the fly.
8. Clip the buckles of the fly and tent body together.
9. Stake out all corners and guy lines for maximum stability, space and ventilation.

**Separate 6", large diameter pole segment included for emergency field repair.
Slide repair pole over the break to act as a splint.**

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for any of our models, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.

1. Lay the foot print on the ground and stake out.
2. Assemble the hubbed pole and insert pole tips into grommets on foot print. **CS2:** the shorter pole sections from the hub correspond to the green webbing at the foot (narrower end) of the footprint. **CS3:** the hubbed pole has equal length pole sections so the pole tips may be inserted at either end.
3. Drape the fly over the pole frame matching the green webbing on fly and footprint together.
4. Assemble single cross pole and place it across the middle of the hubbed pole, inserting the tips into the webbing pockets on the underside of the fly, above the vestibule doors.
5. Clip buckles of fly and footprint together and cinch tightening straps at corners.
6. The cross pole will align across the hubbed pole frame when you insert the tips into the webbing pockets on the fly and clip all the buckles of the fly to the footprint. When the fly is staked out tightly, the cross pole will be stabilized under the fly.
7. Stake out all corners and guy lines for maximum stability and space.

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- Big Agnes tents are all freestanding, but we recommend staking them out to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.



----- Cut here to remove. Do Not Tear! -----



Copper Spur UL2



Copper Spur UL3



Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

info@bigagnes.com or call toll free **877-554-8975**

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in very hot temperatures (such as a car trunk), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired at a reasonable charge. Tents returned for repair must be clean and free of debris.



P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • info@bigagnes.com • www.bigagnes.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>