



----- Cut here to remove. Do Not Tear! -----

PARKVIEW 2 & 3 SET UP INSTRUCTIONS

1. Remove all contents from stuff sack and lay tent body on the ground.
2. Assemble the hub/pole and the single orange vestibule pole without connecting them to the tent body yet. For the Parkview 3, there is also a single silver, cross-over pole.
3. Insert the four pole tips of the hub/pole into the inner grommets at the four corners of the tent, matching the orange poles to the orange webbing. The shorter pole section that connects the two hubs should run parallel to the seam along the top of the tent, in line with the clips that will attach the tent body to the pole frame.
4. Clip up tent body to hub/pole frame using the plastic clips attached to the tent body.
5. Parkview 3: Insert the ends of the silver cross-over pole into the grommets located at the side of the tent and attach corresponding clips on the tent body to the pole.
6. Drape tent fly over the set up tent body, lining up the vestibule doors with the tent body doors. The front vestibule has the largest vestibule space and the rear vestibule is smaller with a single vertical zipper.
7. Clip the side release buckles of the fly and tent body together on the corners of the rear of the tent (with the rear vestibule door), to mate the fly with the tent body.
8. Attach the four Velcro straps on the underside of the fly to each pole on the hub/pole frame.
9. To set up the vestibule: Feed the single orange pole through the small webbing loop (or Velcro strap) at the top of the front vestibule on the underside of the fly.
10. Insert the two pole tips of the orange vestibule pole into the outer grommets on the orange webbing at the front corners of the tent.
11. Attach the four Velcro straps on the front vestibule of the fly to the orange vestibule pole.
12. Clip the side release buckles of the fly and tent body together on the corners of the front of the tent (with the front vestibule door) to mate the fly with the tent body.
13. At the foot and head of the tent, attach the hooks on the tent body to the loops on the inside of the rain fly to pull tent body taut for extra space.
14. Stake out all corners and guy lines for optimum stability, space and ventilation.

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for our Parkview tents, it will enable you to pitch a shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.

1. Lay the footprint on the ground and stake out.
2. Assemble the hub/pole frame and insert the four pole tips into the inner grommets on the footprint.
Parkview 2: the pole section connecting the two hubs should run across the width of the footprint.
Parkview 3: run the silver pole over the hub/pole frame and insert tips into the grommets on the side of the footprint.
3. Drape tent fly over the poles, aligning the vestibule doors with the long side of the footprint for the **Parkview 2** and the short side for the **Parkview 3**. The front vestibule has the largest vestibule space and the rear vestibule has a single, vertical zipper.
4. Clip the side release buckles of the fly and footprint together on the corners of the rear of the tent (with the rear vestibule door), to mate the fly with the footprint.
5. Attach the Velcro straps on the underside of the fly to each pole on the hub/pole frame and silver pole on the **Parkview 3**.
6. Feed the single, orange pole through the small webbing loop at the top of the front vestibule on the underside of the fly and insert the two pole tips into the outer grommets on the corners of the front of the tent.
7. Clip the side release buckles of the fly and footprint together on the front corners of the tent to mate the fly with the footprint.
8. Attach the four Velcro straps on the front vestibule of the fly to the single pole.
9. Stake out all corners and guy lines for optimum stability, space and ventilation.

**Separate 6", large diameter pole segment included for emergency field repair.
 Slide repair pole over the break to act as a splint.**

HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- Big Agnes tents are all freestanding, but we recommend staking them out to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.



----- Cut here to remove. Do Not Tear! -----



Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

info@bigagnes.com or call toll free 877-554-8975

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in very hot temperatures (such as a car trunk), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired at a reasonable charge. Tents returned for repair must be clean and free of debris.



P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • info@bigagnes.com • www.bigagnes.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>