



Cut here to remove. Do Not Tear!

ROYAL FLUSH 3 SETUP INSTRUCTIONS

1. Remove contents of stuff sack and lay tent body flat on ground.
2. Assemble the four poles. One orange hubbed pole, two orange straight poles and one black vestibule pole.
3. Orient the hubbed pole so the shorter, middle section runs across the width of the tent body, aligning the pole with the seams and clips on the tent.
4. You will notice one side of each hub has a piece that will fit into the plastic clip on the tent body. Make sure that side of the hub is facing down.
5. Insert the four ends of the hubbed pole into the grommets in the red webbing straps at the four corners of the tent.
6. Attach the clips on the tent body to the hub pole frame that is now standing. Two clips are "u" shaped and slide over the bottom of the hubs. The hook shaped clips fit over the pole.
7. Take one of the orange poles and insert the ends into the grommets on the black webbing straps located at the floor seam towards the back door of the tent (tent body is symmetrical and you determine the front and back. The larger vestibule on the fly will be the front and the smaller vestibule will be the back. (Step 12).
8. The pole from Step 7 will angle from back to front to back, wrapping around the front of the tent, above the front door and back to the black webbing on the opposite side of the tent (the pole aligns with the seam lines and clips on the tent body). Attach the hook shaped clips on the tent body to this pole - but do not yet attach the carabiner-style clips.
9. Repeat Steps 7 and 8 with the remaining orange pole, inserting pole into grommets on remaining black webbing straps towards front door of tent body.
10. This pole will angle towards and wrap around the back of the tent, above the back door (the pole aligns with the seam lines and clips on the tent body). Attach the hook shaped clips on the tent body to this pole.
11. Now, attach the carabiner-style clips over both poles where they intersect.
12. Drape the rain fly over the tent - the door with the vertical zipper will be the back door. Match red webbing on the fly and corners of the tent body together.
13. There are four webbing straps with buckles on each side of the tent. Clip the rear three buckles on fly and tent body together on each side of tent (one red, two black). Leave the front buckles with red webbing unclipped until the vestibule pole is inserted in front vestibule.
14. Feed the black pole through the sleeve above the vestibule door on the underside of the fly. Then, attach the Velcro loops on the underside of the fly to the pole.
15. Insert the ends of the vestibule pole into the remaining grommets in the red webbing straps at the front corners of the tent.
16. Clip the remaining buckles on the fly and tent body together.
17. Stake out all corners and guy lines for maximum stability, space and ventilation.

FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for any of our models, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.

1. Lay footprint out flat and stake out.
2. Assemble the four poles: One orange hubbed pole, two orange straight poles and one black vestibule pole.
3. Insert the four ends of the hubbed pole into the grommets in the red webbing straps. Orient the hubbed pole so the shorter, middle section is parallel to the side of the footprint that does not have the black webbing straps.
4. Insert one end of the straight orange pole into the grommet on the black webbing on the side of the footprint and the other end into the grommet on the black webbing on the opposite side of the footprint, directly across from where you started. The pole will wrap around the two hubs.
5. Repeat Step 3 with the remaining orange pole and insert the ends into the grommets on the remaining black webbing straps.
6. Drape the rain fly over the poles that are standing, matching the red webbing on fly with red webbing on footprint. The door with the straight, vertical zipper is the smaller, back door.
7. On the underside of the fly are several Velcro loops - these correspond with the points where poles intersect. Wrap the Velcro loops around all intersection points.
8. There are four webbing straps with buckles on each side of the footprint. Clip the rear three buckles on fly and footprint together on each side of tent (one red, two black). Leave the front buckles with red webbing unclipped until the vestibule pole is inserted in front vestibule.
9. Feed the black pole through the sleeve above the vestibule door on the underside of the fly. Then, attach the Velcro loops on the underside of the fly to the pole.
10. Insert the ends of the vestibule pole into the remaining grommets on the red webbing straps at the front corners of the footprint.
11. Clip the remaining buckles on the fly and footprint together.
12. Stake out all corners and guy lines for maximum stability and space.

**Separate 6", large diameter pole segment included for emergency field repair.
Slide repair pole over the break to act as a splint.**



Cut here to remove. Do Not Tear!



Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

info@bigagnes.com or call toll free 877-554-8975

TENT CARE

Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in very hot temperatures (such as a car trunk), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent.

Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired at a reasonable charge. Tents returned for repair must be clean and free of debris.



P.O. Box 773072 • Steamboat Springs, Colorado • 80477
Toll Free: 877.554.8975 • info@bigagnes.com • www.bigagnes.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>