



----- Cut here to remove. Do Not Tear! -----

## SEEDHOUSE 1, 2 AND 3 SET UP INSTRUCTIONS

1. Remove all tent contents from stuff sack.
2. Assemble hub/pole (and 2 single poles for SH3) and lay tent body on ground.
  - **SH1:** the pole has one hub, with the longer section attaching to the grommet in the center rear.
  - **SH2 / SH3:** the pole has two hubs. The hub with the longer pole sections corresponds with the front of the tent.
3. Insert pole tips into grommets on tent body.
4. Hook all plastic clips to poles to create freestanding mesh tent body.
  - **SH3:** leave clip in middle of spine unattached until after you insert the short pole into the two webbing pockets on the tent body (perpendicular to ridge pole). Then, attach the final clip on the tent body to the pole.
5. Drape tent fly over set-up tent body and clip all corner buckles of fly and body together, cinching tightening straps.
6. **SH3:** Clip buckles of fly and tent body together at rear first. Run vestibule pole through sleeve on underside of fly and insert pole tips into grommets on tent body. Then, clip buckles of fly and tent body on front corners and cinch tightening straps.
7. Stake out all corners and guy lines for optimum stability, space and ventilation.

**Separate 6", large diameter pole segment included for emergency field repair.  
Slide repair pole over the break to act as a splint.**

## FAST FLY SET UP INSTRUCTIONS

If you purchase the optional Big Agnes footprint for any of our models, it will enable you to pitch a Fast Fly shelter while leaving the tent body behind. The Fast Fly configuration requires the footprint, tent fly, poles and stakes.

1. Lay the foot print on the ground and stake out.
2. Assemble hub/pole and insert pole tips into grommets on foot print, matching the longer pole sections from the hub with the front of the tent where the vestibule will be. **SH3:** Also has a single vestibule pole. The short cross pole will not be used.
3. Drape fly over the poles and clip buckles of fly and footprint together, cinching tightening straps.
4. **SH3:** Clip buckles of fly and footprint together at rear first. Run vestibule pole through sleeve on underside of fly and insert pole tips into grommets on footprint. Clip buckles on front corners and cinch tightening straps.
5. Stake out all corners and guy lines for optimum stability, space and ventilation. **SH3:** For maximum headroom and to keep fly tight, stake out upper guy lines on side of tent

## HELPFUL HINTS FOR TENT SET UP

- Our tents are easy to set up but we suggest you practice once at home before using them for the first time to avoid late night bickering with tent mates while fumbling around in the dark.
- Before pitching tent, clear campsite of debris that may pierce tent floor.
- Big Agnes tents are all freestanding, but we recommend staking them out to increase space and keep your tent from becoming a tumbleweed.
- Hang onto your stuff sacks or they'll blow away and create backcountry litter.
- Pull on the pole sleeve fabric when inserting poles to avoid any bunching in the material.
- Push rather than pull poles through pole sleeves.



----- Cut here to remove. Do Not Tear! -----



## Thanks for choosing a Big Agnes tent!

Please feel free to contact us if you have any questions or comments.

**info@bigagnes.com or call toll free 877-554-8975**

## TENT CARE

### Storage

Always make sure your tent is dry and free of debris before storing. Stuff or fold your tent a different way each time to avoid permanent creases. Store in a cool, dry place. Never leave your tent in very hot temperatures (such as a car trunk), as it will damage the material coatings. Storing your tent damp can result in mildew growth, which may cause your tent to smell, leak or delaminate. Mildew damage is not covered under warranty.

### Cleaning

For light cleaning, you can sponge the tent with warm water. If it's necessary to wash the entire tent, always use cleaners recommended specifically for tents. We recommend McNett Mirazyme cleaner, or Nikwax Tech Wash. Do not dry clean or machine-wash your tent. Detergents and dry cleaning solvents will damage the fabric and ruin waterproofing. Never use hot water, bleach, liquid detergents or dishwashing liquids.

### Seam Sealing

Seam tape alone is durable enough to prevent water leakage. Any seams that have been taped do not need to be seam sealed with a liquid sealer unless you want extra protection. Make sure the seam-sealer is completely dry before re-packing your tent. Damage caused by misapplication may void warranty.

### Zippers

Keeping your zippers clean will help keep the coils and sliders from wearing out. If filled with dirt, vacuum or brush zippers before storing tent.

### Repairs and Warranty

All Big Agnes tents are guaranteed against manufacturing or material defect. We do not warranty products damaged from normal wear and tear, alteration made by owner, misuse, accidents or damages caused by uses other than intended. Damage due to misuse, normal wear and tear, or improper care may be repaired at a reasonable charge. Tents returned for repair must be clean and free of debris.



**P.O. Box 773072 • Steamboat Springs, Colorado • 80477**  
**Toll Free: 877.554.8975 • info@bigagnes • www.bigagnes.com**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>