

**Experts In Home Cleaning™**

# **PERFECT sweep TURBO™**

**USER'S GUIDE**

29L6 SERIES 220-240 V

- 2 Thank You
- 3 Safety Instructions
- 4 Product View
- 4-5 Assembly
- 5 Operations
- 6 Maintenance and Care
- 7 Troubleshooting
- 7 Replacement Parts
- 8 Warranty




## **Thanks for buying a BISSELL Perfect Sweep Turbo**

We're glad you purchased a BISSELL Perfect Sweep Turbo. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your Perfect Sweep Turbo is well made, and we back it with a limited one year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Services department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your Perfect Sweep Turbo.

Thanks again, from all of us at BISSELL.

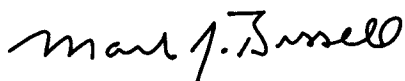

**Mark J. Bissell**  
Chairman, President & CEO

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING YOUR BISSELL PERFECT SWEEP TURBO.**

## **WARNING -** **To reduce the risk of fire, electric shock, or injury:**

- Store indoors.
- Do not expose to rain.
- Do not immerse.
- Do not handle with wet hands.
- Do not use Perfect Sweep Turbo if it has been dropped, damaged, left outdoors or dropped into water, have it repaired at an Authorized Service Center.
- Do not use with damaged cord or plug on the charger.
- Do not unplug charger by pulling on cord.
- Do not damage the charger cord. Never carry or pull the charger unit by the cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use an extension cord. Charger should plug directly into electrical outlet.
- Do not put any object into appliance openings, use with blocked opening, or restrict air flow.
- Do not use with any opening blocked.
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts.
- Do not pick up hot, burning or smoking objects such as cigarettes, matches or hot ashes.
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours.
- Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not allow to be used as a toy.
- Not intended for use by young children

or inform persons without supervision.

- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments - use of attachments not provided or sold by BISSELL may cause fire, electric shock or injury.
- Use only the charger supplied by BISSELL (packaged with your appliance) to recharge your Perfect Sweep Turbo.
- Use charger unit only in standard electrical outlet (220-240V~50/60 Hz.).
- Keep openings free of dust, lint, hair, etc.
- Unplug charger unit from outlet before maintenance or cleaning.
- Unplug by grasping the plug, not the cord.
- Be extra careful when cleaning stairs.
- Turn off all controls when finished cleaning.
- Do not charge the unit outdoors.

Your Perfect Sweep Turbo contains rechargeable nickel metal hydride (NiMH) batteries. Do not incinerate batteries or they can explode when exposed to high temperatures.

Battery cell leaks can occur under extreme conditions. If battery cell contents comes in contact with the skin:

- Flush immediately with warm water for at least 15 minutes, then wash with soap and water.

If battery cell contents comes in contact with the skin:


- Flush immediately with clean water for a minimum of 15 minutes
- Seek medical attention.

## **SAVE THESE INSTRUCTIONS FOR FUTURE USE.**

## **IMPORTANT** FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

## Product view

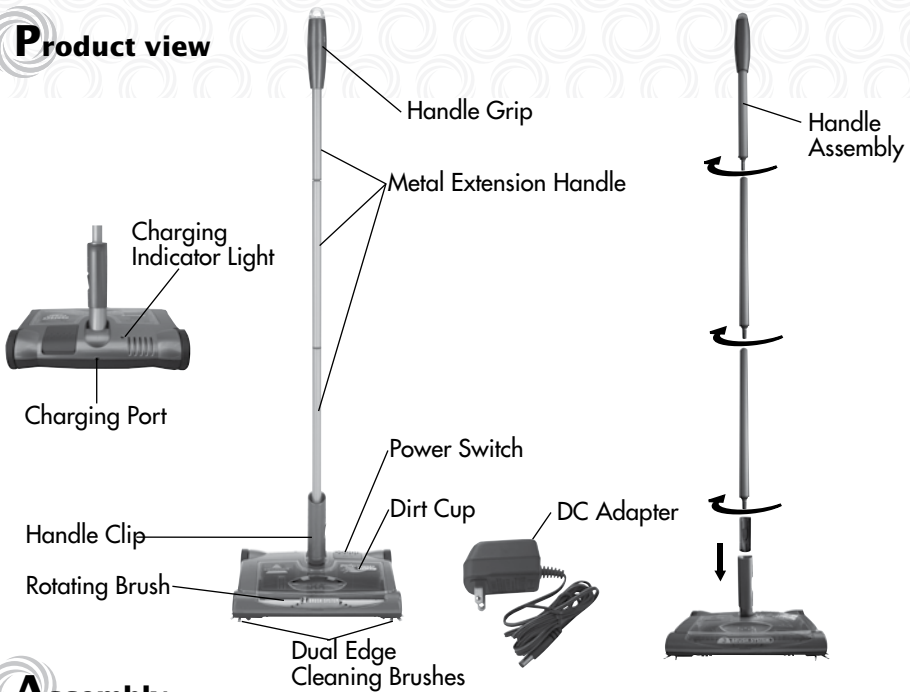

## Assembly

**The Perfect Sweep TURBO requires very little assembly. Remove it from the box and check it against the illustration to familiarize yourself with the components listed. The exploded view drawing with part names will also be helpful if you should need to order a part at a later time.**

1. Assemble the handle by screwing together two pieces of the metal extension handle. Place the colored handle grip on top of the metal extension assembly and twist clockwise until secure. Screw the handle clip into the bottom of the metal extension handle assembly.
2. Place bottom of handle clip into the opening at the top of the Perfect Sweep TURBO. Push firmly until the button at the bottom "clicks" into place in the opening.
3. The Perfect Sweep TURBO must be fully charged before using. To charge the unit, plug the DC adapter into a standard electrical outlet (220-240 V – 50/60 Hz); plug the opposite end into the charging port on the back side of your Perfect Sweep TURBO. The charging indicator light will illuminate when properly connected and will not turn off when fully charged. The Perfect Sweep TURBO is now charging.

**Note: The Power Switch must be in the OFF position when charging.**

## WARNING:

Electric/electronic appliances should not be subjected to extreme temperatures or high humidity. Do not store the Perfect Sweep TURBO in bathing areas or close to stoves, furnaces or radiators.

Charging cord with DC adapter plug



Plug into charging port on the motor side of the Perfect Sweep Turbo.

## Assembly

### Changing the battery

1. When completely charged, the Perfect Sweep TURBO provides up to 60 minutes of full cleaning power.
2. When charging for the first time, allow to charge uninterrupted for at least 16 hours. Thereafter, charge at least 12 hours to renew the Perfect Sweep TURBO battery. The charging indicator light will illuminate when properly connected and will not turn off when fully charged.

**Note: The power switch must be in the OFF position when charging.**

3. Decreased operating time may indicate the battery has built up a charging resistance. To recharge, first completely exhaust the battery, recharge it, then exhaust it again before recharging a second time. This procedure may be required more than once.
4. When charging is complete, be sure to unplug the Perfect Sweep TURBO from the charger.

## ATTENTION:

If your battery still fails to recharge or does not hold a charge of normal duration, call:

**BISSELL Consumer Services**

Listed on page 8  
Or visit our website at  
[www.bissell.com](http://www.bissell.com)

## Operations

### Using your Perfect Sweep TURBO

**The Perfect Sweep TURBO is a quick and easy way to clean your bare floors and carpet.**

1. Tip back the handle into typical use position and gently tap the power switch on the sweeper with your foot.

**Note: The unit will not turn on if the dirt cup is not secure.**

2. To clean small areas, detach the handle by depressing the handle clip button where the bottom of the handle slides into the Perfect Sweep TURBO and pull the entire handle assembly out. Use the Perfect Sweep TURBO by holding the built-in hand grip.
3. When done, replace the handle (if detached) and store for the next use.



## WARNING:

Perfect Sweep TURBO will not pick up crayons, marbles, and other **large or hard objects.**



# Maintenance and care

## Using your Perfect Sweep TURBO

1. Make sure that the Perfect Sweep TURBO is in the "OFF" position.
2. With the sweeper facing toward you, lift the dirt cup out.
3. Carry the dirt cup to a waste container and empty.
4. Replace the dirt cup by gently pressing it into the foot of the sweeper. Make sure that it fits securely.
5. Clean exterior surfaces with a soft cloth dampened with water only. Do not use a strong detergent or other cleaner - this may damage the finish. Always unplug the Perfect Sweep TURBO from the electrical outlet before cleaning the surface.

## Battery Removal and disposal

**Note: It is required that the battery be removed from the Perfect Sweep Turbo before it is disposed of.**

1. Important: Unplug charger.
2. Remove handle and dirt cup.
3. Remove (10) Phillips head screws on the bottom cover as shown in picture.
4. Separate top and bottom cover.
5. Remove wire connectors from the battery pack.
6. Keep battery pack together – DO NOT separate individual batteries. For specific disposal instructions, please contact your local authorities for requirements and regulations on safe disposal or recycling facilities in your area.
7. Discard remainder of product.


2.



## **⚠ WARNING:**

This product contains a rechargeable nickel metal hydride battery (sometimes referred to as a "NiMH" battery) pack. The average life of a NiMH battery is 5 to 7 years, depending on frequency of use. Proper removal and disposal of NiMH batteries is required.

3.

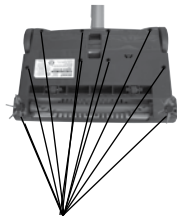

10 Screws

## **⚠ WARNING:**

To reduce the risk of electric shock, turn power switch OFF and disconnect charger from electrical outlet before performing maintenance or troubleshooting.

# Troubleshooting

## No power

### Possible causes

1. Perfect Sweep TURBO is not charged thoroughly
2. Dirt cup is not secure in the unit

### Remedies

1. Make sure Perfect Sweep TURBO has been properly plugged into an outlet for the recommended amount of time. See "Charging the Battery" on page 5
2. Press down on the unit for a snug fit

**Other maintenance or service not included in the manual should be performed by an authorized service representative.**

**Thank you for selecting a BISSELL product.**

**Please do not return this product to the store.**

## Replacement parts - BISSELL vacuum

Item	Part No.	Part Name
1	203-2585	Charge Plug/Cord -3 pin UK plug
2	203-2586	Charge Plug/Cord -3 pin Australian plug
3	203-2588	Charge Plug/Cord -2 pin European plug
4	203-1244	Metal Extension Handle with Handle Grip
5	203-1254	Handle Clip
6	203-1246	Dirt Cup

1/2/3



4



5



6



# Warranty - BISSELL Perfect Sweep Turbo

This warranty gives you specific legal rights, and you may also have other rights which may vary from country to country. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Services by E-mail, telephone, regular mail as described below, or contact your local in country distributor.

## Limited One Year Warranty

Subject to the \*EXCEPTIONS AND EXCLUSIONS identified below, BISSELL Homecare, Inc. will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part due to manufacturer defect.

See "BISSELL Consumer Services" information below.

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

## BISSELL Consumer Service:

If your BISSELL product should require service or if you need information about repairs, authorized service centers in your area, replacement parts or your warranty, please contact BISSELL Consumer Services, as indicated below, or contact your local in country distributor.

### For UK inquiries:

Monday - Thursday 9 am — 5 pm  
Friday 9 am — 4 pm

### BISSELL Homecare (Overseas) Inc.

The Boat Yard  
105 Straight Road  
Old Windsor  
Berkshire, SL4 2SE  
United Kingdom  
Telephone: 0844-888-6644

### For New Zealand inquiries:

Monday - Friday 9 am — 5 pm  
Parex Industries Ltd.  
5 Tolich Place  
Henderson 0610  
Auckland  
New Zealand  
Telephone: 0800-247-735

### For Australian inquiries:

Monday - Friday 9 am — 5 pm

### BISSELL AUSTRALIA PTY LIMITED

42 Rocco Drive  
Scoresby 3179  
Victoria  
Australia  
Telephone: 1-800-811-183

### For all other inquiries:

Monday - Friday 8 am — 4 pm  
**BISSELL Homecare, Inc.**  
PO Box 1888  
Grand Rapids, Michigan 49501 USA  
Telephone: 01-616-453-4451  
Fax: 01-616-453-1383

BISSELL HOME CARE, INC. IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

### \*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.



©2010 BISSELL Homecare, Inc.  
Grand Rapids, Michigan  
All rights reserved. Printed in China  
Part Number 150-4007  
Rev 4/10  
Visit our website at:  
[www.bissell.com](http://www.bissell.com)





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>