


# Telephone Distribution Module C-0432

CHANNEL VISION™

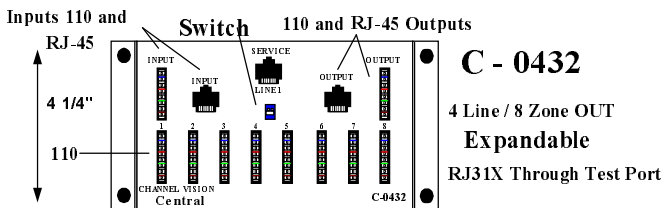

- Step 1:** 110 punch down or use RJ-45 to activate 1 or all 4 pairs through outputs 1-8 and expansion outputs.
- Step 2:** The RJ-45 connector output is used to expand to another hub. RJ-45 connectors can be used for output, making a total of 11 outputs.
- Step 3:** The service port (RJ-31) is used for a security system dialer. When the switch is on, the 1st pair is routed through the security system. This allows the security system to seize the line for system dialing.



Channel Vision Technology will repair or replace any defect in material or workmanship which occur during normal use of this product with new or rebuilt parts, free of charge in the USA, for two years from the date of original purchase. This is a no hassle warranty with no mail in warranty card needed. This warranty does not cover damages in shipment, failures caused by other products not supplied by Channel Vision Technology, or failures due to accident, misuse, abuse, or alteration of the equipment. This warranty is extended only to the original purchaser, and a purchase receipt, invoice, or other proof of original purchase date will be required before warranty repairs are provided.

Mail in service can be obtained during the warranty period by calling (800) 840-0288 toll free. A return Authorization number must be obtained in advance and can be marked on the outside of the shipping carton.

This warranty gives you specific legal rights, and you may have other rights (which vary from state to state). If a problem with this product develops during, or after, the warranty period, please contact Channel Vision, your dealer, or any

## Channel Vision Limited Warranty

### STANDARD TERMINATION FOR 110 PUNCHDOWN

 


The 110 is a sophisticated insulation displacement connection system. To push the wire between the contact blades, use only a 110 punch down tool. Using any tool other than a 110 punch tool may not seat the wire properly and can damage the contacts.

Untwist no more than .5"  
 Keep unshathed wire short

### Modular Plug Pair Configurations:

It is important that the pairing of wires in the modular plug match the pairs in the modular jack as well as the horizontal and backbone wiring. If they do not, the data being transmitted may be paired with incompatible signals.



CHANNEL VISION'S connector part # for (RJ-45) J-C3AW 8  
 Pin Part # for (RJ-11) J-66-C3-6 Pin



Modular cords wired to the T568A color scheme on both ends are compatible with T568B system and vice versa.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>