
INSTALLATION INSTRUCTIONS

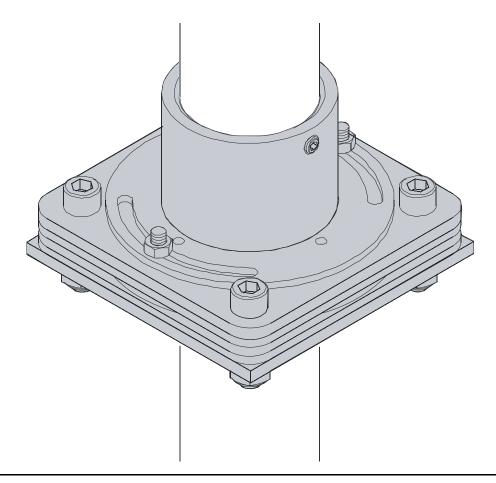

Heavy Duty Swivel Adapter

©CHIEF

CMA351

CMA351 Installation Instructions


DISCLAIMER

CSAV, Inc., and its affiliated corporations and subsidiaries (collectively, "CSAV"), intend to make this manual accurate and complete. However, CSAV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. CSAV makes no representation of warranty, expressed or implied, regarding the information contained herein. CSAV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.



WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

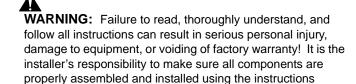

Λ


provided.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located between the CMA351 up to (and including) the display/projector does not exceed 500 lbs (226.8 kg).

 The weight capacity of the CMA351 may be LIMITED to the lowest weight capacity of any other component located between the CMA351 and the supporting structure!

DIMENSIONS

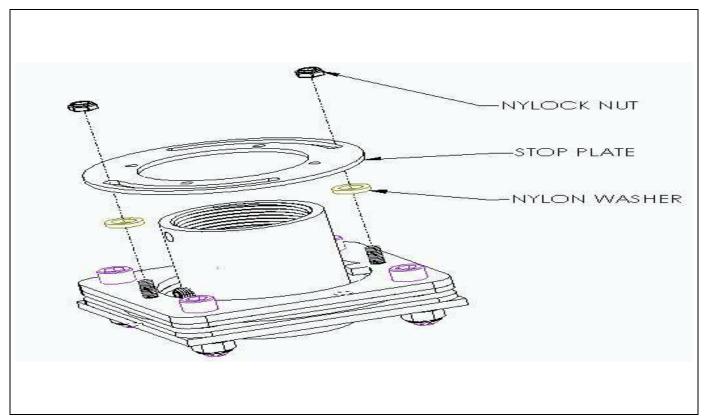


Installation Instructions CMA351

LEGEND


	Tighten Fastener	Pencil Mark
	Apretar elemento de fijación	Marcar con lápiz
	Befestigungsteil festziehen	Stiftmarkierung
	Apertar fixador	Marcar com lápis
	Serrare il fissaggio	Segno a matita
	Bevestiging vastdraaien	Potloodmerkteken
	Serrez les fixations	Marquage au crayon
	Loosen Fastener	Drill Hole
\leftarrow	Aflojar elemento de fijación	Perforar
	Befestigungsteil lösen	Bohrloch
	Desapertar fixador	Fazer furo
	Allentare il fissaggio	Praticare un foro
	Bevestiging losdraaien	Gat boren
	Desserrez les fixations	Percez un trou
	Phillips Screwdriver	Adjust
	Destornillador Phillips	Ajustar
	Kreuzschlitzschraubendreher	Einstellen
	Chave de fendas Phillips	Ajustar
	Cacciavite a stella	Regolare
	Kruiskopschroevendraaier	Afstellen
	Tournevis à pointe cruciforme	Ajuster
	Open-Ended Wrench	Remove
W O	Llave de boca	Quitar
	Gabelschlüssel	Entfernen
	Chave de bocas	Remover
	Chiave a punte aperte	Rimuovere
	Steeksleutel	Verwijderen
	Clé à fourche	Retirez
	By Hand	Optional Opcional
	A mano Von Hand	<u>'</u>
E (Optional
Fo S	Com a mão	Opcional
	Com a mão A mano	Opcional Opzionale
	Com a mão A mano Met de hand	Opcional Opzionale Optie
	Com a mão A mano Met de hand À la main	Opcional Opzionale Optie En option
	Com a mão A mano Met de hand À la main Hex-Head Wrench	Opcional Opzionale Optie En option Security Wrench
	Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal	Opcional Opzionale Optie En option Security Wrench Llave de seguridad
	Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel	Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel
	Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança
	Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale	Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza
	Com a mão A mano Met de hand À la main Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada	Opcional Opzionale Optie En option Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança

CMA351 Installation Instructions

TOOLS REQUIRED FOR INSTALLATION

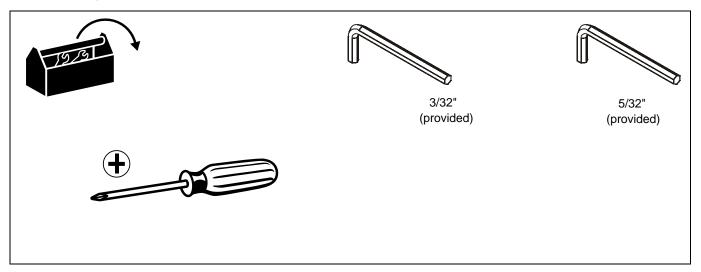

PARTS

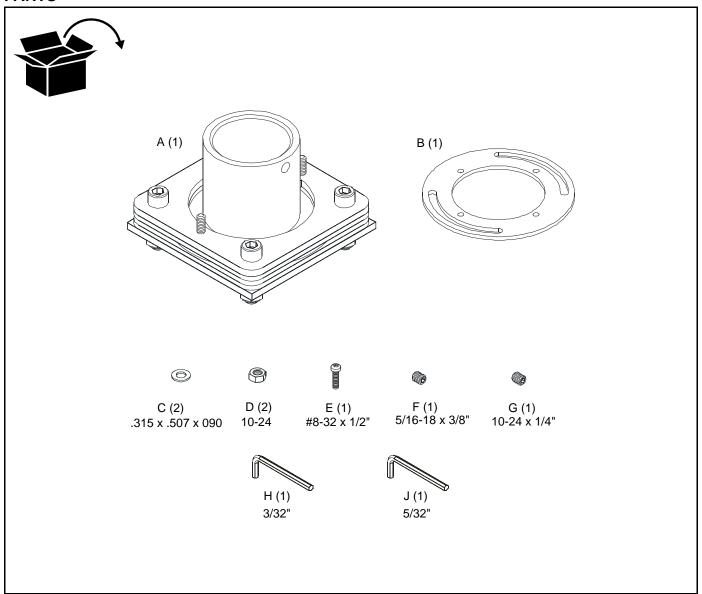

Installation Instructions CMA351

Installation

IMPORTANT!: The following installation procedure assumes that a 1 ½" NPT pipe has been properly installed to the ceiling.

- Place one Nylon washer (C) over each stud on Swivel Adapter (A). (See Figure 1)
- Align slots in stop plate (B) with two threaded studs on Swivel Adapter (A). (See Figure 1)
- Secure Stop plate (B) to Swivel Adapter (A) using two lock nuts (D). (See Figure 1)

NOTE: DO NOT fully tighten lock nuts at this time.

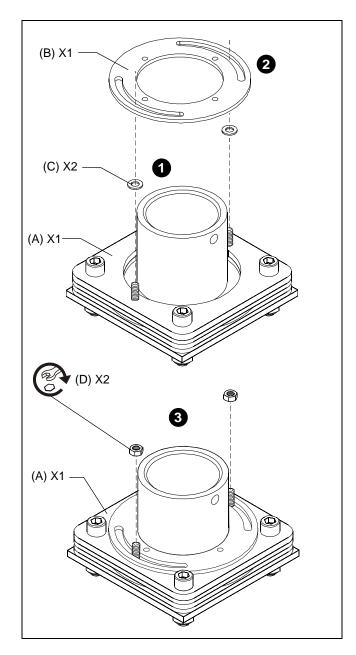


Figure 1

 Thread Swivel Adapter (A) onto existing 1 ½" NPT pipe. (See Figure 2) 5. Secure Swivel Adapter (A) to 1 ½" NPT pipe using one Set Screw (F) and hex wrench. (See Figure 2)

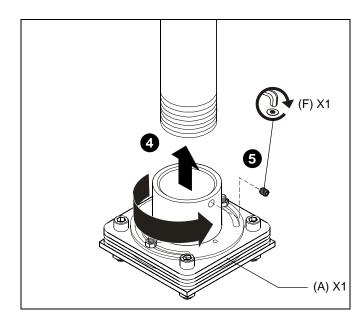


Figure 2

 Rotate the bottom of Swivel Adapter (A) until middle set screw in swivel adapter (A) makes contact with tab in stop plate (B). (See Figure 3)

NOTE: This is considered the first stop position.

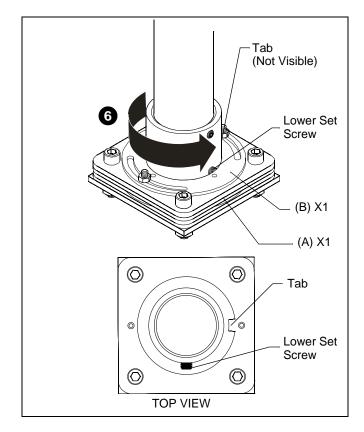


Figure 3

- Thread one 1 1/2" NPT pipe into lower Swivel Adapter (A). (See Figure 4)
- 8. Secure lower 1 1/2" NPT pipe to swivel adapter (A) using one set screw (G). (See Figure 4)

WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components located between the CMA351 up to (and including) the display/projector does not exceed 500 lbs (226.8 kg).

The weight capacity of the CMA351 may be LIMITED to the lowest weight capacity of any other component located between the CMA351 and the supporting structure!

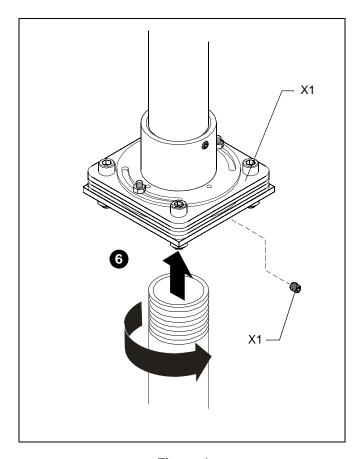


Figure 4

- Rotate the bottom portion of the CMA-351 to the desired location for the second stop (0 degrees to 330 degrees). (See Figure 5)
- 10. Insert one Phillips pan head screw (E) in the nearest threaded hole in stop plate (B). (See Figure 5)

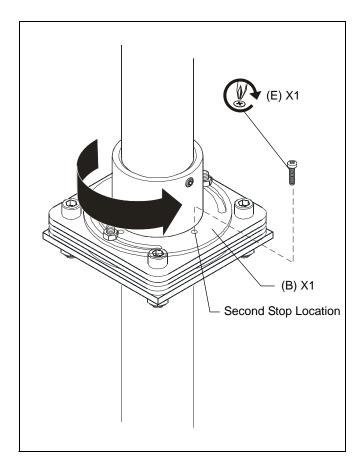


Figure 5

11. Tighten two lock nuts (D). (See Figure 6)

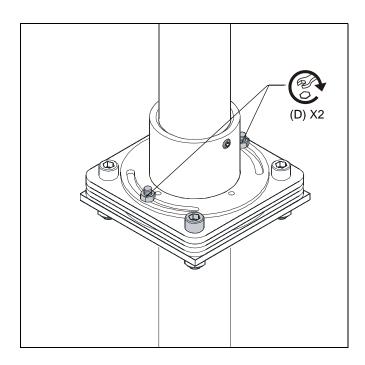


Figure 6

Installation Instructions CMA351

CMA351 Installation Instructions



8803-000010 RevA ©2007 Chief Manufacturing www.chiefmfg.com 11/07 **USA/International** A 8401 Eagle Creek Parkway, Savage, MN 55378

P 800.582.6480 / 952.894.6280

F 877.894.6918 / 952.894.6918

A Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands

P +31 (0)40 2668620

F +31 (0)40 2668615

Asia Pacific A Room 24F, Block D, Lily YinDu International Building

LuoGang, BuJi Town, Shenzhen, CHINA.

P +86-755-8996 9226

F +86-755-8996 9217



Europe

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com