

Chromalox®

SERVICE MANUAL

Chromalox Electric Steam Boilers

The troubleshooting of Chromalox electric boilers can best be placed into five major areas. These areas are: (1) fusing (2) contacts, elements and voltages (3) pressure control (4) low water cut-off (5) water feed mechanism.

WARNING: Hazard of Electric Shock and Thermal Burns. These troubleshooting checks should only be performed by qualified personnel after review

SERVICE REFERENCE

DIVISION 4	SECTION CES
SALES REFERENCE (Supersedes PQ402-5)	PQ402-6
	161-049460-001
DATE	FEBRUARY, 1999

of the Installation and Operating Instructions for your specific Chromalox Electric Steam Boiler.

For convenience, we have outlined a brief description of typical malfunctions and the area that should be explored in order to make the proper correction. This is followed by a detailed analysis of the five areas listed above.

TYPICAL MALFUNCTIONS & PROPER CORRECTION

Boiler does not heat:

1. Check power fusing.
2. Examine control circuit fuse.
3. Reset button on the Low Water Control must be depressed (for states requiring a reset button).
4. Float valve in the Low Water Control is not functioning properly.
5. Elements and/or contactors faulty.
6. Mercury tube in Low Water Control has cracked and mercury has escaped.

Boiler takes too long to reach operating pressure or does not maintain desired pressure:

1. Check amperage on each supply leg of power harness. Reading should correspond to a rating of not less than 10% of rated boiler amperage.
If considerable difference exists:
 - A. Available voltage is insufficient for boiler needs.
 - B. Heating element failure has occurred.
 - C. Fibre carrier in contactor requires replacement. On multi contactor units, check contactors and coils to determine if one is defective.
2. Check to determine whether boiler selected is underrated for the application.
3. Additional Equipment added after initial installation, thus undersizing boiler.
4. Steam piping not insulated.

Boiler continuously blows power fuses:

1. External fusing is not sized properly. Correct sizing is next size larger than boiler rating.
2. Check lines between element and contactors with an ammeter for uniform readings.
3. Check for evidence of charring which indicates loose connections.
4. A short circuit exists in the boiler.

Boiler does not fill with water automatically or does not maintain constant pressure:

1. Check water supply line for closed valves.
2. Check power fusing.

3. For boiler without motor and pump assembly: check pressure of water supply to insure that it is consistently a minimum of 10 psi greater than the desired boiler operating pressure.
4. Check water inlet check valve.
5. For boiler with motor and pump assembly: check mercury tubes in the Low Water Control.
6.
 - A. Check motor and pump for binding and over heating. If caught in time, this can be observed by a humming sound. Replace if defective.
 - B. Check for defective solenoid valve.
 - C. Make sure pump is running with correct rotation.
 - D. Check impeller adjustment on turbine type pumps.

Boiler appears to be leaking from beneath the jacket:

1. Check boiler fittings for looseness; tighten as required.
2. Check boiler fittings for cracks; replace as necessary.
3. Examine heating elements around boiler flange.

IMPORTANT: Leaking is a hazard, correct to prevent further damage to other components.

Boiler overflows:

1. Float valve on the Low Water Control is stuck in the down position.
2. Solenoid valve is not operating.
3. Check for defective mercury tube on the Low Water Control if boiler has a motor and pump assembly.

Pressure increases beyond the preset limits causing safety valve to blow:

1. Check bellows in the pressure control.
2. Check for clogged syphon tube.
3. Contactor points have fused.
4. Check pressure control setting against safety valve rating.

Manual reset button needs constant resetting (for states requiring reset buttons only):

1. Boiler is **not level**; relocate if necessary.

Boiler syphons water:

1. Follow blowdown instructions.

Boiler with condensate system floods overnight:

1. Vacuum breaker is not operating.

Elements fail:

1. Low Water Cut-Off system has failed.
2. Lower equalizer tube on Low Water Cut-Off is clogged due to lack of blowdown.
3. Contactor points have fused.
4. Lack of blowdown has allowed accumulation of foreign material, which has smothered the heating elements.

5. Water softener is being used without an aeration device.

Motor runs too frequently and/or the boiler does not maintain pressure:

1. Test check valve.

Motor runs continuously, but does not pump (CMB-10L to CES-30):

1. Test flexible coupling on motor and pump.
2. Check water supply.
3. Blowdown valve partially open.

DETAILED ANALYSIS

FUSING — The power fuses should be the first component of equipment checked in any power failure. The fuses will be located in a panel near the boiler (or within the boiler on 72kW and larger models).

Test each fuse with a test light or an ohmmeter. If the test light glows or the ohmmeter reads infinite resistance, then the fuse is defective and must be replaced. Fuses can be intermittent. If all other boiler components appear to be in proper order, replace all fuses with known good ones.

If a circuit breaker is used instead of fuses, check to see if all breakers are in the “on” position. Reset if necessary.

If the fuses continue to blow or the circuit breakers continue to trip off, then the internal circuits should be investigated for a short circuit or ground.

CONTACTORS, ELEMENTS AND VOLTAGES

— The power supply voltage must be within ten percent of the boiler voltage rating. The standard voltages are 120, 208, 240 and 480 volts; optional voltages are 190, 275, 380, 415 and 550 volts. All boilers rated at 275 volts and higher are supplied with a separate control circuit of either 120, 208 or 240 volts.

To insure good current flow, it is important that all contacts are mating properly. Contacts that appear burnt or charred must be replaced.

CONTACTOR FAILS TO ENERGIZE

If the contactor fails to energize, check for blown fuses in the control circuit. If the fuses are not blown, check the contactor holding coil. The holding coil can be checked by jumpering Terminal L1 of the line and Terminal No. 4 (coil lead) on the contactor. See Figure 1.

- A. If the contactor fails to energize, then the coil is defective.
- B. If the contactor energizes, it is an indication of failure in either the Pressure Control or in the McDonnell-Miller three wire mercury switch.

Since the Pressure Control and the three wire mercury switch are wired in series, they can be checked one at a time by placing a jumper across each control. If the mercury switch or Pressure Control fail to energize, check the McDonnell-Miller controls by jumpering Terminals 5 and 6. See Figure 2.

At this point, the contactor should energize unless there is an open wire in the control circuit.

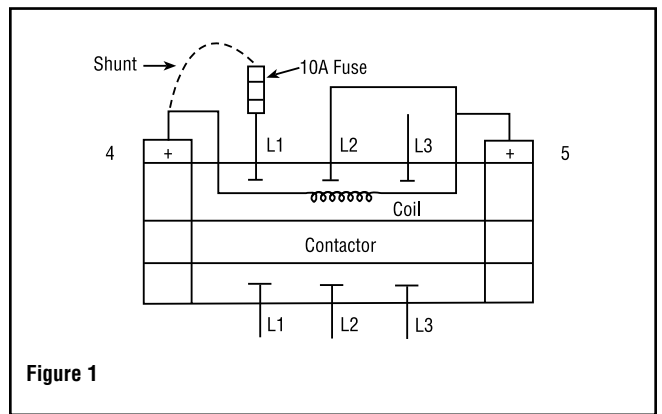


Figure 1

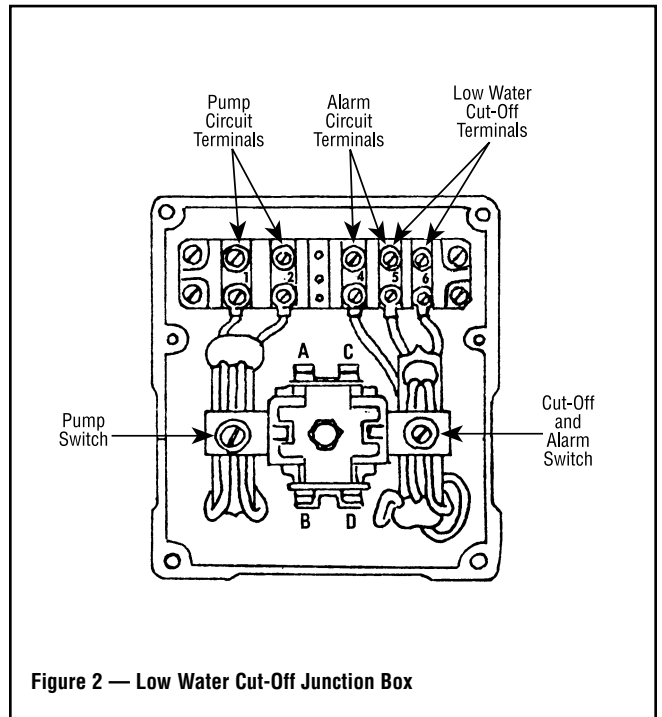


Figure 2 — Low Water Cut-Off Junction Box

PRESSURE CONTROL — Malfunctions in the pressure control can be mechanical or electrical.

The bellows should be removed and the small orifice at the bottom cleaned out. The bellows must be replaced if it is punctured. The syphon tubing should also be cleaned by steam while the control is removed; it will be necessary to join the two loose leads in order to activate the boiler. See Figure 3.

The electrical controls should be checked by referring to the Contactors, Elements and Voltages section.

NOTE: If control is purchased locally, remove #8-32 orifice screw.

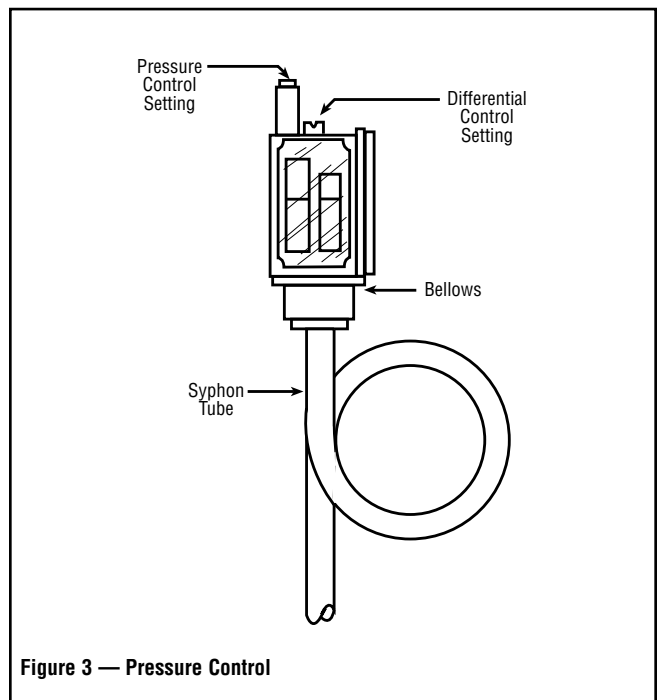


Figure 3 — Pressure Control

LOW WATER CUT-OFF — Like the pressure control, difficulties can be broken down into the mechanical and electrical groups.

The mechanical difficulties can be corrected on the high pressure 100 psig motor and pump units in the following manner:

1. Remove the cover and test the free movement of the float valve. If the float valve is in the off or down position, then the float is either punctured or dirt and sediment is encrusted in the float chamber. Both of these problems will involve disassembly of the float chamber.
2. Check the electrical contacts to determine if they are defective. Defective mercury tube contacts will cause the boiler to fill higher than normal. This occurrence will require replacement of the mercury tube.

On low pressure feed units, the mechanical test is best made by cleaning the valve seat beneath the float valve linkage to

assure that it is properly seated. If the valve seat is scarred or defective, the entire valve seat must be replaced. Also, if the float valve is in the down or “off” position, it may be punctured or encrusted with dirt and the unit must be disassembled.

On all McDonnell-Miller cut-offs, restrictions in the equalizer column can cause burnt out elements. The cause will appear to be a low water condition. Regular blowdown procedures on the equalizer column as well as the boiler will prevent this occurrence. Correction of the problem can be made by both removing the plug from the side of the column and opening the Low Water Cut-Off blowdown valves. A snake should be used to clean the vertical and horizontal columns.

The electrical trouble shooting should be checked by referring to the Contactors, Elements and Voltages section.

WATER FEED MECHANISMS — A common problem in this area is boiler flooding, which may be caused by a defective float or solenoid.

The Low Water Cut-Off must be disassembled to check the float valve. The solenoid can be isolated by disconnecting the union after the solenoid and energizing and de-energizing the solenoid. If water comes out continuously or does not come out at all, then the solenoid is defective.

A defective check valve can cause the pump motor to run continuously or cause loss of water pressure. If the pipe between the check valve and the water supply is hot, boiler water is backing up through the check valve and the check valve must be replaced. A defective check valve can also prevent water from entering the boiler.

The coupling between the motor and pump may be loose; the entire pump must be replaced if the coupling is excessively worn.

Limited Warranty:

Please refer to the Chromalox limited warranty applicable to this product at <http://www.chromalox.com/customer-service/policies/termsofsale.aspx>.

Chromalox[®]
PRECISION HEAT AND CONTROL

2150 N. RULON WHITE BLVD., OGDEN, UT 84404
Phone: 1-800-368-2493 www.chromalox.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>