

Reliable

X-C 6250 Pro (300) NT User's Manual

ITRONIX

W E K N O W T H E R O A D™



Rugged



Identification

X-C 6250 Pro (300) NT User's Manual
January 2001 · Revision 001

Copyright Notice

© Copyright 2001 Itronix Corporation. All rights reserved. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any other language or computer language in whole or in part, in any form or by any means, whether it be electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written consent of Itronix Corporation, South 801 Stevens Street, Spokane, Washington 99204.

Disclaimer

This document is printed in the U.S.A. Itronix Corporation reserves the right to revise the manual and make periodic changes to the content without a direct or inferred obligation to Itronix to notify any person of such revision or changes. Itronix Corporation does not assume responsibility for the use of this manual, nor for any patent infringements or other rights or third parties who may use the manual.

This document contains valuable trade secrets and proprietary information of Itronix Corporation.

This product is available for purchase under the terms of the Itronix Hardware Purchase and Software License Agreement. Itronix hardware products may be reconditioned, or be manufactured from parts and components that may be new, used, rebuilt, or recycled and in some cases, the hardware product may not be new and may have been previously installed. In any event, Itronix warranty terms apply.

Trademark Notice

Itronix is a registered trademark of Itronix Corporation.

Microsoft, MS, Windows, and MS-DOS are registered trademarks of Microsoft Corporation.

IBM is a trademark of International Business Machines Corporation.

Compliance Statements

The X-C 6250 Pro (300) computer has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The X-C 6250 Pro (300) computer complies with Part 68 of the FCC Rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in the devices not ringing in response to an incoming call. In most, but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to the line, as determined by the total RENs, contact the telephone company to determine the maximum REN for the calling area.

The X-C 6250 Pro (300) computer may be connected to the telephone network using the RJ-11 jack provided.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If



this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact the equipment manufacturer for repair and/or warranty information. Do not attempt repairs of this equipment yourself without obtaining manufacturer authorized parts and documentation. If the trouble is causing harm to the telephone network, the telephone company may request you remove the equipment from the network until the problem is resolved.

Compliance Statement for Canada

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION! Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The Ringer Equivalence Numbers (REN) are:

X-C 6250 Pro (300) non-radio: 0.5B

X-C 6250 Pro (300) Motient: 0.5B

X-C 6250 Pro (300) Cingular: 0.5B

X-C 6250 Pro (300) CDPD: 1.3B



NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

The X-C 6250 Pro (300) computer may be connected to the telephone network using the RJ-11 jack provided.

Fax Branding

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual.

In order to program this information into your fax machine, you should complete the following:

This information is entered through the FAX application software you have installed. Consult your FAX software documentation for instructions about entering this information.

Warnings and Cautions

WARNING It is important that only authorized Itronix personnel attempt repairs on Itronix equipment as this might void any maintenance contract with your company. Unauthorized service personnel might be subject to shock hazard on some Itronix equipment if removal of protective covers is attempted.

The product you have purchased is powered by a rechargeable battery. The battery is recyclable and, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Do not crush the battery or place it in a fire. Check with your local solid-waste officials for details on recycling options or proper disposal.

CAUTION Internal components of the X-C 6250 Pro (300) computer will be damaged if exposed to contaminants. When dust covers, the PC card door, or the battery door are open on the computer, shield the unit from all contaminants such as liquids, rain, snow, and dust.

Federal Communication Commission (FCC) Regulations for the Stand Alone Charger

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are



designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"The equipment has been approved to [Commission Decision "CTR21"] for pan-European single terminal connection to the Public Switched Telephone Network (PSTN). However, due to differences between individual PSTNs provided in different countries the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point.

In the event of problems, you should contact your equipment supplier in the first instance.

Safety Information

The following safety symbols are used in this manual to indicate potentially dangerous situations. Do not proceed beyond a WARNING or CAUTION symbol until the indicated conditions are fully understood and met.

CAUTION This caution statement denotes a hazard. It calls attention to a procedure or practice that could result in damage to or destruction of part or all of the product if not performed correctly.

WARNING This warning denotes a hazard. It calls attention to a procedure or practice that could result in personal injury if not performed correctly.



About This Manual

The *X-C 6250 Pro (300) NT User's Manual* provides information about using the X-C 6250 Pro (300) computer and some of its peripherals.

If you've never used this computer (or any computer) before, the first three sections contain important information to get you started successfully. To help you become a proficient user or just to make your daily tasks easier, try using the tools that reside on your system listed on page viii.

If you're an experienced computer user already familiar with Windows, Section 3, "Getting Started," provides important setup procedures for the computer. Section 5 shows you how to customize system settings.

If you don't read anything else in this manual, turn to Section 6 and read about batteries and power. Following the tips outlined in this section can significantly increase the life of your batteries.

Inside

To Do This...	Turn to This Section
See where we put the parts	Features of the Computer, Page 17
Use the keyboard	Keyboard Basics, Page 24
Use the mouse	Using the Mouse, Page 32
Set up your computer correctly	Getting Started, Page 37
Register your radio modem	If You Have a Radio Modem, Page 44
Customize settings	Customizing Settings, Page 5
Charge and maintain batteries	Managing Batteries and Power, Page 58
Use PC Cards	Using PC Cards, Page 72
Connect printers or external drives	Optional Equipment and Accessories, Page 79
Find out about your modem	Modems, Page 95
Maintain your computer	Maintenance and Storage, Page 102
Correct errors	Error Messages, Page 107
Solve problems	Troubleshooting, Page 115



For More Help

If you need help, or if you want to learn more about your computer, use the following resources already installed on your system.

- If you need help using an application, refer to the application's online Help. Start the application, select Help from the menu bar, and then choose the item you want.
- For help using Windows NT, refer to the online Help on your system. To access this information, select Help from the Start Menu.



Contents

About This Manual	vii
Inside	vii
For More Help	viii
Section 1	
Features of the Computer	15
Introduction	16
Individual Parts	17
Indicator Lights	19
Standard Hardware	20
Optional Hardware	20
Standard Software.....	21
If You Have a Touch Screen	22
Section 2	
Using the Keyboard and Mouse	23
Keyboard Basics	24
Restarting the Computer	24
Primary Keys	24
Arrow Keys.....	27
Numeric Keypad.....	28
FN Keys	29
Function Keys	30
Other Keys	31
Using the Mouse	32
General Guidelines	33
Changing the Speed of the Mouse.....	33



Section 3	
Getting Started	35
Introduction	36
PRECAUTIONS	36
The First Time... ..	37
Connecting the AC Adapter	37
Installing and Charging the Battery	38
Turning the Computer On and Off	40
Startup Problems?	41
If You Have a Touch Screen	42
Section 4	
If You Have a Radio Modem	43
Introduction	44
Before You Start: Register!	44
Motient or Cingular	44
Cellular CDPD	44
GSM	45
Wireless LAN (WLAN)	46
What Can I Do with My Radio Modem?	47
Using the Integrated Radio Modem	48
Antenna Positioning	48
Serial Port Settings	48
Radio Indicator Light	49
Factory Installed Windows NT 4.0 Mobile Computer Tools and Radio Tools	50
User Installable Cellular/CDPD Radio Software	51
GSM International Radio Software	51
Wireless LAN	52
Additional Documentation	53

Section 5	
Customizing Settings	55
Introduction	56
Using the System Configuration Utility	56
Accessing the SCU	57
Setting the COM4 IRQs	58
Section 6	
Managing Batteries and Power	61
Introduction	62
Practical Battery Tips	62
Conserving Power and Extending Battery Life	66
Low Battery Warnings	67
Power-saving Features	67
Suspend	67
Hard Disk Standby	68
Display	68
Backlight	68
MaxBright	69
Removing and Replacing Batteries	69
Charging Batteries	71
Battery Storage and Care	72
Disposing of Batteries	73
Section 7	
Using PC Cards	75
Introduction	76
Inserting and Removing a PC Card	76
Transferring Files Using PC Cards	78
Using Bootable PC Cards	78



Section 8	
Optional Equipment and Accessories	79
Connecting a Printer	80
Connecting an External Monitor	81
Connecting an External Mouse	81
PC Card External Floppy Disk Drive	83
PRECAUTIONS	83
Booting from a PC Card External Floppy	84
Using an External CD-ROM	85
Stand Alone Charger	86
Indicator Lights	87
Vehicle Adapter	87
Vehicle Cradle	91
PRECAUTIONS	91
Charging Batteries	91
Communicating with Other Devices	92
External Antennas	93
RF Antenna Placement	93
Cleaning or Replacing Cradle Contact Pins	94
Surge Protection	95
Selecting the Right Surge Protection	95
Surge Environment	95
Type of Equipment to be Protected	95
Quality of Electrical Wiring and Service	96
Selecting the Right Equipment	96

Section 9	
Modems	97
Introduction	98
Which Modem Do I Have?	98
Using the Internal Landline Modem	99
Transferring Files	100
Section 10	
Maintenance and Storage	101
Introduction	102
If You Have a Touch Screen	102
Hard Drive Care and Handling	102
Internal Hard Drives	103
External PC Card Hard Drives	104
Battery Maintenance and Storage	105
Maintaining Batteries	105
Storing Batteries	105
Computer Maintenance and Storage	106
Maintaining Your Computer	106
Care and Cleaning	106
Storing Your Computer	109
Appendix A	
Error Messages	111
Introduction	112
POST Messages	112
Windows Messages	117
Application Messages	117



Appendix B	
Troubleshooting	119
What to Try First	120
For More Help	120
Common Solutions to Common Problems	121
Applications	122
Batteries	124
Display	126
Hard Disk	128
I/O Ports	128
Keyboard	129
Landline Modems	130
Miscellaneous	133
Mouse	136
PC Cards	136
Pen/Touch Screen	138
Radio Modems	138
Appendix C	
Glossary	141
Index	147



SECTION 1

Features of the Computer



.....

Introduction	16
Individual Parts	17
Indicator Lights	19
Standard Hardware	20
Optional Hardware	20
Standard Software	21
If You Have a Touch Screen	22

W E K N O W T H E R O A D [™]




Introduction

The X-C 6250 Pro (300) mobile computer is a ruggedized, weather-sealed computer system built for the demanding environment of the mobile worker. Designed for use by large mobile workforces, this computer is one of the most practical work tools for collecting, managing, and communicating information in the field.

The following pages describe the external and internal features of your X-C 6250 Pro (300) computer.

Individual Parts

These diagrams and descriptions provide an overview of the computer.

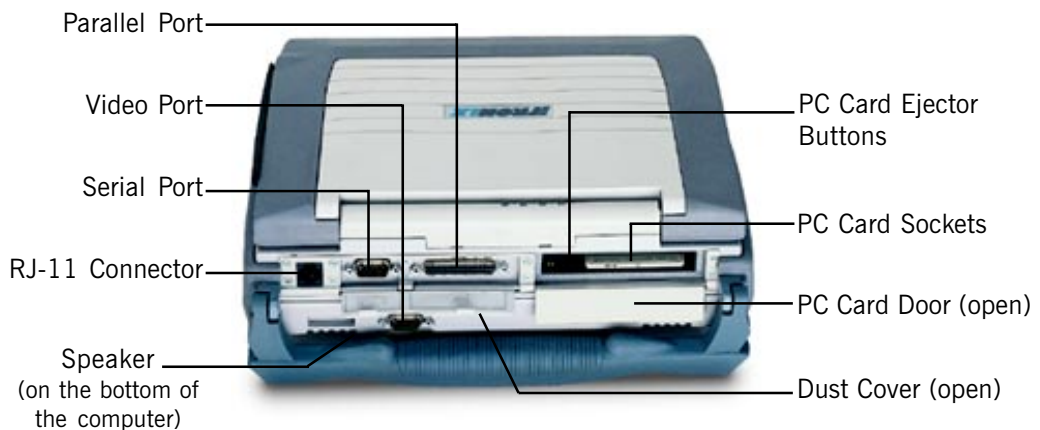



The labeled components are described below.

- **9-Pin Serial Port** This port can be used for serial communications, bar code input, connection to a printer, or other purposes.
- **15-Pin Video Port** This port can be used to connect an external monitor (see Section 9 of this manual for more information).
- **25-Pin Parallel Port** This port can be used to connect optional devices such as a printer.
- **Antenna** If you have a radio modem installed in your computer, the antenna sends and receives radio waves for this modem.
- **Audio Port** A custom port designed to connect to an adapter such as a telco or multimedia adapter.
- **Battery Door and Latches** This door covers the Nickel Metal-Hydride (NiMH) battery. If you unlatch the battery door before turning off the computer first, the system automatically powers off the unit to protect data on the hard disk.
- **Display** Display options include monochrome, color, or touch screen. The screen can be illuminated in low-light conditions by turning on the backlight or MaxBright (FN+F1).
- **Dust Covers** These covers provide added protection for the serial, parallel, USB/Audio, and video ports when they are not being used.
- **Keyboard** The keyboard is environmentally sealed and designed with 93 percent standard key spacing.
- **Microphone** The microphone allows a user to talk to another person using the internal modem.
- **Mouse Pointer and Buttons** The integrated mouse pointer is located directly below the spacebar on the keyboard. The left and right mouse buttons are located on either side of the mouse.
- **PC Card Door** This door covers the PC card sockets. When this door is open, shield the unit from all contaminants such as liquids, rain, snow, and dust.
- **PC Card Sockets** PC cards are inserted into these sockets. To remove a card, press the *ejector button* located to the left of the each socket.



- *Power Port* This port is used to connect the external power supply to the computer.
- *RJ-11 Connector* This port is used by the internal modem to communicate over standard voice grade telephone lines.
- *Speaker* Located on the bottom of the computer, the speaker provides sound for the unit. Use the FN+F6 and FN+F7 keys to adjust speaker volume.
- *USB Port* The Universal Serial Bus port is a series Type A USB connector (NT 4.0 does not support USB).

Indicator Lights

Located below the display, these lights blink or remain on or off to indicate activity on the system.

The *On/Off* light illuminates when you power on the computer; it blinks to indicate a low battery.

The *External Power* light illuminates when external power is connected to the computer. It blinks while the external power supply is charging the battery and remains on when the battery is fully charged.

The *Disk Activity* light comes on when the hard disk is spinning or processing data.

The *Radio On/Off* light illuminates when the radio modem is powered on (if your computer is equipped with a radio modem).





Standard Hardware

- National Semiconductor® 300 megahertz (MHz) GXm® processor
- 64, 128, or 256 Megabytes (MB) of Random Access Memory (RAM)
- 2 MB of internal video RAM
- Chips & Technology 69000 video chip
- Monochrome, color, or touch screen display that opens to 180 degrees
- Internal hard disk
- Weather sealed keyboard with 93 percent standard key spacing
- Video port with a standard 15-pin D connector
- USB port that is a series Type A USB connector
- 2 PC card sockets supporting two Type I or II cards, or one Type III card
- Nickel Metal Hydride (NiMH) battery
- Speaker volume adjustment keys
- Backlight toggle key and adjustment keys and display contrast (monochrome display)
- Backlight adjustment keys (color display)
- MaxBright toggle key (10.4-inch color display only)
- Automatic temperature compensation of display contrast
- Integrated mouse pointer
- AC adapter

Optional Hardware

- Stand Alone Charger
- Vehicle Adapter
- Vehicle Cradle (with or without external radio antenna)
- RF modem
- Bar code wand



- Bar code laser scanner
- Hand-held laser scanner
- External 3.5-inch floppy drive
- External CD-ROM drive
- Internal mini-PCI modem

Standard Software

- Microsoft® Windows® NT 4.0
- National Semiconductor's Virtual System Architecture™ (VSA™)
Allows XpressAUDIO™ as well as generic 16-bit emulation capabilities (SoundBlaster®16).
- Documentation in PDF format
An NT User's Manual resides on the computer's desktop as a PDF file.
- Practical Battery Tips
Lists important information about battery use and proper maintenance.
- HyperTerminal
Enables you to connect your computer to other computers and exchange information.
- XC Tray Utilities
Allows you to turn on/off the radio, T-Berd109, and microphone, and see the status of the internal modem and wireless LAN. If the internal modem or Wireless LAN are installed, they will always stay on in the XC-NT Tray Utility.



If You Have a Touch Screen

If you have a touch screen, follow the guidelines below.

CAUTION

- Always use an approved stylus.
- Never use sharp, hard, or abrasive implements on the touch screen such as ball point pens, pencils, or keys. They could damage the screen.
- To clean the touch screen panel, apply a household glass cleaner to a soft, clean, dry cloth and wipe the screen.

To use the stylus

- Slide the stylus out of its holder.
If you have a shoulder strap, you may have a slot on the strap to hold the stylus.
- To replace it, slide it into the appropriate slot point first.

If you cannot select objects accurately with the stylus, you may need to recalibrate the touch screen.

To calibrate the touch screen

- 1 From the Start Menu, select Programs, Touch, and then choose Touchscreen Controls.
- 2 Select the Calibration button.
- 3 Follow the instructions on the screen to calibrate the touch screen.



SECTION 2

Using the Keyboard and Mouse

.....



Keyboard Basics 24

Restarting the Computer 24

Primary Keys 24

Arrow Keys 27

Numeric Keypad 28

FN Keys 29

Function Keys 30

Other Keys 31

Using the Mouse 32

General Guidelines 33

Changing the Speed of the Mouse 33



Keyboard Basics

The keyboard on the mobile computer looks much like the keyboard of a typewriter and operates in almost the same way. While typewriter keys put characters on paper, the keys on the laptop enter characters in the computer and perform certain functions, depending on the application or program. Typing skills are helpful but are not essential because typing short commands or responses is easy.

The mobile computer features:

- A typewriter-style keyboard
- Twelve function keys, F1-F12
- Embedded numeric keypad
- Mouse keys
- Special Function Keys (85-Key Keyboard Only)


CAUTION You can restart the mobile computer using the following keys; however, restarting your computer while you are running applications or working in Windows may corrupt files or data.

Restarting the Computer


Press...	To do this
START+SHUTDOWN+RESTART	Reboot the computer.
Press and hold both mouse buttons for about 10 seconds and then release the buttons.	Reset the computer.

Primary Keys

Key	Description
ALT	The ALT (alternate) key is used with other keys to perform special tasks.

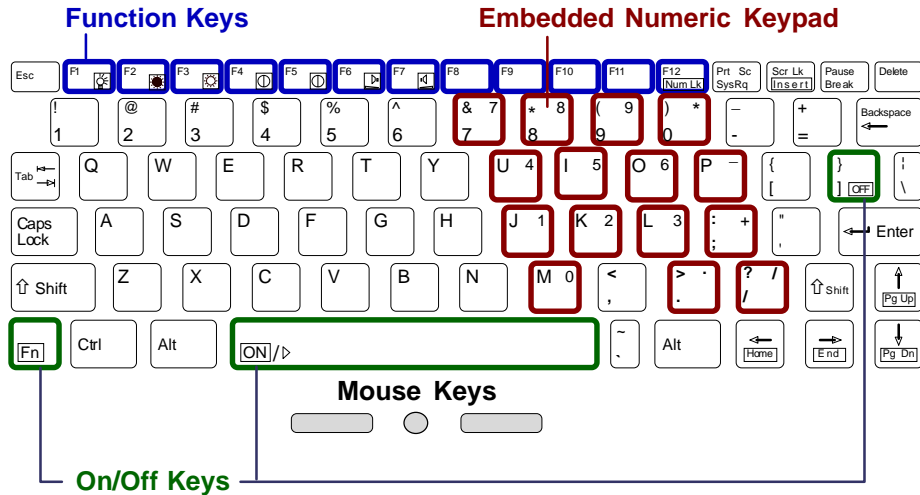


79-Key USA Keyboard

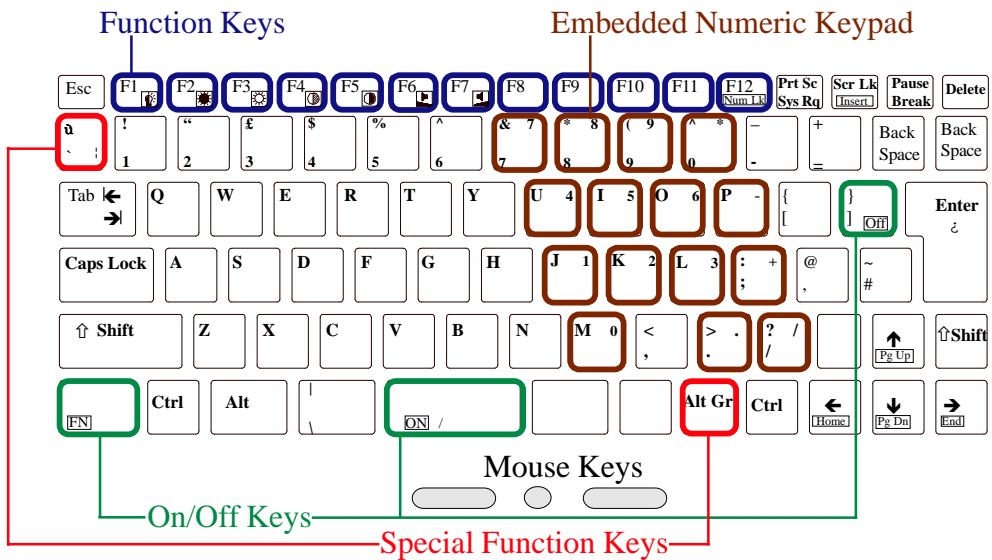

85-Key International
(UK Layout) Keyboard (Optional)



ALT GR	The ALT GR key, a special function key found on the 85-key keyboard, when pressed and held, allows you to use characters in the bottom right of a three character key.
BACKSPACE	<p>The BACKSPACE key, sometimes represented on the keyboard as a left arrow, moves the cursor one position to the left. The character to the left of the cursor is erased.</p> <p>On the 85-key International Keyboard the key to the right of the BACKSPACE key is also designed to move the cursor one position to the left. The character to the left of the cursor is erased. If other functions are designed for this key, the key will be printed with the appropriate legend.</p>
CAPS LOCK	Pressing the CAPS LOCK key one time locks keys A through Z in the UPPER CASE position. Pressing the CAPS LOCK key again returns the letters to lower case. While in the upper case mode, pressing the SHIFT key results in lowercase characters when entered. You still have to use the SHIFT key to display characters located on the upper portion of the keyboard. For example, press SHIFT+8 to type an asterisk (*), even when the CAPS LOCK key is activated.

 This icon appears on the Taskbar when Caps Lock is activated. (feature currently not available with NT 4.0).

Key	Description
CTRL	The CTRL (control) key works with other keys to perform a variety of functions.
ENTER	The ENTER key signals the computer that you have completed your entry. This is your way of telling the computer to process the information that you have entered.
ESC	The ESC (escape) key cancels the current line if you are working in a Command Prompt. In Windows, the ESC key allows you to exit a pop-up window or message box.



PRT SC	In Windows, pressing the PRT SC (print screen) key copies the current screen or window to the clipboard so you can paste it into documents. Pressing ALT+PRT SC key copies the active window to the clipboard.
SHIFT	The SHIFT key changes the keys A through Z to the UPPER CASE position. When you press an alphabetic key, the character appears as a capital letter. When you press SHIFT with other keys, the characters on the upper part of the keys appear. For example, pressing SHIFT+7 displays an ampersand (&).
FN	Function. Some special keys have been established to perform important tasks when pressed and held with the FN key. These keys are described later in this document.
SPACEBAR	Use the SPACEBAR to enter a space and move the cursor one character to the right. If you press FN and the SPACEBAR at the same time, your computer turns on. On the 85-key International Keyboard the two keys to the right of the SPACEBAR are also designed to enter a space and move the cursor one character to the right. If other functions are designed for these keys, the keys will be printed with the appropriate legends.
TAB	The TAB key moves the cursor to the next tab stop or field. Tab stops are defined by your operating system or application program. Press the TAB key to move from one field or text box to another.

Arrow Keys

The arrow keys are defined by the software application.

The UP ARROW key usually moves the cursor up one line. In some cases, you can use the up arrow to make selections from menus and scrollable list boxes.

The DOWN ARROW key usually moves the cursor down one line. In Windows, you can use the down arrow to make selections from menus and scrollable list boxes.

The RIGHT ARROW key usually moves the cursor one character position to the right.



The LEFT ARROW key usually moves the cursor one character position to the left.

In Windows, you can use the arrow keys instead of the mouse.

Key	Description
FN+END	Pressing FN+END (FN+RIGHT ARROW) activates the End key. The function of the End key is defined by the application being used.
FN+HOME	Pressing FN+HOME (FN+LEFT ARROW) activates the Home key. The function of the Home key is defined by the application with which you are working.
FN+PGDN	Pressing FN+PGDN (FN+DOWN ARROW) activates the page down key. The Page Down key is defined by the application being used. It usually causes the next screen or window to appear.
FN+PGUP	Pressing FN+PGUP (FN+UP ARROW) activates the page up key. The Page Up key is defined by the application you use. It usually causes the previous screen or window to appear.

Numeric Keypad

The numeric keypad is embedded in the keyboard area. The embedded keypad emulates the numeric keypad typically found on a full-size keyboard. It is arranged like a calculator for applications that require you to key many numbers or for use with the Calculator in the standard Windows Accessories.



Below are descriptions of the keys when NUM LK is pressed.

Key	Description
NUM LK (FN+F12)	Numeric Lock. Pressing the FN+NUM LK keys places the embedded numeric keypad in the numeric state. Pressing 0 through 9 generates numbers. Pressing FN+NUM LK again returns keys back to their original state. For example, when NUM LOCK is on, the <i>u</i> key generates a 4 when pressed. When NUM LOCK is off, the keys return to their alphabetic setting.
Minus (-)	The Minus key is used to subtract numbers.
Plus (+)	The Plus key is used to add numbers.
Asterisk (*)	The Asterisk key is used to multiply numbers.
Forward Slash (/)	The Forward Slash key is used to divide numbers.
Period (.)	The period key inserts a decimal point.
ENTER	The ENTER key generates a total for calculations you have entered.

FN Keys

On the mobile computer, you must press the FN key in combination with other keys to perform various tasks. These keys are labeled with a small box around the command. For example:

FN+PGDN



Press...	To do this
FN+ON (FN+SPACEBAR)	Turn on / Resume the computer
FN+OFF	Suspend the computer
FN+F1	Toggle the backlight on and off (monochrome display)
FN+F1	Toggle MaxBright on and off (10.4-inch color display only)
FN+F2	Dim the display backlight (on 10.4-inch color only available when MaxBright is off)



FN+F3	Brighten the display backlight (on 10.4-inch color only available when MaxBright is off)
FN+F4	Lighten the display contrast (not available on the 10.4-inch color display)
FN+F5	Darken the display contrast (not available on the 10.4-inch color display)
FN+F6	Decrease the volume
FN+F7	Increase the volume
FN+NUM LK	(FN+F12) Toggle NUM LOCK on and off (In NUM LOCK mode, the blue keys on the keyboard emulate a numeric keypad.)
FN+INSERT	Toggle Insert mode on and off
FN+END	Activate the End key. The function of the End key is defined by the application being used.
FN+HOME	Activate the Home key. The function of the home key is defined by the application with which you are working.

Press...	To do this
FN+PGDN	Activate the Page Down key. This key is defined by the application being used. It usually causes the next screen or window to appear.
FN+PGUP	Activate the Page Up key. This key is defined by the application you use. It usually causes the previous screen or window to appear.

Function Keys

Key	Description
F1 - F12	The Function keys are located at the top row of the keyboard. How you use function keys F1 through F12 depends upon the application that is running.



Other Keys

Key	Description
DEL	Delete. In Command Prompt, the DEL key deletes one character to the left of the cursor's position. In Windows, the DEL key deletes highlighted text, selected objects or graphics, and single characters of text located one position to the right of the cursor.
FN+INSERT	The Insert key is activated by pressing FN+INSERT (FN+SCR LK). The Insert key may vary with the software being used.
PAUSE	Momentarily pauses or stops the display.
SCROLL LOCK	The function of the SCROLL LOCK key depends on the software being used. It is often used to keep the cursor in one position while the text moves.



Using the Mouse

The mouse (pointer device) and its buttons (controls) are located at the bottom of the keyboard just below the space bar. The mouse, which looks like a gray eraser head, is positioned between the left and right mouse buttons at the bottom of the keyboard.

Apply light pressure to the mouse in the direction you want to move the pointer around the screen. You can move the pointer to the icon or menu you want, and click with the left, primary mouse button for most operations. Or, double-click the left, primary mouse button twice rather quickly for certain operations. Use the left, primary mouse button to either click or double-click, which is based on the task you are performing.



Mouse Keys

The following table describes the meaning of terms used with the mouse.

Term	Meaning
Point	To move the mouse until the mouse pointer on the screen points to the item of choice.
Click	To quickly press and release the left, primary mouse button. To select an icon, you must point and click on that icon. Usually, you point and click on buttons, menu bars, menu options, and drop-down list boxes.



Term	Meaning
Double-click	To click the left, primary mouse button twice in rapid succession. Pointing and double-clicking on an application icon opens or launches the program associated with the icon.
Drag	To point, click, and press and hold down the left, primary mouse button while you move the mouse. You use drag to move icons from one window or directory to another. To select text in a data entry field, you place the cursor at the beginning of the text, click on the left, primary mouse button, and drag the cursor over text. You can then delete or type over the text.

General Guidelines

The mobile computer uses a Liquid Crystal Display (LCD), which is the type of screen used on many notebook and sub-notebook computers. One problem experienced on computers with an LCD display, especially in cold environments, is that the cursor seems to “disappear” whenever the mouse is moved quickly. To improve the visibility of the mouse cursor, you should:

- Use a slow or medium speed/sensitivity level.

You can combine a higher level of acceleration with a slow or medium speed/sensitivity level. This will allow you to move the mouse cursor quickly by increasing your finger pressure, while still providing a finer degree of control when you apply minimum pressure.

Changing the Speed of the Mouse

To change the speed of the mouse, from the Start Menu select Settings, Control Panel, and then choose Mouse to make adjustments.





SECTION 3

Getting Started



.....

Introduction	36
PRECAUTIONS	36
The First Time...	37
Connecting the AC Adapter	37
Installing and Charging the Battery	38
Turning the Computer On and Off	40
Startup Problems?	41
If You Have a Touch Screen	42



Introduction

This section includes procedures for setting up and using your computer for the first time.

PRECAUTIONS

Please be aware of the following important information before you begin operating your computer.

- Data stored on floppy disks may be corrupted if the disks come in close contact with the magnetic components of the computer. Do not lay a floppy disk on top of or under the computer.
- The internal components of the computer will be damaged if exposed to contaminants. When dust covers, the PC card door, or the battery door on the computer are open, shield the unit from all contaminants such as liquids, rain, snow, and dust.
- You can lose data if you remove the battery while the computer is operating on battery power. Turn off the unit by pressing FN+OFF before you remove the battery. You can also lose data if the battery is removed for more than 5 minutes.
- **CAUTION** If you have a touch screen:
 - Always use an approved stylus.
 - Never use sharp, hard, or abrasive implements on the touch screen such as ball point pens, pencils, or keys. They could damage the screen.
- **WARNING** The computer is powered by a rechargeable Nickel Metal Hydride (NiMH) battery. Disposing of this battery improperly can cause serious personal injury. Do not crush the battery or place it in a fire. The battery is recyclable and, under various state and local laws, it may be illegal to dispose of the battery into the municipal waste stream. Check with your local solid-waste officials for details on recycling options or proper disposal.

The First Time...


Using your computer for the first time involves:

- Connecting the AC adapter to the computer
- Installing and charging the battery

Connecting the AC Adapter

To connect the AC adapter

- 1 Attach the power cord to the AC adapter, and then connect the appropriate end of the cord to an AC wall outlet.
- 2 Insert the other end of the AC adapter cable into the computer's power port on the side of the unit.

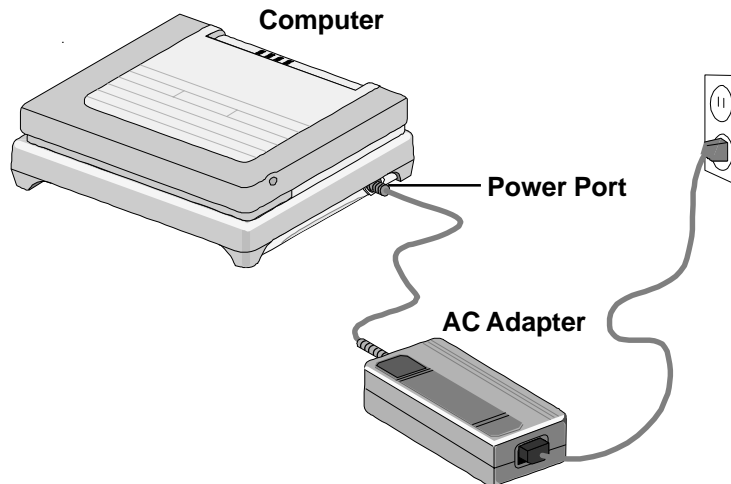


Installing and Charging the Battery

The Nickel Metal Hydride (NiMH) battery supplied with your computer should be fully charged before you operate the unit on battery power. To increase battery capacity, follow the recommendations about deep cycle discharging later in this manual.

To install the battery

- 1 Lift up the display and locate the battery door in front of the keyboard.
- 2 Open the battery door by pushing the two latches down and then sliding it away from the unit.

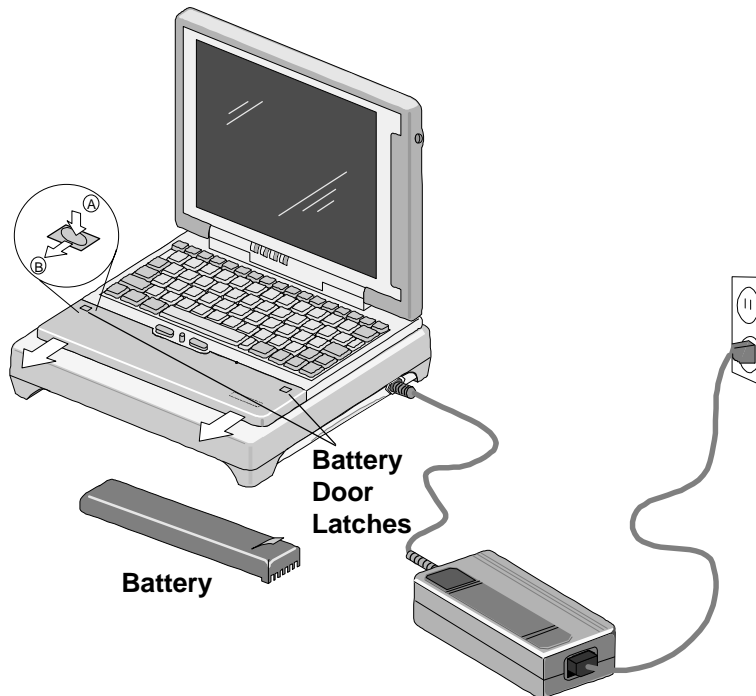


- 3 Align the battery connectors as shown in the diagram below, and then place the battery in the computer.
- 4 Replace the battery door by sliding it toward the keyboard and latching it into place.

The battery starts charging automatically.

The computer's external power light on the indicator panel blinks while the battery is charging; it stops blinking and remains on when the battery has completed charging. At moderate temperatures, approximately 21°C (70°F), the battery will be fully charged in three to four hours. In extremely hot or cold temperatures, it may take up to 16 hours to charge the battery.

Note Keep the display tilted open while the battery is charging to help prevent the battery from overheating.

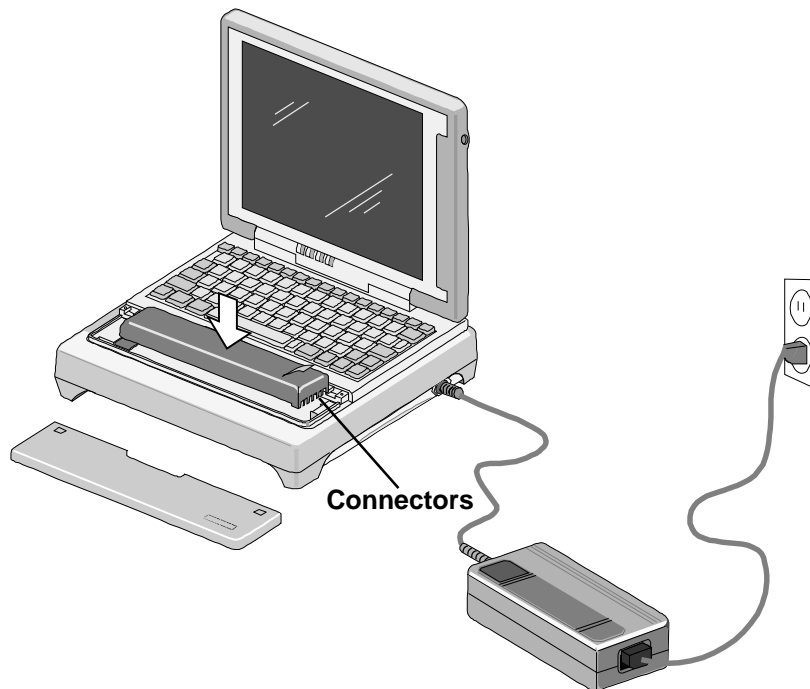



Turning the Computer On and Off

You can operate the computer while the battery is charging.

To turn on the computer

- 1 Press FN+ON (FN+SPACEBAR).

Note: If the computer does not power on, restart it by holding down both mouse buttons for at least 10 seconds, and then releasing the buttons.

- 2 Adjust the display contrast control for a sharp, clear display.

- FN+F4 lightens the display
- FN+F5 darkens the display

Note: If you have a 10.4-inch color display, these keys are not active.

- 3 Adjust the backlight if necessary.

- On a monochrome display, pressing FN+F1 toggles the backlight on and off.
- On a color display, the backlight is on whenever the computer is running. Pressing FN+F1 toggles the MaxBright feature on and off.

- 4 Make sure the date and time are correct by choosing the Date/Time icon from Control Panel and making any needed changes.

To turn off the computer

- Press FN+OFF.

When you power the computer back on, the system resumes from where you left off. To conserve battery power, turn off the computer whenever you are not using it.

Note The system automatically turns off (suspends) the unit after a period of continuous idle time. You can resume where you left off by pressing FN+ON.



Startup Problems?

If your computer does not operate, try these solutions.

- Connect the AC adapter to charge the battery if it is not charged.
- If the AC adapter is connected, make sure the electrical outlet you are using works.
- Check to make sure the battery is installed and charged properly.
- Check the battery door latches to make sure the door is closed and secured.
- If the computer does not turn on, restart the system by holding down both mouse buttons for at least 10 seconds and then releasing the buttons.
- If the battery doesn't begin charging, remove the battery, connect the AC adapter, and turn on the computer by pressing FN+ON. Reinstall the battery. The indicator light blinks while the battery is charging.

Appendix B, "Troubleshooting," lists additional solutions you can try.

CAUTION

- Always use an approved stylus.
- Never use sharp, hard, or abrasive implements on the touch screen such as ball point pens, pencils, screw drivers or keys. They could damage the screen.
- To clean the touch screen panel, apply a household glass cleaner to a soft, clean, dry cloth and wipe the screen. A soft, dry cotton cloth may be used to eliminate fingerprints on the screen if household cleaner is unavailable.



If You Have a Touch Screen

To use the stylus

- Slide the stylus out of its holder.

If you have a shoulder strap, you may have a slot on the strap to hold the stylus.

- To replace it, slide it into the appropriate slot point first.

If you cannot select objects accurately with the stylus, you may need to recalibrate the touch screen.

To calibrate the touch screen

- 1 From the Start Menu, select Programs, Touch, and then choose Touchscreen Controls.
- 2 Select the Calibration button.
- 3 Follow the instructions on the screen to calibrate the touch screen.



SECTION 4

If You Have a Radio Modem



.....
Introduction 44

Before You Start: Register! 44

Motient or Cingular 44

Cellular CDPD 44

GSM 45

Wireless LAN (WLAN) 46

What Can I Do with My Radio Modem? 47

Using the Integrated Radio Modem 48

Antenna Positioning 48

Serial Port Settings 48

Radio Indicator Light 49

**Factory Installed Windows NT 4.0 Mobile Computer
Tools and Radio Tools 50**

User Installable Cellular/CDPD Radio Software 51

GSM International Radio Software 51

Wireless LAN 52

Additional Documentation 53

W E K N O W T H E R O A D



Introduction


If your computer is equipped with a radio modem, you must register it with the appropriate network provider. There are also a few things to remember when using your radio.

Before You Start: Register!

Before using your radio modem you must sign up for service with a wireless network provider.


Motient or Cingular

If you are registering with the Motient wireless network or the Cingular Mobile Data MOBITECH network, your Radio Modem ID (RID) will be printed on a label as shown below. When you register, you will need to furnish the network provider with your modem ID and the computer's serial number. This information is printed on the bottom of the computer.

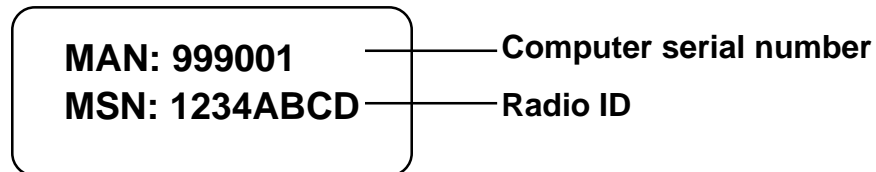

Cellular CDPD

If you are registering with a Cellular provider for CDPD service, your modem's Equipment Identifier (EID) will be printed on a label as shown below.

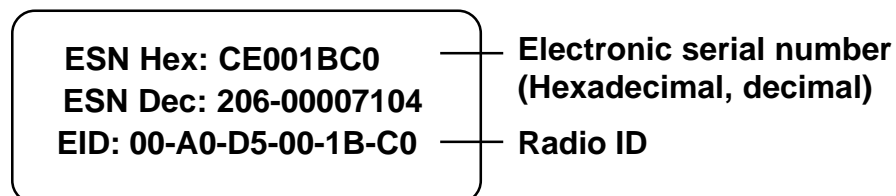



CAUTION Your modem generates radio frequency (RF) signals. Do not operate the radio modem before you have registered it with a network provider. The network will not accept a signal from an unregistered device. Unauthorized use of your radio modem may interfere with local business or government communications, resulting in fines or other legal action.

GSM

To use your GSM International Radio Software you will need to install the GSM modem, the GSM software and a 3V Subscriber Identity Module (SIM) Card.

To install the Wavecom GSM modem, do the following:

- 1 Go to Start, Settings, Control Panel and click on Modems.
- 2 Click Add.
- 3 Check the box “Don’t detect my modem, I will select it from a list”, then click Next.
- 4 Select the “Manufacturers” *Wavecom* name, and the “Models” *Wismo2C*, then click Next.
- 5 Select to install your modem as “Selected ports” on COM4 and click Next.
- 6 Select Finish, then Close.
- 7 You may have a window titled “Modem Setup” that pops up and says:
“Dial Up Networking needs to be configured because the list of installed modems has changed. Would you like to do this now?”
Select Yes.
- 8 You will have a window pop up that is titled “Remote Access Setup”. Select Add. A window will pop up titled “Add RAS Device” with “COM4 - Wismo2C”. Select OK.
- 9 Select Yes when it asks you to restart your computer.



To install your GSM software, do the following:

- 1 Go to Start, Radio Tools, then click on Install GSM.
- 2 Click OK when the install dialogue box asks for the file rasdd.dll. Point it to c:\i386, and click OK again.

To install or replace a SIM card, do the following:

- 1 Shut down the computer and disconnect external power.
- 2 Open the battery door and remove the battery.
- 3 Open the SIM door with a Philips head screwdriver and install your SIM Card by sliding the card into the cover.
- 4 Re-install the SIM door, the battery and the battery door.

Wireless LAN (WLAN)

Your WLAN provides location-independent network access and connectivity within your WLAN coverage area. It is assumed that in most cases your Information Systems (IS) Department will have performed the necessary equipment setup and configuration required. Generally when you start the computer and it boots into Windows, you may be presented with a network Login Window requiring user ID and password. If the computer has not been setup, please contact your local help desk or system administrator for further assistance.

If the Wireless LAN option is installed, it will always stay on in the XC-NT Tray Utility.

Note Unused WLAN adapters may be listed in the Control Panel Network component list. These unused WLAN adapters have no negative functional impact to the system. If you have a Lucent WLAN, do not delete the unused Cisco WLAN adapter. You will need this to set up tools (Internet Connection Sharing), allowing you to get an IP address.



What Can I Do with My Radio Modem?

The radio modem in your mobile computer gives you the freedom to send and receive data without connecting to the wired telephone system or traditional wired networks. Common uses of radio communications include dispatching, personal messaging, and accessing remote host computer systems.

Cellular radio modems offer an additional capability to use your computer as a cellular phone. When you are not sending or receiving data, you can switch the modem into voice mode using your mobile computer's Speaker Phone program. GSM modems offer voice, data, fax, and short messaging system (SMS) and WLAN wireless network cards offer wireless connections to your network


The exact capabilities of your radio modem are determined by the communications software you are using, and the services provided by your wireless network provider. Refer to the documentation provided with your communications software for information on using the program with a radio network. Your network provider can answer questions regarding specific network features, host connectivity, registration options, billing, and geographic coverage areas. In some cases, your network provider can also assist you with selecting modem setup options for your communications software.

Using the Integrated Radio Modem


This section provides basic information on operating your mobile computer's integrated radio modem.

Antenna Positioning

The mobile computer radio antenna has maximum sensitivity in the full vertical upright position. For best radio reception, position the antenna as shown below. You can fold the antenna down while the radio is not being used.

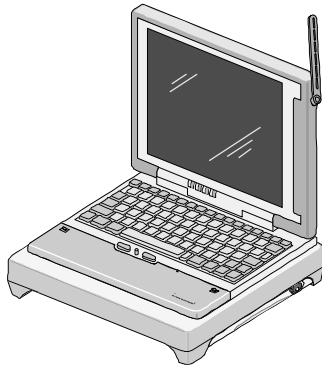

While the display is open

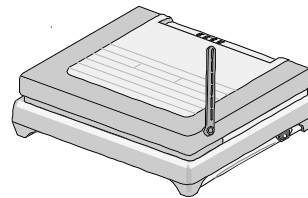

While the display is closed

Serial Port Settings

 
The mobile computer's integrated radio modem is accessed through the COM4 serial port. When installing your communications software, make sure to configure the software to use COM4 with Hardware Flow Control (RTS/CTS) enabled. (This is true for all radio modems except WLAN).

CAUTION While the radio is operating, its antenna must be at least 5 cm from all persons in order to comply with the FCC RF exposure limit. Radio operators must make sure their radio unit is in compliance with these FCC regulations. See Section 8 for important information about vehicle-mounted antennas.



Radio Indicator Light

Indicator lights located below the computer display report current mobile computer activities. The indicator light at the far right shows radio power status and message wake up activity.



There are three modes reported by the radio indicator light:

Off	On	Blinking
Radio power is off	Radio power is on. For GSM, it means the computer is out of range	For GSM, a slow blink means the computer is in range. A fast blink means the radio connection is active.



Factory Installed Windows NT 4.0 Mobile Computer Tools and Radio Tools

The mobile computer includes factory installed software that makes it easy to verify the operation of your integrated radio modem and radio terminal. It also includes help files for installing and using the CardWizard, PowerProfiler and Travel 120 Floppy drive. These programs are located in the Mobile Computer Tools folder.



Additionally, it includes files to install and use GSM, Wireless LAN, and CDPD. These are located in the Radio Tools folder.





User Installable Cellular/CDPD Radio Software

If you are using the Sierra Wireless SB300 (CDPD/Cellular) radio modem, you will need to install the Sierra Wireless Watcher program. To install Sierra Wireless Watcher software, select Radio Tools from the Start menu and click on the “Install CDPD” icon. Then follow the onscreen instructions.

TIP If the computer’s battery becomes low, the system automatically disables the radio and extinguishes the radio indicator light. The system will automatically restore the radio hardware and indicator light after the low battery condition is corrected.

GSM International Radio Software

Phone Tools / WinPhone

You can set your GSM Service Center, make a voice, fax or data call, or make a Dial-Up Networking connection from the Phone Tools / WinPhone application. When Phone Tools / Win Phone is opened, the “Status” light is orange and displays the word “Stby” in the window. When GSM is available it turns green and displays the word “Cell”.

For information on installing and using PhoneTools / WinPhone consult the PhoneTools / WinPhone User’s Guide in the Radio Tools folder on your desktop.

Additional Information

For more detailed information about your GSM International Radio Software see the Itronix Technical Bulletin, *Using your GSM Radio Software for the X-C 6250 Pro Computer*.



Wireless LAN

Your Cisco Aironet 340 WLAN PC card is integrated in your X-C 6250 Pro (300) computer and can achieve performance, throughput and security comparable with wired Ethernet connections. Once installed, you do not need to do anything to turn the WLAN on since it is always on.

To restart the WLAN card:

- 1 Verify that the unit is not shutdown or suspended. If the Radio LED (on the right) is not on and there is no PCMCIA card icon in the tasktray, then the card has been deactivated.
- 2 Perform a Suspend/Resume. This may be done from the Start menu or by depressing FN+OFF on the keyboard. Wait about 10 seconds for the screen to turn black, then depress FN+ON and wait until the display comes on. Verify that the Radio LED is illuminated and a PCMCIA icon is displayed in the tasktray.

To install WLAN Utilities:

- 1 Click Start, Programs, Radio Tools, then select Install WLAN Utilities.

Note If you have the Cisco utilities installed and have any of them open when you Suspend, or if your computer goes into inactivity suspend/resume, you will get a message from the Cisco Utilities/Diagnostics "340 Series Removed at [time]" - where time is the current time at the removal from service. This is normal. The wireless connection will still work. Click OK and restart your diagnostic utilities.

- 2 Follow the on-screen instructions.

Additional Information

For more information about WLAN see the *WLAN User's Guide*, located on your computer in Adobe Acrobat format or see the Itronix Technical Bulletin, *Itronix X-C 6250 Pro (300) Cisco Wireless Local Area Network (WLAN)*.



Additional Documentation

If you are developing a custom radio application for the mobile computer, you may need to order additional documentation describing the programming interface to your radio modem. The following is a list of documents available for purchase from Technical Publications, Itronix Corporation, P.O. Box 179, Spokane, WA 99210.

Motorola RPM Native Mode Interface R1.1

Itronix Part No. 98-0008-001

Native Control Language (NCL) interface specification for developing communication applications using the ARDIS networks.

Motorola Mobile Asynchronous Communications (MASC) Interface R1.0

Itronix Part No. 98-0009-001

MASC serial interface specification for developing communication applications using the Bell South Wireless network.

Sierra Wireless SB300 Series Modem User Guide

Itronix Part No. 98-0013-001 & 98-0012-001

AT command set and SLIP interface specification for use with the Sierra Wireless SB300 Series modem (CDPD/Cellular/PSTN networks).

Sierra Wireless PocketPlus Developer's Toolkit

Itronix Part No. 98-0005-001

Programming information for designing and developing TCP/IP, UDP, and Winsock applications on the CDPD network using the Sierra Wireless SB300 Series modem.





SECTION 5

Customizing Settings



.....

Introduction 56

Using the System Configuration Utility 56

Accessing the SCU 57

Setting the COM4 IRQs 58



Introduction

This section shows you how to access the System Configuration Utility (SCU) in order to customize settings for your own personal preference. It also covers viewing and changing IRQ settings.

CAUTION Changing settings may cause the mobile computer to operate incorrectly. Change default settings only if you are instructed to do so.

Using the System Configuration Utility

The System Configuration Utility (SCU) allows you to change default settings for your hardware options and power management. The default settings should not be changed unless you are installing new hardware or adding memory. Otherwise, your existing hardware may not operate properly.

You can change the power management options based on personal preference. For example, the computer enters suspend mode after 2 minutes if it does not detect any keyboard or mouse activity. If you want to change this time-out setting, use SCU to make this change. Other power management options you may want to change include:

- When the system turns off the backlight (or MaxBright)
- When the hard disk is placed in standby mode
- How power is managed for the COM ports
- Whether the computer resumes when the radio modem detects a ring signal
- Whether or not power management is enabled

Important Changing or disabling power management options can decrease battery life. Set these options at levels that will use the least amount of battery power.



Accessing the SCU

To access the System Configuration Utility

- 1 From the Start Menu, select Shut Down and then choose “Restart the computer.”
- 2 Read the text on the screen while the computer is restarting and press CTRL+ALT+S as soon as the following line appears:
“<CTRL+ALT+S> to enter System Configuration Utility.”
- 3 Follow the instructions at the bottom of the screen to move around in this utility and change the items you want to customize.
- 4 To exit the utility, press ALT+E (or select Exit from the menu), and then choose the appropriate option.

This utility provides additional options in the Exit menu:

“Default Settings” loads default settings defined by the system.

“Factory Defaults” loads the settings defined at the time of manufacture.

Note You may want to reset these parameters to their factory defaults and then customize the settings. First write down the existing settings in case you need to refer to them.

Note When upgrading the BIOS in the field you should use Factory Defaults before setting user settings.



Setting the COM4 IRQs

Some modem software will not work with standard communication (COM) port and Interrupt Request (IRQ) settings. Follow these guidelines for the mobile computer:

COM Port	IRQ Setting	Change to	Used for
COM4	IRQ 3	IRQ 10	GSM, Cingular, Motient, CDPD

The IRQ must be set the same in Windows NT and in the SCU. Follow the procedures below.

To view or change the IRQ settings in the SCU

- 1 From the Start Menu, select Shut Down and then choose "Restart the computer."
- 2 Read the text on the screen while the computer is restarting, and press CTRL+ALT+S as soon as the following line appears:
" <CTRL+ALT+S> to enter System Configuration Utility."
- 3 Select Components by pressing ALT+C.
- 4 Select COM Ports.
- 5 Press TAB to move to COM4 settings.
- 6 Use the UP and DOWN ARROW keys to switch between IRQ values, and then press the SPACEBAR on the desired setting.
- 7 Choose OK to save the settings.

To view the Windows NT 4.0 IRQ settings

- 1 From the Start Menu, select Programs, Administrative Tools, and then choose NT Diagnostics.
- 2 Choose the Resources tab, then Devices, then select Serial.

NOTE Windows NT moves COM4 to COM3 after boot-up. Therefore, even though the SCU settings are for COM4, Windows NT sees and uses this port as COM3.



To check IRQ's currently assigned by Windows NT 4.0:

- 1 Log on as Administrator.
- 2 Select Start / Programs / Administrative Tools / Windows NT Diagnostics
- 3 Select Resources tab
- 4 Select IRQ button





SECTION 6

Managing Batteries and Power

.....



Introduction	62
Practical Battery Tips	62
Conserving Power and Extending Battery Life	66
Low Battery Warnings	67
Power-saving Features	67
Removing and Replacing Batteries	69
Charging Batteries	71
Battery Storage and Care	72
Disposing of Batteries	73



Introduction

The mobile computer uses a Nickel Metal Hydride (NiMH) battery. This section provides some important information about these types of batteries and ways to extend their life.

Practical Battery Tips

Tip 1. Getting the most from your battery

- Your battery will last longer during the day if it is used and charged between 10°C and 30°C (50°F and 86°F).
- Charge the battery nightly where the temperature will remain around 20°C (68°F).
- Set up your system to automatically suspend (turn off) while the battery is charging.

This can be done by enabling the “Suspend on AC Power” option under the Power, Suspend/Resume Control menu in the System Configuration Utility (SCU). This allows the system to automatically suspend while it is connected to external power.

Note Even the best maintained batteries eventually need to be retired. They simply degrade from continuous use. Consider replacing your battery if you are not getting the usage you need from it.

Tip 2. Conserving power and extending battery life

- Turn off your computer by pressing FN+OFF whenever you are not using it.
- Make sure your system suspends automatically. PC Cards, custom applications, or modified system settings can affect this.

Note An open file or directory in Windows Explorer will not allow the computer to go into suspend mode.



- Unplug peripherals and remove peripheral and network PC Cards when you are not using them.
- Certain devices and PC cards will prevent the unit from suspending when they are inserted into a PC card slot on the unit. If they are not required, and the unit will be used intermittently, the battery will drain unnecessarily. They should be removed when not needed. To do this, one must first shutdown the unit, remove the card, and then reboot.
- External floppy and CD-ROM drives, as well as PC card storage devices, will prevent the unit from going into suspend if the unit is accessing them. For example, if a window is open to a file or directory stored on a PC card, the unit will not suspend. Close the file or directory when not required.
- If you have a monochrome display, turn off the backlight when you do not need it.
- If you have a 10.4-inch color display, turn off MaxBright when you do not need it.
- Use the SCU to set power management options at levels that will consume the least amount of battery power (see Section 5, “Customizing Settings,” for more information).
- Use the AC adapter or vehicle adapter whenever possible.
- Avoid exposing batteries to extremely hot or cold temperatures for long periods.
- The mobile computer display does not require a screen saver. Using screen savers consumes valuable battery power and is discouraged unless the unit is connected to external power and an external monitor.
- Store the battery within the recommended temperature range: 10°C to 30°C (50°F to 86°F).

Tip 3. Determining when your battery has finished charging

- Under normal circumstances, your battery is finished charging when the external power indicator light stops blinking and remains solid.



To prevent possible damage to the battery, the system will not allow a charge if the battery temperature is above 50°C (122°F) or below 5°C (41°F), such as in a closed, unattended vehicle. In this case, your battery may not be fully charged.

- If you charge your battery every night, it is finished charging when the Power Profiler application shows a full gas gauge even though the external power indicator light may still be blinking.

If your battery is new, or if you have not used it for a week or more, the gas gauge may be inaccurate because the battery naturally discharges over time. In this case, wait until the external power indicator light stops blinking and remains solid.

Tip 4. How your battery behaves in warm and cold conditions

In warm conditions

- When using a battery in warm conditions, the battery capacity will drain faster. In general, as the temperature rises, it is possible for the battery to drain 20 percent faster at 40°C (104°F) and 50 percent faster at 45°C (113°F).
- To prevent possible damage to the battery, the system will not allow a charge if the battery temperature is above 45°C (113°F), such as in a closed, unattended vehicle during the summer.
- If possible, charge the battery in a location with a moderate temperature of around 20°C (68°F). The battery won't last as long during the day if charged at higher temperatures because heat slows down the battery's chemical reactions. Also, if the battery becomes too hot while charging, the charge mode automatically switches from Fast Charge to Slow Charge. Slow Charge takes much longer to finish charging the battery.
- When charging the battery, leave the display tilted open and allow unrestricted airflow so excess heat can escape from the battery compartment and prevent the battery from overheating.



In cold conditions

- When using a battery in cold conditions, the battery capacity can drain 30 percent faster at 4°C (39°F) and 70 percent faster at -11°C (19°F).
- To prevent possible damage to the battery, the system will not allow a charge if the battery temperature is below 5°C (41°F), such as in a closed, unattended vehicle during the winter.
- If possible, charge the battery in a location with a moderate temperature of around 20°C (68°F). The battery won't last as long during the day if charged at lower temperatures because cold slows down the battery's chemical reactions.

Tip 5. Preventing data loss

How to prevent data loss when removing the battery or storing your computer

- You can lose data if you remove the battery while the computer is operating on battery power. To prevent this, turn off the unit by pressing FN+OFF before you remove the battery.
- The computer is equipped with enough internal backup power to maintain memory contents for about 5 minutes each time you exchange batteries. Be careful not to exceed this 5 minute limit when you replace the battery.
- If you plan to store your computer for more than 30 days, shut down your computer to save data to the hard disk, and then press FN+OFF to turn off the computer. Remove the battery before storing the computer.

Tip 6. Returning batteries for service

- When shipping batteries, use non-static packing material to reduce the possibility of static discharge. Placing the battery in a non-static bag is ideal; however, wrapping the battery in paper or newspaper is also acceptable.
- Contact your supervisor or your organization's help desk for correct shipping procedures and information.



Conserving Power and Extending Battery Life

Follow these guidelines to get the most use from your batteries and extend their life.

- Turn off your computer by pressing FN+OFF whenever you are not using it.
- Make sure your system suspends automatically. PC Cards, custom applications, or modified system settings can affect this.
- Unplug peripherals and remove peripheral and network PC Cards when you are not using them.
- If you have a monochrome display, turn off the backlight when you do not need it.
- If you have a 10.4-inch color display, turn off MaxBright when you do not need it.
- Use the SCU to set power management options at levels that will consume the least amount of battery power (see Section 5, "Customizing Settings," for more information).
- Use the AC adapter or vehicle adapter whenever possible.
- Avoid exposing batteries to extremely hot or cold temperatures for long periods.
- The mobile computer display does not require a screen saver. Using screen savers consumes valuable battery power and is discouraged unless the unit is connected to external power and an external monitor.
- If you plan to store the computer for more than 30 days, remove the battery.
- Store the battery within the recommended temperature range: 10°C to 30°C (50°F to 86°F).



Low Battery Warnings

When the battery becomes low, the mobile computer beeps and the battery indicator light blinks. If you are running Windows, a warning message also appears on the screen periodically. Unless you connect external power or replace the battery within a reasonable time, the system turns off the computer automatically. If the battery voltage becomes very low, the computer shuts off and you cannot turn it back on until you correct the low battery condition.

Power-saving Features

Suspend

Suspend mode turns off the system if there is no activity for a period of time. The computer also enters suspend mode if the battery capacity becomes critically low and external power is not connected or the battery is not replaced. Inactivity Suspend will not happen when certain cards are inserted into a PC card slot on the unit. Shutdown the unit, remove the card, then reboot.

Note Some systems do not automatically enter suspend mode when they are connected to external power. Systems that can suspend on external power have a user-defined option in the System Configuration Utility (SCU) that enables or disables this feature. See Section 5 for information about accessing the SCU.

By default, the computer enters suspend mode after two minutes of inactivity. This “time-out” setting can be changed in the System Configuration Utility (see Section 5, “Customizing Settings”). You can place the computer in suspend mode manually by pressing FN+OFF. Files and data are retained and you can resume where you left off by pressing FN+ON.



Hard Disk Standby

To conserve power, the hard disk switches to standby mode after a period of inactivity and resumes when it detects activity.

Display

To conserve power, the system turns off the display when the computer enters suspend mode. It automatically turns on when the computer is turned back on.

Backlight

The display backlight can be turned on to make information on the screen easier to read in low-light situations. To conserve power on the monochrome display only, the system automatically turns off the backlight after a period of inactivity. You must manually turn the backlight on by pressing FN+F1 when you resume. You can change the time-out setting for the backlight in the System Configuration Utility (SCU). See Section 5, "Customizing Settings," for more information.

On a color display, the backlight is always on whenever the computer is running. See "About the Display Backlight" below.

About the Display Backlight

10.4-inch color

- Backlight is always on when the computer is running
- FN+F1 toggles MaxBright on/off
- FN+F2 dims
- FN+F3 brightens
- FN+F2 and FN+F3 are active only when MaxBright is off

10-inch monochrome

- FN+F1 toggles the backlight on/off
- FN+F2 dims
- FN+F3 brightens



MaxBright

MaxBright is a feature available on 10.4-inch color display that intensifies the backlight to its maximum brightness. Pressing FN+F1 toggles MaxBright on and off. The system automatically turns off MaxBright after a period of inactivity, and this time-out setting can be changed in the System Configuration Utility (SCU). See Section 5, “Customizing Settings,” for information about accessing the SCU.

Cycle Discharging” later in this section.

To learn more about this program, refer to its online help.


Removing and Replacing Batteries

Replace the battery in your computer with a new one if your existing battery does not hold a charge. If your battery is drained, replace it with a charged one. When operating on battery power, the computer is equipped with enough internal backup power to maintain memory contents for about 5 minutes each time you exchange batteries.

CAUTION You can lose data if you remove the battery while the mobile computer is operating on battery power. Turn off the computer by pressing FN+OFF before you remove the battery. You can also lose data if the battery is removed from the unit for more than 5 minutes.

To remove and replace the battery

- 1 Turn off the computer by pressing FN+OFF, and then locate the battery door in front of the keyboard.
- 2 Push the two battery door latches down to unlatch the door and slide it away from the unit (C).
- 3 Grasp the ribbon and pull up on the battery to remove it.
- 4 Align the battery connectors and place a new battery in the computer (D).
- 5 Replace the battery door and make sure it is securely latched.

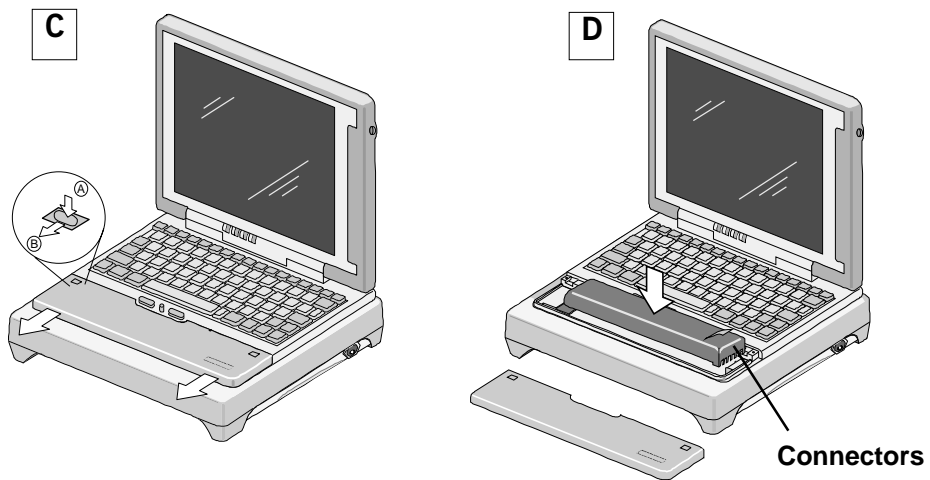


Charging Batteries

To maintain power and prevent data loss from a low battery, charge the battery daily. You can use several external power or charging devices approved for use with the mobile computer. The AC adapter comes with your computer, but you also can use other optional devices such as the vehicle adapter, the stand alone charger, or the vehicle cradle. See Section 8, "Optional Equipment and Accessories," for more information about this equipment.

To charge the battery using the AC adapter

- 1 Connect the appropriate end of the AC adapter to an AC wall outlet.
- 2 Connect the other end to the computer's power port on the side of the unit.
- 3 Install the battery in your computer and make sure the battery door is latched and secured.

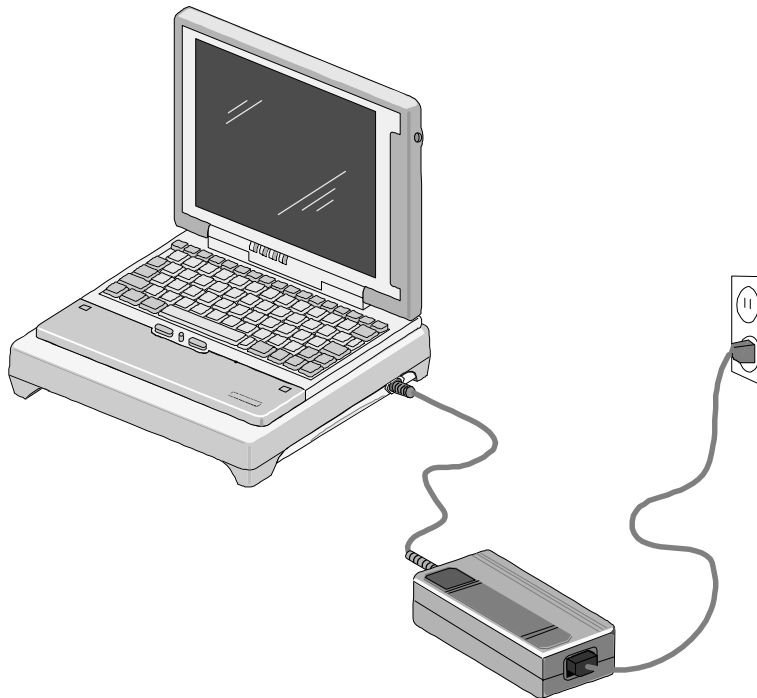



Leave the display tilted open and allow unrestricted airflow while the battery is charging. This allows excess heat to escape from the battery compartment and helps prevent the battery from overheating.

The battery starts fast charging automatically, and the external power indicator light blinks while the battery is charging. At moderate temperatures, around 70 degrees Fahrenheit, the battery will complete charging in 3 to 4 hours. Under extremely cold or hot temperatures, however, the battery can take up to 16 hours to fully charge.

Battery Storage and Care

Follow these guidelines to maintain performance of NiMH batteries.

- Avoid exposing batteries to extremely hot or cold temperatures for long periods. To prevent possible damage to the battery, the mobile computer does not allow the battery to charge if the internal temperature of the battery gets too low ($< 5^{\circ}\text{C}$ or $< 41^{\circ}\text{F}$) or too high ($> 50^{\circ}\text{C}$ or $> 122^{\circ}\text{F}$).
- Charge the batteries nightly where the temperature will remain around 20°C (68°F).
- Store the batteries within the recommended temperature range: 10°C to 30°C (50°F to 86°F).
- After storage, or periods during which the battery has not been used, deep cycling it up to four times in succession may increase its capacity. You may want to do this over consecutive weekends since each deep cycle process can take up to 40 hours. After this initial conditioning, maintain battery capacity by deep cycling at the recommended frequency.



Disposing of Batteries

WARNING The mobile computer is powered by a rechargeable Nickel Metal Hydride (NiMH) battery. Disposing of the battery improperly can cause serious personal injury. Do not crush the battery or place it in a fire. The battery is recyclable and, under various state and local laws, it may be illegal to dispose of it into the municipal waste stream. Check with your local solid-waste officials for details on recycling options or proper disposal.





SECTION 7

Using PC Cards



.....

Introduction	76
Inserting and Removing a PC Card	76
Transferring Files Using PC Cards	78
Using Bootable PC Cards	78



Introduction

A PC card is a self-contained, credit card-sized device that can be used to store programs, data, or to expand the capabilities of your computer. The mobile computer accepts Type I, Type II, and Type III PC cards.

Inserting and Removing a PC Card



The PC card sockets are located on the back of the computer.

CAUTION The internal components of the mobile computer will be damaged if exposed to contaminants. When the PC card door is open, shield the unit from all contaminants such as liquids, rain, snow, and dust.

To insert a PC card

- 1 Provide a suitable environment for the computer, and then open the PC card door by pushing in on the door and sliding the latch down.

Push in on the door and slide the latch down

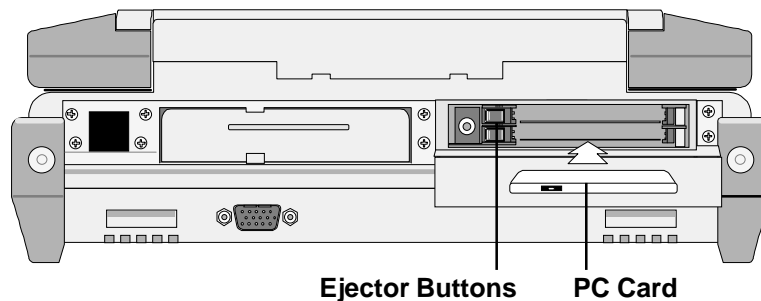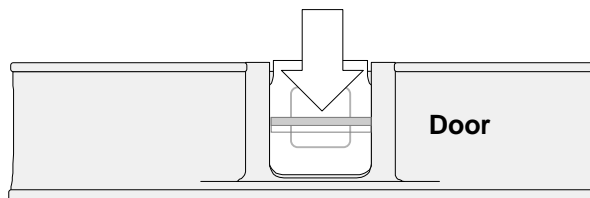



Important Make sure the card is positioned correctly when you insert it. Attempting to insert the card upside down can damage the ejector button, and this may cause the button to malfunction when you remove the card.

- 2 Position the card and carefully slide it into the card socket until it is firmly seated.
- 3 Close the PC card door and push the latch up to secure it.

To remove a PC card

- 1 Before you remove the card, right click on the card wizard icon in the system “tray” area of the screen (near the clock in the lower right corner), and choose “Stop [*card name*] card.” If the card is not highlighted the system must be shut down to remove the card.
- 2 Provide a suitable environment for the computer, and then open the PC card door by pushing in on the door and sliding the latch down.
- 3 Press the ejector button.
- 4 Carefully slide the card out of the socket.

Tip Use one finger to press down lightly on top of the card, and then slide it out. If the ejector button malfunctions when you press it, release the button and press it again.

Warning Some PC cards are not “hot swappable,” removable while the system is operating. Removing these while the system is operating will shut down the unit.



Transferring Files Using PC Cards

To transfer files using PC cards

This method of transferring files requires that the computer you are exchanging files with is also equipped with a PC card socket.

- 1 Insert a PC memory or ATA card into the PC card socket of the source computer.
- 2 Copy the file(s) you want to transfer from the hard disk to the PC card.

The drive letter assigned to the card depends on the hardware configuration of the computer.

- 3 Remove the card and insert it into the card socket of the destination computer.
- 4 Copy the file(s) from the PC card to the hard disk of the destination computer.

Using Bootable PC Cards

The mobile computer normally boots from the internal hard disk (drive C); however, it might be necessary to boot from an alternate boot device if the computer's hard disk becomes corrupted or fails, or if you want to boot another operating system.

You can boot from an approved external floppy disk drive (see Section 8 for more information), or you can use an SRAM PC Card or ATA Flash Card. Boot precedence is first from the SRAM PC card (drive C), then the external floppy (drive A, removable), and then the internal hard drive.

Important Do not use FN+OFF to suspend the computer if you have booted from a PC Card rather than the computer's internal hard disk. When you have finished using the card, remove it from the computer and then press CTRL+ALT+DEL to restart the system.



SECTION 8

Optional Equipment and Accessories

.....



Connecting a Printer	80
Connecting an External Monitor	81
Connecting an External Mouse	81
PC Card External Floppy Disk Drive	83
Using an External CD-ROM	85
Stand Alone Charger	86
Vehicle Adapter	87
Vehicle Cradle	91
Surge Protection	95



Connecting a Printer

You can connect a printer to the mobile computer with the parallel or serial cable supplied with your printer. This allows you to print documents that are stored in the computer. See your printer's user's manual for more information.

To connect a printer to the parallel port

- 1 Open the I/O dust cover on the back of the computer and connect the male end of the parallel cable to the 25-pin connector (the larger of the two connectors).

This connector is referred to as LPT1.


- 2 Connect the other end of the cable to your printer.
- 3 Follow the instructions for your application to use the printer.

To connect a printer to the serial port

- 1 Open the I/O dust cover on the back of the computer and connect the male end of the parallel cable to the 9-pin connector (the smaller of the two connectors).

This connector is referred to as COM1.

- 2 Connect the other end of the cable to your printer.
- 3 Follow the instructions for your application to use the printer.

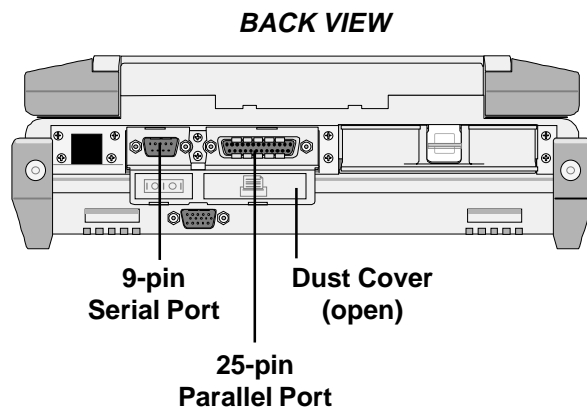



Connecting an External Monitor

The computer has a “Display Selection” feature that allows you to switch between the computer display, an external monitor, or both as the active display.

To use an external monitor, first connect the monitor cable to the 15-pin video port on the back of the computer and then follow the procedure below.

To select a display

- 1 From the Start Menu, select Settings, Control Panel, then double-click the Display Icon.
- 2 From Display Properties, select the Chips tab.
 - “LCD Panel” to use the computer display
 - “CRT / LCD” to use both displays
 - “CRT” to use the external display only
- 3 Choose OK.

Connecting an External Mouse

You can connect an external mouse to the serial port of the computer. First select the appropriate mouse manufacturer and model as described below, and then enable the communication port by making changes in the System Configuration Utility (SCU).

To connect an external mouse

- 1 Connect the mouse to the 9-pin serial port on the back of the computer.
- 2 From the Start Menu, select Settings, Control Panel, then choose Mouse.
- 3 Select the General tab, and then choose Change.
- 4 Make sure “Show all devices” is enabled.
- 5 Under “Manufacturers,” select the appropriate mouse you intend to use.



- 6 Under "Model," select the appropriate model.
- 7 Choose OK.
- 8 Close all windows and enable the communication port.
- 9 Restart the computer.

PC Card External Floppy Disk Drive

An external floppy drive can be connected to the computer using the PC Card socket. You can use the external floppy to transfer files to the mobile computer; use the drive letters that correspond to your hardware configuration.


Follow the procedures in this section to connect the floppy drive to the computer.

PRECAUTIONS

- Using an unapproved bootable external floppy disk drive may cause errors or may damage the computer. Use only external floppy disk drives approved for use with the mobile computer.
- Do not open the computer's battery door when you are using an external floppy disk drive.

To connect an external floppy disk drive

- 1 Open the PC Card door on the back of the computer and insert the PC Card connector into the socket.
- 2 Connect the other end of the cable to your external floppy drive.

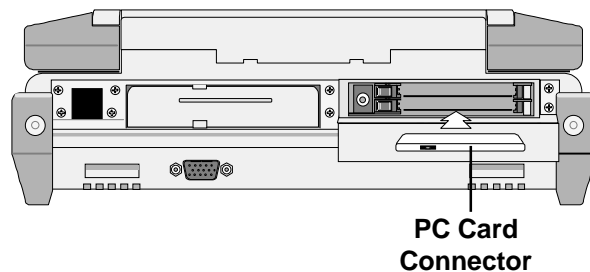



Booting from a PC Card External Floppy

The mobile computer normally boots from the internal hard disk; however, it might be necessary to boot from an alternate boot device if the computer's hard disk becomes corrupted or fails, or if you want to boot another operating system. One option is to use a bootable external floppy disk drive.

To boot from an external floppy disk drive

- 1 You will need a Win9x boot floppy. If you are running Windows, Exit Windows (from the Start Menu select Shut Down, and then choose "Shut down the computer").
- 2 Separate the PC Card connector from the cable by gently squeezing the two small clips on each side of the connector.
- 3 Insert the PC Card (disconnected from the cable) into the socket.
- 4 Restart the computer by pressing FN+ON.
- 5 Follow the instructions on the screen to reconnect the cable to the PC Card, insert a diskette, and boot the computer.

Note When booting from an external floppy you cannot see Drive D since it is NTFS.

Using an External CD-ROM


You can use an external CD-ROM drive to copy files to the mobile computer or access information from a CD. Before you connect an external CD-ROM to the computer, check these things:

- Make sure you are using an external CD-ROM that is approved for use with the mobile computer.
- Follow the instructions provided on Mobile Computer Tools to install the correct device drivers on the computer.
- Install the Peripheral Readme file.

After following the appropriate setup procedures, you can access the external CD-ROM by using Windows Explorer or My Computer. Use the drive letter that corresponds to your hardware configuration.

To connect an external CD-ROM

- 1 Connect the CD-ROM cable to your CD-ROM drive.
- 2 Open the PC Card door on the back of the computer and insert the PC Card connector into the socket.
- 3 From the start menu, SHUTDOWN+RESTART.
- 4 If the CD-ROM drive is not enabled, you will need to enable its driver by following the steps in the Card Wizard Program. Disable it after use.

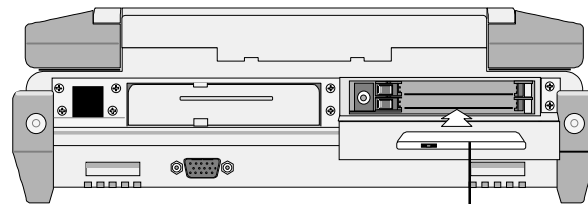

**PC Card
Connector**

WARNING If you do not disable the CD-ROM driver after using it, when you start up the computer without a CD-ROM attached, you will get a device failed warning message.

Stand Alone Charger

The stand alone charger is an optional charging device used to charge a Nickel Metal Hydride (NiMH) battery. This charger allows you to charge an additional battery for the mobile computer.

CAUTION There are no user-replaceable parts within the stand alone charger, so do not open the charger case. The stand alone charger is internally protected. It resets automatically if there is a power fault.

The operating temperature for this device is +10°C to +40°C (+50°F to +104°F). Operating the stand alone charger outside of this temperature range may damage the battery.

To charge a battery

- 1 Insert the appropriate end of the power cord into the power port on the stand alone charger; insert the other end of the power cord into an electrical wall outlet.
- 2 Align the connectors and place the battery onto the charger.

The charger automatically begins fast charging the battery. At moderate temperatures, around 21°C (70°F), the battery will be fully charged in approximately three to four hours. Under extremely cold or hot temperatures, however, the battery can take up to 16 hours to charge.





Indicator Lights

Green	Red	Description
On	On	Power up. No battery installed.
Blinking	Off	Charging battery.
On	Off	Charging complete.
On	Blinking	Battery problem. Use Battery Status to check the condition of the battery.
Blinking	Blinking	Charger problem.

Vehicle Adapter

The Vehicle Adapter is an optional device that supplies power from the vehicle battery to operate the computer and charge the battery installed in the unit. It typically connects to the vehicle battery using the cigarette lighter socket.

CAUTION

There are no user-replaceable parts within the vehicle adapter, so do not open the adapter case. The adapter is internally protected. It resets automatically if there is a power fault.

The operating temperature for this device is -20°C to +60°C (-4°F to +140°F). Operating the vehicle adapter outside of this temperature range may damage the battery.


To prevent possible damage to the battery, the system will not allow the battery to charge at extreme temperatures. Be aware of the following charging characteristics, especially if the computer is left unattended in a closed vehicle.

Temperature	Charging Activity
<5°C (<41°F)	Battery will not charge
>45°C (>113°F)	Slow charge mode
>50°C (>122°F)	Maintenance charge

To connect the vehicle adapter

- 1 Insert the vehicle adapter's power cord into the power port on the side of the computer.
- 2 Insert the cigarette lighter adapter into the vehicle's cigarette lighter socket, turning it slightly to make a good connection.

The power light illuminates to indicate that current is reaching the vehicle adapter. When you connect the vehicle adapter, it automatically begins fast charging the computer's battery. At moderate temperatures, around 21°C (70°F), the battery will be fully charged in approximately three hours. Under extremely cold or hot temperatures, however, it will take longer to charge the battery (up to 16 hours).

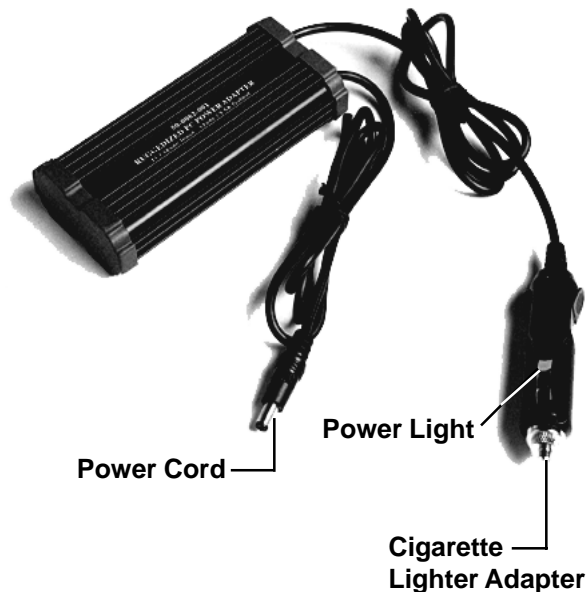



Important


- If you charge your battery daily, rely on the gas gauge reading to determine battery capacity. The gas gauge displayed by Power Profiler may show that the battery is full, but the external power indicator light may still be blinking. This typically occurs if the charge mode switched from Fast to Slow because the battery became too hot. The charging process is trying to put a little more capacity into the battery; however, external power can be removed since the battery is virtually full.
- If your battery is new or has not been used for several weeks, rely on the indicator light to determine when the battery is fully charged. The gas gauge is unreliable in these cases; it may read 100 percent, but the actual capacity is only 10 percent.

Vehicle Cradle


The vehicle cradle is a vehicle-based docking station designed to safely secure the computer in the vehicle. A standard key lock located on the front of the cradle locks the computer onto the cradle for security purposes. You can use the vehicle cradle to:

- Charge batteries
- Communicate with other devices
- Or, Access USB devices (not currently available with NT 4.0)

Front View

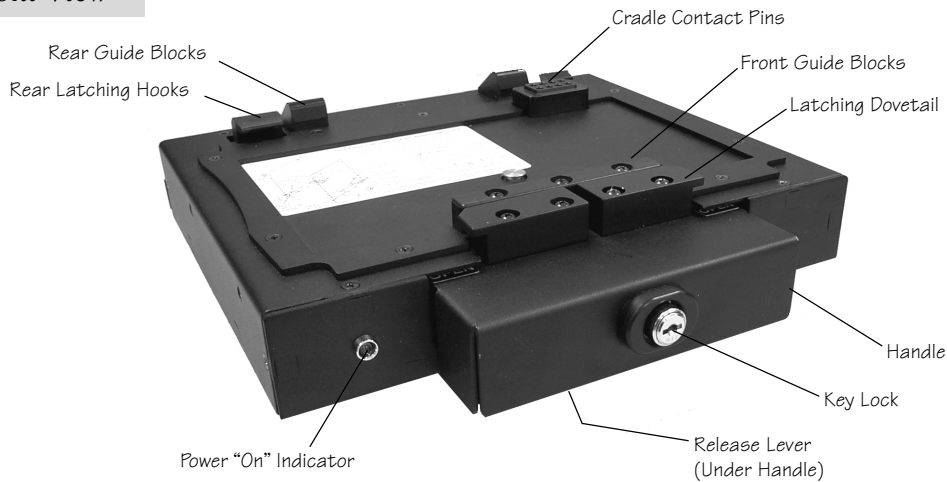

Back View

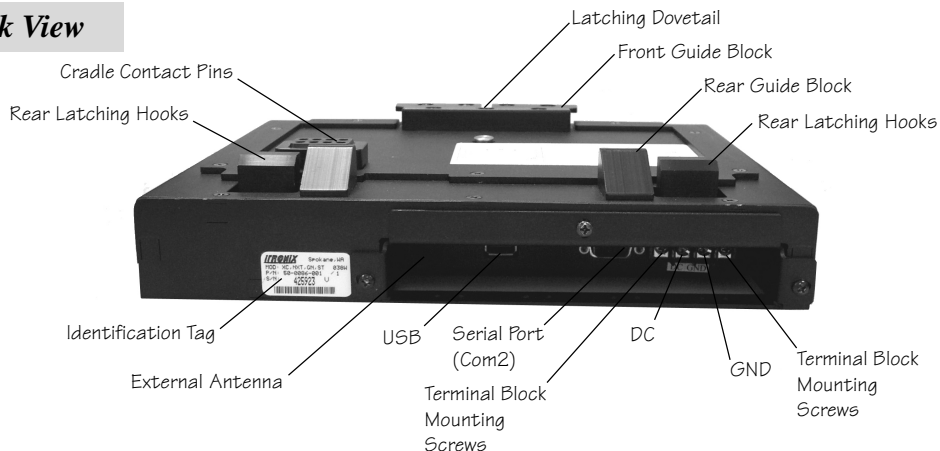



PRECAUTIONS

- There are no user-replaceable parts within the vehicle cradle, so do not open the cradle case. The vehicle cradle is internally protected. It resets automatically if there is a power fault.
- Do not use the vehicle cradle to charge the computer battery overnight. Turn off the vehicle cradle at the end of each work day to prevent draining the voltage in your vehicle's battery below starting levels.

Charging Batteries

The vehicle cradle is designed to charge the computer's battery with voltage from the vehicle battery while you are traveling between customer jobs. Follow the procedure below to charge a Nickel Metal Hydride (NiMH) battery.

To charge a battery installed in the computer

- 1 Make sure the computer is powered off.
- 2 Place the computer onto the vehicle cradle, making sure it is securely latched.
- 3 Turn on the vehicle cradle by pressing the power button.

The vehicle cradle automatically begins fast charging the battery.



Important

- A temperature of -20°C to +60°C (-4°F to +140°F) is recommended when charging batteries with the vehicle cradle. Batteries may not charge successfully outside this temperature range.
- If you charge your battery daily, rely on the gas gauge reading to determine battery capacity. The gas gauge displayed by Battery Status may show that the battery is full, but the external power indicator light may still be blinking. This typically occurs if the charge mode switched from Fast to Slow because the battery became too hot. The charging process is trying to put a little more capacity into the battery; however, external power can be removed since the battery is virtually full.
- If your battery is new or has not been used for several weeks, rely on the indicator light to determine when the battery is fully charged. The gas gauge is unreliable in these cases; it may read 100 percent, when the actual capacity is only 10 percent.

Communicating with Other Devices

The vehicle cradle is designed with a standard serial port and an external USB bus so you can connect external devices such as a printer or modem. Upon initial start-up, the serial port is the default for this computer. To change SCU settings, see Section 5 “Customizing Settings” in this manual, or contact your companies help desk for assistance. The USB port is not supported under NT.

External Antennas

An external RF antenna also can be connected to the cradle using the TNC RF connector on the back. FCC regulations require that users of vehicle-mounted antennas must use only antennas authorized for use with the mobile computer in order to meet FCC RF exposure limits. Please contact your organizations's help desk for a list of approved vehicle-mounted antennas. For mounting installation and/or mounting instructions for these types of antennas, see the instructions that accompany each antenna.


RF Antenna Placement

WARNING Improper installation and/or operating configurations of permanent and magnetic vehicle-mounted antennas may cause FCC RF exposure limits to be exceeded. Vehicle-mounted antennas must be placed at least 20 cm from operators and bystanders.


Placement of a vehicle-mounted antenna

- 1 Measure and identify an area 20 cm (8 inches) in from the edges of the vehicle roof.
- 2 Place the antenna within that area.

To maximize RF performance, position the antenna in the center of the vehicle roof.

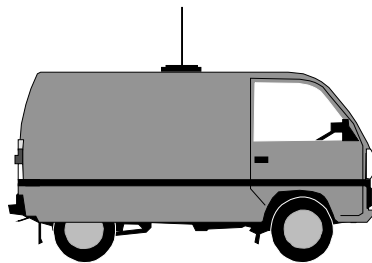

Side View

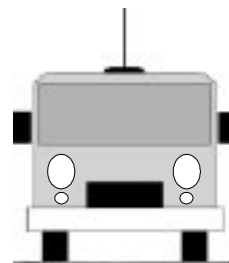

Front View


Cleaning or Replacing Cradle Contact Pins

The contact pins on the vehicle cradle are exposed to contamination and stress when the computer is installed and removed from the cradle during normal daily operation. The pins were designed to be cleaned or replaced as required.

If the pins become dirty, they can be removed and cleaned with an electrical contact cleaner or replaced. The power and ground pins are pins 3 and 8 respectively. When charging problems are encountered and replacement pins are not available, other pins in the contact assembly can be used to field fix the unit until replacement parts are available.

To clean or replace the cradle contact pins

- 1 Hold down the protective plastic cover.
- 2 Grasp a pin and pull straight up and out, being careful not to bend it.
- 3 Clean the pin with electrical contact cleaner and reinstall it into the cradle contact assembly, pressing it straight down and in.
- 4 If a pin is bent or cannot be cleaned, contact your organization's help desk to obtain the correct pin replacements.

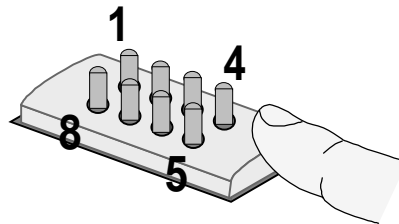

Note Pin 8 on RF units is an RF connector and is not user replaceable. Contact your support desk for information about replacing this RF connector.



Surge Protection

A large number of computer and high technology equipment damage is directly related to AC power and telephone line problems. These problems can include surges, spikes, noise, interference, and weather-related problems, which in turn can cause glitches, hang-ups, crashes, performance slow downs, and down time with computer equipment. The market is flooded with hundreds of AC power line surge suppressors advertising high performance surge protection; only a few of them actually provide adequate protection.

This section provides guidelines for selecting a quality surge suppressor to be used with your mobile computer, and it helps identify a few sources for products with acceptable performance.

Selecting the Right Surge Protection

Consider the level of quality you need when selecting a surge suppressor. This depends on factors such as surge environment, the type of equipment to be protected, and the quality of the electrical wiring and service.

Surge Environment

Surge environment refers to the damage potential from electrical surges in a particular geographical area. A high quality suppressor should be used if there is frequent lightening activity in the area and the location service is fed by overhead utility poles. An example of a high surge environment would be Florida; a low surge environment might be New York.

Type of Equipment to be Protected

If the computer is equipped with a modem, the modem should also be surge protected. Protecting the power line without protecting the modem line provides only partial protection.



Quality of Electrical Wiring and Service

Wiring should be up to current NEC standards and have verified good AC grounds. It is important that your computer system be plugged into a grounded AC outlet when charging and that all peripherals connected to your system reference the same AC ground.

Selecting the Right Equipment

There are a number of companies that sell quality surge suppressors such as Sutton Designs, APC, and Panamax. When you are looking for a surge suppressor, consider these things.

- Expect to pay at least \$50 for a good quality surge suppressor.
- The surge suppressor should be a UL 1449, 497, and 1283 listed for surge suppression, modem surge protection, and RFI/EMI noise filtering respectively.
- The surge suppressor should have diagnostic LEDs that verify good AC ground, proper wiring, and proper surge operation. Lighted on/off switches are not recommended since they can produce electrical noise.
- The Joule ratings should be a minimum of 480 Joules for the AC surge circuit.
- The Joule ratings should be a minimum of 240 Joules for the modem.
- The modem surge circuit should present low capacitance to the modem line or it will slow the transmission rate. Capacitance should be specified at less than 50 picofarads.
- Quality surge suppressor manufacturers generally offer a lifetime warranty.
- Consider obtaining a protected equipment coverage policy which insures the equipment in the event of surge damage.
- The devices that will be attached to the computer also need to be surge protected.



SECTION 9

Modems



.....

Introduction	98
Which Modem Do I Have?	98
Using the Internal Landline Modem	99
Transferring Files	100



Introduction

The mobile computer may be equipped with one of several modems. A modem allows the computer to exchange data over a phone line with another computer that is also equipped with a modem.

See Section 5, "Customizing Settings," for correct IRQ and communication port settings.

Which Modem Do I Have?


To verify which modem is installed in your unit, locate the "Config" string label on the bottom of the computer, check the seventh digit in this string, and then refer to the following table.

If the 7th "Config" string digit is . . .	This modem is installed
C	3-COM Data/Fax Modem
Z	No modem installed

Using the Internal Landline Modem

To use the internal landline modem

- 1 Plug one end of an RJ-11 cable into the RJ-11 connector on the back of the computer.
- 2 Plug the other end of the RJ-11 cable into a telephone jack.
- 3 Set up the HyperTerminal application, or another application, to use the communications port COM4.
- 4 If necessary, set up other communication parameters in your application to match the parameters set for the modem you are talking to.
- 5 Use the HyperTerminal application, a radio terminal and modem terminal, to establish a connection to another computer.

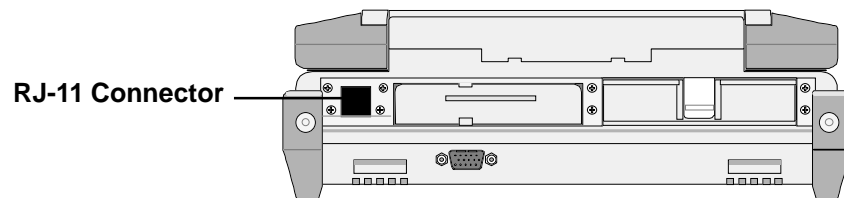




Transferring Files

To transfer files using the internal landline modem

- 1 Insert one end of an RJ-11 cable into the RJ-11 connector on the back of the computer.
- 2 Insert the other end of the RJ-11 cable into a telephone jack.
- 3 Use the communications port COM4 with the HyperTerminal application (which is already set up), or another application such as the modem terminal in Mobile Computer Tools.
- 4 If necessary, set up other communication parameters in the application to match the parameters set for the external modem.
- 5 Use the HyperTerminal application, or another application, to establish a connection to another computer.

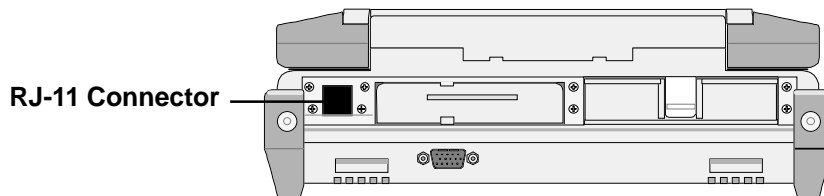



SECTION 10

Maintenance and Storage



.....

Introduction	102
If You Have a Touch Screen	102
Hard Drive Care and Handling	102
Internal Hard Drives	103
External PC Card Hard Drives	104
Battery Maintenance and Storage	105
Maintaining Batteries	105
Storing Batteries	105
Computer Maintenance and Storage	106
Maintaining Your Computer	106
Care and Cleaning	106
Storing Your Computer	109



Introduction

The mobile computer is ruggedized and weather resistant. Handle it with the normal care required by any sophisticated electronic equipment, and the computer will provide reliable service even under harsh field conditions.

Follow the guidelines below to care for your unit.

If You Have a Touch Screen

CAUTION

- Always use an approved stylus.
- Never use sharp, hard, or abrasive implements on the touch screen such as ball point pens, pencils, or keys. They could damage the screen.
- To clean the touch screen panel, apply a household glass cleaner to a soft, clean, dry cloth and wipe the screen.

Hard Drive Care and Handling

There are two hard drive options for the mobile computer: a shock-mounted 2.5-inch hard drive and a PC Card Type III hard drive. All hard drives contain media for data storage in the form of a rotating disk, read/write head(s), a motor, and electronics for interfacing and control. Each hard drive type can be susceptible to damage from severe shock and other stressful environmental impacts. The degree of susceptibility to damage is directly related to the individual hard drive and mounting system employed.

When reading or writing to the hard disk, the head is “flying” on a thin layer of air, micro-inches above the disk. A shock can cause the read/write head to contact the spinning disk, resulting in immediate loss of stored data and possible physical damage to the disk. It could also



create loose debris in the drive enclosure that may cause progressive damage over time.

To reduce exposure to high operating shocks, the mobile computer uses power modes for the hard drive that prevent the read/write heads from being positioned over the disk when it is not being used: idle mode and standby mode.

You can reduce the risk of damage to the hard drive and increase the reliability of the hard drive and data integrity by following the recommendations below.

Internal Hard Drives

- Do not intentionally drop the computer. The unit is designed to withstand the day to day rigors of the mobile environment and provide years of reliable service. The useful life of the product can be enhanced by not intentionally abusing it.
- Use the power management feature control in the System Configuration Utility (SCU). Power management conserves power but also ensures that the read/write heads are unloaded and the hard drive is spun down within the time specified.
- Whenever possible suspend the unit by pressing FN+OFF before moving it from one location to another. This will unload the read/write heads and spin down the disk.
- Maintain the environmental seal of the computer by keeping the PC Card door closed and latched. Also avoid exposing the unit to extreme temperatures or moisture when the PC Card door is open.
- Periodically backup or archive important files and data.



External PC Card Hard Drives

Each PC Card hard drive manufacturer provides specific guidelines for the care and handling of the product. In addition, follow these recommendations:

- When the PC Card hard drive is not inserted in a PC Card socket, store the hard drive in a protective carrying case. This will help protect it from inadvertent shocks.
- Always use care when handling the hard drive. Do not drop, bend, flex, or crush it.
- Avoid exposing the PC Card hard drive to extreme moisture, heat, or sunlight.
- Keep all debris out of the connector to ensure good electrical connections.
- There are no user repairable parts in the PC Card hard drive. Do not attempt to disassemble any part of the hard drive. The warranty will be voided if drive seals are broken or screws have been removed.
- Periodically backup or archive important files and data.



Battery Maintenance and Storage

Maintaining Batteries

Follow these guidelines to maintain performance of Nickel Metal Hydride (NiMH) batteries.

- Avoid exposing batteries to extremely hot or cold temperatures for long periods. To prevent possible damage to the battery, the mobile computer does not allow the battery to charge if the internal temperature of the battery gets too low ($< 5^{\circ}\text{C}$ or $< 41^{\circ}\text{F}$) or too high ($> 50^{\circ}\text{C}$ or $> 122^{\circ}\text{F}$).
- Charge the battery nightly where the temperature will remain around 20°C (68°F).

Storing Batteries

- Store the battery within the recommended temperature range: 10°C to 30°C (50°F to 86°F).
- Unused or stored batteries can lose power over time. When you install a battery that has not been used for awhile, connect external power to the computer and charge the battery.
- After storage, deep cycling the battery up to four times in succession may increase its capacity. You may want to do this over consecutive weekends since each deep cycle process can take up to 40 hours. After this initial conditioning, maintain battery capacity by deep cycling at the recommended frequency.



Computer Maintenance and Storage

Maintaining Your Computer

Follow these guidelines to help maintain the condition and performance of your computer.

- Turn off the computer when you are not using it.
- Charge the batteries daily or whenever their capacity is low.
- Operate the computer within the recommended temperature ranges of -20°C to +60°C (-4°F to +140°F).

Care and Cleaning

Physical Inspection Periodically inspect the computer and accessories for wear, damage, or loose or missing parts. Identifying and correcting potential problems early can help reduce the need to return the unit for service.

Outside Case Like all tools, the outside of the computer will get dirty with use. The case is made of painted Magnesium with Santoprene bumpers and polycarbonate blend (plastic) doors and covers. These areas can be cleaned with a solution of one part Formula 409® and one part water. Follow the procedure below.

To clean the outside case

- 1 Disconnect external power and turn off the computer.
- 2 Remove the battery.
- 3 Using a soft, dry cloth (do not use paper products because they can scratch the surface), add a small amount of cleaning solution to the cloth and clean the computer case and bumpers.
- 4 Wipe off any excess liquid with a soft cloth.
- 5 Reinstall the battery.



Display Periodically inspect the display to make sure the contrast and brightness functions are operating properly and that all pixels are operational.

Note If you have a 10.4-inch color display, the FN+F2 and FN+F3 keys to adjust backlight brightness are only active when MaxBright is off. Additionally, the contrast keys, FN+F4 and FN+F5 are not active for this display.

If you have a touch screen

- Always use an approved stylus.
- Never use sharp, hard, or abrasive implements on the touch screen such as ball point pens, pencils, or keys. They could damage the screen.

To clean the display assembly, use the same cleaning solution and procedure described earlier for the outside case. In some cases, you can use a small amount of isopropyl alcohol to remove streaks or smears. Use a soft, clean cloth to clean the display. Do not use paper products because they can scratch the screen.

External Power Connector The external power connector may sometimes be exposed to moisture and/or contamination causing an unreliable connection to the external power source.

Clean the connector using a cotton swab dipped in isopropyl alcohol.

RJ-11 Connector Make sure this connector is operating properly. During normal use, the connector pins can get dirty or become broken, bent, or pushed out of place. Clean the connector with a cotton swab dipped in isopropyl alcohol.

If the connector needs to be replaced, this can be done without returning the unit for service. Contact your local support person for more information.

Keyboard Check all keys to make sure they are working properly. To clean the keyboard, use the same cleaning solution and procedure described above for the outside case.

If keyboard problems persist, the keyboard might need to be replaced. This can be done without returning the unit for service. Contact your local support person for more information.



I/O Ports Make sure the video, serial, and parallel ports are operating properly. Periodically inspect the ports for damage or contamination, and make sure the cover is attached to the computer. The I/O cover can be replaced without returning the unit for service. Contact your local support person for more information.

PC Card Door and Connector Whenever possible, make sure this door is closed and latched properly. When the PC Card door is closed, it provides a watertight seal for the PC Card socket. Shield the area from all contaminants such as liquids, rain, snow, and dust when the door is open.

If the door needs to be replaced, this can be done without returning the unit for service. Contact your local support person for more information.

Make sure the PC Card connector is operating properly by reading from or writing to a PC Card.

Battery and Battery Well The battery well is not sealed, so it is possible for moisture to enter this area. If this happens, remove the battery and use a clean, dry cloth to wipe away any moisture from the battery well. Also remove any moisture from the battery and battery connectors. The connectors may corrode if they are exposed to moisture for extended periods. Corrosion can be removed with a cotton swab dipped in isopropyl alcohol.

Cradle Contacts The cradle contacts on the bottom of the computer may get dirty with daily use. Pins can be cleaned with a cotton swab dipped in isopropyl alcohol.



Storing Your Computer

You can store the mobile computer for approximately 10 - 14 days (dependent on the memory size of your unit) without losing data as long as the battery is fully charged before it is placed in storage.

If you plan to store the computer for more than 10 - 14 days, follow these storage guidelines.

To store the computer

- 1 Files and data should be saved before storing the computer.
Contact your organization's help desk about the procedure for backing up files or data.
- 2 Exit all applications and use the appropriate procedure to exit from your operating system.
- 3 Turn off the computer.
- 4 Remove the battery from the unit and store it in a dry place.
- 5 Store the computer within the recommended temperature ranges of -40°C to +75°C (-40°F to +167°F).

If you use PC cards, refer to the manufacturer's instructions you received with the card for storage and care information.

Note When you turn on the mobile computer after it has been stored for a long period, you may need to reset the system by holding down both mouse buttons for at least 10 seconds and then releasing the buttons.





APPENDIX A

Error Messages



.....

Introduction	112
POST Messages	112
Windows Messages	117
Application Messages	117



Introduction

The following are possible error and warning messages you may encounter while operating the computer. The messages in this section are listed alphabetically.

Error and warning messages are generated by several different sources including:

- Power On Self Test (POST)
- Windows
- Applications

POST Messages

When the mobile computer restarts, it tests its hardware components. This test is called the Power On Self Test (POST). If the system finds an error during this test, it displays an error message.

Some POST errors can occur before anything can be displayed on the screen. In this case, the computer issues a series of beeps, then stops working. This type of error indicates a serious hardware problem, and you should contact your supervisor or your organization's help desk.

The most common POST error messages are listed next along with solutions you can try.

BIOS ROM bad checksum

An expansion card has a bad ROM checksum. The expansion card may need to be replaced. Contact your supervisor or your organization's help desk.



- Disk not found
- FATAL: CMOS RAM test failed
- FATAL: DMA controller faulty
- FATAL: Faulty DMA page registers
- FATAL: Faulty refresh circuit
- FATAL: Interrupt controller failed
- FATAL: No RAM found
- FATAL: No video display found
- FATAL: RAM error at location xxxxxx: Wrote: xx Read: xx
- FATAL: ROM checksum incorrect

Restart the computer by pressing both mouse buttons for at least 10 seconds and then releasing the buttons. If the problem persists, contact your supervisor or your organization's help desk.

Fixed disk controller failure

Disk controller is not responding. Report this error to your supervisor or your organization's help desk.

Fixed disk failure

Report this error to your supervisor or your organization's help desk.

Gate A20 failure

Hardware failure. Report this error to your supervisor or your organization's help desk.

-Hard disk boot sector invalid

-Hard disk failed

Restart the computer by pressing both mouse buttons for at least 10 seconds and then releasing the buttons. If the problem persists, contact your organization's help desk.



-Insert boot-disk and press any key

-Internal cache test failed

Restart the computer by pressing both mouse buttons for at least 10 seconds and then releasing the buttons. If the problem persists, contact your organization's help desk.

-Keyboard clock line failure

-Keyboard controller failure

-Keyboard data line failure

Reboot the computer by pressing CTRL+ALT+DEL. If the message persists, and the keyboard is not usable, report this error to your supervisor or your organization's help desk.

-Keyboard failure

-Keyboard stuck key failure

-Memory failure at AAAAAAAAA, read XX expected YY

Restart the computer by pressing both mouse buttons for at least 10 seconds and then releasing the buttons. If the problem persists, contact your organization's help desk.

No boot device available — press F1 to retry boot

Reboot the computer by pressing CTRL+ALT+DEL. If the problem persists, the hard disk may need to be replaced. Report this error to your supervisor or your organization's help desk.

No boot sector on hard disk

Data corrupted on hard disk. Restore hard disk data by booting from a bootable PC card.

No timer tick interrupt

Restart the computer by pressing both mouse buttons for at least 10 seconds and then releasing the buttons. If the problem persists, contact your organization's help desk.



Non-system disk or disk error — Replace and press any key to continue

Remove the non-bootable PC memory card from the card socket and press any key to reboot.

Non-system disk - insert boot disk and press any key

Restart the computer by pressing both mouse buttons for at least 10 seconds and then releasing the buttons. If the problem persists, contact your organization's help desk.

Press the F1 key to continue

This message indicates that an error was found during POST. Pressing the F1 key allows the system to attempt to boot.

Shutdown failure

Reboot the computer by pressing CTRL+ALT+DEL. If the message persists, contact your supervisor or your organization's help desk.

Unexpected interrupt in protected mode

Reboot the computer by pressing CTRL+ALT+DEL. If the message persists, contact your supervisor or your organization's help desk.

WARNING! PC87570 initialization incomplete. Code=XXX

Press ENTER to continue and then restart the computer by pressing CTRL+ALT+DEL. You can continue to use the computer since basic computer functions may still be operable; however, some functions may not work properly.

If the problem persists, contact your supervisor or your organization's help desk.

WARNING! Boot sector 0 has changed

The boot sector of the hard drive has been modified. This message also may be displayed when booting from drive C after booting from another device. Pressing F1 will allow the system to continue to boot. If this problem persists, contact your organization's help desk.



-WARNING: CMOS checksum invalid - run SCU

-WARNING: CMOS failure - run SCU

Run the System Configuration Utility (SCU) to set the system configuration. If the problem persists, contact your organization's help desk. (See Section 5, "Customizing Settings," for more information about the SCU.)

-WARNING: Keyboard controller failure

-WARNING: Keyboard failure

Reboot the computer by pressing CTRL+ALT+DEL. If the problem persists, the keyboard is not usable; contact your organization's help desk.

-WARNING: No bootable floppy drive 0 installed

-WARNING: No interrupts from timer 0

Restart the computer by pressing both mouse buttons for at least 10 seconds and then releasing the buttons. If the problem persists, contact your organization's help desk.

WARNING: Time/date corrupt - run SCU

Run the System Configuration Utility (SCU) to set the time of day and date. (See Section 5, "Customizing Settings," for more information about the SCU.)

WARNING: Unexpected amount of memory - run SCU

Run the System Configuration Utility (SCU) to reinitialize the system configuration. If the problem persists, contact your organization's help desk. (See Section 5, "Customizing Settings," for more information about the SCU.)

xxxxxh Option ROM checksum failure where xxxxxh is the starting address of the option ROM

An expansion board contains a defective ROM. Try restarting the computer by pressing CTRL+ALT+DEL. If the problem persists, the expansion board may need to be replaced. Report this error to your supervisor or your organization's help desk.



- PC87570 CPU test failed! Press ENTER to continue
- PC87570 initialization failed! Press ENTER to continue
- PC87570 RAM test failed! Press ENTER to continue
- PC87570 ROM test failed! Press ENTER to continue

Restart the computer by pressing both mouse buttons for at least 10 seconds and then releasing the buttons. You can press ENTER to continue to use the computer since basic computer functions may still be operable; however, the battery will not be charged properly. If the problem persists, contact your organization's help desk.

Windows Messages

Windows messages are typically self-explanatory. See Appendix B, "Troubleshooting," for more information.

Application Messages

Both MS-DOS and Windows applications may display messages if a warning or error condition occurs. Refer to the online Help or other documentation for the application that generated the message.





APPENDIX B

Troubleshooting



.....

What to Try First 120

For More Help 120

Common Solutions to Common Problems 121

Applications 122

Batteries 124

Display 126

Hard Disk 128

I/O Ports 128

Keyboard 129

Landline Modems 130

Miscellaneous 133

Mouse 136

PC Cards 136

Pen/Touch Screen 138

Radio Modems 138



What to Try First

This section is designed to help you determine and fix problems you might encounter while operating the mobile computer. Try the following things in order:

- First look through the categories in this section for a solution.
- If you don't find a solution for your situation here, try one of the resources listed below.
- If you are having a problem with a computer application, use the online Help that comes with the application to find a solution.
- If you still cannot resolve your problem, contact the help desk at your organization.

For More Help

- NT 4.0 online Help is already installed on your system. To access this information, select Help from the Start Menu.
- Third-party NT 4.0 manuals are available from your local bookstore.



Common Solutions to Common Problems

Solutions to some common problems are listed on the following pages under these categories:

- Applications
- Batteries
- Display
- Hard Disk
- I/O Ports
- Keyboard
- Landline Modem
- Miscellaneous
- Mouse
- PC Cards
- Pen/Touch screen
- Radio Modem



Applications

My application locks up, acts strangely, or produces an NT blue screen (crash screen for monochrome displays)

- If you've tried to resolve the problem other ways and your application still doesn't respond, you may need to restart your computer as described below.

CAUTION Restarting your computer may corrupt files or data.

Reset the computer by holding down both mouse buttons for at least 10 seconds and then releasing the buttons.

- The data on the hard disk could be corrupted. NT will run CHECKDISK.
- Windows is out of memory/resources. Exit Windows and restart Windows.
- If you are using a communications application, make sure that the Interrupt Request lines (IRQ) for COM4, specified for Windows, match the IRQ lines specified in the SCU. See Section 5, "Customizing Settings," to view and change IRQ settings.



...Applications

Communications programs such as HyperTerminal or Procomm Plus don't seem to work or they lock Windows

- If you are using the internal modem, be sure to specify COM3 as the communications port.
- When you first try to use HyperTerminal or similar application, the system responds with a message asking if you want to install the modem. Answer "Yes" to this question and follow the instructions on the screen to install it.
- Verify with your company that your computer has an internal modem installed.

Third-party applications don't work with COM3

- Make sure a modem is installed. Locate the "Config" string label on the bottom of the computer; a modem is not installed if the seventh digit is Z.
- Make sure your application is set to use COM3.
- Make sure your application is using the correct communication settings (baud, parity, etc.).
- You may also need to try a different IRQ setting. Refer to Windows Help for more information.



Batteries

The battery does not charge

- To prevent possible damage to the battery, the system will not allow a charge if the battery temperature is extremely hot or cold (such as in a closed, unattended vehicle). If possible, charge the battery in a location with a moderate temperature of around 20°C (68°F).
- Keep the display tilted open and allow unrestricted airflow while the battery is charging so excess heat can escape and prevent the battery from overheating.
- If possible, turn off the computer while the battery is charging.
- Try enabling the “Suspend on AC Power” option under the Power, Suspend/Resume Control menu in the System Configuration Utility (SCU). This allows the system to automatically suspend while it is connected to external power.
- If the battery is new or has been stored for a week or more, follow this procedure:
 - 1 Make sure the computer is turned off (press FN+OFF).
 - 2 Open the battery door and remove the battery.
 - 3 Connect the AC adapter to the computer and an AC wall outlet, and then turn on the computer by pressing FN+ON (FN+SPACEBAR).
 - 4 Reinstall the battery and replace the battery door.
 - 5 Allow the system to remain idle for one hour with the AC adapter connected to the computer.

The external power light blinks when the battery starts charging.
 - 6 If the battery still fails to charge after an hour, remove the battery, wait several seconds, and then install it again.

If the battery does not begin charging within several minutes, return the unit for service.



...Batteries

The batteries take much longer than three hours to charge

- Under moderate temperatures, about 21°C (70°F), the computer's battery takes 3 to 4 hours to completely charge. Under extremely cold or hot temperatures, however, the battery can take up to 16 hours to fully charge.

The batteries don't last very long

- Over time, your battery may develop "memory effect." This occurs when the battery is partially discharged and recharged repetitively without full discharge. A partial or shallow discharge means that you use less than 50 percent of its capacity before charging.
- As your battery ages, the maximum capacity that it can hold naturally decreases, and even the best maintained batteries eventually need to be retired. Consider replacing the battery if you are not getting the usage you need from it.

The charging light doesn't flash

- Verify that a battery is installed in the unit.
- Check AC power connection.
- Check the Power Profiler to see if the gas gauge is full.

The ambient temperature rises rapidly when charging the battery at room temperature

- This is normal. The internal ambient temperature is always 0° to 16° higher than the external ambient temperature. Ambient temperature is not used for charge termination criteria.



...Batteries

The gas gauge reads “full,” but the indicator light is still blinking

- If you charge your battery daily, rely on the gas gauge reading to determine battery capacity. The charge mode may have switched from Fast to Slow because the battery became too hot. The charging process is trying to put a little more capacity into the battery; however, external power can be removed because the battery is virtually full.
- If your battery is new or has not been used for several weeks, rely on the indicator light to determine when the battery is fully charged. The gas gauge is unreliable in these cases; it may read 100 percent, when the actual capacity is only 10 percent.

Display

The display performance is slow

- The temperature may be too cold. Move the computer to a warmer operating environment.

I can't read the display

- Adjust the backlight.
 - On a monochrome display, pressing FN+F1 toggles the backlight on and off.
 - On a color display, the backlight is on whenever the computer is running. Pressing FN+F1 toggles the MaxBright feature on and off.
- The automatic power-saving mode may have shut off (suspended) the computer. Press FN+ON to resume.
- Adjust the contrast by pressing FN+F4 and FN+F5 (these keys are not active on a 10.4-inch color display).



...Display

The underlined, inverse, and hypertext characters are difficult to read on the screen

- Adjust the contrast by pressing FN+F4 and FN+F5 (these keys are not active on a 10.4-inch color display).
- Change the color scheme. From the Start Menu select Settings, Control Panel, choose Display, and then click the Appearance tab to make changes to the color scheme.

The display goes “squiggly wiggly” after removing/inserting the battery

- This can occur if you attempt to turn on the unit with a low or depleted battery. Restart the unit by pressing and holding down both mouse buttons for at least 10 seconds and then releasing the buttons. Connect external power and recharge the battery.

I can't see the cursor while using the Command Prompt

CAUTION Restarting your computer while you are running applications or while you are working in Windows may corrupt files or data.

- Press FN+INSERT to change from insert mode to overwrite mode to enable a block cursor. When it defaults to insert mode, the Command Prompt uses an underline cursor which is less visible than the block cursor for overwrite mode.

The display appears to have random pixels darkened after scrolling

- Contact your supervisor or your organization's help desk for information about correcting this problem.



...Display

I changed my display resolution, but I see no difference on the screen

- Try restarting your computer.

Hard Disk

The hard disk will not spin up so the computer can't boot up

- This occurs if the unit is exposed to extreme temperature and humidity. This is a hardware failure associated with the hard disk power circuit. Return the unit for service.

I can't save files because the disk is full

- Report this situation to your supervisor or your organization's help desk.

Diskette Read Error

- Any card in the PC card socket except for a properly formatted memory card will cause this error since it is trying to read the PC card.

I/O Ports

I can't access a serial port

- Disable the Peripheral Timeout setting in the SCU since this goes to the serial port. Select Standby Control from the Power menu to do this.
- Make sure another application is not using the same port.
- Make sure the correct COM port is selected in your application. Refer to the online Help for your application.

PC SRAM cards are not readable on the mobile computer

- If the SRAM card is reformatted on the mobile computer, read/write operations will be successful.



Keyboard

Something unexpected happens when I press a key

- You may have pressed a key combination that performs a Windows function. Make sure you are pressing the correct keys for the application you are running.

PGUP, PGDN, HOME, and END keys don't work

- You need to press the FN key in combination with other keys for certain functions. For example:

To page up, press FN+UP ARROW.

To page down, press FN+DOWN ARROW.

To move to the home position, press FN+HOME.

To move to the end position, press FN+END.

Keyboard stuck failure” appears when the computer boots up

- This error occurs if more than four keys are pressed during the Power On Self Test (POST).



Landline Modems

The modem doesn't work

- Make sure a modem is installed. Locate the “Config” string label on the bottom of the mobile computer; a modem is not installed if the seventh digit is Z.
- When you first try to use HyperTerminal or similar application, the system may respond with a message asking if you want to install the modem. Answer “Yes” to this question and follow the instructions on the screen to install it.
- Make sure the communication settings are correct in your application. Refer to the online Help for your application.
- Make sure you have the correct COM port selected in your application. Refer to the online Help for your application. The following table describes the correct settings for each modem type.

<u>Modem type</u>	<u>COM port</u>
External	COM1 or COM2
Internal landline	COM4
Internal CDPD / GSM	COM3

- Make sure that the Interrupt Request lines (IRQs) for COM3 or COM4 specified for Windows match the IRQ lines specified in the SCU. SCU has no settings for COM3. See Section 5, “Customizing Settings” for additional information on SCU settings.

The modem doesn't dial a number

Check these things:

- If you are using an external modem, make sure the cables are attached correctly.
- If you are using an internal modem, make sure the modem is installed. Check with your organization to determine if your computer has an optional internal modem installed.
- Make sure your communications parameters are correct in your application. Refer to the online Help for your application.



...Landline Modems

- Make sure you have the correct COM port selected in your application. Refer to the online Help for your application. The following table describes the correct settings for each modem type.

Modem type	COM port
External	COM1 or COM2
Internal landline	COM4
Internal CDPD / GSM	COM3

- Make sure that the Interrupt Request lines (IRQs) for COM4 specified for Windows matches the IRQ lines specified in the SCU.

You may also need to try a different IRQ setting. See Section 5, “Customizing Settings.”

The modem dials and receives an answer but does not establish a connection

- You may have incorrect parameters selected for your application to talk with the remote modem. Refer to the online Help for your application.
- You may need to adjust your modem’s baud rate or protocol selection.
- Make sure that the Interrupt Request lines (IRQs) for COM4 specified for Windows matches the IRQ lines specified in the SCU.

You may also need to try a different IRQ setting. See Section 5, “Customizing Settings.”

Communications programs such as HyperTerminal or Procomm Plus don’t seem to work or they lock Windows

- If you are using the internal modem, be sure to specify COM4 as the communications port on the Control Panel, or the Mini PCI Modem Icon.
- Verify with your company that your computer has an internal modem installed.
- When you first try to use HyperTerminal or similar application, the system may respond with a message asking if you want to install the modem. Answer “Yes” to this question and follow the instructions on the screen to install it.



...Landline Modems

Third-party applications don't work with COM4

- Make sure a modem is installed. Locate the "Config" string label on the bottom of the mobile computer; a modem is not installed if the seventh digit is Z.
- Make sure your application is set to use COM4.
- Make sure your application is using the correct communication settings (baud, parity, etc.).
- Some DOS based modem programs may not work with the COM4 modem unless special drivers are installed.
- See Windows help for additional information.

The modem dials and the answering modem generates tone, but our modem does not begin the training sequence to establish a connection

Although the problem may appear to originate from the computer, the source of the problem is the answering modem.

- Try setting up the answering modem to generate the correct V.22 tone which can usually be done by sending an AT command to the modem. See the AT Command summary in the *AT Command Reference* manual for more information.
- Add %!1300AO to the initialization string. If used, this command must be sent immediately before the command to dial the desired phone number and sent again before re-dialing the number since the modem will default to the original setting at the end of the session.
- From Modems in the Control Panel select the COM4 Modem, Properties, and then set the Volume to High.



Miscellaneous

The computer shuts off unexpectedly

- The computer has entered suspend mode. Press FN+ON to turn it back on.
- The battery capacity may be low. Connect external power to charge the battery, or replace the battery with a fully charged one.
- The battery door may be loose. Make sure the battery door is securely latched.
- The computer turns off automatically if you remove the battery door. To turn on the computer, replace the door, make sure the door is secured, and press FN+ON.
- The battery contacts may be dirty. Turn off the computer by pressing FN+OFF, remove the battery, and clean the contacts.

The speaker volume is too high or too low

- Increase the volume by pressing FN+F7; decrease the volume by pressing FN+F6.

The computer won't turn on

- The battery may not be installed properly, or it may not be fully charged. Make sure a fully charged battery is properly installed.
- Connect external power to charge the battery if it is not charged.
- If you are using the AC adapter, check the electrical outlet you are using to make sure it is working properly.
- If the mobile computer does not turn on, restart the computer by holding down both mouse buttons for at least 10 seconds and then releasing the buttons.

CAUTION Restarting your computer while you are running applications or while you are working in Windows may corrupt files or data.



...Miscellaneous

The computer won't turn off

- Press FN+OFF.
If pressing FN+OFF does not turn off your computer, the system may be locked up. Restart your computer by holding down both mouse buttons for at least 10 seconds and then releasing the buttons.
- The unit may have been idle for an extended period. Hold down both mouse buttons for at least 10 seconds and then release the buttons.

The computer enters suspend mode too quickly

- When there is no activity for a period of time, the computer turns off or enters suspend mode. To extend this time, use the SCU and enter a new time. See Section 5, "Customizing Settings," for information about accessing this utility.

WARNING If you increase the suspend time too high it may not allow your computer to suspend.

The computer doesn't automatically suspend

- Check to make sure the COM ports are off. For example, exit any application that uses COM ports such as Speaker Phone.
- Make sure external power is not connected. Some systems will not suspend automatically when they are connected to external power or when PC Cards are inserted.
- Close any open files or directories on a PC Card.
- Set your inactivity time to one minute in the SCU.



...Miscellaneous

The computer is locked up

- If you've tried to resolve the problem other ways and your system still doesn't respond, you may need to restart your system as described below.

CAUTION Restarting your computer while you are running applications or while you are working in Windows may corrupt files or data.

To recover from a lock-up on your computer, press CTRL+ALT+DEL and then select the Shut Down button at the bottom of the "Windows NT Security" dialogue box. When the "Shutdown Computer" dialogue box appears, select "Shutdown and Restart" and click OK.

If the computer does not restart, the keyboard may be locked up. Reset the computer by holding down both mouse buttons for at least 10 seconds and then releasing the buttons.

The system date and time are incorrect

- Reset the correct date and time by choosing the Date/Time icon from the Control Panel and making the appropriate changes.

Holding down both mouse buttons for more than 10 seconds to reset the computer doesn't always work

- Try resetting the computer again. If this doesn't work, remove all power, and allow the unit to remain idle for 10 minutes. After 10 minutes, connect external power and retry.

I can't turn off the computer after booting from a PC Card

- Do not use FN+OFF to suspend the computer if you have booted from a PC Card rather than the internal hard disk. Instead, remove the card and then press CTRL+ALT+DEL to restart the system.



Mouse

I have difficulty double-clicking the mouse fast enough

- From the Start Menu, select Settings, Control Panel, and then choose Mouse. The Buttons tab contains the setting for the double-click speed.

I can't see the mouse pointer

- The mouse pointer may be off the screen. Move the mouse until it reappears on the screen.
- From the Start Menu, select Settings, Control Panel, and then choose Mouse. The Motion tab contains settings for the mouse speed.

It's difficult to position the mouse on window borders

- From the Start Menu, select Settings, Control Panel, and then choose Display. Click on the Appearance tab, select "Active Window Border" under Item, and then increase the numbers under Size.

PC Cards

I can't remove the PC card

- Press the ejector button located inside the PC card door on the back of the computer. Use one finger to press down lightly on top of the card, and then slide it out.
- If the ejector button malfunctions when you press it, release the button and then press it again.

Diskette Read Error

- Any memory card in the PC Card socket except for a properly formatted memory card will cause this error since it is trying to read the PC Card.

PC SRAM cards are not readable on the mobile computer

- If the SRAM card is reformatted on the computer, read/write operations will be successful.



...PC Cards

The system does not recognize the PC Card CD-ROM when it is inserted into the PC Card socket

- From the Start Menu, select Shutdown, and then Shutdown the computer. Plug in the PC card and then restart the computer.
- Drivers may not be installed. Contact your organization's help desk for assistance.

The computer locks up when I remove the PC card

- Before you remove the card, right-click the card wizard icon in the system "tray" area of the screen (near the clock in the lower right corner), and choose Stop "card name" or shut down the computer and remove the card.

I can't turn off the computer after booting from a PC Card

- Do not use FN+OFF to suspend the computer if you have booted from a PC Card rather than the internal hard disk. Instead, remove the card and then press CTRL+ALT+DEL to restart the system.
- The card drivers may not allow suspend on NT. Shut down the computer to save battery life.

The Megahertz Ethernet PC card does not work

- This card has two connectors, XJACK and Honda. Use the Honda connector.



Pen/Touch Screen

When I try to use the stylus on my touch screen, nothing happens

- If you cannot select objects accurately with the stylus, you may need to recalibrate the touch screen.

To calibrate the touch screen

- 1 From the Start Menu, select Programs, Touch, and then choose Touchscreen Controls.
- 2 Select the Calibrate button.
- 3 Follow the instructions on the screen to calibrate the touch screen.

The touch screen display warps or pillows in high humidity

- The computer remains functional; however, moving the computer to a more suitable environment will allow the display to recover.

Radio Modems

How can I tell if my Cingular radio is working?

Try the following procedure.

- 1 Make sure the IRQ is set the same in the SCU.
See Section 5, "Customizing Settings," for more information.

How can I tell if my Motient radio is working?

- Make sure the IRQ is set the same in the SCU.
See Section 5, "Customizing Settings," for more information.
- Motient can be contacted to verify that the computer has a Motient radio installed and that it is registered with their company.
Contact your company's help desk for assistance.



...Radio Modems

The radio program can't regain network contact after the radio detects a low battery even when the battery is recharged

- The radio power must be cycled before the radio will resume contact with the network.
- From the Start Menu, select Shut Down, then select "Restart the computer?" to regain the radio.

Radio application cannot find radio modem

- Make sure the IRQ setting for COM4 is set correctly in the SCU. Some applications assume this to be IRQ 3.
See Section 5, "Customizing Settings."

The LED light is not on and there is not a PCMCIA icon in the tasktray when I try to use WLAN.

If the LED light is not on and there is not a PCMCIA icon in the tasktray, then the card has not been restarted and you should perform the following:

- 1 Perform a Shutdown/Shutdown. From the Start menu, select Shutdown and select Shutdown in the Shutdown window box. Wait for 10 seconds after the unit completely shuts down, then press FN+ON. When the unit has completely booted into Windows, verify that the rightmost LED is on and there is a PCMCIA icon in the task tray. If this condition is still not true, then;
- 2 There may be a problem with the X-C 6250 Pro (300) hardware or software requiring that the unit be returned for service. Contact your local help desk or IT department for further assistance.





APPENDIX C

Glossary



.....

AC adapter The standard charging device shipped with the mobile computer that supplies power from an AC wall outlet to operate the computer and charge the battery installed in the unit.

antenna If you have a radio modem installed in your computer, this device sends and receives radio waves for this modem. For best reception, place the antenna in a vertical position.

application A program designed for a specific purpose such as solving a particular business or mathematical problem.

backlight A feature of the computer display that makes information on the screen easier to read in low-light situations. On a monochrome display, the backlight automatically turns off after one minute of inactivity. You must manually turn the backlight on by pressing FN+F1 when you resume. On a color display, the backlight is on whenever the computer is running. See *also* “MaxBright.”

battery indicator light The left-most light on the indicator panel, this light illuminates when the computer is operating on battery power and blinks to let you know the battery capacity is getting low.



bit The smallest unit of computer data (binary digit).

deep cycle discharge A user-initiated charging method that completely discharges Nickel Metal Hydride (NiMH) batteries before charging them again. This helps eliminate “memory effect,” reconditions the batteries, and helps increase their capacity.

desktop The screen background for Windows on which windows, icons, and dialog boxes appear.

dust cover A cover that provides added protection for the serial, parallel, and video ports when they are not being used.

external power Any of the approved devices used to supply power to the mobile computer including the AC adapter, the vehicle adapter, and the vehicle cradle.

external power light The second light from the left on the indicator panel, this light illuminates when the computer is operating on external power. If a battery is installed, the external power supply automatically begins charging the battery when power is connected. The light blinks to indicate the battery is being charged; it remains on when the battery is fully charged.

fast charge A method of quickly increasing the battery capacity while the mobile computer is attached to external power. This is the normal and preferred charging method. It takes approximately three hours to fully charge the battery using this method.

hard disk A rigid magnetic storage device that provides fast access to stored data. The standard hard disk for the mobile computer is ruggedized to withstand more shock and vibration than hard disks in typical notebook computers.

hardware The electronic components, boards, peripherals, and equipment that make up your computer system.

indicator lights The small lights located between the display and the keyboard that blink or remain on or off to indicate activity on the system. They include an On/Off light, an External Power light, a Disk Activity light, and a Radio On/Off light.

keyboard The keyboard is weather sealed and designed with 93 percent standard key spacing.



MaxBright A feature available on the 10.4-inch color display that intensifies the backlight to its maximum brightness. Pressing FN+F1 toggles MaxBright on and off.

megabytes (MB) A unit of memory measurement equal to approximately one million bytes (1,048,576 bytes).

megahertz (MHz) A measurement of electrical frequency equal to one million cycles per second.

microphone Using the microphone allows a user to talk to another person.

Microsoft Windows NT An operating environment used on IBM-compatible computers that provides users with graphical windows in which to do their work. All Windows applications have consistent features such as command menus, windows, and dialog boxes.

mouse pointer and buttons On the mobile computer, the integrated mouse pointer is located directly below the spacebar on the keyboard. The left and right mouse buttons are located on either side of the mouse pointer.

MS-DOS (Command Prompt) Microsoft Disk Operating System. The standard, single-user operating system of IBM-compatible computers.

Nickel Metal Hydride battery (NiMH) The standard types of rechargeable batteries used in the mobile computer.

on/off light The left-most light on the indicator panel, this light illuminates when you turn on the mobile computer; it also blinks to let you know the battery is getting low.

online help A help utility available on-screen while you are using an application.

operating system A set of programs that manage the overall operation of the computer.

parallel port A port that can be used to connect a printer.

PC card A self-contained, credit card-sized device that can be used to store programs, data, or to expand the capabilities of your computer.



- port** An interface between the computer and external devices.
- Power On Self Test (POST)** A diagnostic test run by the computer's BIOS system when the computer restarts.
- power port** A port used to connect the external power supply to the mobile computer.
- radio on/off light** The right-most light on the indicator panel. If your computer is equipped with a radio modem, this light turns on when the radio modem is powered on.
- Random Access Memory (RAM)** The computer's primary working memory in which program instructions and data are stored so they are accessible directly to the central processing unit (CPU).
- RJ-11 connector** A port used by the internal modem to communicate over standard voice grade telephone lines.
- ruggedized** The unique design of mobile computers that are built to withstand rugged and rough environments.
- serial port** A port that can be used to connect a printer or modem.
- slow charge** A method of increasing the battery capacity while the computer is attached to external power. This method uses lower AC voltage. It takes approximately 16 hours to fully charge the battery using this method.
- software** System, utility, or application programs expressed in a computer-readable language. Software programs tell the hardware components what to do.
- speaker** Located on the bottom of the computer, the speaker provides sound for the unit.
- stand alone charger** An optional charging device used to charge an additional battery for the computer.
- Super Video Graphics Array (SVGA)** Video graphics technology that supports a graphics resolution of 800x600 pixels.



suspend mode Suspend mode turns off certain functions of the computer if there is no activity for a user-specified time. The computer also enters suspend mode if the battery capacity becomes critically low and external power is not connected or the battery is not replaced. Some systems do not automatically enter suspend mode when they are connected to external power.

System Configuration Utility (SCU) A utility that allows you to change default settings for your hardware options and power management.

Taskbar In Windows NT, the area along the bottom of the screen that contains the Start button and buttons for windows, documents, or applications that are open.

utility A program that helps you maintain and improve the efficiency of the computer system.

vehicle adapter An optional device that supplies power from the vehicle battery to operate the computer and charge the battery installed in the unit. It typically connects to the vehicle battery using the cigarette lighter socket.

vehicle cradle An optional, vehicle-based docking station designed to safely secure the computer in a vehicle. You can also use the vehicle cradle to charge batteries and communicate with other devices.

video port This port can be used to connect an external monitor.





Index



Symbols

- 15-pin video port 17
- 25-pin parallel port 17
- 9-pin serial port 17

A

- AC adapter 37, 71
 - defined 141
- accessories
 - optional 20, 80
- adjusting display contrast 30, 40
- adjusting mouse movement 33
- adjusting volume 30
- antenna
 - illustrated 17
 - position 48
- applications
 - defined 141
 - HyperTerminal 21
 - troubleshooting 122
- ATA cards. *See PC cards*
- audio port, illustrated 17

B

- backlight 40, 68
 - adjusting 29
 - changing time-out setting 56
 - defined 141
- battery
 - charging 38, 39, 71, 86
 - conserving power 66, 67
 - deep cycle discharging 142
 - disposing of 73
 - extending life 66
 - installing 38, 69
 - light 19
 - low battery indicators 19
 - low battery warnings 67
 - maintenance 72, 105
 - Nickel Metal Hydride (NiMH) 38, 143
 - recycling 73
 - replacing 69
 - storage and care 72, 105
 - temperatures 64, 125
 - tips 62
 - troubleshooting 125



battery door
 illustrated 17
 opening 70, 133
brightness, display 40

C

calibrating the touch screen 22
Caps Lock mode 26
CD-ROM
 external 85
CDPD radio, registering 44
cellular modem, registering 44
changing power management options 56
changing the speed of the mouse 33
chargers
 AC adapter 71
 stand alone 86
 vehicle adapter 87
 vehicle cradle 91
charging batteries 38, 39, 71, 86
cleaning the computer 106, 107
COM3 IRQ, setting 58
COM4 IRQ, setting 58
compliance statements iii
connecting a printer 80
connecting an external monitor 81
connecting an external mouse 81
connecting optional equipment and accessories 80
conserving power 66, 67
copying files
 using an external CD-ROM 85
 using an external floppy disk drive 83
 using PC cards 78
 using the internal landline modem 100
customizing settings 56

D

deep cycle discharging 142
default settings, changing 56
disk activity light 19

display
 adjusting contrast 30, 40
 backlight 68, 141
 calibrating the touch screen 22
 cleaning 107
 if you have a touch screen 42
 illustrated 17
 MaxBright 29
 troubleshooting 126
disposing of batteries 73

E

error messages 112
extending battery life 66
external floppy disk drive 83
external monitor, connecting 81
external mouse 81
external power
 AC adapter 71
 defined 142
 indicator light 19
 vehicle adapter 87
 vehicle cradle 91

F

FCC statements iii
files, copying 78, 100
floppy disk drive, external 83
FN keys 29
function keys 30

G

general description of the computer 17
getting started 37

H

hard disk
 care and handling 102
 defined 142
 troubleshooting 128



hardware settings, changing defaults 56
hardware, standard 20
headset port, illustrated 17
HyperTerminal application 21

I

I/O ports
 illustrated 17
 troubleshooting 128
if you have a touch screen 42
important battery tips 62
indicator lights 19, 39
 defined 142
 illustrated 17
installing batteries 38, 69
IRQ settings 58

K

keyboard
 basics 24
 cleaning 107
 illustrated 17, 24
 troubleshooting 129
 using 24, 29
keys
 FN 29
 numeric 28
 summary table 29

L

landline modem 99, 130
LED. *See indicator lights*
lights. *See indicator lights*
low battery indicators 19
low battery warnings 67

M

maintaining batteries 72, 105
MaxBright 29, 40
memory 20
messages, error 112

microphone, illustrated 17
Microsoft Windows, defined 143
mobile computer
 cleaning 106, 107
 connecting peripherals 80
 connecting to telephone line 99
 features 17
 illustrated 17
 indicator lights 19
 keys 24
 memory 20
 operating the first time 37
 overview 17
 power-saving features 67
 processor 20
 restarting 24
 special keys 29
 standard hardware and software 20
 storing 109
 turning on and off 29
modem
 determining type 98
 internal landline 99
 radio 44
 surge protection 95
 troubleshooting 130, 138
monitor, external 81
mouse
 adjusting movement 33
 connecting external 81
 defined 143
 how to use 32
 illustrated 17

N

Nickel Metal Hydride (NiMH) battery 38
 defined 143
 maintaining 72
 tips 62
Num Lock mode 28
numeric keypad 24, 28

**O**

optional equipment and accessories 20, 80
optional hardware and software 20

P

parallel port
 connecting a printer 80
 defined 143
 illustrated 17
PC card door and slots, illustrated 17
PC cards
 bootable 78
 inserting 76
 troubleshooting 136
 using to transfer files 78
pen/touch screen 42
 calibrating 22
 cleaning 102
 troubleshooting 138
peripherals
 connecting 80
 surge protection 95
power, conserving 66
power management. *See also battery: tips*
 AC adapter 37
 changing options in the SCU 56
power port
 cleaning 107
 illustrated 17
power surges, protecting equipment from 95
precautions 36
printer 80
problems, solutions to 120, 121
processor 20
protecting equipment from power surges 95

R

radio modem
 additional documentation 53
 antenna position 48
 capabilities 47
 registering 44
 software 50
 troubleshooting 139

recycling batteries 73
replacing the battery 69
restarting the computer 24
resuming 40
RJ-11 connector 99
 cleaning 107
 defined 144
 illustrated 17

S

safety information vi
screen. *See* See display. *See display*
selecting a surge suppresser 95
serial port
 connecting a printer 80
 connecting an external mouse 81
 defined 144
 illustrated 17
settings, changing defaults 56
software
 radio 50
 standard 21
speaker, illustrated 17
stand alone charger 86, 144
standard hardware 18
standard software 21
startup instructions 37
startup problems, solutions to 41
storing batteries 72, 105
storing the computer 109
stylus, using 42
surge suppressors 95
suspend mode 67, 145
System Configuration Utility (SCU) 56
 accessing 57
 defined 145

T

telephone line, connecting 99
temperatures
 battery 64, 124
 operating 106
 storing the computer 109



- tips, battery 62
- touch screen 42
 - calibrating 22
 - cleaning 102
 - troubleshooting 138
- transferring files
 - using an external CD-ROM 85
 - using an external floppy disk drive 83
 - using PC cards 78
 - using the internal landline modem 100
- troubleshooting
 - common solutions 121
 - what to try first 120
- turning MaxBright on and off 29, 40
- turning the backlight on and off 29, 40
- turning the computer on and off 40

U

- USB port, illustrated 17

V

- vehicle adapter 87, 145
- vehicle cradle 91, 145
- video port 17, 81
- volume, adjusting 30

W

- wireless network providers 44





Itronix Corporation
P.O. Box 179
Spokane, WA 99210-0179
www.itronix.com



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>