



SPORT-LANTERN INSTRUCTION MANUAL



Catalog Number WLL1B

Thank you for choosing Black & Decker!
Go to www.BlackandDecker.com/NewOwner
to register your new product

**BEFORE RETURNING THIS PRODUCT
FOR ANY REASON PLEASE CALL**

1-800-544-6986

BEFORE YOU CALL, HAVE THE CATALOG No, AND DATE CODE AVAILABLE. IN MOST CASES, A **BLACK & DECKER** REPRESENTATIVE CAN RESOLVE THE PROBLEM OVER THE PHONE. IF YOU HAVE A SUGGESTION OR COMMENT, GIVE US A CALL. YOUR FEEDBACK IS VITAL TO BLACK & DECKER.

TO REDUCE THE RISK OF INJURY, THE USER MUST READ AND UNDERSTAND THE INSTRUCTION MANUAL

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Cat. # WLL1B
April '07

Form # 90519500
Copyright © 2007 Black & Decker

Printed in China

⚠️ GENERAL SAFETY WARNINGS AND INSTRUCTIONS FOR ALL APPLIANCES

READ ALL INSTRUCTIONS

⚠️ **WARNING:** Read all instructions before operating product. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

- **AVOID DANGEROUS ENVIRONMENTS** Don't use appliances in damp or wet locations. Don't use appliances in the rain.
- **KEEP CHILDREN AWAY.** All visitors should be kept at a distance from work area.
- **STORE IDLE APPLIANCES INDOORS.** When not in use, appliances should be stored indoors in dry, and high or locked-up place – out of reach of children.
- **USE RIGHT APPLIANCE.** Do not use the appliance for any job except that for which it is intended.
- **USE SAFETY GLASSES AND OTHER SAFETY EQUIPMENT.** Use safety goggles or safety glasses with side shields, complying with applicable safety standards and, when needed, a face shield. Also use face or dust mask if operation is dusty. This applies to all persons in the work area. Also use a hard hat, hearing protection, gloves, safety shoes and dust collection systems when specified or required. Safety glasses or the like are available at extra cost at your local dealer or Black & Decker Service Center.
- **DON'T OVERREACH.** Keep proper footing and balance at all times.
- **USE OF ACCESSORIES AND ATTACHMENTS.** The use of any accessory or attachment not recommended for use with this appliance could be hazardous. Note: Refer to the accessory section of this manual for further details.
- **STAY ALERT.** Watch what you are doing. Use common sense. Do not operate tool when you are tired.
- **CHECK DAMAGED PARTS.** Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorized service center unless otherwise indicated elsewhere in this instruction manual. Have defective switches replaced by authorized service center. Do not use tool if switch does not turn it on and off.
- **DO NOT OPERATE** portable electric tools near flammable liquids or in gaseous or explosive atmospheres. Motors in these tools normally spark, and the sparks might ignite fumes.

SAFETY GUIDELINES / DEFINITIONS

⚠️ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

⚠️ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

⚠️ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION: Used without the safety alert symbol indicates potentially hazardous situation which, if not avoided, may result in property damage.

RISK OF UNSAFE OPERATION. When using tools or equipment, basic safety precautions should always be followed to reduce the risk of personal injury. Improper operation, maintenance or modification of tools or equipment could result in serious injury and property damage. There are certain applications for which tools and equipment are designed. Black & Decker strongly recommends that this product NOT be modified and/or used for any application other than for which it was designed. Read and understand all warnings and operating instructions before using any tool or equipment.

IMPORTANT SAFETY INSTRUCTIONS

⚠️ **CAUTION: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE:**

- Do not disassemble the main body of the unit. Other than the 9 "C" size dry cell battery pack and the 9 watt compact fluorescent (CFL) bulb, there are no user-replaceable parts.
- DO NOT operate any of the unit's features unless unit is fully assembled.
- NEVER attempt to operate the Lantern without the bulb and housing in place; and only replace the bulb with a new 9 watt CFL bulb.
- Replace the Removable Battery Pack only with a manufacturer-supplied battery pack.
- Make sure all switches are in the OFF position before replacing the bulb or battery pack.
- Follow all warnings, cautions, and instructions marked on this unit.
- THIS UNIT IS NOT FOR USE BY CHILDREN AND SHOULD ONLY BE OPERATED BY ADULTS.
- Check unit periodically for wear and tear. Take to a qualified technician for replacement of worn or defective parts immediately.

• Read This Instruction Manual Before Using This Unit.

⚠ WARNING: Batteries can explode, or leak, and can cause injury or fire. To reduce this risk:

- Carefully follow all instructions and warnings on the battery label and package.
- Always insert batteries correctly with regard to polarity (+ and -), marked on the battery and the equipment.
- Do not short battery terminals.
- Do not charge batteries.
- Do not mix old and new batteries. Replace all of them at the same time with new batteries of the same brand and type.
- Remove dead batteries immediately and dispose of per local codes.
- Do not dispose of batteries in fire.
- Keep batteries out of reach of children.
- Remove batteries if the device will not be used for several months.

"Transporting batteries can possibly cause fires if the battery terminals inadvertently come in contact with conductive materials such as keys, coins, hand tools and the like. The US Department of Transportation Hazardous Material Regulations (HMR) actually prohibit transporting batteries in commerce or on airplanes (i.e. packed in suitcases and carryon luggage) UNLESS they are properly protected from short circuits. So when transporting individual batteries, make sure that the battery terminals are protected and well insulated from materials that could contact them and cause a short circuit."

SAVE THESE INSTRUCTIONS

THIS MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS FOR THE SPORT-LANTERN MODEL WLL1B.

INTRODUCTION

Thank you for purchasing the *Black & Decker® Sport-Lantern Model WLL1B*. Please read this guide carefully before use to ensure optimum performance and to avoid damage to the unit.

FEATURES

- Powerful fluorescent lantern
- Ultra bright 6 LED Auxiliary Light
- Powered by nine (9) "C" alkaline dry cell batteries (not included)
- Fold-away Handle/Hanging Hook
- Protective cage

Control and Function Guide



POWER SUPPLY

The unit is powered by 9 "C" alkaline dry cell batteries (not supplied).

Press the button on the bottom of the Lantern to eject the pack. Turn the knob (counterclockwise) on the front of the Removable Dry Cell Battery Pack to open. Insert the batteries observing the cautions that follow.

Note: Use only "C" alkaline dry cell batteries in this unit.

⚠ CAUTIONS

- When replacing the "C" alkaline dry cell batteries: DO NOT mix old and new batteries. Always insert batteries correctly with regard to polarity (+ and -), marked on the battery and the equipment. Remove dead batteries immediately and dispose of per local codes.
- DO NOT dispose of batteries in fire, as this may result in an explosion.
- Keep batteries out of the reach of children.

OPERATING THE LANTERN

The Lantern is controlled by the Lantern ON/OFF Switch on the front of the unit (see the "Control and Function Guide").

OPERATING THE 6 LED AUXILIARY LIGHT

The 6 LED Auxiliary Light in the lantern base is controlled by the LED Light ON/OFF Pushbutton on the front of the unit. (See the "Control and Function Guide.")

CARE AND MAINTENANCE

Cleaning

Over time, dust or fingerprints may accumulate on the Lantern glass. Clean with a soft, clean, oil-free cloth moistened with household window cleaner. Do not use alcohol based cleaners on plastic surfaces. This will eventually cause surface clouding.

Note: Never submerge this unit in water or any other liquid.

Replacement Parts

Check unit periodically and discontinue use if parts or accessories are found to be damaged or defective. To replace worn or defective parts, contact Customer Service toll-free at 1-800-544-6986.

Bulb Replacement

1. Unscrew the top of the Lantern (refer to Figure 1 below).
2. Remove the bulb assembly (refer to Figure 2 below).
3. Locate the metal spring in the top of the lamp (refer to Figure 3 below).
4. Grasp the metal spring and the lamp base to remove the bulb (refer to Figure 4 below).
5. Replace the bulb with a new 9 watt CFL bulb and re-assemble.

FIGURE 1

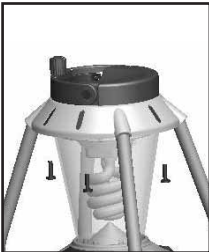


FIGURE 2



FIGURE 3

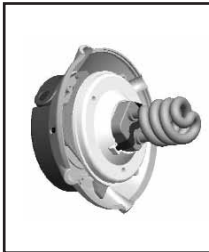


FIGURE 4



⚠ WARNINGS

DO NOT operate any of the unit's features unless the unit is fully assembled.

NEVER attempt to operate the Lantern without both the bulb and housing in place; and only replace the bulb with a new 9 watt CFL bulb.

⚠ CAUTIONS: TO REDUCE THE RISK OF INJURY OR PROPERTY DAMAGE: NEVER grasp the glass bulb directly. It can shatter. DO NOT TWIST to remove the bulb; it pulls straight out of the socket.

Safe Battery Disposal


Refer to the Safety Warnings in the front of this Instruction Manual when selecting and replacing batteries. Always dispose of used batteries properly.

WARNINGS: TO REDUCE THE RISK OF INJURY / EXPLOSION

- Do not dispose of batteries in fire as this may result in an explosion.
- Do not expose the unit containing batteries to fire or intense heat as it may explode.

Accessories

Recommended accessories for use with your tool are available from your local dealer or authorized service center. If you need assistance regarding accessories, please call: **1-800-544-6986**.

 **WARNING:** The use of any accessory not recommended for use with this tool could be hazardous.

SERVICE INFORMATION

All Black & Decker Service Centers are staffed with trained personnel to provide customers with efficient and reliable power tool service. Whether you need technical advice, repair, or genuine factory replacement parts, contact the Black & Decker location nearest you. To find your local service location, refer to the yellow page directory under "Tools—Electric" or call: 1-800-544-6986 or visit www.blackanddecker.com.

FULL TWO-YEAR HOME USE WARRANTY

Black & Decker (U.S.) Inc. warrants this product for two years against any defects in material or workmanship. The defective product will be replaced or repaired at no charge in either of two ways.

The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges (usually 30 to 90 days after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns that are beyond the time set for exchanges.

The second option is to take or send the product (prepaid) to a Black & Decker owned or authorized Service Center for repair or replacement at our option. Proof of purchase may be required. Black & Decker owned and authorized Service Centers are listed under "Tools-Electric" in the yellow pages of the phone directory and on our website www.blackanddecker.com.

This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state or province to province. Should you have any questions, contact the manager of your nearest Black & Decker Service Center. This product is not intended for commercial use.

FREE WARNING LABEL REPLACEMENT: If your warning labels become illegible or are missing, call 1-800-544-6986 for a free replacement.

SPECIFICATIONS

Bulb:	9 watt compact fluorescent (CFL)
LED Quantity / Life:	6 / 10,000 hours
Batteries:	(9) "C" Alkaline Batteries (not included)

Imported by
Black & Decker (U.S.) Inc.,
701 E. Joppa Rd.
Towson, MD 21286 U.S.A.



See 'Tools-Electric'
– Yellow Pages –
for Service & Sales



BLACK & DECKER (U.S.) INC.
701 East Joppa Road
Towson, MD 21286 U.S.A.

Copyright © 2007 Black & Decker, Inc.
RD060607

Made in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>