 


 **BLACK & DECKER**®

Jug Kettle

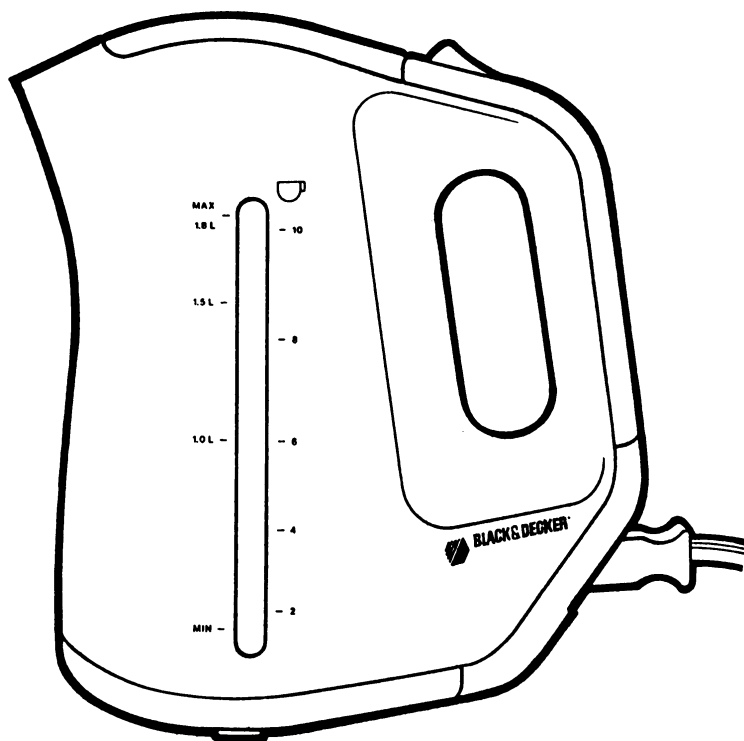

(Model JKA300 shown)

Models JK200, JKA300 and JKA350
For Descaling Instructions - See page 3
Full Two Year Warranty - See page 3

READ AND SAVE THIS BOOK
Copyright © 1992 Black & Decker

CONGRATULATIONS on your purchase of this fine product from Black & Decker.

Please read these instructions carefully. They have been prepared to help you obtain the best results from this product.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should be followed including the following:

- Read all instructions carefully, even if you are familiar with the appliance.
- Do not touch hot surfaces. Use handle.
- To protect against electrical shock hazard kettle should be unplugged when filled from water tap.
- To protect against electrical hazards do not immerse any part of this appliance or cord set in water or other liquid.
- Close supervision is always important when an appliance is used near children.
- Always unplug this kettle immediately after using.
- To prevent burns and shock hazards unplug and allow to cool before cleaning.
- To minimize injury hazards, do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or if the appliance has been dropped or damaged in any manner. Return appliance to nearest authorized service facility for examination, repair or adjustment.
- The use of attachments not recommended or sold by Black & Decker may cause hazards.
- To avoid electrical shock hazard do not use outdoors.
- To prevent damage do not let cord touch hot surfaces or allow cord to hang over edge of table or counter in such a way that kettle could be accidentally pulled over.
- To prevent damage do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use for other than heating water. Other liquids or food will contaminate the interior.
- To protect against fire do not operate in the presence of explosive and/or flammable fumes.
- NEVER YANK ON CORD as this may damage the cord and eventually cause a shock hazard.
- If operated on wood furniture use a protective pad to prevent damage to delicate finishes.
- Use only delimiting chemicals and techniques described in this booklet.
- The kettle is a high wattage appliance and no other appliance should be plugged into the same outlet or electric circuit at the same time. Overloading circuits can cause fuse problems and fire hazards.
- To avoid scalding always ensure lid is correctly secured in the jug body prior to operating.
- Scalding may occur if lid is removed while heating.
- Remove and replace lid carefully when hot.
- Extreme caution must be used when moving the kettle containing hot water. Never lift the kettle by its lid. Always use the body handle.
- Do not overfill. Overfilling may cause boiling water from being ejected through the spout. Maximum level is indicated on the water window.
- A kettle equipped with the automatic off feature should not be left connected to a wall outlet where room temperature is likely to fall to outdoor winter temperatures. At sub-zero temperatures the Automatic Control Thermostat may reset to boil and energize the element.

SAVE THESE INSTRUCTIONS

SPECIAL INSTRUCTIONS

1. Before first use, fill kettle with clean water to maximum capacity and boil. Discard water and repeat once.
2. Do not overfill as this may cause water to spill out when boiling or pouring.
3. Operate the kettle only on a dry and level surface with lid properly secured in place.
4. Do not plug in dry. Do not pour water out while plugged in as damage to kettle may occur. This kettle has a safety thermostat designed to disconnect the heating element if the kettle is accidentally plugged in empty or allowed to boil dry. When this occurs, allow to cool for a few minutes and then add some cold water to bring the temperature back to normal. The kettle is then ready for use again.
5. To avoid shock and operating hazards refer to an authorized service depot to repair a defective or damaged kettle.
6. To avoid possible steam damage, turn spout opening away from walls or cabinets when operating kettle.

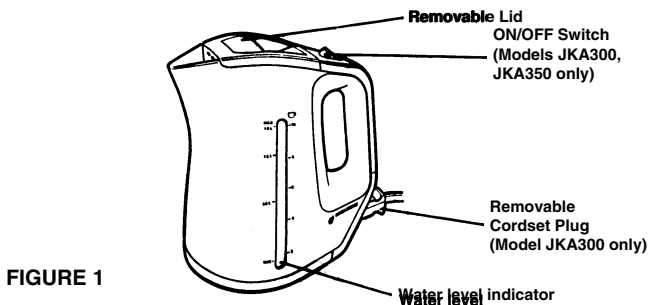 


FIGURE 1

HOW TO USE YOUR JUG KETTLE

1. Kettle should always be unplugged when filling or adding water.
2. Fill the kettle with water to the desired level. Do not overfill. If kettle is overfilled there is a risk of spillage or spitting. The kettle lid may be removed for filling if desired. The water level indicator will assist you to measure correct amount. (See Figure 1).
3. Place kettle on a dry, flat surface. Ensure lid is in place securely.
4. Never operate the kettle with less than one cup (250 mL) of water or without lid securely in place.
5. For auto-off model JKA300 only, connect cordset into socket on the kettle just below the handle (See Figure 2). This is not required on the JK200 and JKA350 models as cord set is permanently fixed to kettle.
6. Insert plug into a grounded 120V 60Hz power outlet. **CAUTION: Do not place kettle on a heated stove, or on a hot electric or gas burner.** For auto-off models JKA300 and JKA350 depress the on/off switch button on top of the kettle to the ON (-) position. (see Figure 3). No switching is required for JK200.
7. When the water has boiled, the kettle will switch off automatically (auto-off JKA300 and JKA350 models only). After a short delay the water can be brought back to a boil by resetting the switch back to the ON (-) position. The JK200 model kettle must be unplugged manually upon reaching a full boil. **DO NOT ALLOW THE KETTLE TO BOIL DRY** (See special instructions - clause 4 if this occurs).
8. The auto-off JKA300 and JKA350 model kettles may be switched off at any time by either pushing the switch on top of kettle to the "OFF" position or by manually unplugging unit at electrical wall outlet at the power outlet. The JK200 model kettle must be switched off by manually unplugging the unit.
9. Always unplug your kettle from electrical power outlet before pouring. The cordset on your JKA300 may be removed from the kettle for handling and pouring convenience.

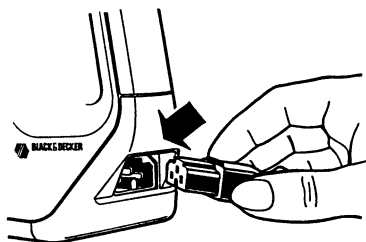 


FIGURE 2

(Model JKA300 Only)

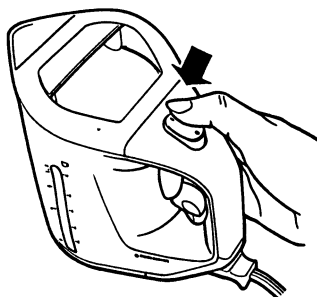 


FIGURE 3

(Models JKA300, JKA350 Only)

HOW TO CARE FOR YOUR JUG KETTLE

Wipe the durable polypropylene exterior and lid of the Kettle with a soft, damp cloth or sponge. Remove stubborn spots with a cloth moistened with mild liquid detergent. Do not use abrasive scouring pads or powders. NEVER IMMERS KETTLE BODY IN WATER OR OTHER LIQUIDS. From time to time, dependent on the nature of your water, mineral deposits can build up on the inside of your kettle reducing boiling speed and efficiency. You can remove this build-up by using a commercial descaler (available at Black & Decker Authorized Service Depots) or by using vinegar and water in the following manner:

- Half fill the Kettle with ordinary tap water.
- Add 30 mL (1 fluid oz.) of white vinegar to the water in the Kettle.
- Boil the mixture and allow it to stand for 30 minutes. Reboil the mixture and allow it to stand for a further 30 seconds. Repeat procedure again for a third time. (Note: In extreme cases this procedure may have to be repeated).
- Empty, rinse well and use in the normal way.

NOTE : Some type mineral deposits cannot be removed with a vinegar solution. Check your element surface for scale removal and use commercial descaler if necessary.

WARRANTY

To the original purchaser (or gift recipient) of this product for home use, Black & Decker Canada Inc., warrants that any part of the product which proves to be defective in material or workmanship within two years of the date of purchase or receipt will be repaired or replaced, free of charge.

Should your product not perform properly, return it to your nearest Black & Decker service depot, transportation charges prepaid. A list of authorized service depots is packaed with the appliance.

If the nearest service depot is located outside of your city or metro area, or if you live in a rural area, Black & Decker Canada Inc. will pay the return transportation charges. This warranty will be honoured by any of our authorized service depots in Canada, wherever you may live, regardless of where the appliance was purchased.

The provisions of this warranty are in addition to, and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties or other rights or remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.



Black & Decker Canada Inc.
100 Central Avenue.
Brockville, Ontario K6V 5W6

BEYOND WARRANTY SERVICE

For beyond warranty repairs we recommend that you use our authorized service depots as these facilities carry replacement parts and have the proper servicing and test equipment for safe repairs.

PRINTED IN HONG KONG

Form No.: 263079-01

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>