


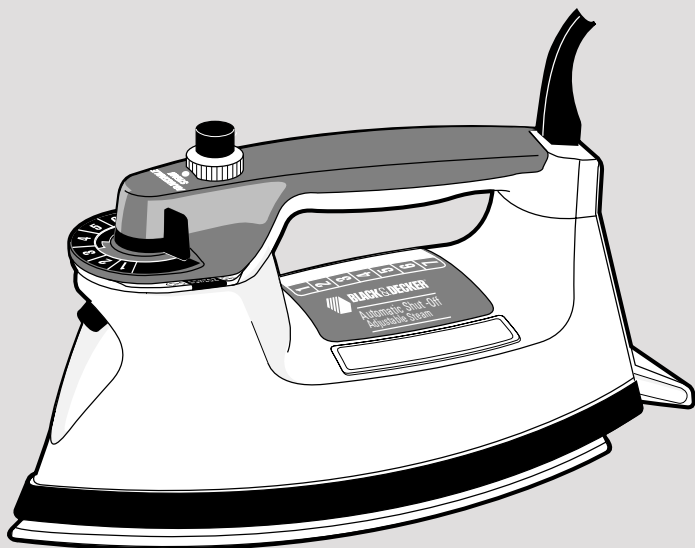

SAVE THIS USE AND CARE BOOK

Light 'n Easy[®] Iron

with Automatic Shut-Off



1-800-231-9786
QUESTIONS? Please call us TOLL FREE

MODELS F495SA/F499S

IMPORTANT SAFEGUARDS

When using your iron, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquid.
- The iron should always be turned to O/FILL before plugging into or unplugging from an outlet. Never yank cord to disconnect from outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around cordwrap when storing.
- Always disconnect iron from electrical outlet when filling with or emptying of water and when not in use. Be careful to avoid spilling water over iron when filling.
- Do not operate iron with a damaged cord or plug or if the iron has been dropped or damaged.
- To avoid the risk of electric shock, do not disassemble the iron; instead, take it to an authorized service center for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board. Always position iron carefully to prevent it from falling if ironing board is accidentally moved or cord is pulled. Always use heel rest.
- Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down — there may be hot water in the water tank. Avoid rapid movement of iron to minimize hot water spillage.
- Do not operate in the presence of explosive and/or flammable fumes.
- Do not use iron outdoors.
- This product is for household use only and not for commercial or industrial use.

SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- If an extension cord is necessary, it should be rated not less than 10 amperes and have Underwriters Laboratories listing. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled on or tripped over.


SAVE THESE INSTRUCTIONS

POLARIZED PLUG

This appliance has a polarized plug—one blade is wider than the other. To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

TAMPER-RESISTANT SCREW

This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, **do not attempt to remove the outer cover**. There are no user serviceable parts inside. Repair should be done only by authorized service personnel (see pages 14 & 15 for a list of Black & Decker Company-Owned Service Centers).

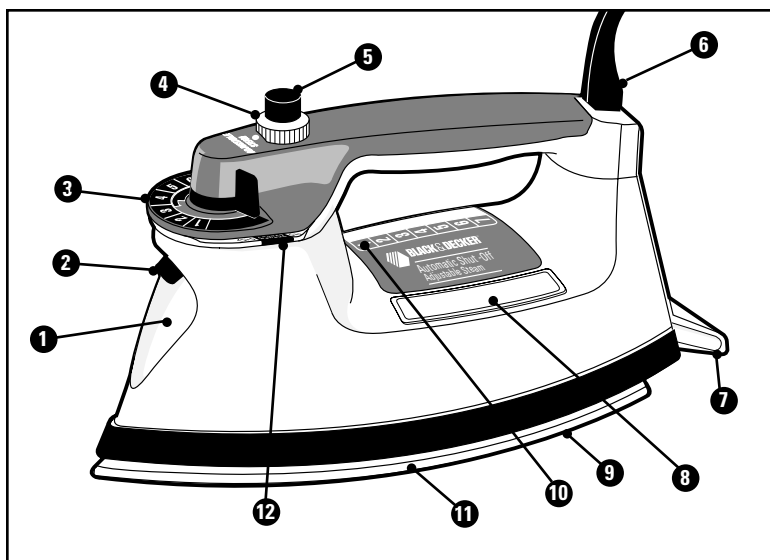

- | | |
|------------------------------|---------------------------------|
| 1. Water Fill Hole | 7. Extended Heel Rest/Cord Wrap |
| 2. Spray Nozzle | 8. Water Window |
| 3. Temperature Selector Dial | 9. Non-Stick Coated Soleplate |
| 4. Adjustable Steam/Dry Dial | 10. Heat Fabric Guide |
| 5. Spray Button | 11. Button Groove |
| 6. Centered Cord | 12. Push ON Button |

How To Use

PERPARING THE IRON

IMPORTANT: Follow this procedure to clean the iron and to become familiar with its features before first use.

1. Remove any labels, stickers, protective materials, or tags which may be attached to the body or soleplate of the iron.

2. Fill the Water Tank to the water full mark (approximately 4 oz.). (See "Filling With Water," below)
3. Plug the iron into a standard (polarized) electrical outlet.
4. Set the Temperature Selector/ Heat Fabric Guide to the Cotton setting and preheat for about 30 seconds. (See "Starting The Iron," page 6)
5. While ironing on an old cotton terry cloth towel for about two minutes, try using each of the iron's features:

Spray: Pump the SPRAY Button a few times to see the amount of water that is released.

Steam Settings: Turn the Adjustable Steam/Dry Dial to the Indicator Mark for ☁ (light), ☁☁ (medium), and ☁☁☁ (heavy) settings to become familiar with the different amounts of steam at each setting.

FILLING WITH WATER

NOTE: When filling, be sure the iron is unplugged, the Temperature Selector Dial is in the O/FILL position, and the Adjustable Steam/Dry Dial is in the Dry position.


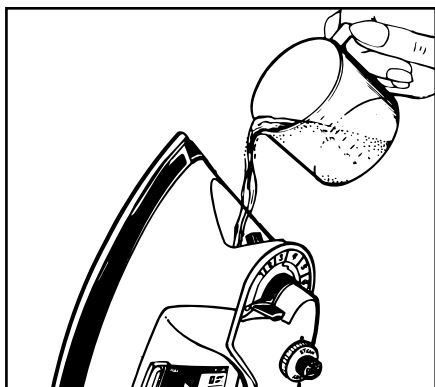 


Figure A

1. Using a clean cup, pour water into the Water Fill Hole until the water level reaches the FULL mark next to the Water Window (Figure A). Do not overfill. Refill as necessary. Never place the iron directly under a faucet to add water.
2. Ordinary tap water can generally be used for ironing. However, do not use water processed through a home softening system.
3. In extremely hard water areas, consider using distilled or demineralized water. If using distilled or demineralized water, tap water should be used the first time you use the iron and once per month thereafter to maintain steam performance.

STARTING THE IRON

 1. Be sure the iron is filled with water. Plug in the iron.
2. Press the PUSH ON Button in to start the iron. (Figure B).

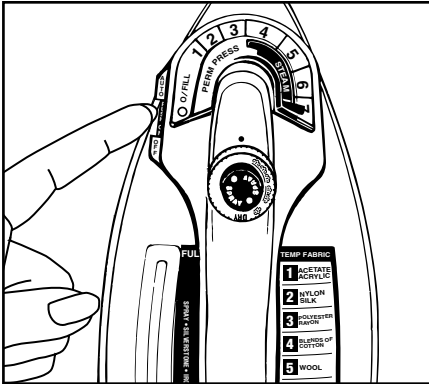

NOTE: The PUSH ON Button will normally remain pushed in. It will pop out only if the iron shuts itself off automatically.

Figure B

3. Use the Heat Fabric Guide (Numbered 1 thru 7) on the body of the iron to select the setting for the fabric to be ironed. (Also, see "Fabric Ironing Chart" on page 9).
4. Turn the Temperature Selector Dial to the appropriate setting and allow to preheat for approximately 2 minutes.
5. To iron with steam, turn the Adjustable Steam/Dry Dial to the ☺ (light), ☺☺ (medium), or ☺☺☺ (heavy) steam setting as indicated

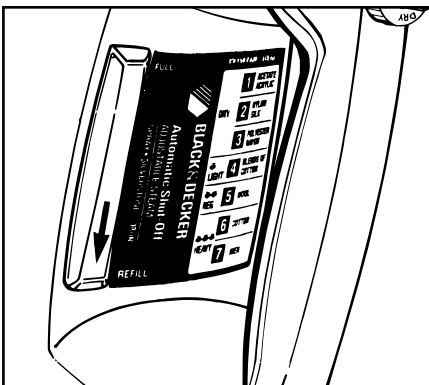


Figure C

next to the Heat Fabric Guide on the body of the iron (Figure C). **IMPORTANT:** the Temperature Selector Dial must be in the steam area (settings 4 thru 7) to generate steam. If water spotting occurs, reduce the steam level and/or

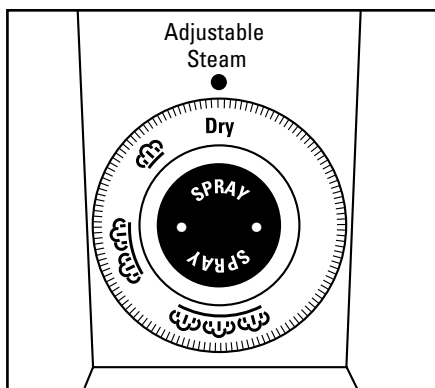


Figure D

increase the heat setting slightly on the Temperature Selector Dial.

6. For spray, simply pump the spray button at the top of the iron to get a water mist from the spray nozzle. Spray can be used at any temperature setting whether steam or dry ironing.

7. To iron without steam, turn the Adjustable Steam/Dry Dial to the Indicator Mark for DRY. (Figure D)

ABOUT THE AUTO-OFF FEATURE

1. This iron will shut off automatically after one hour whether or not it is in use.

2. The PUSH ON Button will pop out *only* if the iron shuts off automatically after an hour.

3. If the PUSH ON Button pops out while you are ironing, then one hour has elapsed since the iron was plugged in. Simply press the PUSH ON Button back in to continue ironing.

NOTE: Turning the Temperature Selector to O/FILL will not shut off the iron. That simply shuts off the heat. If you have ironed for less than an hour and the PUSH ON Button remains pushed in, unplug the cord from the outlet to ensure the iron is off. Otherwise, the iron will shut off automatically after it has been plugged in for an hour.

TURNING THE IRON OFF

To manually turn the iron off, turn the Temperature Selector Dial to O/FILL and unplug the cord from the outlet. You cannot manually pop out the PUSH ON Button.

STORING THE IRON

1. Turn the Adjustable Steam/Dry Dial to DRY.
2. Turn the Temperature Selector Dial to O/FILL.
3. Unplug the iron.
4. Allow the iron to cool and wrap the cord around the body of the iron and extended heel rest.
5. It is not necessary to empty the water if the iron is used more than once a week.
- 6. Store the iron on its heel rest to prevent water from leaking from the Soleplate.**

FABRIC IRONING CHART

Refer to this chart for recommended Temperature and Steam Settings and ironing instructions for various fabrics. Always read garment labels and follow manufacturer's ironing instructions.

NOTE: Use **SPRAY** at any temperature setting. **STEAM** should only be used in the steam area (Settings 4 thru 7) of the Temperature Selector Dial. Water spotting may occur if the setting is too low.

FABRIC	ADJUSTABLE STEAM	TEMP.	IRONING INSTRUCTIONS	
ACRYLIC ACETATE	↑	1.	Dry iron on wrong side. Press washables while damp.	
NYLON SILK		2.	Dry iron on wrong side to prevent shine. Press washables while damp.	
POLYESTER SOME RAYONS PERM. PRESS		3.	Dry iron washables while fabric is damp. Iron rayon fabrics on the wrong side. Steam iron if fabric manufacturer directs.	
COTTON BLENDS	DRY IRON AT ANY SETTING ↓	4.	Check care label and follow the manufacturer's instructions for blends: use the setting for the fiber requiring the lowest heat.	
WOOL		5.	Steam iron on wrong side to prevent shine, or use a press cloth on right side. Do not press completely dry.	
COTTON		LIGHT ☁☁ ↑ REGULAR ☁☁☁ ↑ HEAVY ☁☁☁☁ ↓	6.	Dry iron washables while damp. Use steam as needed. Iron dark fabrics on wrong side to avoid shine.
LINEN			7.	Dry iron washables while damp and until dry. Use steam as needed. Iron dark linens on wrong side to avoid shine.

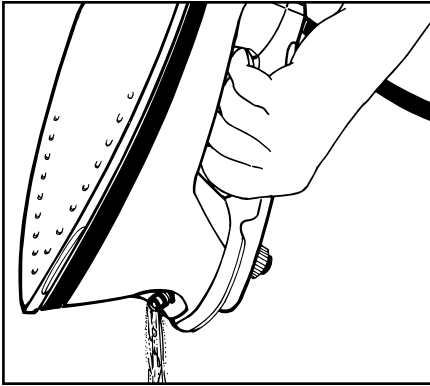


Figure E

CARE OF THE IRON EMPTYING THE IRON

1. Turn the Temperature Selector Dial to O/FILL.
2. Set the Adjustable Steam/Dry Dial to the DRY position, and unplug the iron.
3. Empty the water by holding the iron over a sink with the tip pointing downward (Figure E).

Water will empty out the Water Fill Hole.

4. If all the water hasn't drained, repeat the emptying process.

CLEANING THE OUTSIDE SURFACES

1. Allow the iron to cool completely.
2. Wipe the outer shell and non-stick coated soleplate with a cloth dampened in water and a mild household detergent. Never use abrasives, heavy-duty cleansers, or scouring pads on the non-stick coating.

Need Help?

IRON WON'T HEAT?

1. Is the iron plugged in? Press the PUSH ON Button in.
2. If it still doesn't heat, will a lamp plugged into the outlet turn on?

IRON WON'T START STEAMING?

3. Is the Temperature Selector Dial turned to a fabric setting?

1. Check to see if there is enough water in the Water Tank.
 2. Is the Adjustable Steam Dial set at ☐, ☐☐, or ☐☐☐? Adjust the Dial to Dry and back to the desired steam level several times.
 3. Is the Temperature Selector Dial set to the steam area (settings 4 thru 7)?
 4. If steaming doesn't start, gently tap the Soleplate on the ironing board once or twice.
-

WATER DROPLETS COMING FROM STEAM VENTS?

1. Is the Temperature Selector Dial set in a steam area (somewhere between settings 4 and 7)?
 2. Is the Adjustable Steam Dial set at the corresponding ☐, ☐☐, or ☐☐☐ steam setting?
-

SHUTS OFF AUTOMATICALLY WHILE IRONING?

1. Has the iron been plugged in for an hour? This iron will shut off after an hour whether or not you have been using it.
 2. Press the PUSH ON Button in to restart the iron.
-

SERVICE OR REPAIR

Service, if necessary, must be performed by a Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. The Service Center nearest you can usually be found in the yellow pages of your phone book under "Appliances-Small-Repairing." For your convenience, a complete listing of our Company-Owned Service Centers can be found on pages 14 & 15.

Before shipping or mailing your iron, empty all water from the iron. Plug in the cord and heat the iron at the maximum temperature setting (setting 7). Iron continuously using any steam setting over an all cotton cloth for about 5 minutes. Place the iron on its heel rest and leave it operating for 7 to 8 minutes. These steps will help to dry the inside of the iron.

Turn the iron off, move the Adjustable Steam Dial to DRY and be sure the iron is completely cool before packing for shipment. Pack it carefully into a sturdy carton with enough packing material to prevent damage. The original carton is not suitable for mailing. Include a note describing the problem to our Service Center and be sure to give your return address. We also suggest that you insure the package for your protection.

BLACK AND DECKER COMPANY-OWNED SERVICE

ALABAMA

BIRMINGHAM — 2412 Green Springs Hwy., 35209
205-942-0538

MOBILE — 3831 Airport Blvd., 36608 205-343-6624

ALASKA

ANCHORAGE — 910 West International Airport Rd., 99518
907-563-4664

ARIZONA

MESA — 535 South Dobson Rd., Suite 7, 85202
602-461-1074

PHOENIX — 4501 N. 7th Ave., 85013 602-279-6414

TUCSON — 4845 E. Speedway Blvd., 85712 602-323-3388

ARKANSAS

LITTLE ROCK — 519 W. Seventh St., 72201 501-372-3040

CALIFORNIA

ANAHEIM — 540 South State College Blvd., 92806
714-772-4050

CHULA VISTA — 309 Broadway, 91911 619-420-6350

CONCORD — 1500 Monument Blvd., #C2, 94520

510-682-4880

FRESNO — 5412 North Blackstone Ave., 93710 209-435-0810

LONG BEACH — 2011 South St., 90805 310-422-5825

LOS ANGELES — 4820 South Eastern Ave., Suite "L"
90040

213-720-1834

RIVERSIDE — 6215 Magnolia Ave., Suite B, 92506
714-787-9700

SACRAMENTO — 2033 Fulton Ave., 95825 916-972-9090

SAN DIEGO — 9270 Clairmont Mesa Blvd., 92123

619-279-2011

SAN JOSE — 1185 South Bascom Ave., 95128 408-293-7350

SAN LEANDRO — 15206 East 14th St., 94578 510-276-1610

VAN NUYS — 14920 Victory Blvd., 91411 818-787-5531

COLORADO

DENVER — 1171 South Federal Blvd., Box 19220, 80219
303-922-8325

CONNECTICUT

HARTFORD — 662 Silas Deane Hwy., 06109 203-563-5800

ORANGE — 481 Boston Post Rd., 06477 203-795-3583

DISTRICT OF COLUMBIA

COLMAR MANOR, MD — 4153 Bladensburg Rd., 20710
301-779-3808

FALLS CHURCH, VA — 344 W. Broad St., 22046
703-533-7313

FLORIDA

FT. LAUDERDALE — 799 East Oakland Pk. Blvd., 33334
305-566-5102

FT. MYERS — 5224 Bank St., 33907 813-278-1188

JACKSONVILLE — 920 Cassat Ave., 32205 904-781-2253

MIAMI — 13345 North West Seventh Ave., 33168
305-681-6658

MIAMI — 12233 South Dixie Hwy., 33156 305-232-9497

ORLANDO — 3807 East Colonial Dr., 32803 407-894-7011

ST. PETERSBURG — 5635 49th St. North, 33709
813-525-0273

TAMPA — 3432 West Kennedy Blvd., 33609 813-872-8317

WEST PALM BEACH — 310 South Military Trail, 33415
407-689-3247

GEORGIA

ATLANTA (South) — 5330 Old National Hwy., 30349 404-762-8844

SMYRNA — 2550 Cobb Parkway South, 30080 404-956-0869

STONE MOUNTAIN — 5723 Memorial Dr., 30083 404-292-4714

HAWAII

HONOLULU — Unit No. 106, Sand Island Access Rd.,
96819

808-847-7447

ILLINOIS

CHICAGO (Lincolnwood) — 6710 North Crawford Ave.,
60646

708-673-0923

DES PLAINES — 1277 South Elmhurst Rd., 60018 708-364-5220

LISLE — 2950 Ogden Ave., Unit H, 60532 708-717-1075

MOLINE — 4433 23rd Ave., 61265 309-762-3000

OAK LAWN — 6343 W. 95th St., 60453 708-423-7212

WAUKEGAN — 31 S. Greenbay Rd., 60085 703-249-4390

INDIANA

EVANSVILLE — 307 First Ave., Crescent Ctr., 47710 812-425-4269

HAMMOND — 7103 Kennedy Ave., 46323 219-845-5100

INDIANAPOLIS (Speedway) — 5999 Crawfordsville Rd.,
46224

317-243-8308

IOWA

DES MOINES — 3427 Merle Hay Rd., 50310 515-270-1340

KANSAS

WICHITA — 155 South West St., 67213 316-943-1271

KENTUCKY

LOUISVILLE — 5211 Preston Hwy., 40213 502-968-7100

LOUISIANA

BATON ROUGE — 11859 Florida Blvd., 70815 504-272-8111

HARVEY — 2500 Lapalco Blvd., 70058 504-366-8676

METAIRIE (New Orleans) — 3504 North Causeway Blvd.,
70002

504-837-2550

SHREVEPORT — 7710-7714 Jewella Rd., 71108 318-688-1553

MARYLAND

BALTIMORE — 4712 Erdman Ave., 21205 410-485-5550

BALTIMORE — 29-31 Cranbrook Rd., Cockeysville, 21030
410-666-5966

COLMAR MANOR (Wash. D.C.) — 4153 Bladensburg Rd.,
20722

301-779-3808

PASADENA — 8220 Ritchie Hwy., 21122 410-647-8456

MASSACHUSETTS

BRIGHTON (Boston) — 12 Market St., 02135 617-782-6264

SEEKONK — 120 Highland Ave., 02771 508-336-6510

MICHIGAN

GRAND RAPIDS — 3040 28th St., SE, 49512 616-949-8331

LANSING — 3205 W. Saginaw Hwy., 48917 517-323-4181

WARREN — 27035 Van Dyke Blvd., 48093 313-756-6711

WESTLAND — 8067 N. Wayne Rd., 48185 313-427-1520

MINNESOTA

BLOOMINGTON — 9517 Lyndale Ave., South, 55420 **612-884-9191**

MISSOURI

KANSAS CITY — 4324 Main St., 64111 **816-531-0629**

ST. ANN — 3637 North Lindbergh Blvd., 63074

314-739-4661

ST. LOUIS — 12852 Manchester Rd., 63131 **314-821-8740**

NEBRASKA

OMAHA — 4225 South 84th St., 68127 **402-592-5666**

NEVADA

LAS VEGAS — 3411 East Charleston Blvd., 89104

702-641-6555

NEW JERSEY

CHERRY HILL — 1444 East Marlton Pike (Rt. 70), 08034

609-429-2822

LITTLE FALLS — 1189 U.S. Hwy. 46, 07424 **201-256-9373**

SCOTCH PLAINS — 2520 Route #22 East, 07076 **908-233-5665**

NEW MEXICO

ALBUQUERQUE — 5617 Menaul Blvd., N.E., 87110

505-884-1002

NEW YORK

ALBANY (Latham) — 836 Troy-Schenectady Rd., 12110

518-785-1867

BUFFALO — 881 West Delavan Ave., 14209 **716-884-6220**

CENTEREACH LI. — 2061-63 Middle Country Rd., 11720

516-737-4706

NEW YORK (Elmhurst) — 77-20 Queens Blvd., 11373

718-335-1042

NEW YORK (Manhattan) — 50 West 23rd St., 10010

212-929-6450

NEW YORK (Westbury, L.I.) — 1061 Old Country Rd., 11590

516-997-6140

ROCHESTER — 2969 W. Henrietta Rd., 14623 **716-424-1310**

SYRACUSE — 3485 Erie Blvd., East, 13214 **315-446-3086**

NORTH CAROLINA

CHARLOTTE — 3007 East Independence Blvd., 28205

704-374-1779

GREENSBORO — 3716 High Point Rd., 27407 **919-852-1300**

RALEIGH — 2930 Capital Blvd., 27604 **919-878-0357**

OHIO

CINCINNATI — 2310 East Sharon Rd., 45241 **513-772-3111**

COLUMBUS — 3975 East Livingston Ave., 43227

614-237-0461

DAYTON — 2898 South Dixie Drive, 45409 **513-298-1951**

MAYFIELD HEIGHTS — 5881 Mayfield Rd., 44124

216-449-2770

PARMA HEIGHTS (Cleveland) — 6483 Pearl Rd., 44130

216-842-9100

TOLEDO — 3231 Dorr St., 43607 **419-531-8921**

OKLAHOMA

OKLAHOMA CITY — 1318 Linwood Blvd., 73106

405-232-7515

TULSA — 3120 S. Sheridan Rd, 74145 **918-622-5666**

OREGON

PORTLAND — 1640 NW Johnson St., 97209

503-228-8631

PENNSYLVANIA

ALLENTOWN (Whitehall) — 2242 MacArthur Rd., 18052

215-435-9544

EVANS CITY — Cranberry Town Center Plaza, 20808 Rt. 19 N., 16033 **412-779-9600**

HARRISBURG — 6080 Allentown Blvd., 17112 **717-545-0651**

LANCASTER — 118 Keller Ave., 17601 **717-393-5251**

PHILADELPHIA — 9977-81 Bustleton Ave., 19115

215-464-7771

PHILADELPHIA — 333 North 20th St., 19103 **215-564-5520**

PITTSBURGH — 5437 Baum Blvd., 15232 **412-362-2700**

WILKES-BARRE — 759 Kidder St., 18702 **717-824-5704**

PUERTO RICO

GUAYNABO — "C" Street # 14, Rexco Industrial Park,

00922-1924

809-783-3535

RHODE ISLAND

SEEKONK, MA — 120 Highland Ave., 02771 **508-336-6510**

SOUTH CAROLINA

GREENVILLE — 1557 Laurens Rd., 29607 **803-232-3038**

TENNESSEE

CHATTANOOGA — Perimeter Place Shopping Ctr., Sp. E,

6231 Perimeter Dr., 37421 **615-894-5957**

KNOXVILLE — 4118 North Broadway, 37917 **615-688-0921**

MEMPHIS — 1085 East Brooks Rd., 38116 **901-332-3444**

NASHVILLE — 4811 Nolensville Rd., 37211 **615-833-8277**

TEXAS

AMARILLO — 3008 West 6th Ave., 79106 **806-373-1531**

AUSTIN — 6549 Burnet Rd., 78757 **512-459-1133**

DALLAS — 2257 Royal Lane, 75229 **214-620-8655**

EL PASO — 6822 Gateway East, 79915 **915-778-9769**

FORT WORTH — 721 North Beach St., 76111 **817-831-3828**

GARLAND — 78 West Centerville Rd., 75043 **214-686-9302**

HOUSTON — 536 East Tidwell Rd., 77022 **713-692-7111**

SAN ANTONIO — 500 Culebra Ave., 78201 **210-732-1221**

WEBSTER — 100 East Nasa Road One, Ste. 75, 77598 **713-338-4556**

UTAH

SALT LAKE CITY — 1541 S. Third West St., 84115 **801-486-5828**

VIRGINIA

FALLS CHURCH — 344 W. Broad St., 22046 **703-533-7313**

HAMPTON — 3416 W. Mercury Blvd., 23666 **804-826-9382**

NORFOLK — 7631 Sewells Point Rd., 23513 **804-480-3333**

RICHMOND — 1424 Chamberlayne Ave., 23222 **804-649-9245**

WASHINGTON

SEATTLE — 421 S. Michigan, 98108 **206-763-2010**

SPOKANE — N. 7011 Division St., 99208 **509-467-8190**

TACOMA — 2602 S. 38th St., 98409 **206-473-6040**

WEST VIRGINIA

CHARLESTON — 1638 Sixth Ave., 25312 **304-343-0289**

WISCONSIN

MILWAUKEE (Wauwatosa) — 10424 W. Bluemound Rd.,

53226

414-453-4240

REV: 9/94

FULL TWO-YEAR WARRANTY

Black & Decker (U.S.) Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period after the original date of consumer purchase or receipt as a gift. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge, including free return transportation, provided it is delivered prepaid to any Black & Decker (U.S.) Inc., Household Appliance Company-Owned or Authorized Service Center. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Answers to any questions regarding warranty or service locations may be obtained by calling toll free 1-800-231-9786 or by writing:

Consumer Assistance
and Information
Black & Decker (U.S.) Inc.
626 Hanover Pike
Hampstead, MD 21074-0618



Listed by Underwriters Laboratories Inc.
Copyright © 1995 Black & Decker
Printed in Mexico
Pub. No. 168640-46-RV00

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>