



## 2000 W Steam Iron




### First Use safety Recommendation

Please read through this booklet for safe and efficient use of the appliance. We urge you read and follow all instructions, even if you are familiar with a similar appliance.

Keep this guide handy for future reference.

English Page 02  
Farsi Page 12  
Arabic Page 18

# X1030 - X1035

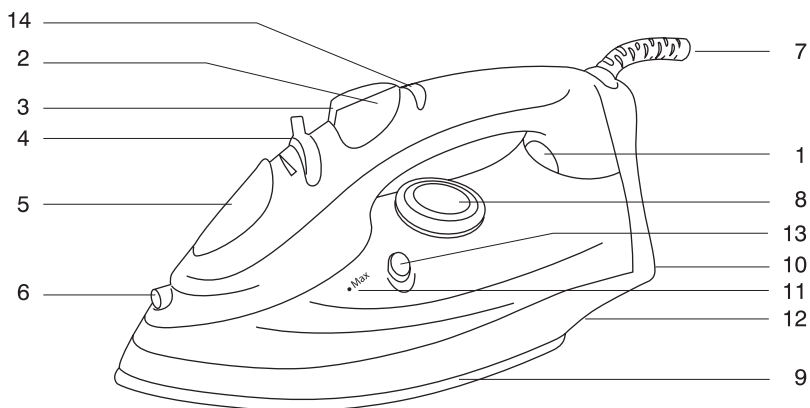

1	Pilot Light	8	Temperature Dial
2	Burst Of Steam Button	9	Sole Plate
3	Spray Button	10	Heel Rest
4	Steam Control	11	Max. Filling Level
5	Water Inlet Cover	12	Cord Storage
6	Spray Nozzle	13	Self-Cleaning Knob
7	Cord Set	14	Auto Shut Off LED

## Intended use

Your Black & Decker iron has been designed for ironing garments made of linen, cotton, silk, wool and synthetic materials. This product is intended for household use only.

## Safety Instructions

- **Warning!** When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.
- Read all of this manual carefully before using the appliance.
- The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- Retain this manual for future reference.

## Using your appliance

- Always take care when using the appliance.
- Do not use the appliance outdoors.
- Do not operate the appliance if your hands are wet.
- Do not operate the appliance if you are barefoot.
- Guide the power supply cord neatly so it does not hang over the edge of a worktop and cannot be caught accidentally or tripped over.
- Never pull the power supply cord to disconnect the plug from the socket. Keep the power supply cord away from heat, oil and sharp edges.
- If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
- Disconnect the appliance from the power supply when not in use and before cleaning.

## Safety of others

- Do not allow children or any person unfamiliar with these instructions to use the appliance.
- Do not allow children or animals to come near the work area or to touch the appliance or power supply cord. Close supervision is necessary when the appliance is used near children.

## After use

- Switch off, remove the plug from the socket and let the appliance cool down before leaving it unattended and before changing, cleaning or inspecting any parts of the appliance.
- When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

## Inspection and repairs

- Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- Do not use the appliance if any part is damaged or defective.
- Have any damaged or defective parts repaired or replaced by an authorised repair agent.
- Before use, check the power supply cord for signs of damage, ageing and wear.
- Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- If the power supply cord or mains plug is damaged or defective it must be repaired by an authorised repair agent in order to avoid a hazard. Do not cut the power supply cord and do not attempt to repair it yourself.
- Never attempt to remove or replace any parts other than those specified in this manual.

## Electrical Safety



This product must be earthed. Always check that the power supply corresponds to the voltage on the rating plate

## **Extension cables & class 1 product**

- A 3-core cable must be used as your appliance is earthed and of class 1 construction
- Up to 30m(100 ft) can be used without loss of power.
- This appliance is not intended for use by young or infirm person without supervision. Children must be supervised to ensure they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or an authorised Black & Decker Service Centre in order to avoid a hazard.

## **Additional safety instructions for irons**

- Always route the cord carefully to avoid a tripping hazard.
- Do not use the appliance near water.
- Do not place the appliance near heat sources or directly under cabinets. Do not use the appliance in the presence of explosive or flammable materials.
- The filling aperture must not be opened during use.
- Steam may escape from the soleplate.
- Surfaces may be hot during use and during the cooldown period.
- Set the temperature control dial to the min position before plugging in or out.
- Let the appliance cool down before leaving it unattended and before cleaning or inspecting any parts of the appliance.
- The power supply cord should not touch the hot soleplate during use or during the cool down period.
- Do not touch the sole plate until it has cooled down.
- Wait until the appliance has cooled down before emptying the water tank as the water may still be hot.
- Always disconnect the appliance from the supply before filling, emptying, cleaning, or carrying out any maintenance on the appliance.
- Do not immerse the appliance, plug or cord set in liquids

## **Before first use**

### **Cleaning the sole plate**

- Make sure that the appliance is unplugged.
- Fill the appliance with water as described below.
- Use the self-clean system as described below. When finished, wipe the sole plate and steam vents with a cloth.

Some parts of the appliance have been lightly greased and as a result the appliance may smoke slightly when switched on for the first time. This will cease after a short while.

## **Assembly**

**Warning!** Before assembly, make sure that the appliance is switched off and unplugged.

### **Filling the water tank**

In order to be able to use the steam function or the spray feature, you will first need to fill the water tank with water.

- Make sure that the appliance is unplugged.

- Open the water tank cover (5).
- Hold the appliance horizontally.
- Fill the appliance with water using the beaker provided.
- Close the water tank cover.

**Warning!** Never fill above the maximum filling level (12). Normal tap water can be used, but if you live in a hard water area the use of distilled water is recommended. Do not use chemically descaled water.

## Use

**Warning!** Do not leave the appliance unattended while it is connected to the power supply and during the cool down period.

## Temperature setting

The required temperature setting depends on the garment fabric.

- Adjust the temperature control dial (8) to the required setting:
- Synthetic
- Silk, wool
- Cotton, linen

If you are unsure of the fibre content of a garment, start with a low temperature setting and test on a small area (seam or inside hem). If wrinkles remain, gradually increase the heat setting until you find the optimum setting.

## Using as a dry iron

- Stand the appliance on its heel rest (10).
- Plug the appliance in and switch on.
- Set the steam control dial (4) to the 'O' position.
- Adjust the temperature control dial (8) to the required setting.

The heating light (1) will switch off when the appliance has reached the required temperature.

## Using as a steam iron

- Fill the water tank as described above.
- Stand the appliance on its heel rest (11).
- Plug the appliance in and switch on.
- Adjust the temperature control dial (8) to the required setting.

The heating light (1) will switch on. When the heating light switches off, the iron will be ready for use as a steam iron. The heating light will regularly switch on and off whilst ironing.

- To create steam, set the steam control dial (4) to the required steam position.

## Using the steam burst button

The steam burst feature can only be used whilst ironing on a high temperature setting.

- Make sure that there is water in the tank and the temperature control dial (8) is set to the required setting.
- Lift the appliance and press the steam burst button (2). You may need to press a few times to activate the pump.

### **Vertical steaming**

The appliance can also be held vertically to remove creases from hanging clothes, curtains etc.

### **Using the spray button**

The spray feature can be used at any temperature setting when either steam or dry ironing.

- Make sure that there is water in the tank.
- Press the button (3) several times to activate the pump while you are ironing.

### **Using the self-clean button**

The self-clean function must be used before using the appliance for the first time and then regularly to remove scale.

- Fill the tank to the maximum filling level (11).
- Set the temperature control dial (8) to the max position.
- Plug the appliance in and switch on.
- Allow the appliance to heat up until the heating light (1) switches off and then on again.
- Unplug the appliance and hold it horizontally over the sink.
- Press the self-clean button (13).

Hot water and steam will come out of the vents. Impurities and scale will be washed away.

- Move the iron backwards and forwards while this is happening.
- Release the self-clean button.
- Stand the appliance upright on its heel.
- Plug the appliance in and switch on.
- Iron an old cloth or towel to dry the sole plate.

### **Auto Shut-Off (X1035 only)**

- If the unit is left in the vertical position for 8 minutes, the lamp(14) will flash, indicating that the Iron has stopped heating.
- Returning the appliance to the horizontal position will cause it to re-heat.
- If the unit is left in the horizontal position for 30 seconds, the lamp will also flash, indicating that the Iron has stopped heating.
- Any movement of the appliance will cause it to re-heat.

### **Hints for optimum use**

- Sort the articles to be ironed according to the fabric. Start ironing with the fabrics requiring the lowest heat setting.
- The appliance can be used as a dry iron even if there is water in the tank. Do not fill the tank with water if the appliance is to be used as a dry iron for an extended period.
- Avoid ironing over zippers, rivets on jeans etc. as they will scratch the soleplate.

## Cleaning and storage

**Warning!** Before cleaning and storing, unplug the appliance and allow it to cool down.

- Pour out any remaining water after each use by tilting the appliance forward.
- Clean the body with a soft damp cloth.
- Wipe scale and other residues off the soleplate with a damp cloth.
- Store in an upright position. The cord can be wound around the cord storage (12).

## Protecting the environment



Separate collection. This product must not be disposed of with normal household waste. Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose of it with household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again. Re-use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product. Black & Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service, please return your product to any authorised repair agent who will collect them on our behalf. You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. Alternatively, a list of authorised Black & Decker repair agents and full details of our after-sales service and contacts are available on the Internet at: **[www.2helpU.com](http://www.2helpU.com)**

---

## Names & Addresses for Black & Decker Service Concessionaries

**Afghanistan:** Ishan National Co., Opp. Ministry of Justice, Kabul. Tel.: +93-2-2101727. **Algeria:** SARL Outillage Corporation, 04 Route De Dely Brahim Cheraga, Alger. Tel.: +213-21-364363/508, Fax: +213-21-369667. **Bahrain:** Fawaz Al Zayani, P.O.Box 26563, Adliya, Manama. Tel.: +973-17-715252/712756, Fax: +973-17-713789. **Bangladesh:** Ultra Corporation, 8, Kushol Centre, Uttara, Dhaka 1230. Tel.: +880-2-8919272/9756 Ext.28, Fax: +880-2-9887167. **Egypt:** Anasia Egypt for Trading S. A. E., P.O.Box 2443, 110 Mostafa Refaat Street, Sheraton Heliopolis 11361, Cairo. Tel.: +20-2-2684159, Fax: +20-2-2684169. **Ethiopia:** Tewfik Sherif & Co. Ltd., P.O.Box 5583, Debre Zeit Road, Addis Ababa. Tel.: +251-1-651700/601, Fax: +251-1-650570. **India:** Gryphon Impex Pvt. Ltd., D-6/4, Okhla Industrial Area, Phase-I, New Delhi-110020. Tel.: +91-11-26372602-4, Fax: +91-11-26372601. **Iran:** Tehran - Service Centre of Iran, No 510, South Karger Ave, Below Pasteur Sq, Tehran. Tel.: +98-21-6490608/0656/6407672. **Kish Island:** Cayhan Electric Co., No. 69, Paradise Shopping Centre, Kish Island. Tel.: +98-76444-22894. **Jordan:** Bashiti Hardware, P.O.Box 1564, TLA Ali, Amman. Tel.: +962-6-5350009/4770741, Fax: +962-6-5350012/4789783. **Kenya:** Zyllog Enterprises, IPS Building, Kuanda Street, P.O.Box 40877, Nairobi. Tel.: +254-2-338188/199, Fax: +254-2-330642. **Kuwait:** Al Omar Technical Co., P.O.Box 4062, 13041 Safat, Kuwait. Tel.: +965-4848595/0039, Fax: +965-4845652. **Lebanon:** Est. F.A. Kettaneh SA, P.O.Box 110242, Dora Highway, Kettaneh Building, Beirut. Tel.: +961-1-255860/6, Fax: +961-1-255891. **Libya:** El Ghoul Brothers, P.O.Box 348, Islamic Call Bldg., Office 201-202, Benghazi. Tel.: +218-61-9097681/4183, Fax: +218-61-9094123. **Madagascar:** Group Tana Confort S. A. R. L., B. P. 1770, Antananarivo. Tel.: +261-20-2264505, Fax: +261-20-2264244. **Malta:** John G. Cassar Ltd., 36 Victory Str, Qormi QRM 06, Malta. Tel.: +356-21-493251, Fax: +356-21-483231. **Mauritius:** Happy World Marketing Ltd., Block 2, Industrial Estate, Coromandel, P.O.Box 429, Port Louis. Tel.: +230-2076700, Fax: +230-2337330/7400. **Nepal:** Universal Trading Centre, P.O.Box 1947, Tripureswor, Kathmandu. Tel.: +977-1-262192/260587/785, Fax: 261154. **Nigeria:** Amin Bros. Eng. Co. Ltd., 30A (Plot 1291), Akin Adesola Street, Victoria Island, Lagos. Tel.: +234-1-3201778, Fax: +234-1-2613667. **Oman:** Oman Mktg. & Service Co., P.O.Box 2734, Ruwi, Muscat. Tel.: +968-560232, Fax: +968-560255. **Pakistan:** Karachi - Ammar Service & Spares, 60, Bank Arcade, Serai Road, Karachi. Tel.: +92-21-2426905, Fax: 2427214/5243. **Pakistan:** Lahore - Electronics Inn, 212-G Raja Centre, Main Market, Gulberg, Lahore. Tel.: +92-42-5756750. **Philippines:** Modern House International Enterprises, 213 Rizal Ave. Extension, between 2nd and 3rd Ave. Kalookan City. Tel.: +632 366-4487, Fax: +632 366-4489. **Qatar:** Al Mufthah Trading & Cont., P.O.Box 875, Doha. Tel.: +974-4650880/4446868, Fax: +974-4441415. **Saudi Arabia:** Dammam - Ebrahim Fawaz Al Zayani, P.O.Box 76026, Al Raka, Dammam. Tel.: +966-3-8140914, Fax: +966-3-8140824. **Jeddah:** Anasia - P.O.Box 50959, Jeddah - 21477. Tel.: +966-2-6710014, Fax: +966-2-6725929, EAC (Al Yousuf) - P.O. Box 30377, Jeddah - 21477. Tel.: +966-2-6519912, Fax: +966-2-6511153. **Madina:** Garziz Trdg. for Bldg. Mat.&Decor., P.O.Box 3364, Madina. Tel.: +966-4-8261490/8227636, Fax: +966-4-8265741. **Riyadh:** Anasia, P.O.Box 18689, Riyadh - 11425. Tel.: +966-1-2693751, Fax: +966-1-4501178. **Yanbu:** Bin Afif, P.O.Box 530 Yanbu, Al Bahr. Tel.: +966-4-3222626/8867, Fax: +966-4-3222210. **Sri Lanka:** Delmege Gen. Equip. Pvt. Ltd., No. 428/1AT. B., Jaya Mawatha (Darley Road), Colombo-10. Tel.: +94-11-2665914, Fax: +94-11-2665915. **Sudan:** United Distribution Company, P.O.Box 325, Sayed Abdul Rehman Street, Khartoum. Tel.: +249-11-772612/777296, Fax: +249-11-770919. **Tanzania:** General Motors Investment, P. O Box 16541, 14 Vingunguti Nyerere Road, Dar Es Salaam. Tel.: +255-22-2862661/5022, Fax: +255-22-2862667/5412/3. **Tunisia:** Ste Tunisienne De Quincaillerie Stq.Nvelle Z.I 2013, Ben Arous, Tunis, Tunisia. Tel.: 00216 71386102, Fax: 00216 71380412. **Tunis:** Souissi Ace Home Centre, Zone Industrielle, Megrine (Saint Gobain), Z4-Tunis. Tel.: +216-1-428038, Fax: + 216-1-429540/330. **UAE:** Abu Dhabi- Light House Electric., P.O.Box 120, Abu Dhabi. Tel.: +971-2-6726131, Fax: +971-2-6720667. **Dubai - Black & Decker (O) A.G.,** P.O.Box 5420, Dubai. Tel.: +971-4-7028234/233, Fax: +971-4-2822765. **Ideal Mach. & Equipt. R. W/shop** P.O.Box 37116, Al Quoz, Dubai. Tel.: +971-4-3474160, Fax: +971-4-3474157. **Sharjah - McCoy Middle East LLC,** P.O.Box 20228, Sharjah. Tel.: +971-6-5336321, Fax: +971-6-5336320. **Uganda:** The Building Centre, Kitgum House, 52 Station Road, P.O.Box 7436, Kampala. Tel.: +256-41 -234567, Fax: +256-41 -236413. **Yemen:** Aden - Middle East Trad. Co. Ltd., Mulla Dakka, Aden. Tel.: +967-2-240950, Fax: +967-2-240952. **Sana'a:** Middle East Trad. Co. Ltd., P.O.Box 12363, Hayel Street, Sana'a. Tel.: +967-1-204201, Fax: +967-1-204204. **Taiz:** Middle East Trad. Co. Ltd., Campa area near Al-Kair mosque, Taiz. Tel.: +967-4-231610/232033, Fax: +967-4-219869. **Zimbabwe:** J.D.Distributors, P.O.Box 226, 17 Bessemer Road, Graniteside, Harare Tel.: +263-4-753913-7, Fax: 753918.



## WARRANTY REGISTRATION CARD

YOUR NAME/الاسم \_\_\_\_\_

YOUR ADDRESS العنوان \_\_\_\_\_

POSTCODE الرمز البريدي \_\_\_\_\_

DATE OF PURCHASE تاريخ الشراء \_\_\_\_\_

DEALER'S NAME & ADDRESS/اسم وعنوان البائع \_\_\_\_\_

PRODUCT MODEL NO. X1030 - X1035



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>