 
 


SANTOS

Coffee Maker Kaffeemaschine
Cafetière Kaffemaskine

WARRANTY CERTIFICATE. 3000 SANTOS COFFEE MAKER
GARANTIESCHEIN. 3000 SANTOS KAFFEEMASCHINE
CERTIFICAT DE GARANTIE. CAFETIÈRE 3000 SANTOS
GARANTIBEVIS. 3000 SANTOS KAFFEMASKINE



Business stamp
Firmenstempel
Cachet de la
société
Firmastempel

Date
Datum
Date
Dato

1.5 l
Coffee Maker
Kaffeemaschine
Cafetière
Kaffemaskine

Instruction for use
ENGLISH
Gebrauchsanweisung
DEUTSCH
Mode d'emploi
FRANÇAIS
Brugsanvisning
DANSK



Design: Carsten Jørgensen



www.bodum.com

Download from www.Somanuals.com. All Manuals Search And Download.

OPERATING PRINCIPLE

The water is heated in the jug. The steam generated forces the water through the riser tube and into the funnel. The gentle heating of the ground coffee enhances the coffee's beneficial qualities. The coffee is brewed at the ideal temperature and develops its full aroma. Once the correct brewing time has elapsed, the heating element switches off and the coffee flows back into the jug – it is now ready to serve.

Brewing 10 cups takes approximately 11 minutes, depending mainly on the coarseness of the coffee. The finer the grind, the longer the brewing time.

Coffee can be kept warm in the jug for 2 hours after brewing. The start time for automatic coffee brewing can be programmed.

Intended use. The "Santos" coffee maker is designed only for brewing coffee with ground coffee beans. Coarse or finely ground coffee for filter coffee. Instant coffee is not suitable.

**Warning! Never use the unit to boil water!
Never heat up cold, brewed coffee.**

The coffee maker is intended exclusively for household use and may therefore be operated only in the household.

The "Santos" coffee maker enables the rapid brewing of superb coffee. With the special process developed by BODUM®, the coffee retains its full aroma – a fact that coffee connoisseurs are bound to appreciate.



- 1 Funnel cover
- 2 Filter
- 3 Funnel
- 4 Seal
- 5 Swing
- 6 Lid of jug

- 7 Jug
- 8 Level indicator with MIN and MAX filling marks
- 9 Power base
- 10 Cable storage

- 11 Programming display
- 12 ON/OFF button
- 13 AUTO button
- 14 Hours button
- 15 Minutes button
- 16 Time display



Parts marked with this symbol can be cleaned in the dishwasher.

SAFETY INSTRUCTIONS

WHAT TO DO:

Use the unit exclusively in the household and only for the intended purpose (see "Intended use").



Please also observe the instructions in the "Cleaning & Lime Removal" section on page 12.

Damaged units should be taken immediately to the nearest BODUM® SHOP or authorized Bodum® dealer for repairs.



Only operate the unit with the rated voltage indicated (see label on base of unit).



Always place the unit on a dry, stable and horizontal surface.



Always allow the unit to cool down before cleaning.



Switch off the unit before removing the plug from the electrical outlet. Always pull only on the plug and never on the cable.



For situations not covered by these instructions, please contact BODUM® for additional information regarding safe handling of this unit. Please keep these instructions in a safe place!

SAFETY INSTRUCTIONS

WHAT YOU MUST NOT DO:

Do not allow children to operate the unit without supervision. Children do not recognize hazards.

The power base and parts of the jug become very hot during operation! Lift the jug only by the handle; do not touch hot surfaces!

Under no circumstances should you operate units in which parts are defective or missing.

Do not crush the cable or lead it around corners or sharp edges! Store excess cable in the base of the unit.

Operate the unit with BODUM® original parts only. BODUM® decline any liability or guarantee if the unit is fitted with any other parts.

Do not place the unit or parts near a stove or oven or in a microwave oven.

To protect against fire, electric shock or injuries, never immerse the cable, plug or power base in liquids or allow them to come into contact with liquids.

Never open the power base or the bottom of the jug! Have repairs performed only by authorized experts.



COFFEE PREPARATION

Before first use. Every unit is tested and carefully packed before shipping.

Nevertheless, please check before use that the unit is complete and is not damaged anywhere.

Before the first brewing. Flush the unit without coffee. To do this, fill the jug with water, boil and pour out.

Always make sure that the jug is filled with enough water for brewing coffee. The MIN mark on the level indicator must always be reached, i.e. always fill with at least enough water for 4 cups (0,5 l).



1. Pull the cable out of the power base for at least 2/3 of its length.



2. Plug in the cable, leading it as directly as possible.



3. Fill the jug with the desired amount of cold water (approx. 1.5 dl per cup).



4. The MIN mark on the level indicator must be reached!



5. Place the jug on the power base.



6. Turn the funnel around on its axis to fit it on the jug. **Note: Wetting the seal facilitates fitting of the funnel.**



7. Ensure that the funnel sits securely on the jug and that the seal is evenly compressed.



8. Place the filter in the funnel.



9. Ensure that the filter snaps audibly in position!



10. Place the desired amount of ground coffee in the funnel. We recommend 7g per cup. (The supplied scoop holds 7g).



11. Place the cover on the funnel.



12. Press the ON button.
Caution: The unit will become hot and steam may escape from the openings in the cover.



13. As soon as there is no water left in the funnel, the coffee is ready.



14. A funnel holder is integrated in the power base. Press lightly on the swing.



15. Turn the swing outwards from the power base.



16. Hold the jug firmly by the handle and tip the funnel holder aside slightly.
Warning: Hot parts! Lift the jug only by the handle.



17. Place the funnel on the funnel holder on the power base, or else in the sink.



18. The coffee can now be enjoyed.



19. If you place the jug back on the power base within 10 minutes, the unit will remain switched on and will keep the coffee warm for 2 hours.

Warning! Allow all parts to cool before cleaning! The plastics selected by BODUM® are perfectly suited for coffee machines. Use only water and mild detergents for cleaning and no scouring or aggressive cleaning agents. **Warning! The power base and the jug may never be placed in the dishwasher or immersed in liquids! Parts marked with the symbol**



can be cleaned in the dishwasher.

CLEANING



Remove the cover from the funnel and discard the coffee grounds.



Remove the filter from the funnel. Rinse and clean the funnel and filter with water.



Clean the jug with warm water and washing-up liquid.
Warning: Do not immerse the jug in liquids. Do not clean the jug under running water.



Remove the swing from the power base. Rinse the swing with water.

Warning: Unplug the power base before cleaning and do not immerse in liquids or clean under running water.

Replace the cable in the storage area in the base.



If the "Santos" is frequently used, BODUM® recommends replacing the filter plate monthly. Filter plates are available at any BODUM® SHOP or authorized BODUM® dealer. Loosen the screw in the filter and replace the filter plate.



LIME REMOVAL



Coffee has a slightly descaling effect. If lime deposits are only slight, it is sufficient to leave a little coffee in the jug after each brewing cycle over a period of 2-3 days.



We recommend the use of ordinary commercial lime-removing agents for the regular removal of lime from the jug. Please follow the instructions on the lime remover.

TIMER FUNCTIONS

Setting the time

No times are set and no automatic functions are active when the unit is plugged into the mains. The following sections describe in detail how the times and functions can be set.

Plug the unit into the mains.



Turn on the unit by pressing the ON button.



The unit starts automatically in time-setting mode and the display flashes.



Input the present time in hours and minutes.



If you do not press any button for 5 seconds, the set time is automatically stored.



Changing the time

Press one of the right-hand buttons for 2 seconds. Change hours and minutes. Wait until the clock symbol stops flashing.



The unit can be switched on or off at any time with the ON/OFF button.

Coffee can also be brewed without the time being programmed.

Time-setting mode: If you set the time for the first time, the time display and the clock symbol will flash. If you change the set time, the clock symbol will flash.

If you do not press any button for 5 seconds, the set time is automatically stored.

Programming automatic start time. The start time for automatic coffee brewing can be programmed as desired. The unit switches on automatically at the desired (programmed) time, the brewing process is started and coffee is prepared. The selected start time is automatically activated after programming.


Switch on the unit and press the AUTO button for 2 seconds.



Input the desired hour for the automatic start time.



Input the minutes for the automatic start time.

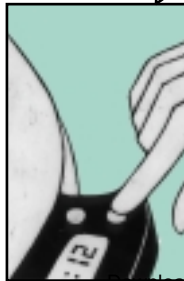

If you do not press any button for 5 seconds, the set time is automatically stored.



Activate automatic start time. The unit switches on at the desired time and coffee is prepared automatically. The AUTO lamp goes out, the display ON appears, and the ON lamp is lit.

Once coffee has been prepared, the unit remains switched on for 2 hours. However, it can also be immediately switched off by hand.


If coffee is to be automatically prepared again the following day, the automatic start time must be reactivated.

Coffee can always be brewed even if the automatic start time is activated.

Press the AUTO button for 2 seconds.



The display AUTO appears and the AUTO lamp is lit.

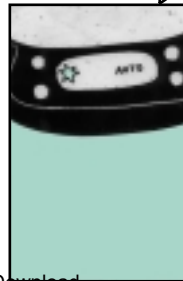

AUTO time-setting mode:

If you set the AUTO start time, the AUTO lamp and the AUTO symbol will flash.

If you do not press any button for 5 seconds, the set time is automatically stored.

Deactivation of automatic start time

AUTO time-setting mode:

If you set the automatic start time the AUTO lamp and the AUTO symbol will flash.

Press the AUTO button for 2 seconds.



If the unit is switched on, the display ON appears, and the ON lamp is lit. The automatic start time is then no longer active.



SERVICE & GUARANTEE CONDITIONS

All BODUM® products are made of high-quality, durable materials. However, should parts require replacement, please contact one of the following:

your BODUM® dealer - the BODUM® SHOP - the BODUM® representative in your country, or our home page at www.bodum.com.

Guarantee. BODUM® guarantees the "Santos" coffee maker for 2 years from date of purchase against material defects or malfunctions which can be traced back to defects in manufacturing or design.

Repair is free of charge provided all guarantee requirements are fulfilled. No refunds can be made.

Guarantee requirements. The guarantee certificate must be completely filled out by the seller at the time of purchase.

Only agents authorized by BODUM® may perform guarantee services.

BODUM® makes no guarantee for damage which can be attributed to use for unintended purposes, incorrect handling, normal wear and tear, defective or incorrect maintenance or service work, incorrect operation or manipulation by unauthorized persons.

TECHNICAL DATA:

Mains voltage:

230V 50Hz or
120V 60Hz

Rated power:

1200W

Cable length extendible to 80cm

Net contents:

0.5 – 1.5 liters
17 – 50 ounces

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>