

You can read the recommendations in the user guide, the technical guide or the installation guide for BOSCH SMS69L22GB. You'll find the answers to all your questions on the BOSCH SMS69L22GB in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

> User manual BOSCH SMS69L22GB User guide BOSCH SMS69L22GB Operating instructions BOSCH SMS69L22GB Instructions for use BOSCH SMS69L22GB Instruction manual BOSCH SMS69L22GB





## Manual abstract:

An exact description can be found in the back of the envelope. – Do not allow children to play with or operate the appliance. – Keep children away from detergents and rinse aid. These may cause chemical burns in the mouth, throat and eyes or asphyxiation. – Keep children away from open dishwasher. The water in the rinsing compartment is not drinking water and could contain detergent residue. Ensure that children do not place fingers in the tablet collecting tray 1B. Small fingers could become caught in the slots. – If the appliance is installed at eye-level, ensure when opening and closing the door that children are not caught or crushed between the appliance door and the cupboard door situated below. Installation Read the "Installation" chapter to learn how to install and connect the appliance correctly.

In daily use – This appliance is intended for use in the home and the home environment. – Use the dishwasher only in the household and only for its designed purpose: for washing domestic dishes. – Children or people whose physical, sensory or mental abilities prevent them from using the appliance safely must not use this appliance without supervision or instruction by a responsible person. – Do not lean or sit on the open door. The appliance could tip.

- Please note that free-standing appliances may tip over if the baskets are overloaded. 4 en Childproof lock (door lock) \* okD lcr The description of the

childproof lock is at the back in the envelope. \* depending on model Getting to know your appliance Diagrams of the control panel and the interior of the appliance can be found in the envelope at the front. Individual positions are referred to in the text. Damage – The appliance may be repaired and opened up by a technician only.

To do this, disconnect the appliance from the power supply. Pull out the mains plug or switch off the fuse. Turn off the tap. Control panel (08 @ H P X `h)" )\* 2 ON/OFF switch Programme buttons \*\* Digital display Display "Check water supply" Salt refill indicator Rinse aid refill indicator Timer programming display Timer programming Additional options \*\* START button Door opener Display window Disposal – Make redundant appliances unusable to prevent subsequent accidents. – Dispose of the appliance in an environmentally friendly manner. ã=Warning Children could become locked in the appliance (risk of suffocation) or find themselves in other dangerous situations. Therefore: Pull out the mains plug, sever and dispose of the power cord. Destroy the door lock so that the door can no longer be closed. \*\* Number depending on model Appliance interior 1" 1\* 12 1: 1B 1J 1R 1Z 1b 1j 9" 9\* 92 Interior light \* Cutlery drawer Top basket Top spray arm Tablet collecting tray Bottom spray arm Dispenser for special salt Filters Bottom basket Dispenser for rinse aid Detergent dispenser Lock for detergent dispenser Rating plate \* depending on model 5 en Overview of menu The settings can be found in the individual chapters. Water Hardness : - : Intensive drying : - : Rinse aid : - : Hot water : - : End of programme buzzing sound : - : p Language p: - p: Automatic disconnection : - : Onboard computer : - : To change the language: – Open the door.

Switch on ON/OFF switch (. – Hold down programme button # and press START button )" until the digital display 8 : . is indicated. – Release both buttons.
Press programme button # until the factory set value p: is indicated on the digital display 8. "German" (Deutsch) is indicated in the display window )2. –
Press programme button 3. Each time the button is pressed, the set value increases by one level; when the value of p: has been reached, the display jumps back to p: – Press START button )". The set value is saved. – Close the door.



Your user manual BOSCH SMS69L22GB Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com