

User's Manual

BV7280

**IN-DASH DIGITAL MEDIA AM/FM
RECEIVER WITH 3.2" (81mm)
WIDESCREEN TFT MONITOR
WITH USB AND SD MEMORY CARD PORTS
AND FRONT PANEL AV INPUT**



BV7280

**IN-DASH DIGITAL MEDIA AM/FM RECEIVER
WITH 3.2" (81mm) WIDESCREEN TFT MONITOR
WITH USB AND SD MEMORY CARD PORTS AND FRONT PANEL
AV INPUT**

01.2012



iPod® is a trademark of Apple, Inc.
registered in the U.S. and other countries.

tech support: www.bossaudio.com/support

BOSS®

AUDIO SYSTEMS

BOSS Audio Systems
3451 Lunar Court • Oxnard, CA 93030

www.bossaudio.com

800.999.1236

BOSS®

AUDIO SYSTEMS

BOSS Audio Systems is not affiliated with Apple, Inc.

Downloaded from www.manuals.com. All Manuals Search And Download.

WARNING


**To ensure safety while driving
and to comply with laws,
drivers should not watch video or
operate the video device while driving.**



BV7280

OWNER'S MANUAL

 Mobile Audio/Video System

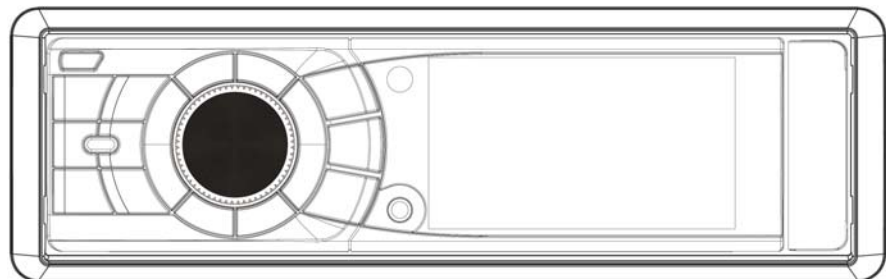

- **PLL Synthesizer Stereo Radio**
- **Automatic Memory Storing**
- **RBDS Operation**
- **Full Detachable Panel**
- **Preset Equalization**
- **Memory Card Interface**
- **USB Interface**
- **AV IN interface on the front panel**
- **Remote Control**

CONTENTS

INSTALLATION.....	3
USING THE DETACHABLE FRONT PANEL	6
CONNECTIONS.....	7
LOCATIONS AND FUNCTION OF THE PLAYER.....	8
LOCATIONS AND FUNCTION OF THE REMOTE CONTROL	9
OPERATION	11
BASIC OPERATION.....	12
USB PLAY OPERATION	13
MEMORY CARD OPERATION.....	16
RADIO OPERATION	17
AV IN OPERATION.....	18
TROUBLE SHOOTING	19
SPECIFICATIONS	20

INSTALLATION

Notes:

- Choose the mounting location where the unit will not interfere with the normal driving function of the driver.
- Before finally installing the unit, connect the wiring temporarily and make sure it is all connected up properly and the unit and the system work properly.
- Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- Consult with your nearest dealer if installation requires the drilling of holes or other modifications of the vehicle.
- Install the unit where it does not get in the driver's way and cannot injure the passenger if there is a sudden stop, like an emergency stop.
- Avoid installing the unit where it would be subject to high temperature, such as from direct sunlight, or hot air, from the heater, or where it would be subject to dust, dirt or excessive vibration.

 
DIN FRONT/REAR-MOUNT

This unit can be properly installed either from "Front" (conventional DIN Front-mount) or "Rear" (DIN Rear-mount installation, utilizing threaded screw holes at the sides of the unit chassis). For details, refer to the following illustrated installation methods.

DIN FRONT-MOUNT (Method A)

Installation Opening


This unit can be installed in any dashboard having an opening as shown below:

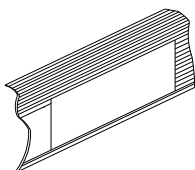

Installing the unit

Be sure you test all connections first, and then follow these steps to install the unit.

 
1. Make sure the ignition is turned off, and then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Disconnect the wire harness and the antenna.
3. Press the release button on the front panel and remove the control panel (see the steps of "To detach the front panel").
4. Lift the top of the outer trim ring then pull it out to remove it.
5. The two supplied keys release tabs inside the unit's sleeve so you can remove it. Insert the keys as far as they will go (with the notches facing up) into the appropriate slots at the middle left and right sides of the unit. Then slide the sleeve off the back of the unit.

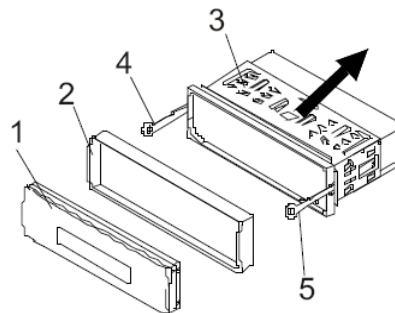

- (1) Front panel; (2) Outer trim ring;
(3) Sleeve; (4) L key; (5) R key


6. Mount the sleeve by inserting it into the opening of the dashboard and bend open the tabs located around the sleeve with a screwdriver. Not all tabs will be able to make contact, so examine which ones will be most effective. Bending open the appropriate tabs behind the dashboard to secure the sleeve in place.

 INSTALLATION

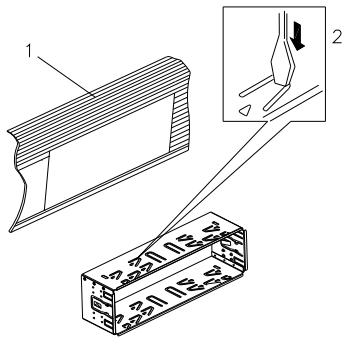

(1) Dashboard (2) Tabs

 7. Reconnect the wire harness and the antenna and be careful not to pinch any wires or cables.
8. Slide the unit into the sleeve until it locks into place.
9. To further secure the unit, use the supplied metal strap to secure the back of the unit in place. Use the supplied hardware (Hex Nut (M5mm) and Spring Washer) to attach one end of the strap to the mounting bolt on the back of the unit. If necessary, bend the metal strap to fit your vehicle's mounting area. Then use the supplied hardware (Tapping Screw and Plain Washer) to attach the other end of metal strap to a solid metal part of the vehicle under the dashboard. This strap also helps ensure proper electrical grounding of the unit. Note to install the short threading terminal of the mounting bolt to the back of the unit and the other long threading terminal to the dashboard.

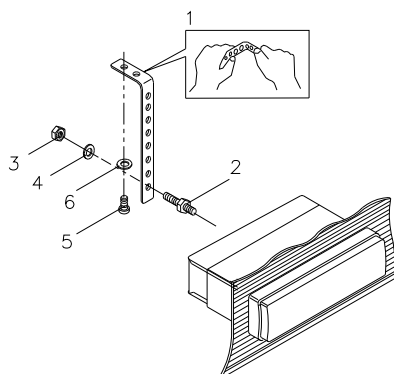


- (1) Metal Strap; (2) Mounting Bolt;
- (3) Hex Nut; (4) Spring Washer;
- (5) Tapping Screw; (6) Plain Washer

10. Reconnect the cable to the vehicle battery's negative (-) terminal. Then replace the outer trim ring and install the unit's front panel (see the steps of "To Install the front panel").

Removing the unit

 1. Make sure the ignition is turned off, then disconnect the cable from the vehicle battery's negative (-) terminal.
2. Remove the metal strap attached to the back of the unit (if attached).
3. Press the release button to remove the front panel.
4. Lift the top of the outer trim ring then pull it out to remove it.
5. Insert both of the supplied keys into the slots at the middle left and right sides of the unit, then pull the unit out of the dashboard.

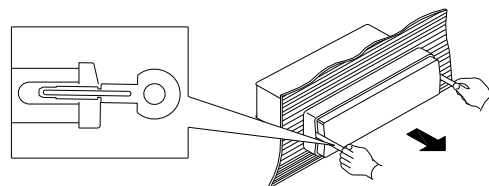


DIN REAR-MOUNT (Method B)

If your vehicle is a Nissan, Toyota, follow these mounting instructions.

Use the screw holes marked T (Toyota), N (Nissan) located on both sides of the unit to fasten the unit to the factory radio mounting brackets supplied with your vehicle.

 INSTALLATION

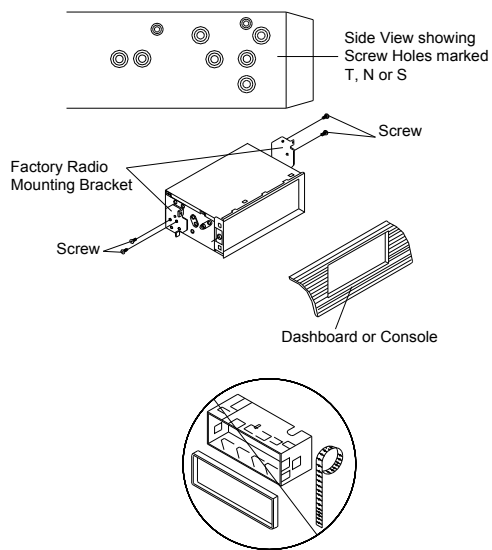

To fasten the unit to the factory radio mounting brackets.

 
 
Align the screw holes on the bracket with the screw holes on the unit, and then tighten the screws (5x5mm) on each side.

Note: The outer trim ring, sleeve and the metal strap are not used for method B installation.


USING THE DETACHABLE FRONT PANEL

To Detach the Front panel

1. Press the release button on the left-top of the panel and pull off the control panel.

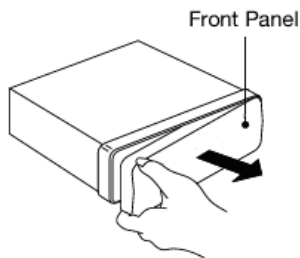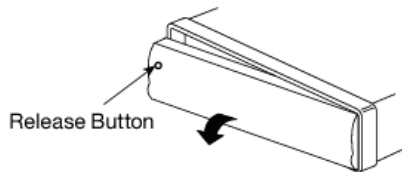


 2. Keep the control panel into the case.

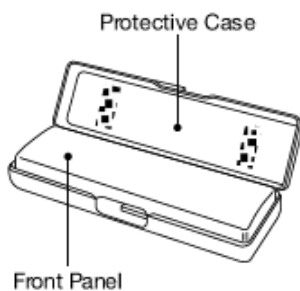

To Install the Front Panel

 
To install the control panel, insert the panel into the housing and make sure the panel is properly installed. Otherwise, abnormality occurs on the display or some keys will not function properly.

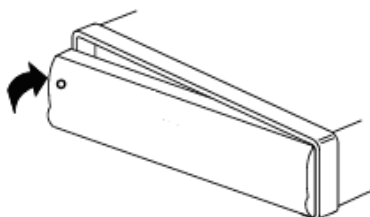

Precautions when handling


1. Do not drop the control panel.
2. Do not put pressure on the display or control buttons when detaching or re-installing the control panel.
3. Do not touch the contacts on the control panel or on the main unit body. It may result in poor electrical contact.
4. If any dirt or foreign substances adhered on the contacts, they can be removed with a clean and dry cloth.
5. Do not expose the control panel to high temperatures or direct sunlight in anywhere.
6. Keep away any volatile agents (e.g. benzene, thinner, or insecticides) from touching the surface of the control panel
7. Do not attempt to disassemble the control panel.

 WIRING CONNECTION

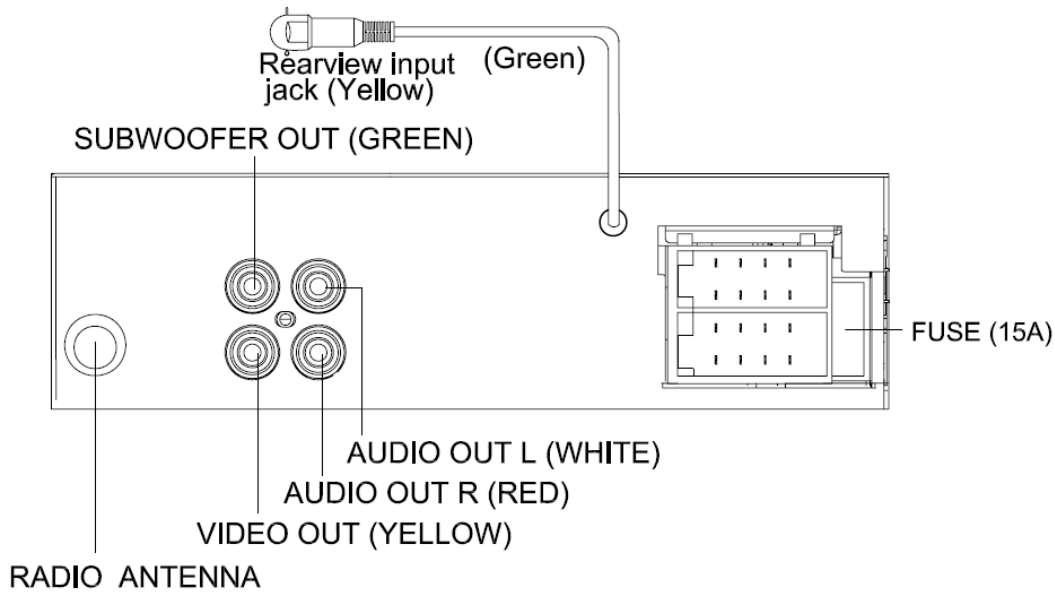

Connector A

 1. N.C.
2. BRAKE (PINK)
3. REAR VIEW (BROWN)
4. MEMORY +12V (YELLOW)
5. AUTO ANTENNA OUTPUT (BLUE)
6. N.C.
7. +12V (TO IGNITION KEY) (RED)
8. GROUND (BLACK)

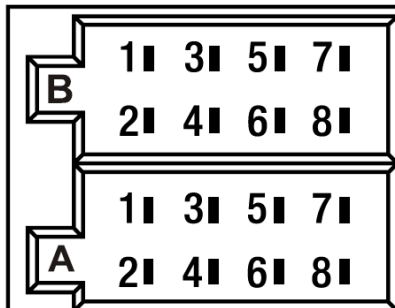








Connector B

 1. REAR RIGHT SPEAKER (+) (VIOLET)
2. REAR RIGHT SPEAKER (-) (VIOLET/BLACK)
3. FRONT RIGHT SPEAKER (+) (GRAY)
4. FRONT RIGHT SPEAKER (-) (GRAY/BLACK)
5. FRONT LEFT SPEAKER (+) (WHITE)
6. FRONT LEFT SPEAKER (-) (WHITE/BLACK)
7. REAR LEFT SPEAKER (+) (GREEN)
8. REAR LEFT SPEAKER (-) (GREEN/BLACK)

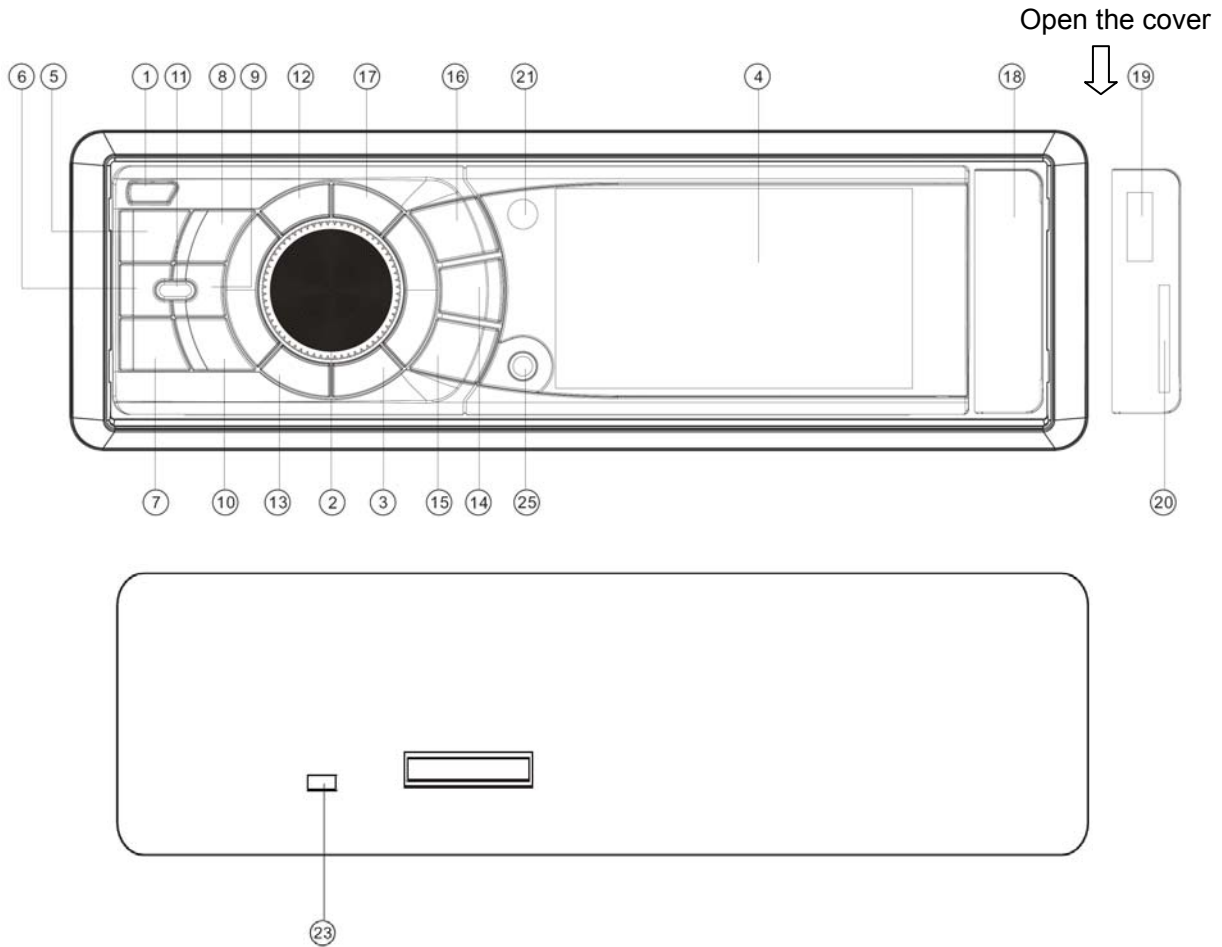
OPERATION

  LOCATION OF KEYS





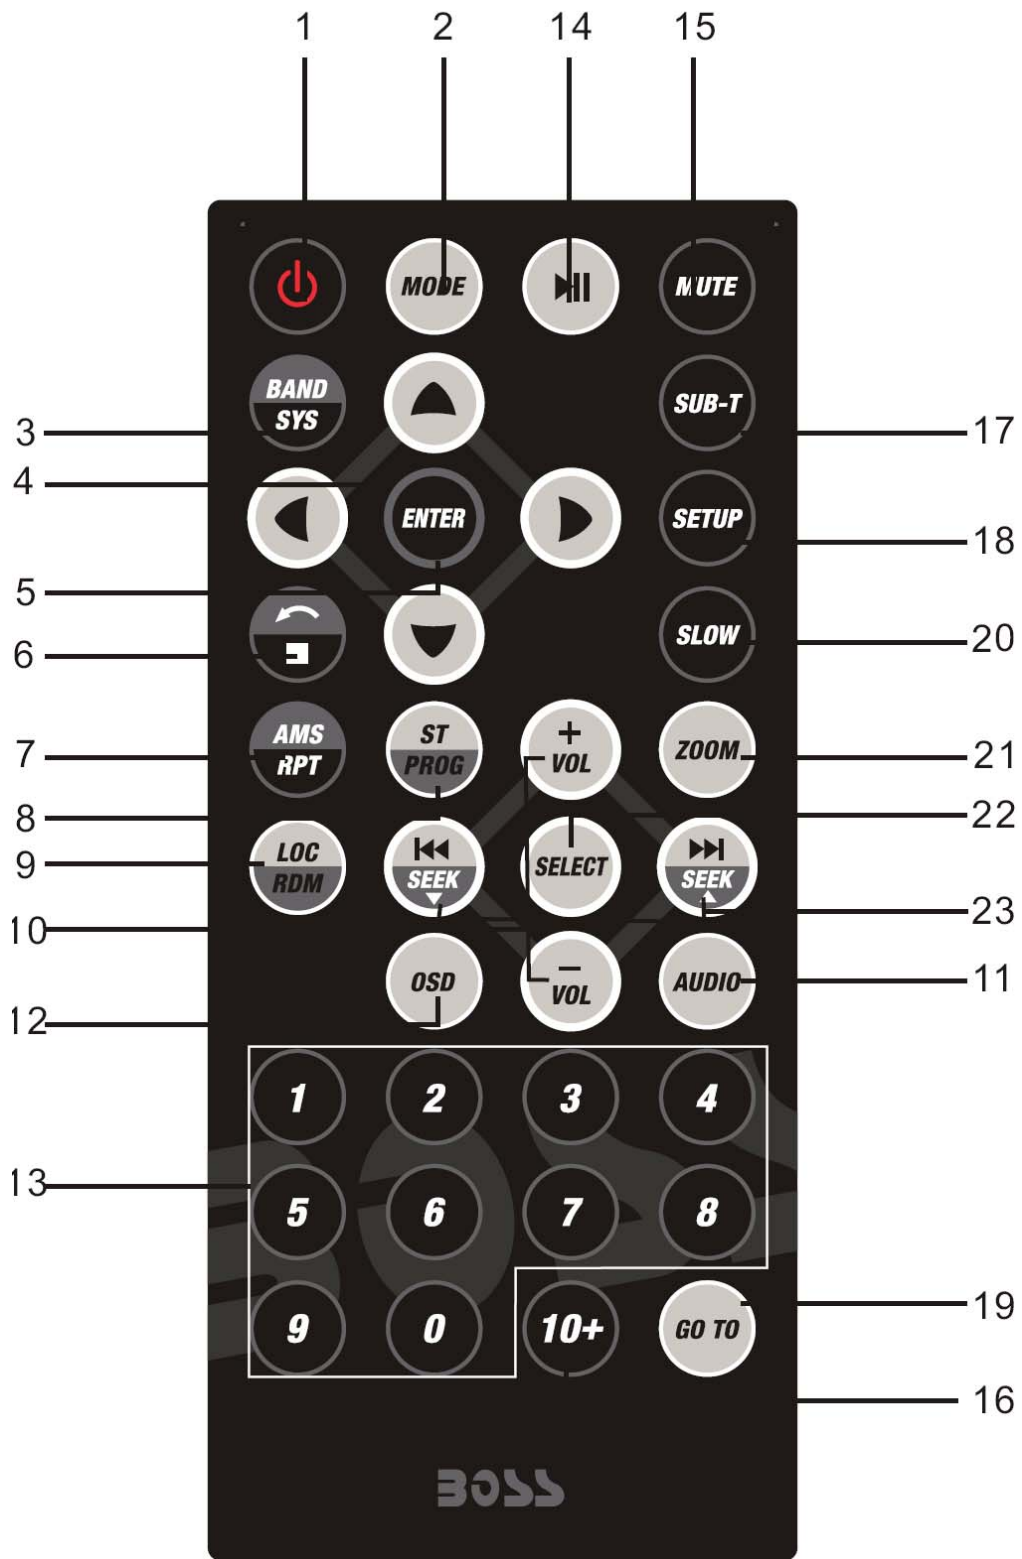

- | | |
|---|---|
| 1.  (Release button) | 12. BND/AMS |
| 2. Volume knob (when rotated)
Push SEL (when pressed) | 13. EQ/TA |
| 3. PTY/AF | 14.  |
| 4. 3.2 inch TFT display | 15.  |
| 5. 1  | 16. MODE |
| 6. 2  | 17. CLOCK |
| 7. 3 OSD | 18. USB/SD cover |
| 8. 4 RPT | 19. USB interface |
| 9. 5 RDM | 20. Memory card interface |
| 10. 6 SUB-T | 21. Remote Sensor |
| 11.  /MUT | 22. AV IN jack |
| | 23. Reset button |

LOCATIONS AND FUNCTION OF THE REMOTE CONTROL



LOCATIONS AND FUNCTION OF THE REMOTE CONTROL

1. 
Press it to turn on the unit. When the unit is on, press it to turn the unit off.
2. MODE
When the unit is on, press it to select the different mode, such as RADIO, USB, SD, AV IN mode.
3. BAND/SYS
In radio mode, press it shortly to select the desired band, such as FM1, FM2, FM3, AM1 and AM2.
In video play mode, press to change the TV system between AUTO, NSTC and PAL.
4. 
In case of menu mode, the buttons served as cursor buttons to select item left/right, up/down.
5. ENTER
Press to confirm your selection.
6. 
In USB/SD mode, press it once to pre-stop play, press it twice to stop the play and return to the logo.
7. AMS/RPT
In radio mode, press to activate auto seek/preset store function.
In media play mode, press to switch the repeat mode of programs.
8. ST/PROG
In media play mode, press to enter into program mode to play the track in your desired sequence.
In radio mode press to set the reception between mono mode or stereo mode.
9. LOC/RDM
In radio mode, press it to select between local and distant stations.
10. VOL+/VOL-
Press to increase/decrease the volume level.
11. AUDIO
In video play mode, press shortly to display the audio information of the file.
In video play mode, press and hold it to enter into EQ setting, such as POP, CLAS, ROCK and OFF. In radio mode, pressing the button is EQ function.
12. OSD
In media play mode, press to display OSD (the on-screen display) information.
13. 0-9
Numeric buttons.
14. 
Press to play/pause the playback.
15. MUTE
Press to mute the sound, press it again to resume the sound.
16. 10+
Digital selecting button for track, cooperatively used with numeric buttons.
17. SUB-T
Press to display the subtitle information of the video file.
18. SETUP
In media play mode, press to enter into the setup menu.
19. GO TO
“GO TO” (Search button) used in media play mode, cooperatively used with numeric buttons.
20. SLOW
For some video files, press to start slow forward function.

LOCATIONS AND FUNCTION OF THE REMOTE CONTROL

21. ZOOM

Press to allow the picture to be increased in size.

22. SELECT

Press to enter into the system setup menu.

23. SEEK- ◀◀/ SEEK+ ▶▶

Press shortly to skip to the previous/next track.

Press and hold it to activate fast reverse/forward function.

In radio mode, press it shortly to search the frequency backward/forward manually. Press and hold it to seek the frequency automatically.

Preparing the Remote Control

Inserting the Batteries

1. Open the battery compartment cover.
2. Insert the new batteries. Make sure that the positive and negative terminals of the batteries are oriented as indicated.
3. Close the cover.

- Battery: One button cell lithium battery (CR2025).

Using the Remote Control

Point the remote control towards the remote control signal receiver on the player front face.

Operation angle: About ± 30 degree in each the direction of the front of the remote sensor.


OPERATION

BASIC OPERATION

◆ Turn the unit on/off

When all the connection is finished, press **MUT** button on the front panel or **MUT** on the remote control will turn the unit on. When the unit is on, hold press **MUT** button or press **MUT** to turn the unit off.

◆ Faceplate release

Press the release button  on the front panel to release the front panel.

◆ System menu

Press the volume button on the front panel of the unit or **SELECT** button on the remote control to enter into the setup menu.

BASS	0
TREB	0
BALA	L= R
FADE	F= R
TIME	00:05
TIME	OFF
SUBWOOF	OFF
STEREO	ON
TAVOL	35
REG	OFF

Then press **◀/▶** buttons on the front panel or on the remote control to select the item up or down, then use the volume knob on the front panel or **VOL+/-** buttons on the remote control to adjust the selected item.

* TIME --- ON or OFF

When TIME OFF, the CLOCK will disappear.

* STEREO --- ON or MONO

* REG --- ON or OFF

* SUBWOOF --- ON or OFF

The subwoofer output jack is on the back of the unit.

NOTE: In video play mode, press the **SELECT** button, you can see another more interface:


BRIGHTNESS
CONTRAST
SHARPNESS
COLOR
HUE
RESET

Then press **◀/▶** buttons on the front panel or on the remote control to select the item up or down, then use the volume knob on the front panel or **VOL+/-** buttons on the remote control to adjust the Brightness, Contrast, Sharpness, Color and Hue.

◆ Remote sensor

There is a remote sensor on the front panel. You can point the remote control to the remote sensor and press functions keys on the remote control to control the unit.

◆ Reset function

Press the  button on the front panel to fold down the panel, then you will see the **RST** button on the housing of the unit.

It must be activated with either a ballpoint pen or thin metal object. The reset button is to be activated for the following reasons:

1. Initial installation of the unit when all wiring is completed.
2. All the function buttons do not work.
3. Error symbol on the display.

◆ Volume level adjustment

Rotating the volume knob on the front panel clockwise or anticlockwise or pressing **VOL+/-** buttons on the remote control to adjust the volume level.

When you adjust the volume the current value of the volume will be displayed on the screen.

OPERATION

Pressing **MUT** button on the front panel or **MUTE** button on the remote control will mute the sound. Press it again will resume the sound.

◆ Mode selection

Press **MODE** button on the front panel or **MODE** on the remote control to select the desired mode to enjoy. Such as Radio, USB, SD, AV IN mode.

◆ Equalization

In radio mode, press **AUDIO** button on the remote control or shortly press **EQ/TA** button on the front panel to turn on equalization function and to select desired audio mode, such as POP, CLASS, ROCK, JAZZ and OFF.

In media play mode, press and hold the button is EQ function.

◆ Clock display

Repeatedly press **CLOCK** button on the front panel to let the clock appear on the screen or not.

◆ Brake function

If the brake wire (pink wire) isn't connected to the ground (when driving), the picture will not be shown on the screen in video play mode for safety purpose. Only the audio will be heard.
Note: Only when parking, the video picture can be seen on the screen. When driving, the warning information will be displayed.

◆ Rearview function

On the back of the unit, there is a yellow jack for rearview video in. When backing a car, the picture of the screen will switch to rearview picture automatically and the unit will play the video information that inputted from the yellow rearview video in jack.

◆ Power-down memory function

The unit has the power-down memory

function and some data will never lose even when power's off. You can press the numerical button **1, 3, 6** on the front panel of the unit in succession then hold press **4** button to clear the power-down memory function and "EEP INNT" will appear.

USB PLAY OPERATION

On the front of the unit, when you open the USB cover, you will see an USB interface. An USB device can be connected through this interface.

When you connect an USB device through the interface, the unit will search the audio/video/photo files in the USB driver and start to play automatically.

If in other mode, you can also press **MODE** button to select USB mode.

NOTE:

- When in USB play mode, be sure not to remove the USB driver from the USB interface.
When stop USB play, you can remove the USB drive, after remove USB driver from the unit.
- When connecting an MP3 player and there has normal battery in the player (non rechargeable battery), you should remove the battery from the MP3 player then connect it to the USB interface. Otherwise, it may cause battery burst.

◆ Stopping playback

Press **■** button on the front panel or **■** on the remote control for one time to pre-stop the playback. When **▶||** button on the front panel or on the remote control is pressed, normal playback will continue.
Press **■** or **■** button twice to stop the playback completely.

◆ Pausing play

Shortly press **▶||** on the front panel or **▶||** on the remote control during playback to stop playback temporarily.


OPERATION

Shortly press **▶||** again will return to the normal playback.

◆ Rapid forward / rapid reverse


Hold press **▶▶/◀◀** on the front panel or hold press **▶▶/◀◀** on the remote control during playback.

 Each time the button is hold pressed, the speed of rapid forward /reverse changes as follows.



◆ Slow motion playback (for Video file only)

 Press **SLOW** on the remote control during play. Each time the button is pressed, the speed of slow forward (SF) changes as follows.



In slow motion state, shortly press **▶||** on the remote control or **▶||** on the front panel to resume the normal playback.

◆ Skipping track

Pressing **▶▶/◀◀** buttons on the remote control or **▶▶/◀◀** on the front panel during playback will skip to the next/previous track.

Note you can use the numeric buttons (0-9) and 10+ button on the remote control to select the track directly.

◆ Zoom function

Allows the picture to be increased in size. Press **ZOOM** button on the remote control to toggle scale among 1, 2, 3, 4, 1/2, 1/3, and 1/4. When the scale is 1/4, press **ZOOM** again will exit zoom operation.

During zoom mode, press **◀ / ▶**, **▲ / ▼** buttons to move the picture left/right, up/down.

◆ Multi-subtitle language function (For Video file)

Press **SUB-T** button on the remote control or **SUB-T** button on the front panel during playback. The corresponding information will be shown on the screen.

Each time the button is pressed, the subtitle language changes in the sequential order.

 
Note: The language is different according to the video file. Some files only contain one subtitle language.

◆ Audio function

Press **AUDIO** during playback to change the audio channel among STEREO, MONO L, MONO R, MIX MONO.

◆ Repeat play

Press **RPT** button on the remote control or on the front panel repeatedly to select different repeat mode.



◆ Play the tracks in random order

 
For audio files, when playing, press **RDM** button on the front panel or on the remote control will play the tracks in random order. In random on mode, press **RDM** button again will exit random playing.

◆ Program play

In program play mode, you can play the track/photo in your desired sequence.

For audio/photo files:

- Press **PROG** button on the remote control to enter the program edit interface.

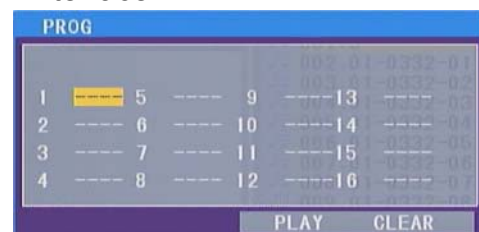

OPERATION

- b) Press ◀ / ▶, ▲ / ▼ cursor buttons on the remote control to select the items you want to program. The items you selected will become highlight.
- c) Input the number you want to program by numeric buttons (0-9) on the remote control. Use cursor buttons to select **PLAY** on the bottom of the screen, or press **ENTER** button on remote control to confirm. And the unit will play the tracks you programmed.
- d) If you want to clear the program, select **CLEAR** on the screen and press **ENTER** on the remote control to confirm, and the unit will cancel the programmed play.

◆ Goto Function

Press **GO TO** button on the remote control, then use the numeric buttons to input the desired Track or Time and press **ENTER** to confirm. It will play the corresponding program you just set.

 
◆ Setup Menu

In media play mode, press **SETUP** button on the remote control to enter setup menu.

- a) When the cursor is on the top side, use ◀ / ▶ buttons to move between the different pages, such as SYSTEM SETUP, LANGUAGE SETUP, AUDIO SETUP, VIDEO SETUP, SPEAKER SETUP and DIGITAL SETUP.
- b) Press ▼ button to move the cursor to the setup page below and then you can use ▲ / ▼ buttons to move between the different setup options.
- c) Press ▶ button to display the choice list for each setup option and then use ▲ / ▼ buttons and **ENTER** button to change your selection.

1) SYSTEM SETUP


When you open the setup menu, you will see the system setup page at first, see below:

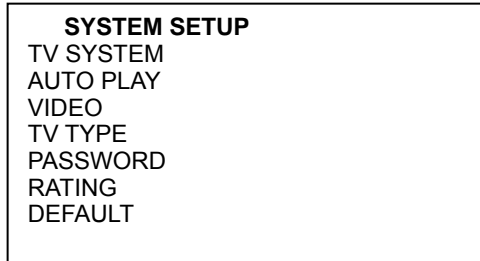

- * TV SYSTEM: Change the TV SYSTEM among NTSC, PAL and AUTO.
- * AUTO PLAY: Change between ON and OFF. When AUTO PLAY ON, the unit will skip over the menu to play automatically.
- * VIDEO: Change among S-VIDEO INTERLACE-YUV, TV-RGB, P-SCAN YPBPR and PC-VGA.
- * TV TYPE: Change the TV TYPE among 4:3 PS, 4:3 LB and 16:9.
- * PASSWORD: Change the PASSWORD lock or unlock, the default PASSWORD is "0000".
- * RATING: Change the parental RATING among 1KID SAFE, 2G, 3PG, 4PG13, 5PG-R, 6R, 7NC-17, 8ADULT.
- * DEFAULT: Restore the system setup to the default setup.

2) LANGUAGE SETUP

 When you open the language setup menu, you will see the language setup page:

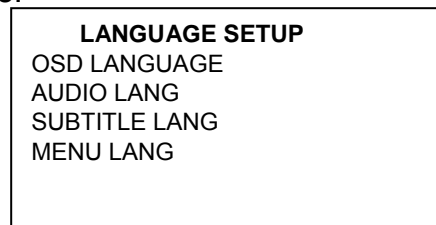


- * You can change the OSD LANGUAGE, AUDIO LANGUAGE, SUBTITLE LANGUAGE, MENU LANGUAGE among different languages. The language options are different depending on your country or region.

OPERATION

3) AUDIO SETUP

 When you open the AUDIO menu, you will see the following picture:

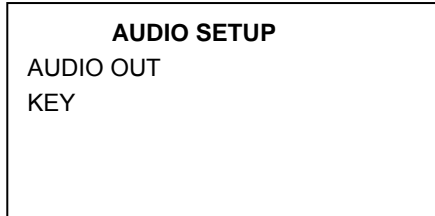


*AUDIO OUT: Change among SPDIF/OFF, SPDIF/RAW and SPDIF/PCM.

* KEY: Change the tone within a certain range.

4) VIDEO SETUP

 
When you open the VIDEO menu, you will see the following picture:

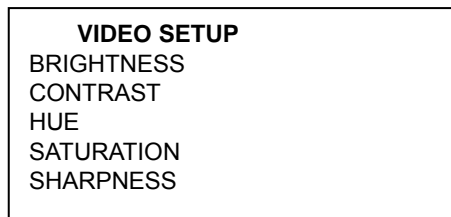

You can adjust the value of the brightness, contrast, hue, saturation and sharpness.

5) SPEAKER SETUP

 When you open the SPEAKER menu, you will see the following picture:

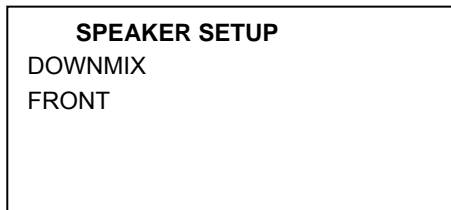


* DOWNMIX: to set the DOWNMIX modes of LT/RT and STEREO.

* FRONT: to select between LARGE and SMALL.

6) DIGITAL SETUP

 When you open the DIGITAL menu, you will see the following picture:

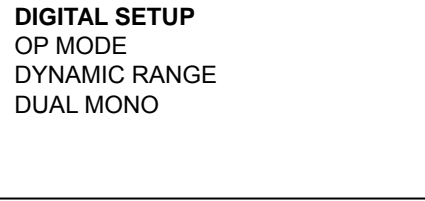

A rectangular box representing the DIGITAL SETUP menu. At the top, it says "DIGITAL SETUP". Below that, there are three options listed: "OP MODE", "DYNAMIC RANGE", and "DUAL MONO".

* OP MODE: to set the operating modes for Dolby Digital decoder, there are LINE OUT and RF REMOD to be selected.

* DYNAMIC RANGE: you can adjust the dynamic range between OFF, 1/8, 2/8, 3/8, 1/2, 5/8, 3/4, 7/8, full.

* DUAL MONO: there are STEREO, MONO L, MONO R and MIX MONO to be selected.

Note: The displayed setting information is different according to different version.

◆ On-screen Display Function

Press the **OSD** button on the remote control or on the unit during playback to display the console information of the current file on the screen, such as the remaining time and the played time.

◆ Last Play Memory

1) During media playback, if you turn off the unit and then turn on the unit again, the unit will resume playing from the point that just interrupted.

2) During playback, if you press **MODE** button to switch to other mode, then return to media play mode again, the unit will resume playing from the point that just interrupted.

MEMORY CARD OPERATION

On the front of the unit, when you open the USB cover, you will see a memory card interface. You can insert a memory card into the interface.

When you insert a memory card in the memory interface, the unit will search

OPERATION

the audio/video/photo files in the card and start to play automatically. The operation is the same with the USB operation described above.

If in other mode, you can also press **MODE** button to select Card mode.

The corresponding operation please refer to the USB PLAY OPERATION.

RADIO OPERATION

◆ Switching to Radio Mode

Press **MODE** button on remote control or **MODE** on the front panel start radio mode.

The band/frequency/station/clock and other information will display on the display.

RADIO	ST
87.50	MHZ
BAND :	FM1
STATION:	M1
POP	00:03

◆ Selecting the Frequency Band

Press **BND** button on the remote control or **BAND/AMS** button on the front panel to select desired band. The reception band will change in the following order:

→FM1→ FM 2→ FM3 → AM1 → AM2

◆ Selecting Station

Press **◀▶** buttons on the remote control or press **◀▶** on the front panel shortly to adjust the frequency manually. Hold Press **◀▶** on the remote control or hold press **◀▶** on the front panel for fast tuning. The frequency is updated correspondingly on display.

◆ Setting Memory

Press radio preset buttons (numeric buttons 1~6) on remote control or on the front panel to preset stations at radio mode. Each band can store six preset stations. The stations might be FM1, FM2,

FM3, AM1 and AM2 band. The operation is as below:

1) Store in Memory

Press and hold desired radio preset buttons (numeric buttons 1~6) on the remote control or on the front panel for several seconds, the memory icon will be shown display and the current listening station will be stored into the number button.

2) Retrieve a Preset Station

Press any one of the radio preset buttons (numeric buttons 1~6) on the remote control or on the front panel to retrieve a station which had been stored in the memory in advance and the chosen frequency will be shown on display.

◆ Automatic memory storing & program scanning

1) Program scanning

Shortly press **AMS** button on remote control to scan preset station.

2) Automatic memory storing

Press and hold press **AMS** button on the remote control or **BND/AMS** button on the front panel for about several seconds, the radio searches from the current frequency and checks the signal strength until one cycle search is finished. And then stations are stored into the preset number button in turn according to the strength of the stations. When auto search is finished, it will enter into preset scan mode automatically.

Note: Press and hold 1-6 numeric buttons on the remote control for about several seconds, will store the current station to the current numeric key position.

◆ Mono/Stereo

Press **ST** button on remote control to select mono or stereo mode. You can sometimes improve reception of distant stations by selecting mono operation.

OPERATION

◆ Local/Distant

Press **LOC** button on the remote control to select between local and distant stations. Local setting for reception of strong station, and a distant setting for reception of weaker stations.

◆ RBDS OPERATION

1) In FM mode, hold press **TA** button on the front panel to switch TA on or off. When TA on, the unit will search Traffic Announcement automatically. When received a Traffic Announcement station, the unit will change to the Traffic Announcement station automatically. Hold press **TA** again to exit TA mode.

2) Using **PTY** to Select Program

Press **PTY/AF** button on the front panel to start the station search.

Use **VOL+/-** buttons on the remote control or volume knob on the front panel to change the items, when you choose the desired items.

When PTY is selected, the radio starts to search corresponding PTY information, and stops if the corresponding PTY information is detected.

If corresponding PTY information is not existed any more, PTY engaging is automatically exit to normal mode.

NOTE: When you set AREA EUR, hold pressing **PTY/AF** button can switch on or off RDS mode.

◆ Switching Area USA/EUR

In radio mode, press and hold the volume button on the front panel of the unit or **SELECT** button on the remote control, then you can use the volume knob on the unit or **VOL+/-** buttons on the remote control to set AREA USA or AREA EUR frequency spacing.

AV IN OPERATION

On the front panel of the unit, there is an AV IN jack. When you connected the audio/video device from the jack, press **MODE** button on the remote control or **MODE** on the front panel to select AV IN mode.

TROUBLE SHOOTING

If it appears that your unit is faulty, first consult this checklist. It may be that something simple has been overlooked.

Under no circumstances should you try to repair the player yourself, as this will invalidate the warranty. Only qualified service personnel can remove the cover or service this player.

The power does not turn on.

- The lead wires are not connected properly to the connectors.
 - Make sure the connection is correct.
- The fuse has blown.
 - After checking for short circuits in the wires, replace the fuse with one having the same rating.
- The internal processor is not working due to noise or other factors.
 - Press the reset button to reset the unit to factory defaults.

The remote control does not work. The unit does not operate even when the correct buttons on the remote control are pressed.

- Battery capacity is low.
 - Install new batteries.
- Some operations are disabled in specific states.
 - Enter the correct mode.

The file can not play.

- The file is not supported by the unit.
 - Examine the file format.

The desired source is not selected although you press the MODE button.

- An optional unit required to listen to each source is not connected yet.
 - Connect the optional unit correctly.
- The reset button is not pressed yet although the optional unit has been connected to the unit.
 - Press the reset button.

Nothing happens when the buttons are pressed.

- An optional unit required to listen to each source is not connected yet.
 - Connect the optional unit correctly.
- The computer chip in the unit is not functioning normally.
 - Press the reset button on the housing of the unit.

The sound quality is poor or distorted.

- One of the speaker wires is being pinched by a screw in the car.
 - Check the speaker wiring.
- The speakers are not wired correctly.
 - Reconnect the speaker wires so that each output terminal is connected to a different speaker.

Radio reception is poor.

- The car antenna is not extended.
 - Pull the antenna out all the way.
- The antenna control wire is not connected.
 - Connect the wire correctly.

A track will not play.

- Random play has been selected.
 - Turn off random play.

SPECIFICATION

GENERAL

Power Supply Requirements	:	DC 12 Volts, Negative Ground
Maximum Output Power	:	4x80 watts
Current Drain	:	15 Ampere (max.)
Monitor Screen Size	:	3.2" TFT

RADIO

FM

Frequency Coverage	87.5 to 107.9 MHz (USA) 87.5 to 108 MHz (Europe/Asia)
Sensitivity (S/N=30dB)	10 dBu
Image Rejection	>45dB
Stereo Separation	>25dB

AM

Frequency Coverage	530 to 1710 KHz (USA) 522 to 1620 KHz (Europe/Asia)
Sensitivity (S/N=20dB)	36 dBu
Image Rejection	>45 dB

SUPPORTED FILE TYPE

VIDEO:	MPEG1, MPEG2, MPEG4, VOB, AVI, XVID, DAT, 3GP
AUDIO:	MP3, ID3, WMA
PHOTO:	JPEG

Note:

Specifications and design are subject to modification, without notice, due to improvements in technology.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>