

QUICK AND EASY GUIDE TO PROGRAMMING YOUR ONELINK™ ALARM AND USING THE OPTIONAL FEATURES

M08-0147-000 O 04/05
Printed in Mexico

MODEL SCO500

All Rights Reserved. © 2005 BRK Brands, Inc.
BRK Brands, Inc., 3901 Liberty Street Road, Aurora, IL 60504-8122
Consumer Affairs: (800) 323-9005 • www.firstalert.com

QUICK INSTALLATION INSTRUCTIONS

1. Insert two (2) AA batteries into the battery drawer of the first Alarm and close the drawer.
2. The Alarm will sound with a chirp.
3. You will now be prompted to set the Alarm's location. Follow the direction given by the Alarm.

Available locations:

Basement	Kitchen	Child's Bedroom
Living Room	Dining Room	Master Bedroom
Family Room	No Location	Guest Bedroom
Office	Hallway	Utility Room

Your Alarm has now been programmed for the location of your choice.

NOTE: Steps 4 through 6 need to be completed within two minutes. If more than two minutes pass, the Green power LED will stop blinking. Simply open the battery drawer of the second Alarm and repeat steps 4 through 6.

4. Insert the batteries into the battery drawer of the next Alarm. DO NOT CLOSE THE DRAWER.
5. Press and hold the test button and then close the battery drawer.
6. Once you hear the unit chirp, release the test button. The Green power LED will start to blink indicating the ONELINK™ Alarm is waiting for program data from one of the other setup ONELINK™ Alarms.
7. Press and hold the test button on the first Alarm, until the second Alarm chirps and its Green power LED stops blinking. Then release the test button.
8. If you purchased the Talking Smoke and Carbon Monoxide Alarm, you will now be prompted to set the Alarm's location. Follow the directions given by the Alarm.
9. If you have purchased the hardwired battery back-up ONELINK™ Alarm, you can now connect the hardwired Alarm by installing the three-wire connector on the ceiling to the Alarm.

10. Repeat steps 4-9 for additional ONELINK™ Alarms.

You have now successfully linked your new ONELINK™ Alarms.

To add additional Alarms at a later time, follow steps 4 through 9.

IF YOU ARE CHANGING THE BATTERIES

Action:	Alarm Will Say:
1. Insert batteries (2, AA batteries).	"Welcome, First Alert Carbon Monoxide and Smoke Alarm. Location [if location already programmed, example "Kitchen"] programmed. To select location, press and hold test button now."
2. Press & Hold Test Button if you would like to change the location.	"To change location, press and hold test button after location is heard." Alarm will speak list of locations (see below).
3. After you hear the location of where you are placing the Alarm, Press & Hold the Test Button.	"[Location, example "Kitchen"] location saved." If no location is chosen: "No location saved."

Your Alarm has now been programmed for the location of your choice.

Available locations:

Basement	Kitchen	Child's Bedroom
Living Room	Dining Room	Master Bedroom
Family Room	No Location	Guest Bedroom
Office	Hallway	Utility Room

USING THE SILENCE FEATURES

⚠ WARNING!

Never remove the batteries to quiet an unwanted alarm. Removing the batteries disables the alarm and removes your protection.

The **Alarm Silence Feature** can temporarily quiet an unwanted alarm for several minutes. You can silence the Smoke/CO Alarm by pressing the Test/Silence button on the alarm cover for at least 6 seconds.

After the Test/Silence button is released, the Alarm Voice will say "Horn silenced, detector active."

The **Low Battery Warning Silence Feature** can temporarily quiet the low battery warning "chirp" for up to 8 hours. You can silence the low battery warning "chirp" by pressing the Test/Silence button on the alarm cover for at least 3-5 seconds.

Once the low battery warning "chirp" silence feature is activated, the unit continues to flash the Green light twice a minute for 8 hours. After 8 hours, the low battery "chirp" will resume. **Replace the batteries as soon as possible; this unit will not operate without battery power!**


OPTIONAL LOCKING FEATURES

The optional locking features are designed to discourage unauthorized removal of the batteries or alarm. It is not necessary to activate the locks in single-family households where unauthorized battery or alarm removal is not a concern.

This Smoke/CO Alarm has two separate locking features: one to lock the battery compartment, and the other to lock the Smoke/CO Alarm to the mounting bracket. You can choose to use either feature independently, or use them both.

Tools you will need: • Needle-nose pliers • Standard flathead screwdriver.

Both locking features use locking pins, which are molded into the mounting bracket. Depending on which locking features you use, remove one or both pins from the mounting bracket using needle-nose pliers.

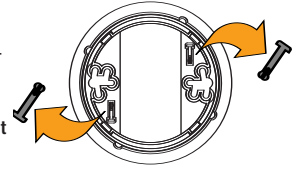


IMPORTANT!

To permanently remove either locking pin, insert a flathead screwdriver between the locking pin and the lock, and pry the pin out of the lock.

TO LOCK THE BATTERY COMPARTMENT

Do not lock the battery compartment until you install the batteries and test the Smoke/CO Alarm.

1. **Install the batteries** before attaching the Alarm to the bracket. Insert the two (2) AA batteries (included) into the battery compartment. Match the terminals on the end of the battery with the terminals on the unit. Match "+" to "+" and "-" to "-".
If the batteries are not fully inserted, the unit cannot receive battery power.
2. Push and hold test button until the alarm sounds.

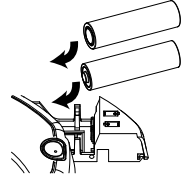


IMPORTANT!

If the unit does not alarm during testing, DO NOT lock the battery compartment! Install new batteries and test again. If the unit still does not alarm, replace it immediately.

3. Using needle-nose pliers, detach one locking pin from the mounting bracket.
4. Push the locking pin through the hole near the battery door latch on the back of the Smoke/CO Alarm.

TO UNLOCK THE BATTERY COMPARTMENT

1. Remove the Smoke/CO Alarm from the mounting bracket. If the unit is locked to the bracket, see the section "To Unlock the Mounting Bracket."
2. Insert a flathead screwdriver under the head of the locking pin, and gently pry it out of the battery compartment lock. (If you plan to re-lock the battery compartment, save the locking pin.)
3. To relock the battery compartment, close the battery door and reinsert locking pin in lock.
4. Reattach the Smoke/CO Alarm to the mounting bracket.

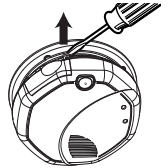

IMPORTANT!


When replacing the batteries, always test the Smoke/CO Alarm before relocking the battery compartment.

TO LOCK THE MOUNTING BRACKET

1. Using needle-nose pliers, detach one locking pin from the mounting bracket.
2. Insert the locking pin through the hole on the back of the Smoke/CO Alarm as shown in the diagram.
3. When you attach the Smoke/CO Alarm to the mounting bracket, the locking pin's head will fit into a notch on the bracket.

TO UNLOCK THE MOUNTING BRACKET

1. Insert a flathead screwdriver into the rectangular cut-out on the mounting bracket nearest to the locking pin.
2. Pry the Smoke/CO Alarm away from the bracket by pushing up on the screwdriver and turning the Smoke/CO Alarm counterclockwise (left) at the same time.

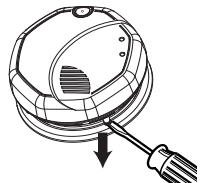

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>