

BRAUN

Cordless Medium Styler

C 21



 
Our products are engineered to meet the highest standards of quality, functionality and design. We hope you thoroughly enjoy your new Braun appliance. Please read the use instructions carefully before usage.

Braun Cordless is the perfect styling solution for young, modern women. Its ability to curl, flick, wave and shape hair makes it the ultimate in styling freedom.


I m p o r t a n t

- Do not expose to temperatures of more than 50°C (e.g. glove compartment of cars), nor direct sunlight for long periods of time.
- Keep out of the reach of children.
- Do not allow the appliance to become wet.
- When starting the appliance please ensure that it is held away from the hair, face and clothing. Do not start the appliance while it is in the hair in order to avoid damage to the hair. Energy cell contains flammable butane gas under pressure.
- Keep away from flames (burning cigarettes as well).
- Use Braun energy cells only.
- Avoid touching the hot parts of the product.
- When hot, do not place on surfaces which are not heat resistant.
- Do not take apart, puncture or incinerate.
- If the appliance is damaged, stop using it immediately.
- For repairs refer to authorised Braun Service Agents only.
- The appliance should be used on dry hair only.

Description

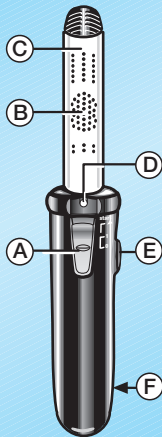

 - A** Energy supply / start switch
«0» = off,
«1» = energy supply,
«start» = starting heat up
- B** Ignition control window
- C** Tong
- D** Ready indicator dot
- E** »open« release button for handle
- F** Energy level indicator

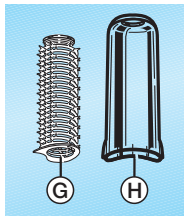

- G** Round styling brush
- H** Heat-resistant cover with safety lock

 
 
Before use

Inserting or changing the Braun energy cell

The energy supply must be switched off (switch **A** at position «0»).

Press the «open» release button **E** and pull off the handle.

Insert a Braun energy cell into the handle as shown in the illustration (arrow on energy cell pointing upwards). Push the handle with the energy cell back into the appliance until it snaps into place.

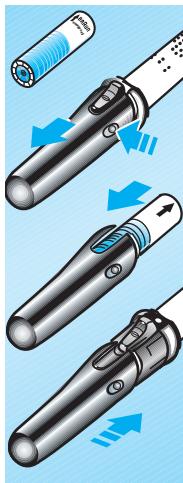

The handle is provided with an energy level indicator **F** that shows when the filling level of the energy cell is 50 % and below.

Only use Braun maxi energy cells. These are available from the store where this appliance was purchased, as well as from authorised Braun Service Agents.

The energy cells can be taken out or changed at any time, even if they are only partly filled.

Switching on



To start the energy supply shift switch **A** up to position «1». (the protective cover **H** must be removed).



 
Wait 3 to 4 seconds.



Shift switch **A** further up to the «start» position until you can clearly hear a click. This starts heating up the appliance.



Let the switch slide back to position «1».

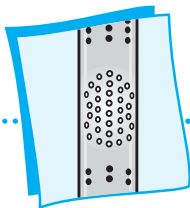

Red dots shining in the ignition control window indicate that the styler has ignited and is heating up. In the unlikely case that it does not heat up, make sure the gas is on and push the start switch again.





After approx. 1 to 2 minutes, the ready indicator dot **D** changes colour. Only then is the appliance ready for use.

Styling

Braun Cordless offers various styling functions:



The brush attachment **G** can be put on or off as shown.

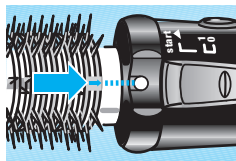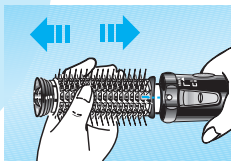

Switching off

To switch off shift switch **A** back to position «0».



Cleaning

Make sure the appliance is switched off and cold. The tong and the handle can be cleaned with a soft damp cloth if necessary. Never immerse the appliance in water. The brush attachment and the protective cover can be cleaned in warm, soapy water.



Storage

After use or cleaning, always place the heat-resistant cover **H** on the appliance. It can be placed on the product immediately after usage. The cover will ensure that the appliance does not turn on accidentally.

Subject to change without notice.

This product conforms to the EMC Directive 2004/108/EC.



When travelling by air, please note that no more than one appliance may be carried by each crew member or passenger aboard an aircraft in checked luggage, if the protective cover is secured over the heating element. Separate gas refills are not permitted. In case of doubt, check with your airline.



Should you require any further assistance, please call Braun Consumer Relations tollfree on

Braun (UK)
0800 783 70 10

Braun Ireland
1 800 509-448

www.braun.com

Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose.

This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover: damage due to improper use, normal wear or use as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre.

For UK only:

This guarantee in no way affects your rights under statutory law.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>