 


Bravetti
PLATINUM PROTM

Professional Drink Maker

Use and Care Instructions
Model EP542

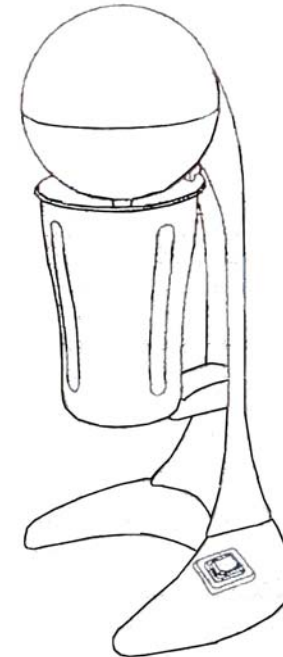

For information or assistance:

EURO-PRO
178 West Service Rd.
Champlain, NY 12919
Tel.: 800-798-7398

EURO-PRO 



ONE (1) YEAR LIMITED WARRANTY

EURO-PRO warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to **EURO-PRO**, 178 West Service Rd., Champlain, N.Y. 12919. If the appliance is found by **EURO-PRO** to be defective in material or workmanship, **EURO-PRO** will repair or replace it free of charge. Proof of purchase date and \$8.95 to cover the cost of return shipping and handling must be included.*

The liability of **EURO-PRO** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO** if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event** is **EURO-PRO** liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

***Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



OWNERSHIP REGISTRATION CARD

Please fill out and mail the product registration card within ten (10) days of purchase in order to validate the foregoing Limited Warranty. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

RETURN TO **EURO-PRO** , 178 WEST SERVICE RD., CHAMPLAIN, N.Y. 12919

EP542

Appliance model			
Date purchased		Name of store	
Owner's name			
Address	City	State	Zip Code

Cleaning Instructions



Warning: Always remove the plug from the wall outlet before cleaning or storing the unit. never immerse the unit, cord or plug in water or any other liquid.

1. To clean the blade, fill the container with one (1) cup of warm water. Operate the drink maker on speed "1" as previously described in operating instructions. Unplug unit from wall outlet. Dry mixing blades and shaft with a soft dry cloth.
2. Wipe the motor housing with a damp cloth. Make sure that the cloth is not excessively wet and that no moisture enters the vents on the motor housing.
3. Wash the container in warm, soapy water.

Do NOT use abrasive cleaners of any type to clean either the unit or the container.

DO NOT IMMERSE THE APPLIANCE IN WATER OR ANY OTHER LIQUID.

Hints

1. When preparing milk shakes note that the volume of a milk shake will vary according to the type of milk used.
2. It is important to follow guidelines in the recipes to avoid spillage from the container.
3. Always remember that solids such as ice cream or fruit will increase the volume of the milk shake.
4. The container must always be filled at least to half the distance to the "MAX" line or the liquid will not reach the blade.
5. When mixing do not fill above the maximum level (8 oz./1 cup/250 ml) or liquid will overflow.
6. For best results, all liquid ingredients should be as cold as possible.
7. All syrups and powdered mixes should be added just before mixing to prevent them from sinking to the bottom of the container.
8. The Drink Maker does **NOT** crush ice. For best results, use crushed ice if the recipe calls for ice.

IMPORTANT SAFEGUARDS

Read Instruction Manual Before Use

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using the appliance. It is suggested that you keep these instructions in a safe place for future reference.
2. Your voltage must correspond to the voltage printed on the bottom of the appliance.
3. To protect against electrical shock, do not immerse the motor housing (base), cord, or plug in water or other liquid.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug appliance from outlet when not in use, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils out of container to prevent personal injury or damage to the mixer.
7. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. Return the appliance to **EURO-PRO** for examination, repair, electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by **EURO-PRO** may cause fire, electric shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Container must be properly in place before operating the appliance.
12. Never add ingredients to container while the appliance is operating.
13. **DO NOT USE THIS APPLIANCE ON A STOVE.**
14. Do not use appliance other than for intended use.
15. Do not operate the drink mixer without the container. Do not use any container other than the one that is supplied with the drink mixer.
16. Unplug drink mixer before cleaning or when not in use.

IMPORTANT NOTICE

 
This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:

1. The electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or tabletop where they can be pulled on by children or tripped over accidentally.

IMPORTANT NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

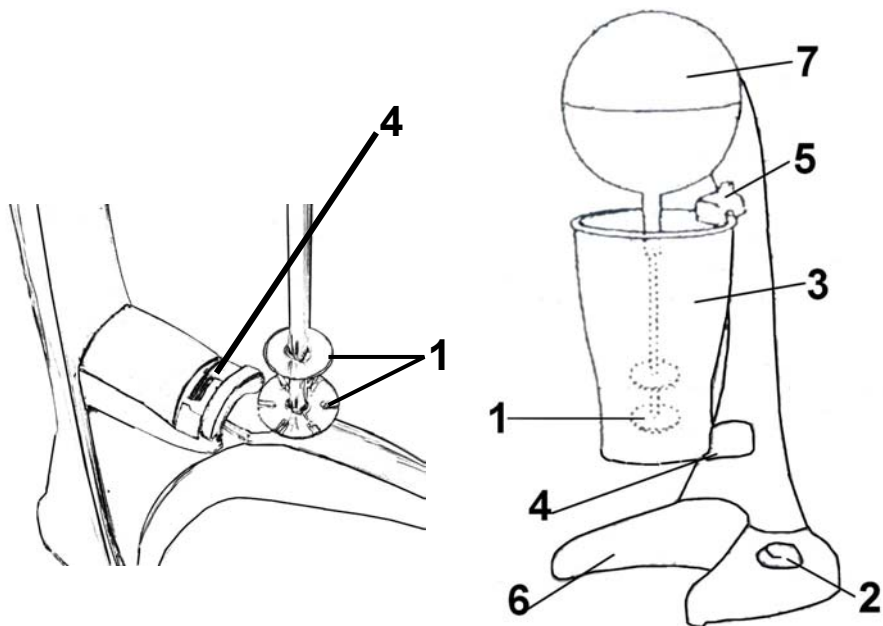

1. Mixing Blades
2. Electrical Switch - (II) High Speed, (O) Off, (I) Low Speed
3. Large stainless steel ergonomic container.
4. Bracket with Safety Switch - Unit will not operate unless the container is placed correctly on the switch bracket.
5. Upper interlocking bracket to support the container - always put container lip behind bracket.
6. Weighted base with non-slip rubber feet gives maximum stability.
7. Motor Housing

Technical Specifications

Voltage: 120V., 60Hz.
 Power: 70 Watts

Read all the sections of this booklet and follow all the instructions carefully.

Before Using for the First Time

1. Remove all promotional labels from the drink maker. Wash the container in hot soapy water and dry thoroughly.
2. Clean the mixing blades and shaft with a damp cloth and dry thoroughly.

Warning: Do not immerse unit in water or any other liquid for cleaning.



Fig. A



Fig. B

Using the Drink Mixer

1. Place the drink maker on a level, dry surface. Plug the unit into a 120 volt wall outlet.
2. Make sure that the 2 speed switch is in the center (O) "Off" position (Fig. A).
3. Combine the ingredients in the container. Do not overfill the container beyond the "MAX" line (Fig. B).
4. Hold the container and place it into the drink maker. Make sure that the top of the container is placed **behind** the upper interlocking bracket that supports the container (Fig. C). The base of the container should rest on the bottom bracket pressing on the safety switch. (Fig. D).
5. Switch on the 2-speed electrical switch.
6. Choose speed (I) or (II) according to the ingredients that you are using. (Fig. E).
7. When your drink is ready, press the 2-speed switch to the "OFF" (O) position to stop the unit (Fig. A).
8. Remove the container by lifting it upwards slightly to release it from the bottom bracket and serve.



Fig. C



Fig. D

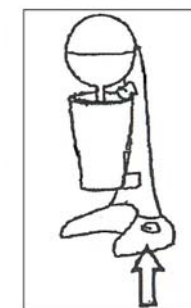 


Fig. E

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>