

 
Bravetti[™]

GLASS BOWL FOOD PROCESSOR

OWNER'S MANUAL

Model EP108H

120V., 60Hz., 270 Watts

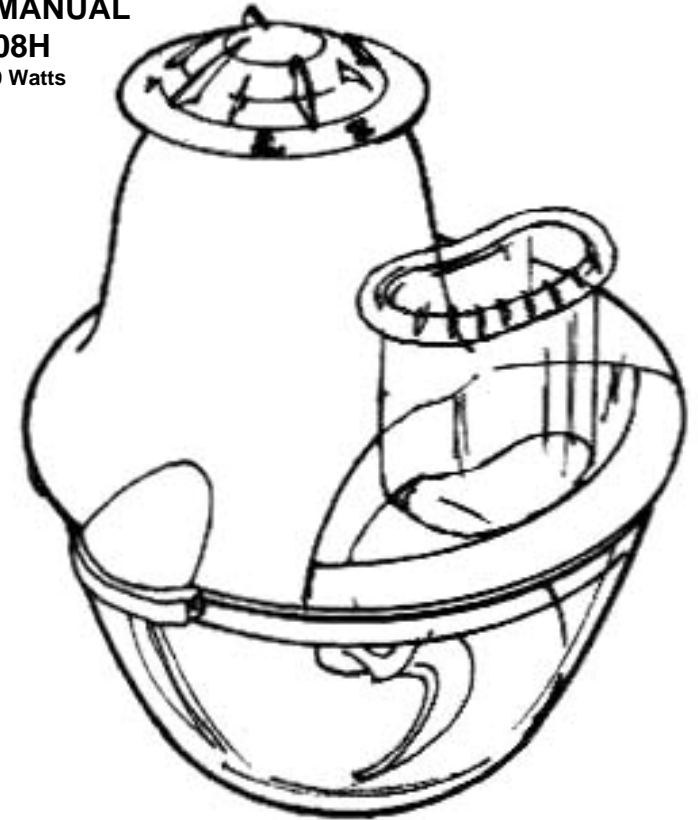

EURO-PRO Operating LLC

Boston, MA, 02465

1 (800) 798-7398

www.euro-pro.com

EURO-PRO 

IMPORTANT SAFEGUARDS

Read Instruction Manual Before Use

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using the appliance. It is suggested that you keep these instructions in a safe place for future reference.
2. Your voltage must correspond to the voltage printed on the bottom of the appliance.
3. To protect against electrical shock, do not immerse the motor housing (base), cord, or plug in water or other liquid.
4. Close supervision is necessary when the appliance is used by or near children.
5. Unplug appliance from outlet when not in use, before putting on or taking off parts and before cleaning.
6. Avoid touching moving parts at all times.
7. Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. Return the appliance to **EURO-PRO Operating LLC** for examination, repair, electrical or mechanical adjustment.
8. The use of attachments not recommended by the manufacturer may cause fire, electric shock or injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter or touch hot surfaces.
11. Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the food processor. A scraper may be used but must be used only when the food processor is not running.
12. Blades are sharp. Handle carefully. When handling the chopper blade always hold it by the plastic hub.
13. To reduce the risk of injury, never place cutting blades or discs on the base without first putting bowl properly in place.
14. Be certain cover is securely locked in place before operating appliance.
15. Never feed food by hand. Always use food pusher.
16. Do not attempt to by-pass the cover interlock mechanism.
17. Always operate food processor with the cover in place.
18. **Never** place bowls in microwave or over direct heat.

 
IMPORTANT NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

GETTING TO KNOW YOUR FOOD PROCESSOR

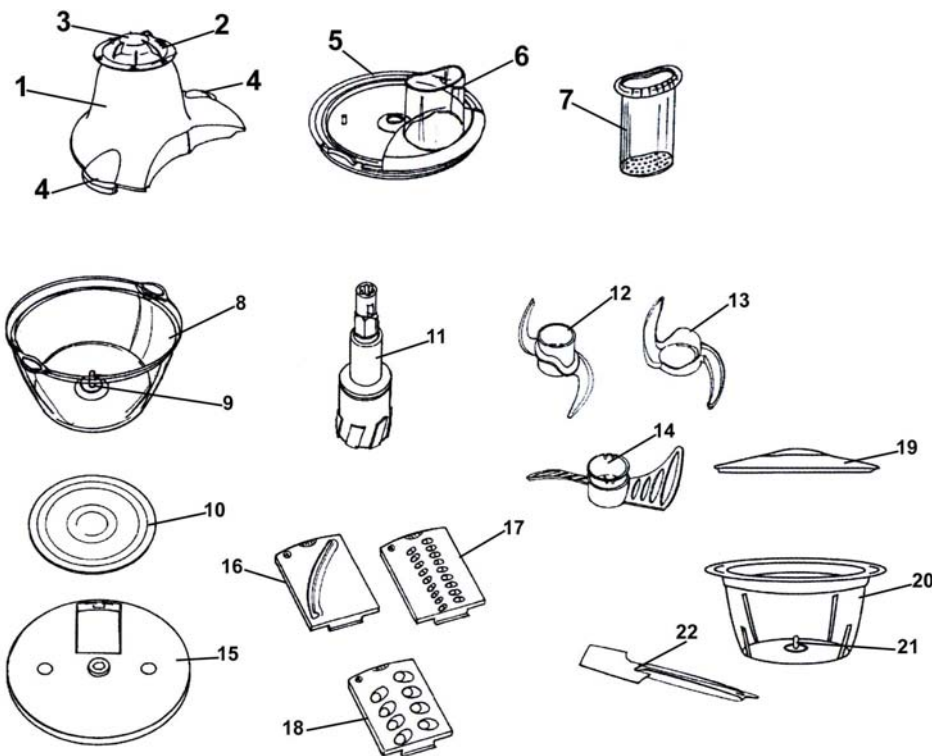

1. Power Unit
2. Speed Control & Locking/Unlocking Button
3. Pulse Button
4. Locking Handles
5. Processor Inner Lid
6. Feeder Tube
7. Food Pusher
8. Glass Bowl
9. Locating Pin
10. Slip Guard Pad
11. Spindle
12. Chopping Blade
13. Protective Chopping Blade Cover
14. Whipping Attachment
15. Blade Holder
16. Slicing Blade
17. Thin Shredding Blade
18. Thick Shredding Blade
19. Bowl Lid
20. Plastic Bowl
21. Locating Pin
22. Spatula

Technical Specifications

Voltage: 120V., 60Hz.
Power: 270 Watts
Capacity: 6 Cups

Illustrations may differ from actual product.

OPERATING INSTRUCTIONS

The **Bravetti Glass Food Processor** is an indispensable kitchen tool for blending, chopping, mixing or pureeing when preparing your favorite recipes. For best results, be sure to carefully read all the instructions contained in this book before using this appliance.

Power Unit

The Power Unit operates on 120V., 60Hz. electrical power. Never allow the power unit to become wet when plugged into an electrical outlet.

Warning: The power unit should never be immersed in water.

Caution: Make sure that the power unit is unplugged from power source before attaching or removing any accessory.

Speed Control & Locking/Unlocking Button

The speed control & locking/unlocking button that is on the power unit will automatically lock the power unit onto the processor bowl when you turn it on.

The food processor has a variable speed control dial and "Pulse".

The speed can be adjusted while the food processor is in use.

Use of the "Pulse" button allows greater control over the texture of the food being processed. You can also use "Pulse" when the unit is in the "Off" position. Please note that the "Pulse" is only intended to be used for short "bursts" of processing.

Operating the Food Processor

Caution - Blades are sharp. Use extreme caution when handling the blade, always hold it by the plastic hub. Do not immerse the power unit in water.

Caution: Make sure that the unit is unplugged from the power source.

Caution: Never place food processor bowls (glass or plastic) in microwave or over direct heat.

IMPORTANT: Remove protective chopping blade cover(s) before use. Protective blade covers to be used only for storage.

Using the Chopping Blade:

1. Place the food processor bowl onto the slip guard pad.
2. Holding the chopping blade by plastic hub, remove the protective blade cover and insert it onto the spindle. (Fig. 1)
3. Place the spindle with the blade onto the locating pin in the food processor bowl. (Fig. 2)
4. Add ingredients that you wish to process into the bowl.
5. Place the processor inner lid onto the bowl making sure that it is placed correctly onto the bowl. (Fig. 3)
6. Place the power unit onto the bowl. Turn the locking/unlocking button to the left to lock the power unit in place on the bowl. (Fig. 4)

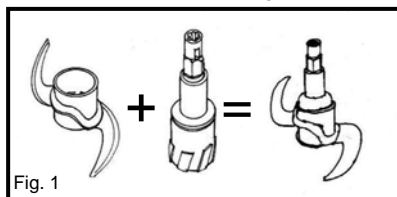 


Fig. 1

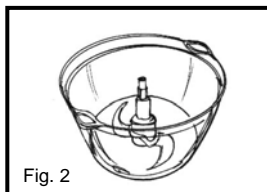 


Fig. 2

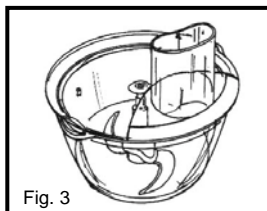 


Fig. 3

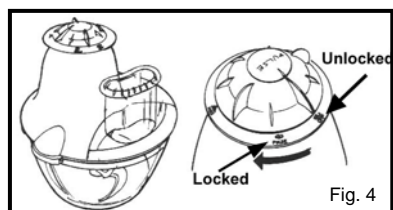 


Fig. 4

OPERATING INSTRUCTIONS

Operating:

1. Plug power cord into an electrical outlet.
2. To turn the unit on, turn the speed control more to the left until you get the speed that you desire. The speed can be adjusted while the unit is in use.
3. Now you are ready to use the food processor.

Note: Please note that the maximum amount of liquid to be processed at one time is 1 cup. Exceeding this quantity of liquid will cause overflow.

Attention: Do NOT operate this unit continuously for more than 10-15 seconds.

4. When you are finished using the food processor, turn the unit "Off".
5. Unlock the power unit and remove from the food processor.
6. Remove the processor inner lid. Be sure that all chopping blade has stopped rotating before you remove the processor inner lid.

Warning: Do NOT operate this appliance when empty.

Using the Whipper:

1. Place the food processor bowl onto the slip guard pad.
2. Insert the whipper onto the spindle. (Fig. 5)
3. Place the spindle with the whipper onto the locating pin in the food processor bowl.
4. Add ingredients that you wish to process into the bowl.
5. Place the processor inner lid onto the bowl making sure that it is placed correctly onto the bowl.
6. Place the power unit onto the bowl. Turn the locking/unlocking button to the left to lock the power unit in place on the bowl.

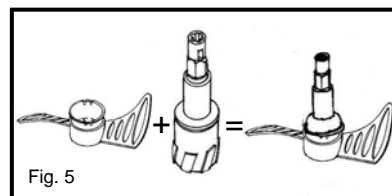 


Fig. 5

Slicing & Shredding Blades

Caution: Make sure that the unit is unplugged from the power source before inserting or removing attachments.

1. Select the blade that you wish to use. (Fig. 6)
2. To insert the blade of your choice into the blade holder, place the longer tab of the blade into the blade holder first. (Fig. 7)
3. Press the other end of the blade until it clicks into place. (Fig. 8)
4. Fit the processor bowl and spindle as detailed on the page 3. (Fig. 9)
5. Using the finger holes in the blade holder, fit it over the spindle and place spindle in processor bowl. (Fig. 10)

Warning: USE EXTREME CAUTION WHEN HANDLING BLADES. BLADES ARE SHARP.

6. Place the processor inner lid onto the bowl making sure that it is placed correctly onto the bowl. (Fig. 11)
7. Place the power unit onto the bowl. Turn the locking/unlocking button to the left to lock the power unit in place on the bowl. (Fig. 12)



Fig. 6



Fig. 7

Fig. 8

Fig. 9

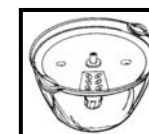 


Fig. 10

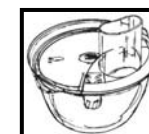 


Fig. 11

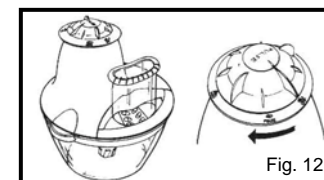 


Fig. 12

OPERATING INSTRUCTIONS

Slicing & Shredding Blades (cont.)

8. Plug in the processor.

WARNING: ALWAYS USE THE FOOD PUSHER TO ADD FOOD INTO THE PROCESSOR BOWL THROUGH THE FEEDER TUBE.

Do not overload the food processor bowl. In one operation, you can process a maximum of 6 cups (1500 ml) of food.

PROCESSING EXAMPLES

PROCESSING EXAMPLES USING THE CHOPPING BLADE & WHIPPER


The processing times indicated below are approximate and also depend on the quantity of the food to be processed and the degree of fineness you require.

PRODUCT	QUANTITY	RECOMMENDED SPEED	ACCESSORY USED
Onions / Garlic	2 cups	Max / Pulse	Chopping blade
Parsley	1 cup	Max / Pulse	Chopping blade
Raw Meat	2 cups	Max / Pulse	Chopping blade
Meat (cooked)	2 cups	Max / Pulse	Chopping blade
Nuts	1 ½ cups	Max / Pulse	Chopping blade
Fruits (cut in small pieces)	2 ½ cups	Max / Pulse	Chopping blade
Carrots (cooked)	2 cups	Max / Pulse	Chopping blade
Hard Boiled Eggs	4 eggs	Max / Pulse	Chopping blade
Mayonnaise	Max 4 cups	Max / Pulse	Whipper
Whipping cream	1 cup	Max / Pulse	Whipper

* Always allow food to cool before placing in the bowl.

* Remove all bones before processing.

 
PROCESSING EXAMPLES USING THE SHREDDING & SLICING BLADES

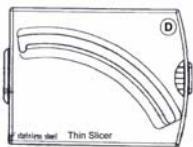

SLICING



 THIN SHREDDING

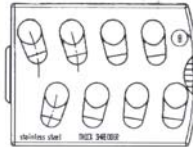

THICK SHREDDING

- For slicing: - Recommended speed level is High (Cucumbers, raw potatoes, lettuce, carrots, cabbage, onions)
- For thin shredding: - Recommended speed level is High (Carrots, cucumbers, cabbage)
- For thick shredding: - Recommended speed level is High (Lettuce, carrots, apples)

CLEANING & TROUBLESHOOTING

Cleaning

- **Do NOT** immerse the power unit into water or any other liquid. Clean with a damp sponge or cloth and wipe dry.
- The glass processor bowl and the chopping blade may be cleaned in the upper basket of the dishwasher.
- Use extreme caution when cleaning the chopping blade as the blades are very sharp.
- The processor inner lid, plastic bowl, bowl lid, whipper and the slip guard pad may be washed in lukewarm water and a mild dishwashing liquid. **Do NOT** place these in the dishwasher.

Trouble Shooting

Motor doesn't start or blade doesn't rotate:

- Check that the plug is securely inserted into the electrical outlet.
- Check that the processor inner lid and power unit are securely in place.

Trouble Shooting (cont.)

Food is unevenly chopped:

- Either you are chopping too much food at one time, or the pieces are not small enough. Try cutting the food into smaller pieces of even size and processing smaller amounts per batch.

Food is chopped too fine or is too watery:

- The food has been over processed. Use brief pulses or process for shorter time. Let blade stop completely between pulses.

Food collects on processor inner lid or on the sides of the glass bowl:

- You may be processing too much food. Turn the machine off. When the blade stops rotating, remove the power unit and the processor inner lid. Remove some of the food being processed. Maximum capacity for processing is 6 cups (1500 ml).



ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid. For Customer Service support, call 1 (800) 798-7398 or visit our website www.euro-pro.com.

If the appliance is found to be defective in material or workmanship, **EURO-PRO Operating LLC** will repair or replace it free of charge. Proof of purchase date and \$12.95 to cover the cost of return shipping and handling must be included.*

The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event** is **EURO-PRO Operating LLC** liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

***Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



OWNERSHIP REGISTRATION CARD FOR CANADIAN CONSUMERS ONLY

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

RETURN TO **EURO-PRO Operating LLC, 4400 Bois Franc, St-Laurent, QC, H4S 1A7**

Model EP108H

Appliance model

Date purchased

Name of store

Owner's name

Address

City

Prov.

Postal code

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>