 


# ***Bravetti***

## ***PLATINUM PRO***

### Food Slicer

Use and Care Instructions  
Model BKS600

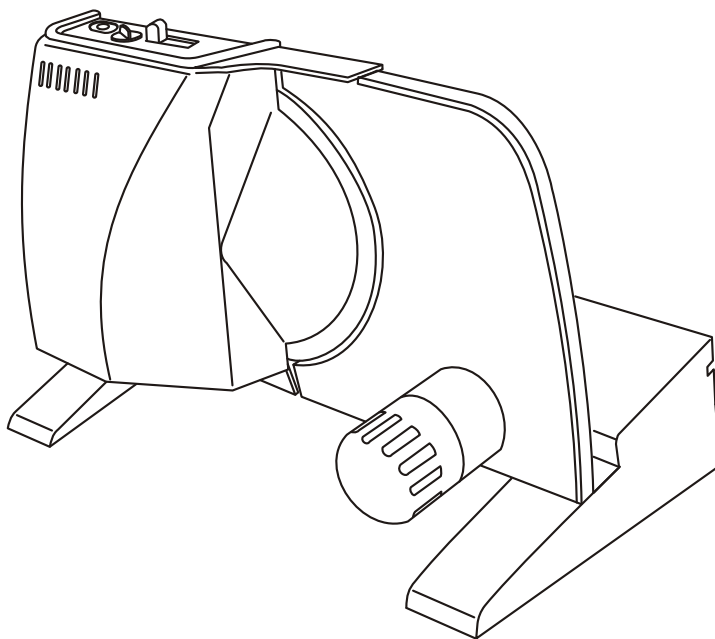

EURO-PRO OPERATING LLC  
BOSTON, MA 02465  
Tel.:1 (800) 798-7398  
[www.euro-pro.com](http://www.euro-pro.com)

# IMPORTANT SAFEGUARDS

**WARNING:** A risk of fire and electric shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

1. READ ALL INSTRUCTIONS BEFORE USING APPLIANCE.
2. The appliance is designed for household use only. It is not intended for commercial use. The electronic scale is not for trading use.
3. Do not use the appliance for other than intended use.
4. Do not use outdoors.
5. The safety switch prevents accidental operation of the slicer by pressing the switch plate. Do not attempt to defeat this safety feature.
6. Unplug the appliance from power outlet before putting on or taking off parts and before cleaning. Be careful, the blade continues to turn for a while even after the appliance is switched off.
7. Do not operate the appliance continuously for more than 10 minutes. Allow the appliance to cool down for one hour before second operation.
8. Do not use the appliance to cut deep frozen food, bones or jellylike wet food.
9. Operate the appliance only when the blade-locking knob is properly engaged and tightened. Avoid contacting moving parts, such as blade or gear.
10. Handle the blade carefully when cleaning, removing and inserting, as the blade is extremely sharp. Do not touch the sharp edge of the blade. Do not use or install the blade in any way other than recommended in this manual.
11. To avoid danger of injury, always cut the food with feeder and food press. The food press must not be removed, unless the size and shape of the food do not permit their use.
12. Always set the adjustment plate to position '0' before and after cleaning.
13. To protect against risk of electric shock, do not operate this appliance if it has a damaged cord or plug, is not working properly, has been dropped or damaged, or is dropped into water or any other liquid. Return the appliance to service center for examination and repair.
14. Do not let the cord hang over the edge of table or touch hot surface.

15. Do not use accessories not supplied with this appliance.
16. Do not allow children to get access to this appliance.
17. Close supervision is necessary when the appliance is used by or near disabled persons.
18. Clean the appliance before the first time usage. See "Cleaning Instructions".

# SAVE THESE INSTRUCTIONS

## THE APPLIANCE IS DESIGNED FOR HOUSEHOLD USE ONLY

### Short Cord Instructions

**CAUTION:** A short power supply cord is provided to reduce the risk of personal injury resulting from because entangled in or tripping over a longer cord.

### Extension Cord Use

If extension cord is required, special care and caution is necessary. The extension cord should be marked with an electrical rating of 125V and at least 10A, 1250W. The power supply and the extension should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

### Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## DIRECTIONS FOR USE

CAUTION: Blade is sharp. Handle carefully.

1. Place the food slicer (Fig. 1) on a flat solid surface so that the appliance has good adhesion.
2. Make sure the safety lock is at '0' position before the appliance is plugged in the electrical outlet.
3. Plug in the electrical outlet with alternating current and voltage supply specified for the appliance 120 V~, 60 Hz, 90W .
4. To turn on the appliance, first turn the safety switch from position '0' to '1' then press down the pulse switch plate (Fig. 2). Keep pressing down the switch plate during slicing. Be very careful when operating the appliance.
5. To turn off the appliance, release your hand pressing the switch plate. The switch plate will spring up automatically and the slicer will stop.
6. Place the food tray on the side of appliance (Fig. 3) to collect the food.
7. Set the desired cutting thickness by turning the slice thickness adjustment knob (Fig. 4). Setting 0-20 can be chosen. Always return the supporting plate to setting '0' after use.
8. The slicer can be used to cut meat, ham, sausage, bread, vegetable or cheese. Blade cutting speed can be adjusted to cut different kinds of food. Use the highest speed for sausage while the lowest speed is for cheese. Select the cutting speed by sliding the speed control button (Fig. 5) to appropriate food symbol :



Cheese



Vegetable



Bread



Sausage

9. Put the food on the feeder and push the food with food press plate. Cut the food by sliding the feeder forward (Fig. 6). To avoid danger of injury, always cut the food with feeder and food press plate. In case the shape or size of food does not allow the use of feeder, the feeder can be removed by tilting to the side (Fig. 7). However extra care should be taken during cutting.
10. The blade is protected by a blade cover. Always cut the food with blade cover installed.
11. Turn the safety switch to position '0' after finish slicing.

## CLEANING INSTRUCTIONS

**CAUTION:** Blade is sharp. Handle carefully. Do not wash in dishwasher. Do not immerse the main unit in liquid. Do not remove the lubricant from the gears

1. Always unplug the appliance and let the blade come to stop before cleaning.
2. Never immerse the appliance into water.
3. Adjust the supporting plate to setting '0' before cleaning.
4. To clean the blade, remove the blade cover by sliding upward (Fig. 8). The blade cover has latches to engage both with motor assembly and blade. Remove the blade by turning the blade knob 90 degrees clockwise (Fig. 9) and pulling outward (Fig. 10).
5. The blade, blade cover, food press plate and food tray can be washed and then dried. Be careful when cleaning the blade as it is extremely sharp. Do not touch the sharp edge by hand.
6. For thorough cleaning, pull out the motor assembly from the motor housing (Fig. 11). Clean the outer surface of the motor assembly by a dry cloth only. Never immerse the motor assembly in water.
7. For feeder, supporting plate, base and motor housing, clean the outer surfaces by a damp cloth. Use domestic cleaning detergent for worse dirt. Do not use sharp objects to remove the dirt as it will damage the coating on surface.
8. After cleaning, put back the motor assembly on the motor housing. Install the blade and blade cover on motor assembly in reverse order of step 4. Make sure the blade cover is properly engaged.

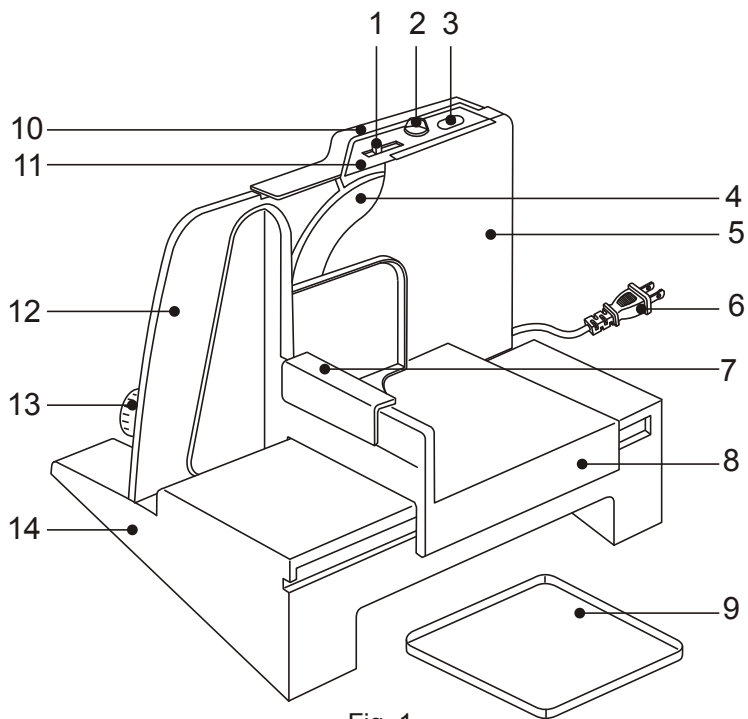 


Fig. 1

- |                         |                                     |
|-------------------------|-------------------------------------|
| 1. Speed control button | 8. Feeder                           |
| 2. Safety switch        | 9. Food tray                        |
| 3. Pulse switch         | 10. Motor housing                   |
| 4. Blade                | 11. Motor assembly                  |
| 5. Blade cover          | 12. Supporting plate                |
| 6. Power supply cord    | 13. Slice thickness adjustment knob |
| 7. Food press plate     | 14. Tilting base                    |

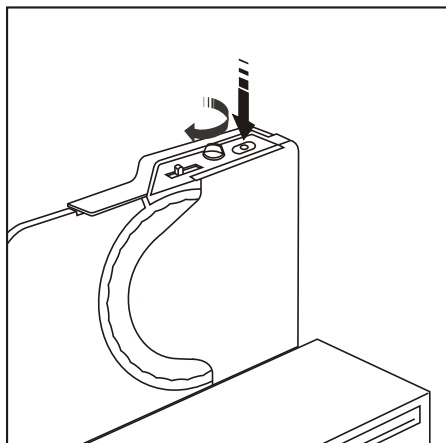 


Fig. 2

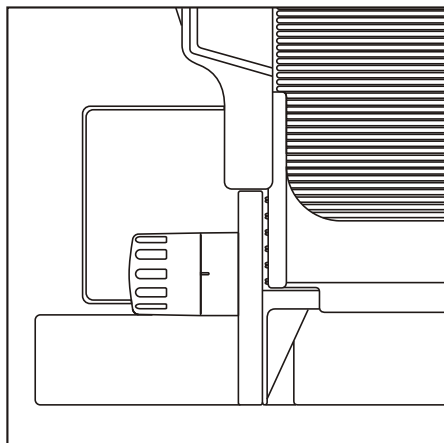 


Fig. 3

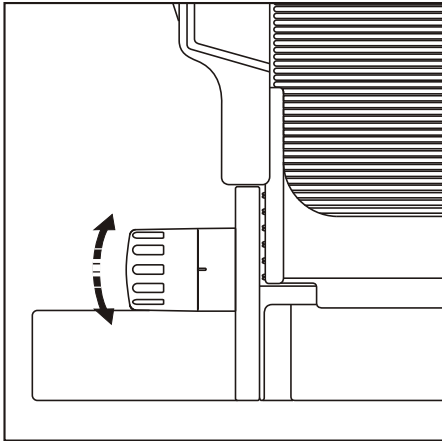 


Fig. 4

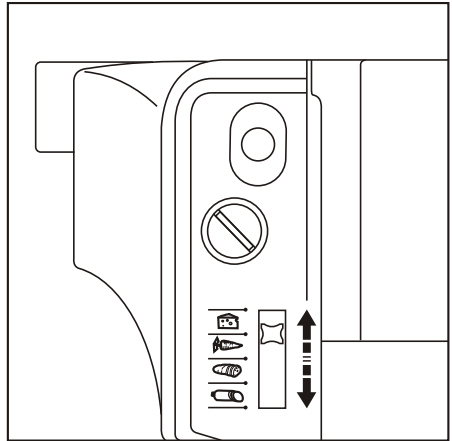 


Fig. 5

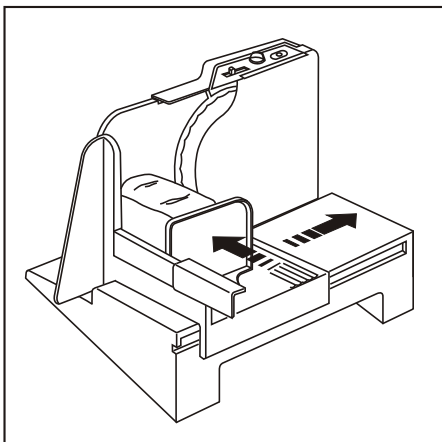 


Fig. 6

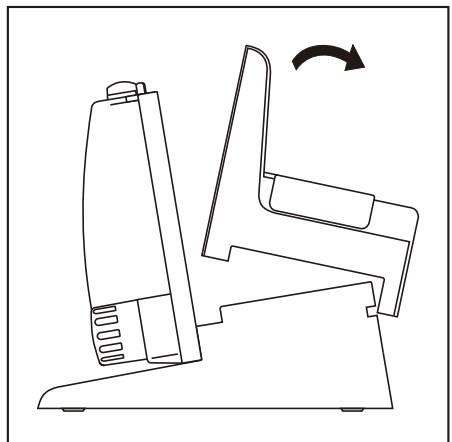 


Fig. 7

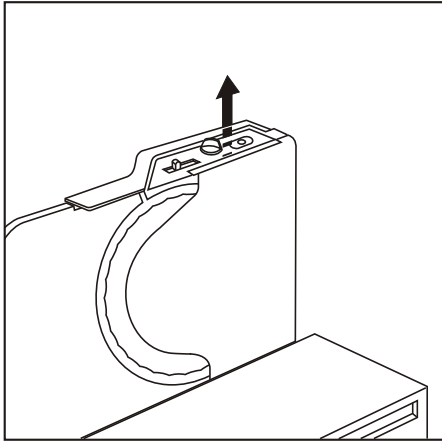 


Fig. 8

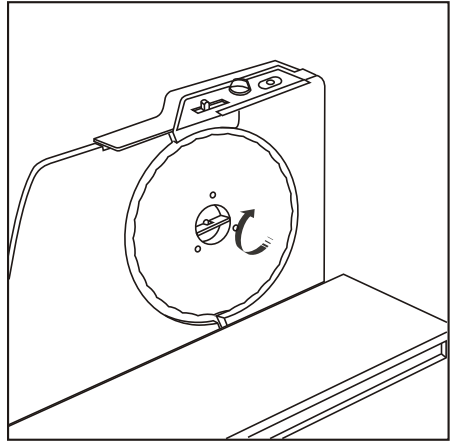 


Fig. 9

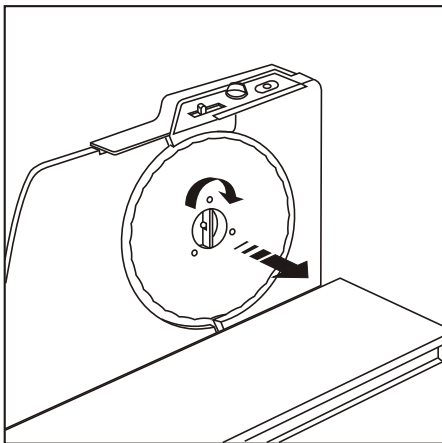 


Fig. 10

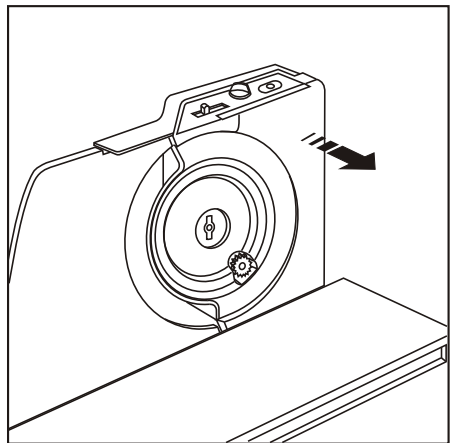 


Fig. 11



## HINTS FOR USING FOOD SLICER

1. Roasts: Beef, pork, poultry and lamb -- Allow roasts to stand for 20 minutes after removing from oven.
2. Bulk Bacon -- With a sharp knife, remove rind from "thoroughly chilled" bacon. Trim bacon to fit securely on food tray, fat side down.
3. Cheese and cold cuts -- Slice as needed to retain flavor. Remove the plastic or hard casing from "well chilled" food before slicing. Use gentle pressure for uniform slices.
4. When you are going to slice very thin food, unplug the unit and moisten the blade with a damp cloth; this helps to prevent sticking. If cheese builds up on blade or under blade cover, unplug the slicer and wipe blade clean with a damp cloth.
5. When slicing food that is not uniform in size, always slice with the largest side first.
6. Vegetables and fruits -- Slice potatoes, tomatoes, carrots, cucumbers, cabbage, lettuce, eggplant, squash and zucchini in a matter of minutes.
7. Breads -- Do not use excessive pressure or squeeze the loaf. Trim or cut bread to fit comfortably on feeder. Move the loaf of bread smoothly through the blade with continuous "gentle" pressure on the loaf.

# Bravetti / EURO-PRO

PLATINUM PRO

## ONE (1) YEAR LIMITED WARRANTY

EURO-PRO Operating LLC warrant this product to be free from defects in material and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to EURO-PRO Operating LLC. For Customer Service support call 1(800) 798-7398 or visit our website [www.euro-pro.com](http://www.euro-pro.com). If the appliance is found by EURO-PRO to be defective in material or workmanship, EURO-PRO will repair or replace it free of charge. Proof of purchase date and \$16.95 to cover the cost of return shipping and handling must be included.\*

The liability of EURO-PRO Operating LLC is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of EURO-PRO Operating LLC if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is EURO-PRO Operating LLC liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**\*Important:** Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".



### OWNERSHIP REGISTRATION CARD

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

---

Appliance model

---

Date purchased                      Name                      of store

---

Owner's name

---

Address                                      City                                      State                                      Zip Code

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>