



Illustrated Parts List

Model Series

09P700

TYPE NUMBERS
0001 through 0061.

TABLE OF CONTENTS


 
 


 
 




Air Cleaner	3
Armature	7
Blower Housing	6
Camshaft	2
Carburetor	4
Controls	7
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electrical System	7
Exhaust System	5
Flywheel	6
Fuel Supply	5
Gasket Set	2
Governor Spring	7
Ignition	7
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	6
Spark Plug	7
Sump	2
Warning Label	2



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

09P700

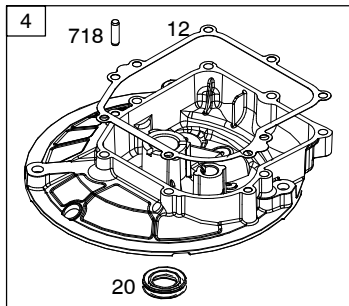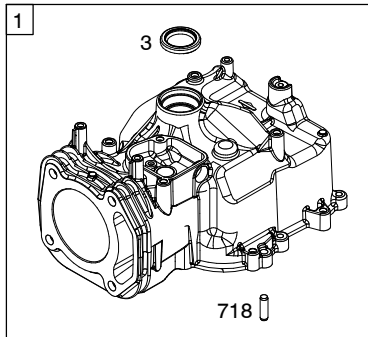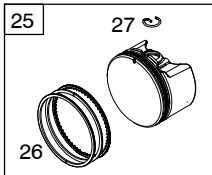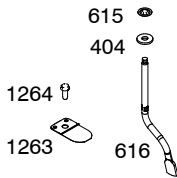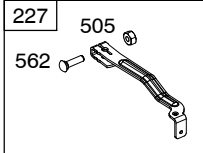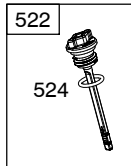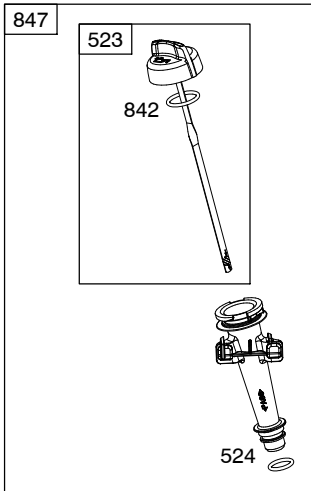

1319 WARNING LABEL

WARNING

- Read and follow Operating Instructions before running engine.
- Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
- Engines emit carbon monoxide, DO NOT run in enclosed area.
- Muffler area temperature may exceed 150°F. Do not touch hot parts.

REQUIRED when replacing parts with warning labels affixed.

1319A WARNING LABEL



REQUIRED when replacing parts with warning labels affixed.

1058 OPERATOR'S MANUAL

1036 EMISSIONS LABEL


358 ENGINE GASKET SET

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.





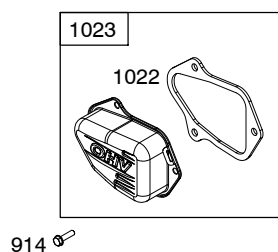
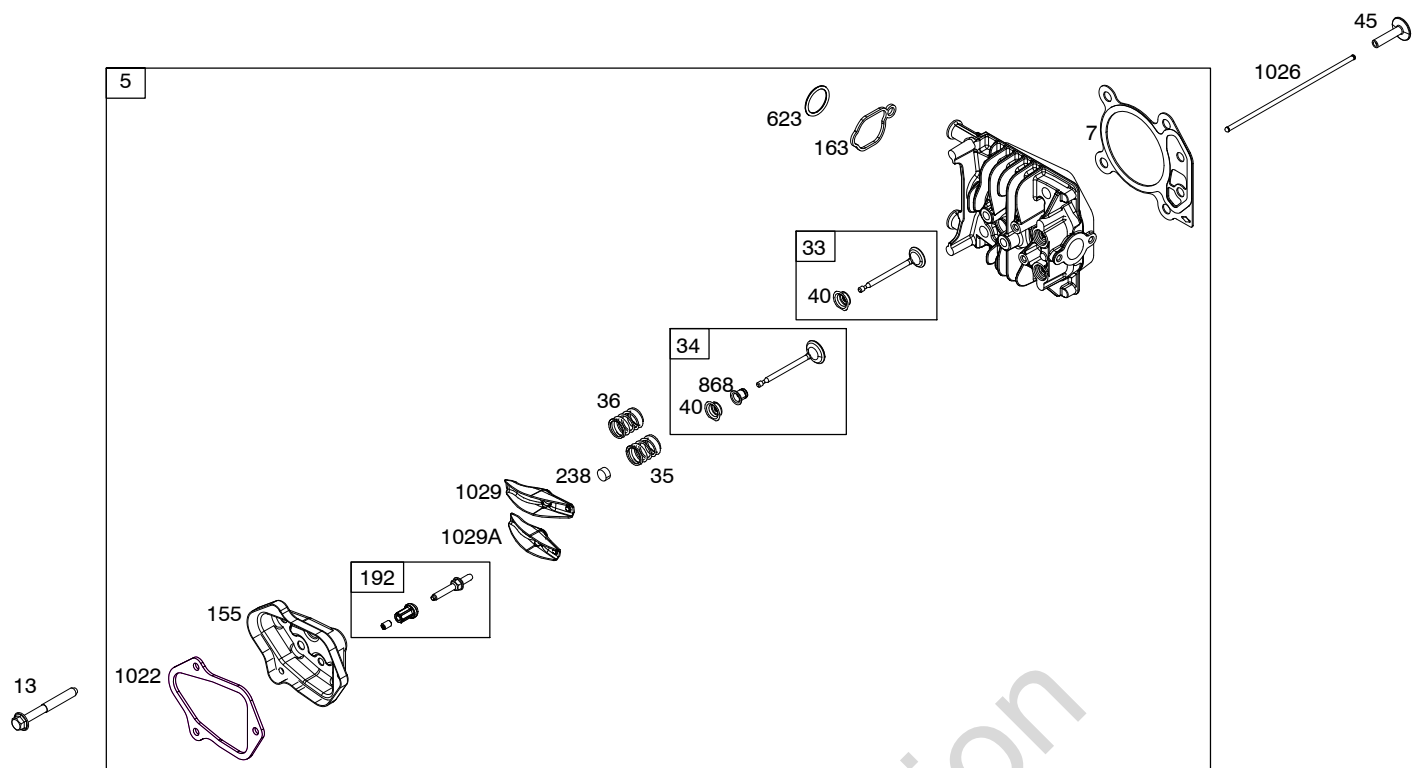


914




Not for Reproduction

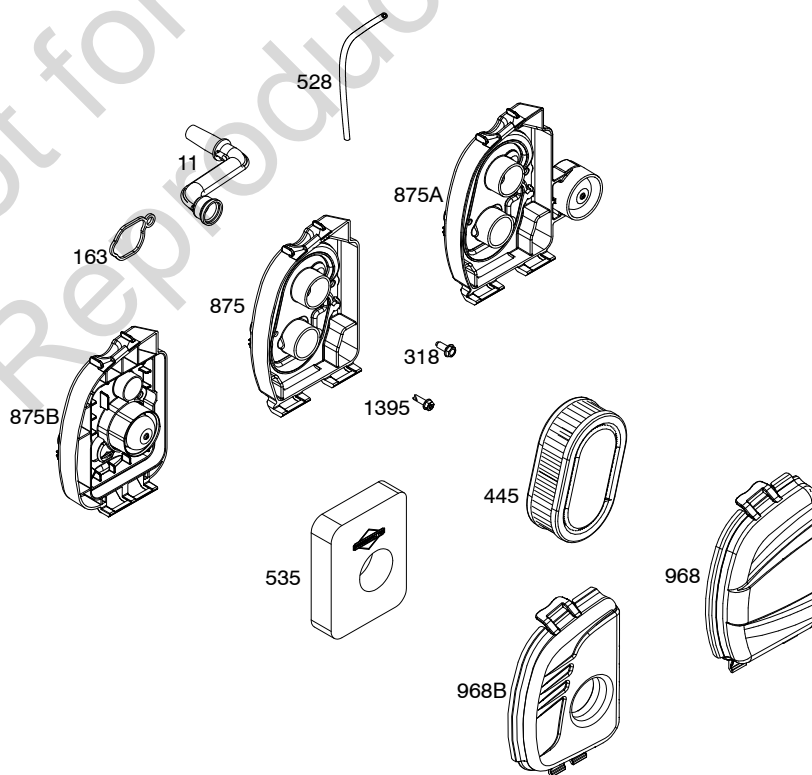


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

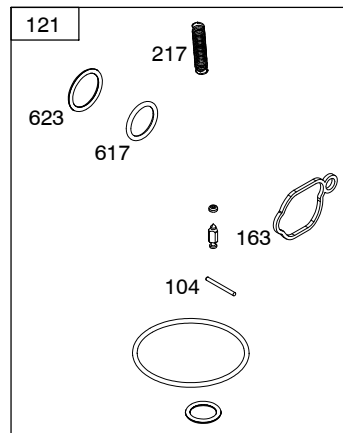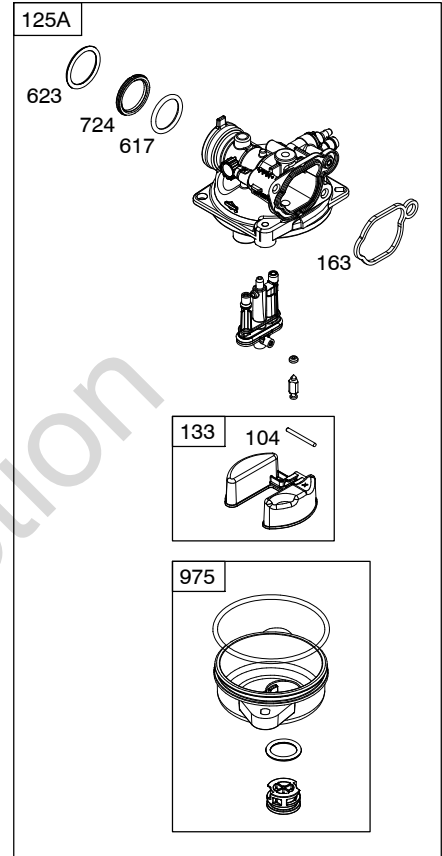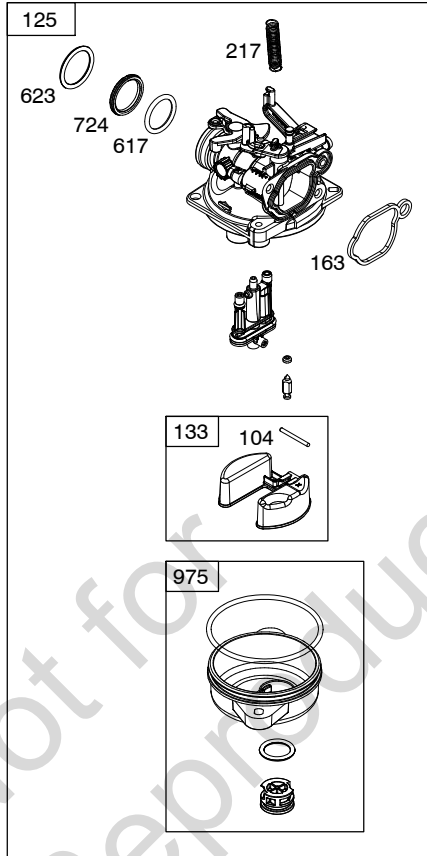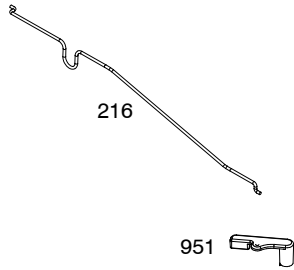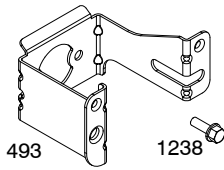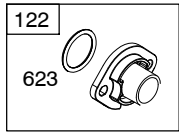


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

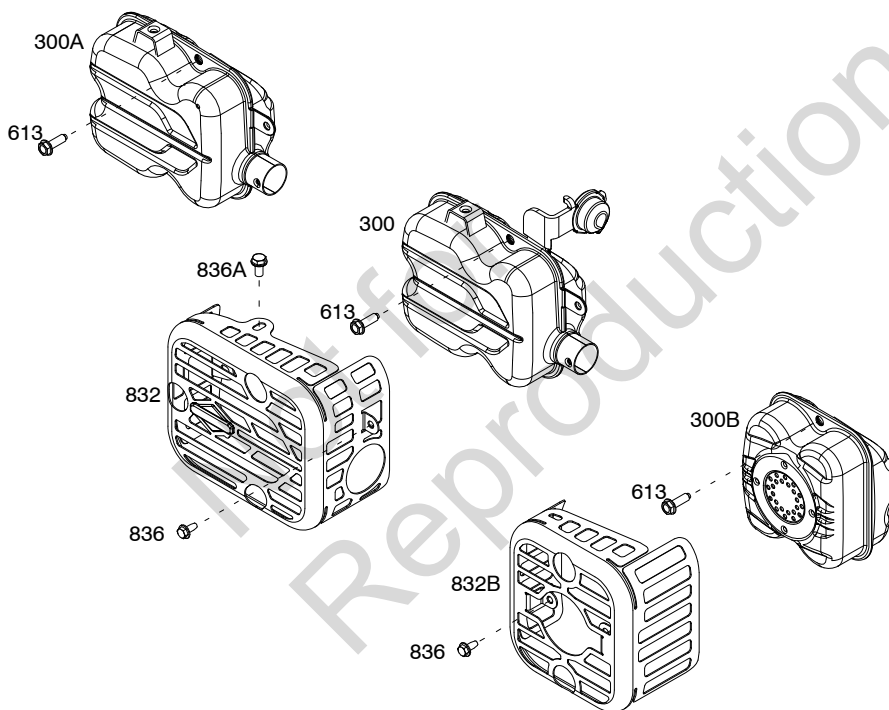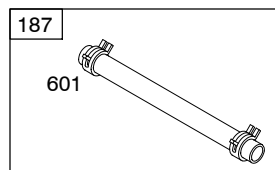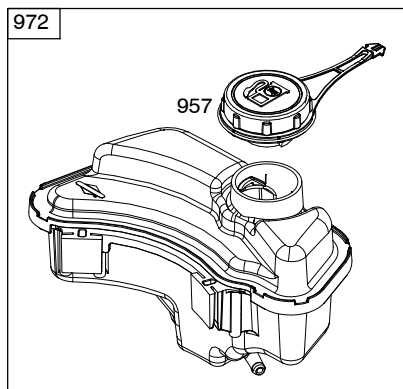

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

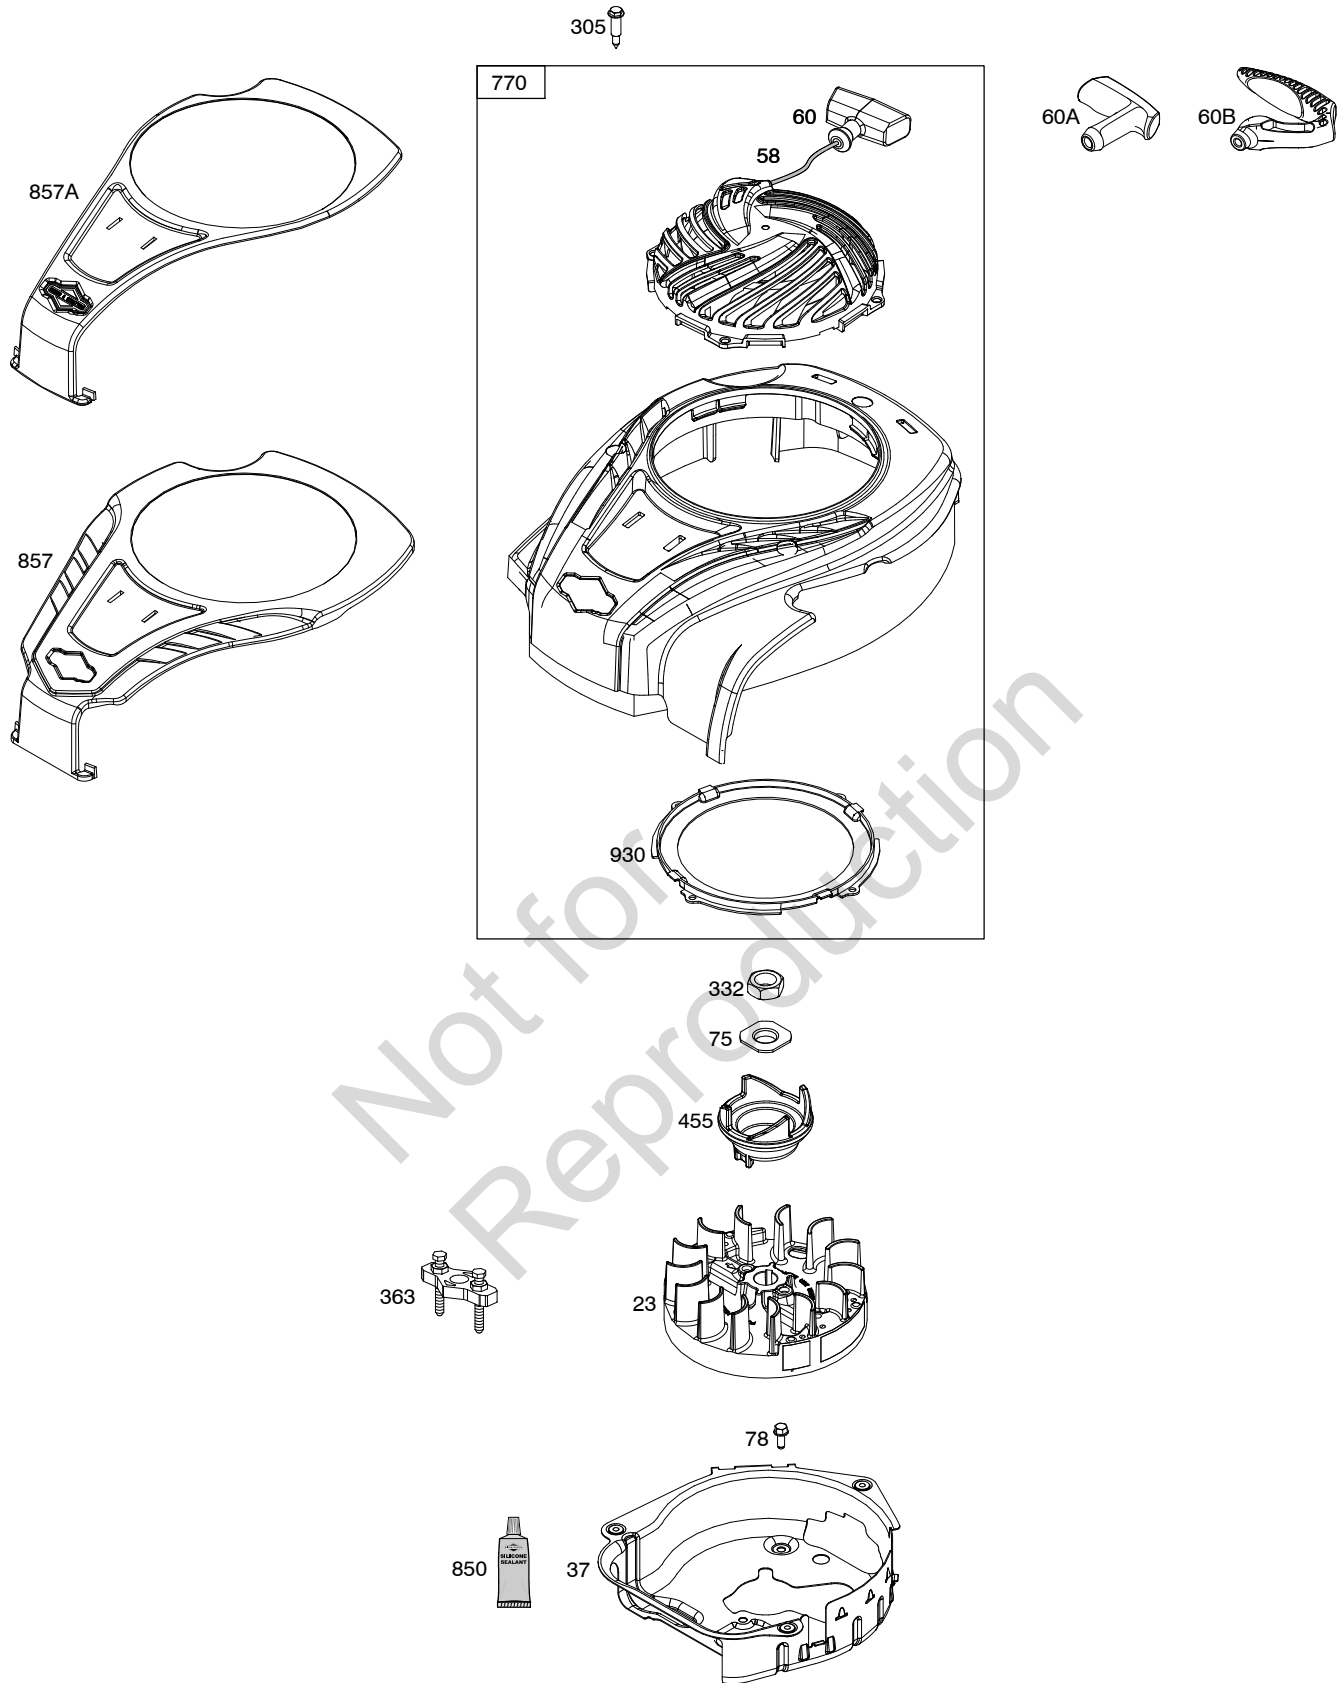

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

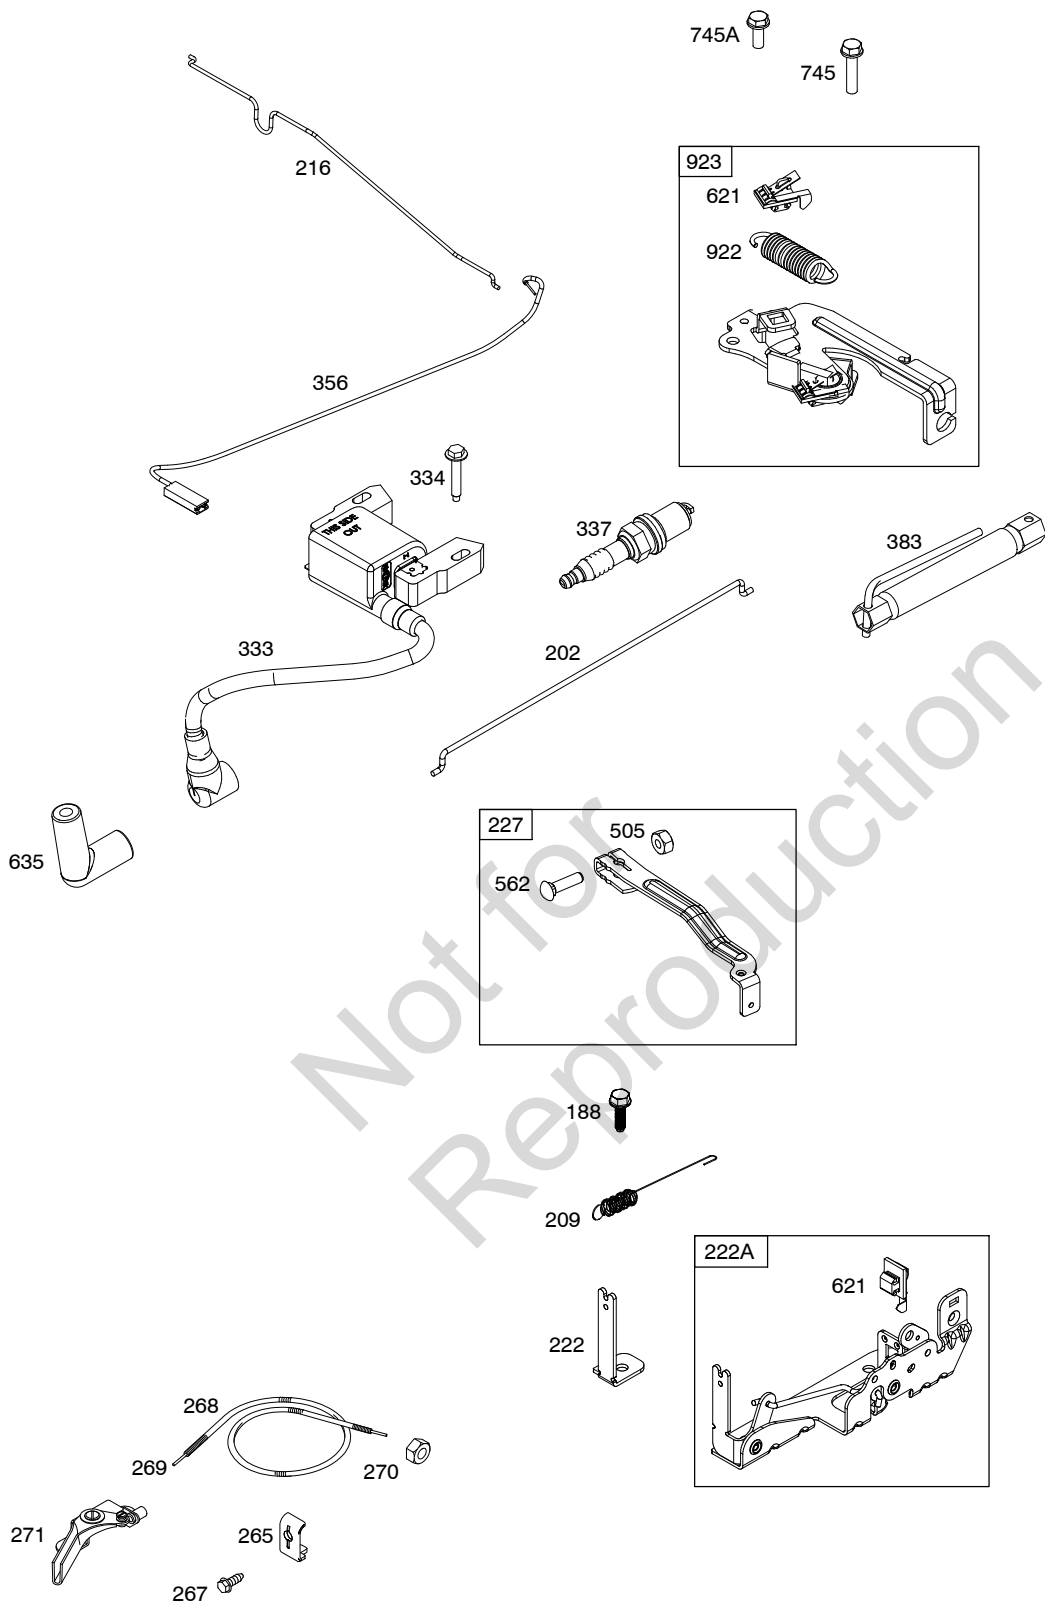

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

09P700

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	590519	Cylinder Assembly	36	590532	Spring-Valve (Exhaust)	192	590535	Adjuster-Rocker Arm
3	299819S	Seal-Oil (Magneto Side)	37	590582	Guard-Flywheel	202	590517	Link-Mechanical Governor
4	590569	Sump-Engine	40	590528	Retainer-Valve	209	590541	Spring-Governor
5	590525	Head-Cylinder	43	697799	Slinger-Governor/Oil	----- Note -----		
7	799586	Gasket-Cylinder Head	45	590514	Tappet-Valve	591497 Spring-Governor		
11	590522	Tube-Breather	46	590524	Camshaft	Used on Type No(s). 0057, 0058.		
12	799587	Gasket-Crankcase	58	591108	Rope-Starter	216	590547	Link-Choke
13	590512	Screw (Cylinder Head)	60	691915	Grip-Starter Rope	217	590740	Spring-Choke Return
16	590538	Crankshaft	60A	281434S	Grip-Starter Rope	222	590560	Bracket-Control
----- Note -----			60B	799716	Grip-Starter Rope	222A	590561	Bracket-Control
590537 Crankshaft			75	590546	Washer (Flywheel)	Used on Type No(s). 0012, 0013, 0017, 0018, 0019, 0028, 0029, 0031, 0042, 0043, 0044, 0046, 0049, 0050, 0054, 0056, 0060.		
Used on Type No(s). 0011, 0012, 0013, 0014, 0015, 0016, 0017, 0018, 0019, 0028, 0029, 0031, 0042, 0043, 0044, 0046, 0049, 0050, 0054, 0056, 0060.			78	793480	Screw (Flywheel Guard)	0012, 0013, 0017, 0018, 0031, 0048, 0050, 0056, 0057, 0058.		
591152 Crankshaft			104	590558	Pin-Float Hinge	227	590520	Lever-Governor Control
Used on Type No(s). 0037, 0047.			121	590589	Kit-Carburetor Overhaul	238	590533	Cap-Valve
20	391483S	Seal-Oil (PTO Side)	122	590549	Spacer-Carburetor	265	690798	Clamp-Casing
22	692551	Screw (Crankcase Cover/Sump)	125	591109	Carburetor	267	691044	Screw (Casing Clamp)
22A	590763	Screw (Crankcase Cover/Sump)	----- Note -----			268	691025	Casing-Control Wire (Cut To Required Length)
23	590544	Flywheel	799584 Carburetor			269	691026	Wire-Control (Cut To Required Length)
24	222698S	Key-Flywheel	Used on Type No(s). 0001, 0003, 0005, 0006, 0007, 0010, 0024, 0033, 0045, 0046, 0047, 0055.			270	691027	Nut (Control Wire Casing)
25	590521	Piston Assembly (Standard)	125A	591110	Carburetor	271	691028	Lever-Control
26	590523	Ring Set (Standard)	Used on Type No(s). 0011, 0012, 0015, 0017, 0021, 0023, 0028, 0029, 0034, 0040, 0043, 0048, 0056, 0057, 0058.			300	590563	Muffler
27	691588	Lock-Piston Pin	----- Note -----			300A	590564	Muffler
28	699659	Pin-Piston	590556 Carburetor			Used on Type No(s). 0034, 0057, 0058.		
29	590518	Rod-Connecting	133	591120	Float-Carburetor	300B	590565	Muffler
32	691664	Screw (Connecting Rod)	155	590529	Plate-Cylinder Head	305	590586	Screw (Blower Housing)
33	590531	Valve-Exhaust	163	799580	Gasket-Air Cleaner	318	793480	Screw (Mounting Bracket)
34	590530	Valve-Intake	187	791766	Line-Fuel (Cut To Required Length)	332	690662	Nut (Flywheel)
35	590532	Spring-Valve (Intake)	188	793480	Screw (Control Bracket)	333	799582	Armature-Magneto
						334	691061	Screw (Magneto Armature)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine. 10242-8 Assemblies include all parts shown in frames. 03/01/2012

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
337	692051	Plug-Spark ----- Note ----- 491055S Plug-Spark Used on Type No(s). 0007, 0008, 0009. 797434 Plug-Spark Used on Type No(s). 0015. 692720 Plug-Spark Used on Type No(s). 0016, 0017, 0018, 0022, 0028, 0049.	635	692076	Boot-Spark Plug	922	692135	Spring-Brake
			718	690959	Pin-Locating (Crankcase Cover)	923	691487	Brake
			724	697478	Retainer-Seal	930	590585	Guard-Rewind
			741	796210	Gear-Timing (Plastic)	951	591104	Lever-Choke
			745	691146	Screw (Brake)	957	799585	Cap-Fuel Tank (Black)
			745A	690859	Screw (Brake)			----- Note ----- 591003 Cap-Fuel Tank (Red)
			770	590588	Kit-Rewind/Blower Housing	957A		Cap-Fuel Tank (Order Replacement Fuel Tank Cap Reference Number 957)
356	692390	Wire-Stop	832	590566	Guard-Muffler			
358	590590	Gasket Set-Engine	832B	590567	Guard-Muffler			
363	19069	Puller-Flywheel	836	690661	Screw (Muffler Guard)	968	590548	Cover-Air Cleaner
383	19576S	Wrench-Spark Plug	836A	793500	Screw (Muffler Guard)	968B	590581	Cover-Air Cleaner Used on Type No(s). 0002, 0004, 0008, 0009, 0025, 0027, 0036, 0037.
404	690272	Washer (Governor Crank)	842	691876	Seal-O Ring (Dipstick Tube)			
445	798452	Filter-Air Cleaner Cartridge	847	590572	Dipstick/Tube Assembly	972	590568	Tank-Fuel
455	590545	Cup-Flywheel	850	100106	Sealant-Silicone	975	591116	Bowl-Float
493	590551	Bracket-Mounting (Carburetor)	857	591113	Trim-Blower Housing Cover	1022	591255	Gasket-Rocker Cover
505	793515	Nut (Governor Control Lever)	857A	591114	Trim-Blower Housing Cover	1023	590513	Cover-Rocker Arm
522	590580	Plug-Dipstick/Fill	868	590534	Seal-Valve (Intake)	1026	590515	Rod-Push
523	796503	Dipstick	875	590553	Base-Air Cleaner	1029	590526	Arm-Rocker
524	691876	Seal-Dipstick Tube	875A	590557	Base-Air Cleaner Used on Type No(s). 0011, 0012, 0015, 0017, 0021, 0023, 0028, 0029, 0034, 0040, 0043, 0048, 0056, 0057, 0058.	1029A	590527	Arm-Rocker Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
528	793006	Hose-Primer (Cut to Required Length)				1036		
535	799579	Filter-Air Cleaner Foam				1058	380406	Manual-Operator's
562	793514	Bolt (Governor-Control Lever)				1127	590554	Screw (Float Bowl to Carburetor Body)
601	791850	Clamp-Hose				1238	590550	Screw (Carburetor Spacer)
613	590562	Screw (Muffler)	875B	590584	Base-Air Cleaner Used on Type No(s). 0002, 0004, 0008, 0009, 0025, 0027, 0036, 0037.	1263	697124	Reed-Breather
615	690340	Retainer-Governor Shaft				1264	793453	Screw (Breather Reed)
616	590516	Crank-Governor				1319	794467	Label-Warning
617	270344S	Seal-O Ring				1319A	797669	Label-Warning
621	692310	Switch-Stop				1395	590552	Screw (Air Cleaner Base to Carburetor)
623	799581	Seal-O Ring (Carburetor Spacer)	914	591103	Screw (Rocker Arm Cover)			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

Not for
Reproduction

Not for
Reproduction

Not for
Reproduction



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>