



**123K00**

# Illustrated Parts List

## Model Series

# 123K00

TYPE NUMBERS  
0005 through 3717.

### TABLE OF CONTENTS

Alternator .....	6
Air Cleaner .....	4
Blower Housing/Shrouds .....	5
Camshaft .....	2
Carburetor .....	3
Controls .....	4
Crankshaft .....	2
Cylinder .....	2
Electric Starter .....	6
Electrical .....	6
Engine Sump .....	2
Exhaust System .....	4
Flywheel .....	6
Flywheel Brake .....	6
Fuel Supply .....	4
Governor Spring .....	4
Ignition .....	6
Kits/Gaskets .....	2 & 3
Lubrication .....	2
Piston Group .....	2
Rewind Starter .....	6
Valves .....	2

PRINTED IN U.S.A.



COPYRIGHT by BRIGGS & STRATTON CORPORATION  
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

# 123K00

## 1319 WARNING LABEL



**REQUIRED** when replacing parts with warning labels affixed.






## 1058 OPERATOR'S MANUAL








## 1330 REPAIR MANUAL






## 1019 LABEL KIT

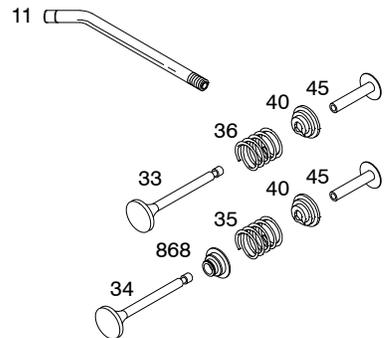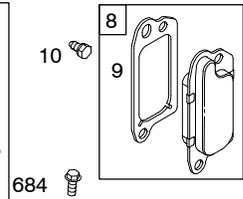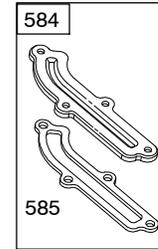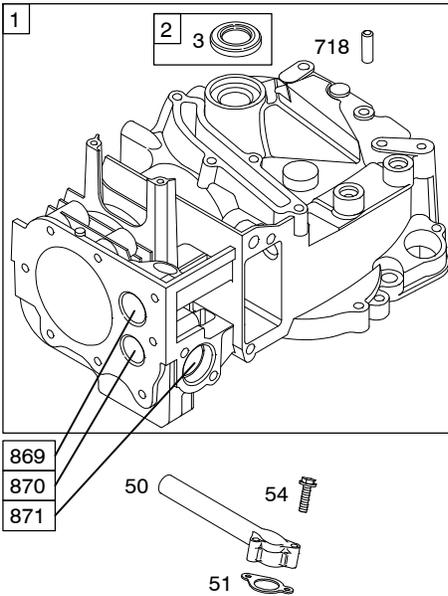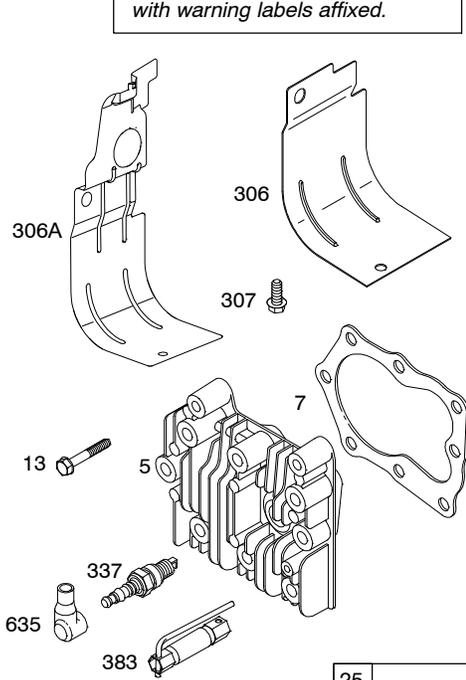






## 1095 VALVE GASKET SET

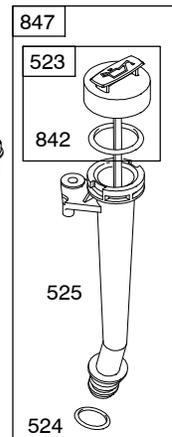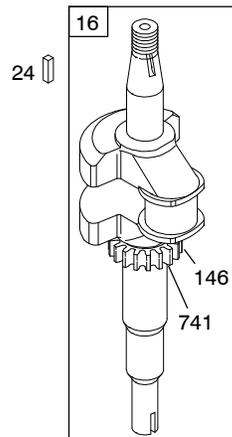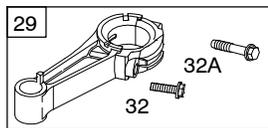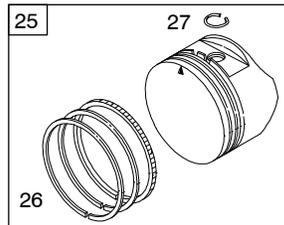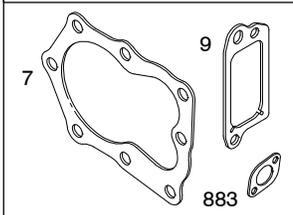

## 358 ENGINE GASKET SET
























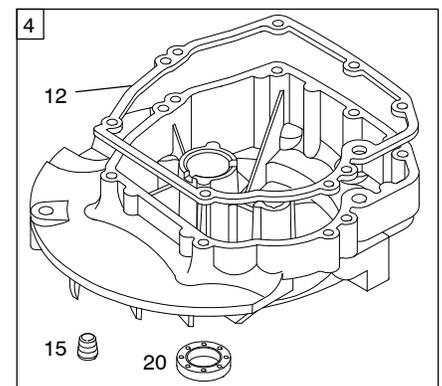
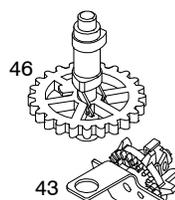
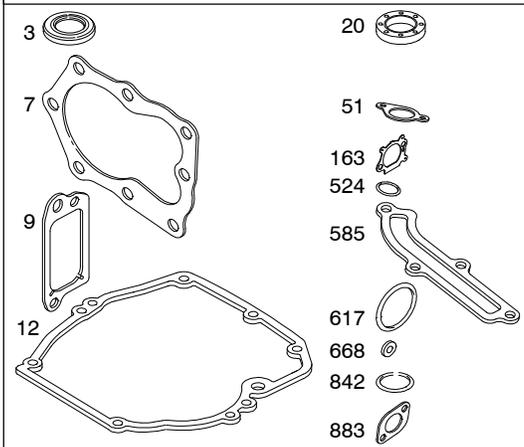


**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
**5054-2** Assemblies include all parts shown in frames. **07/09/2008**

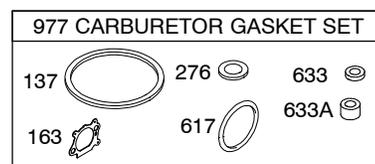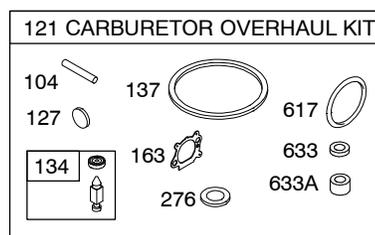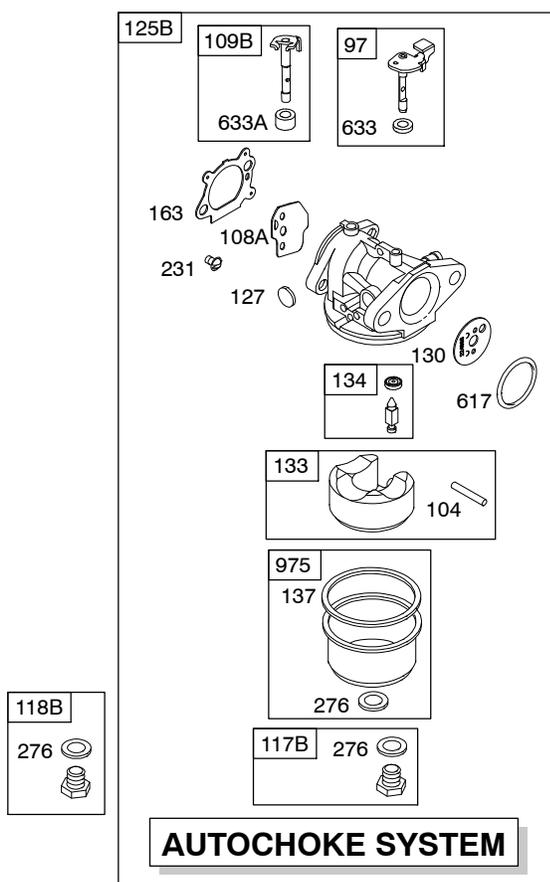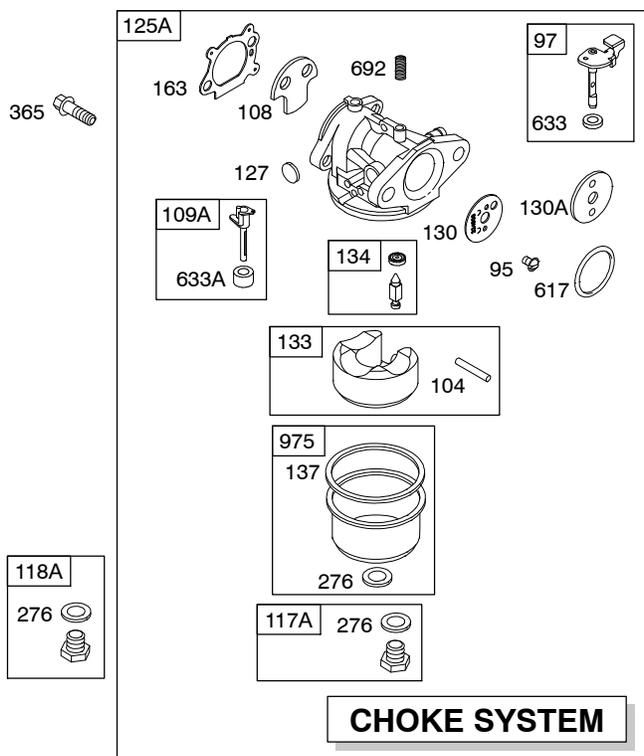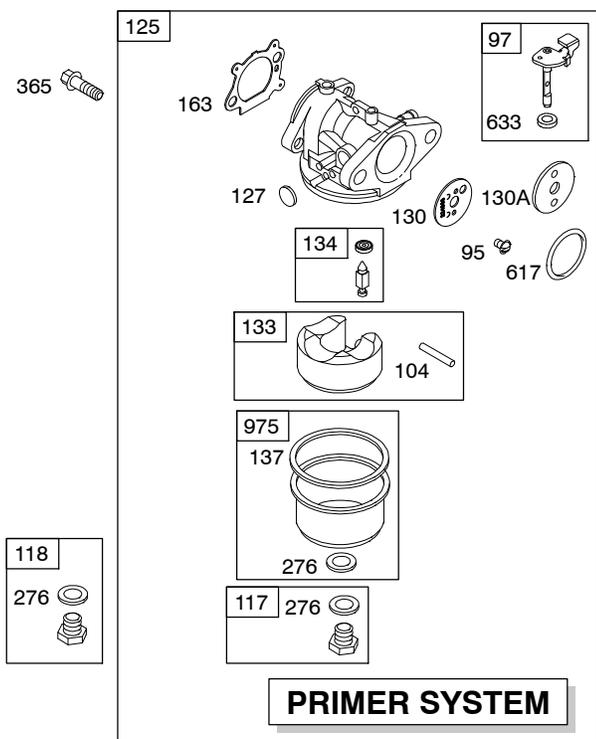


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

# 123K00

       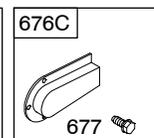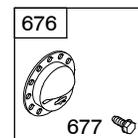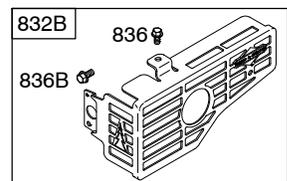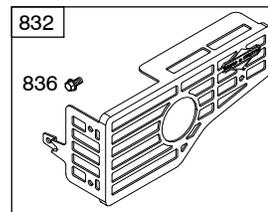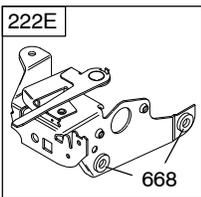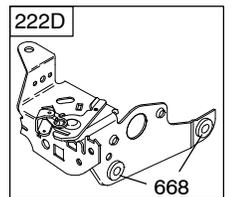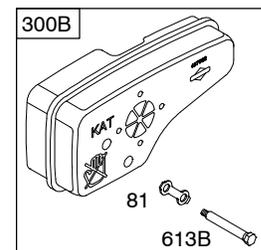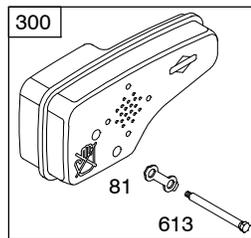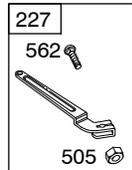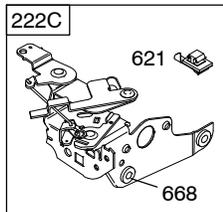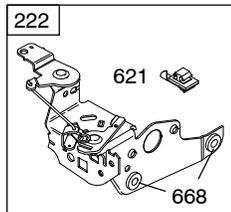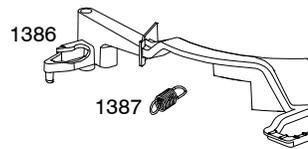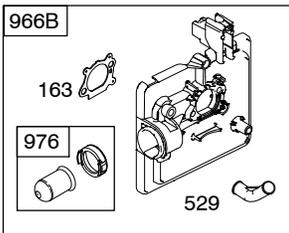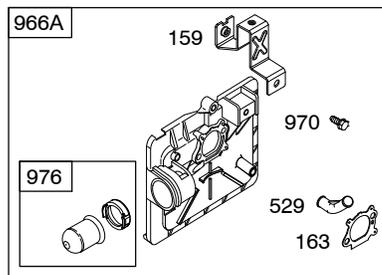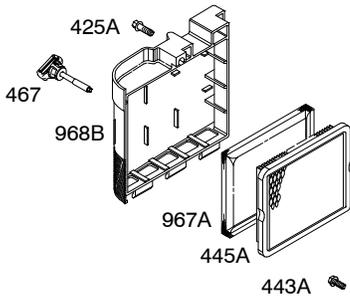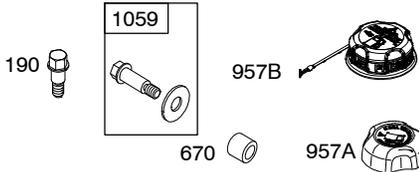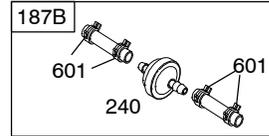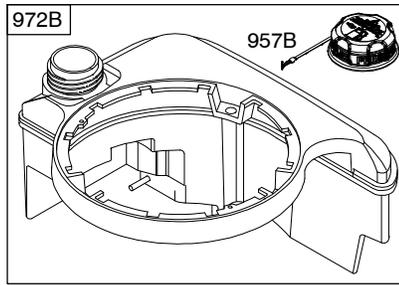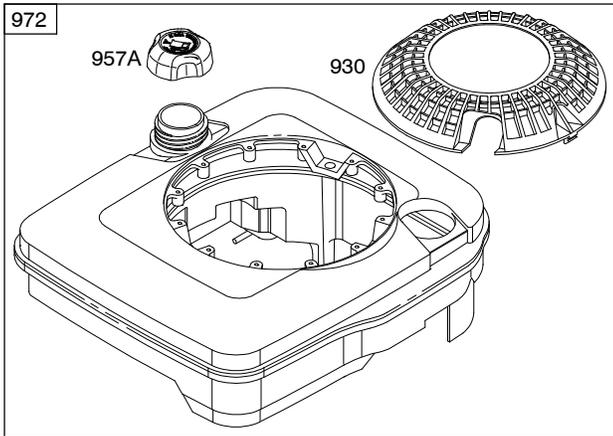


Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
 5054-4 Assemblies include all parts shown in frames. 07/09/2008

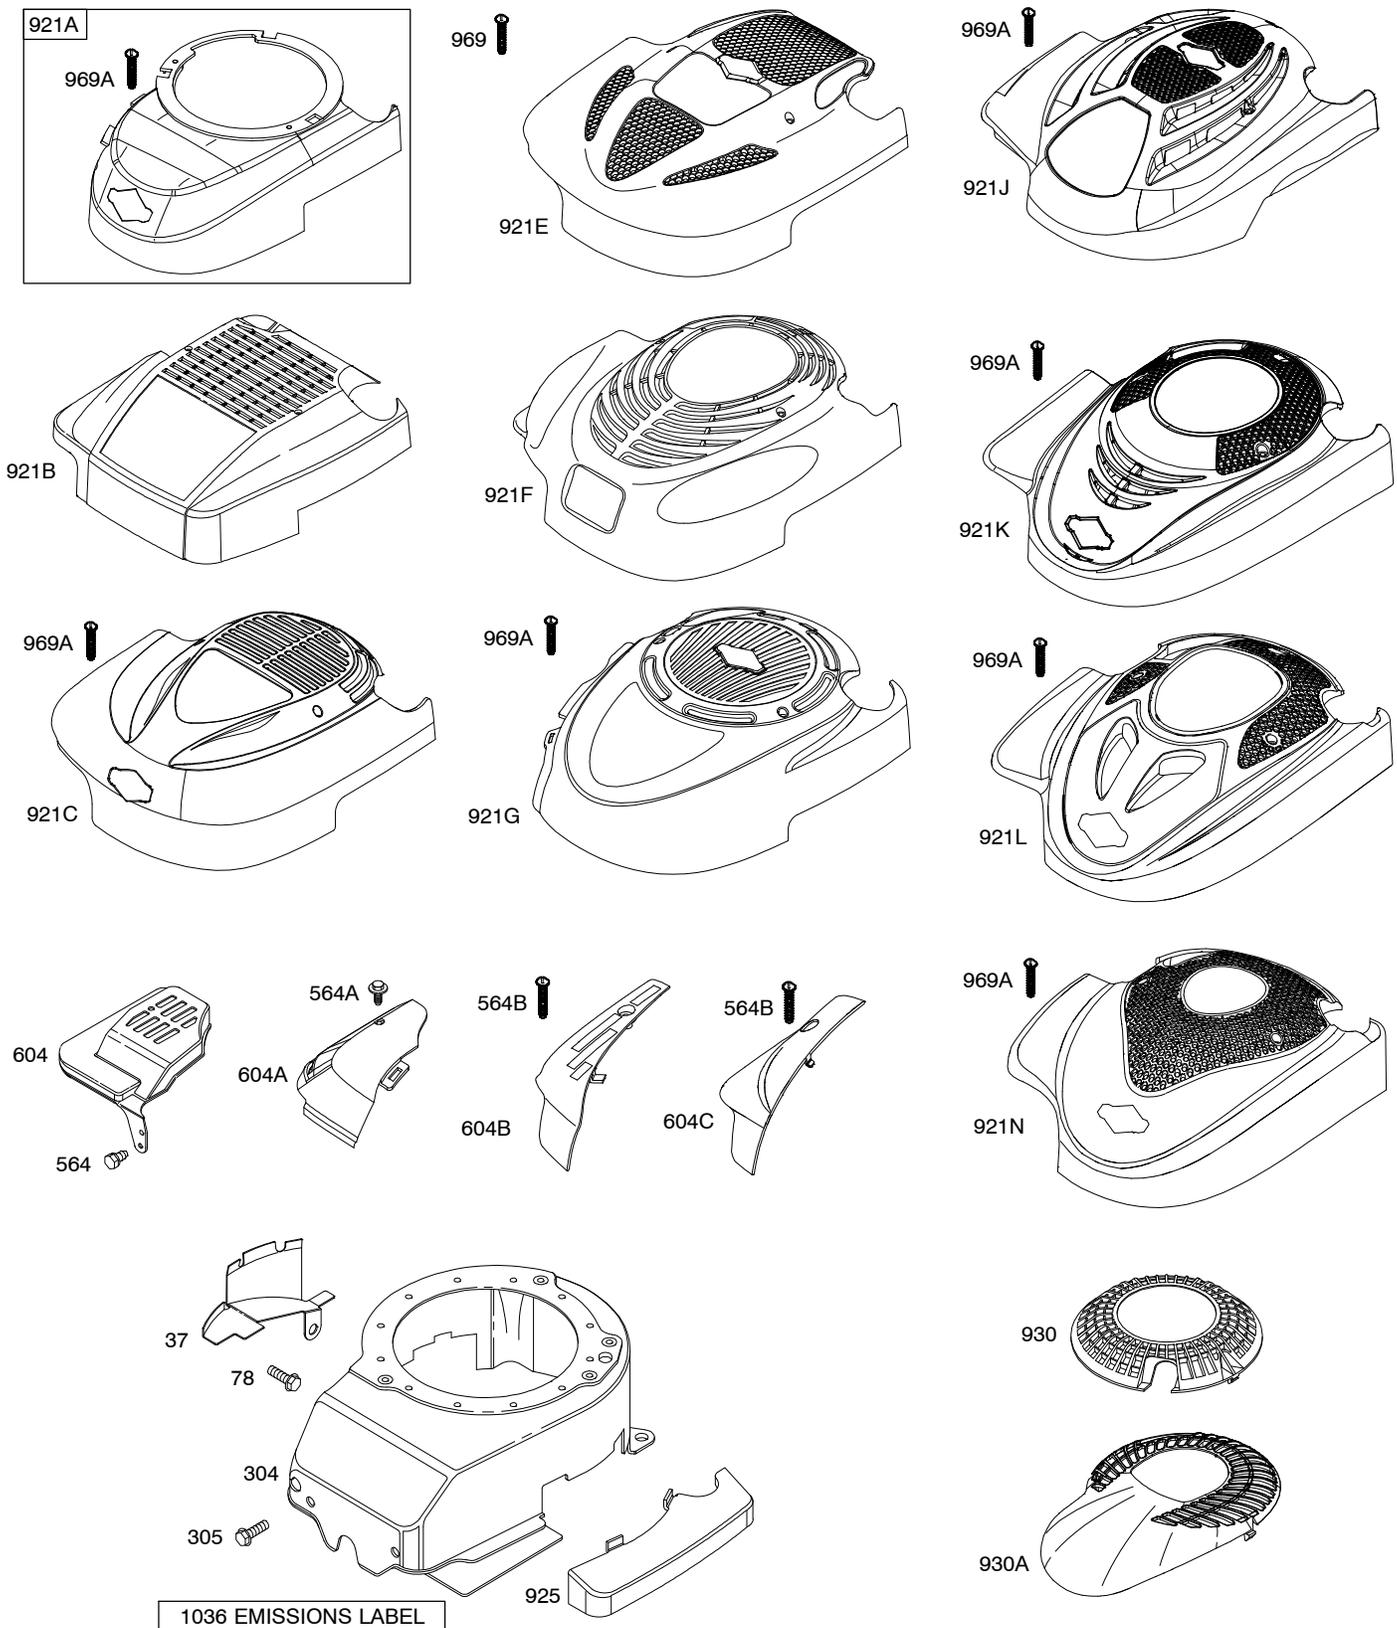

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**  
**5054-5** Assemblies include all parts shown in frames. **07/09/2008**

# 123K00

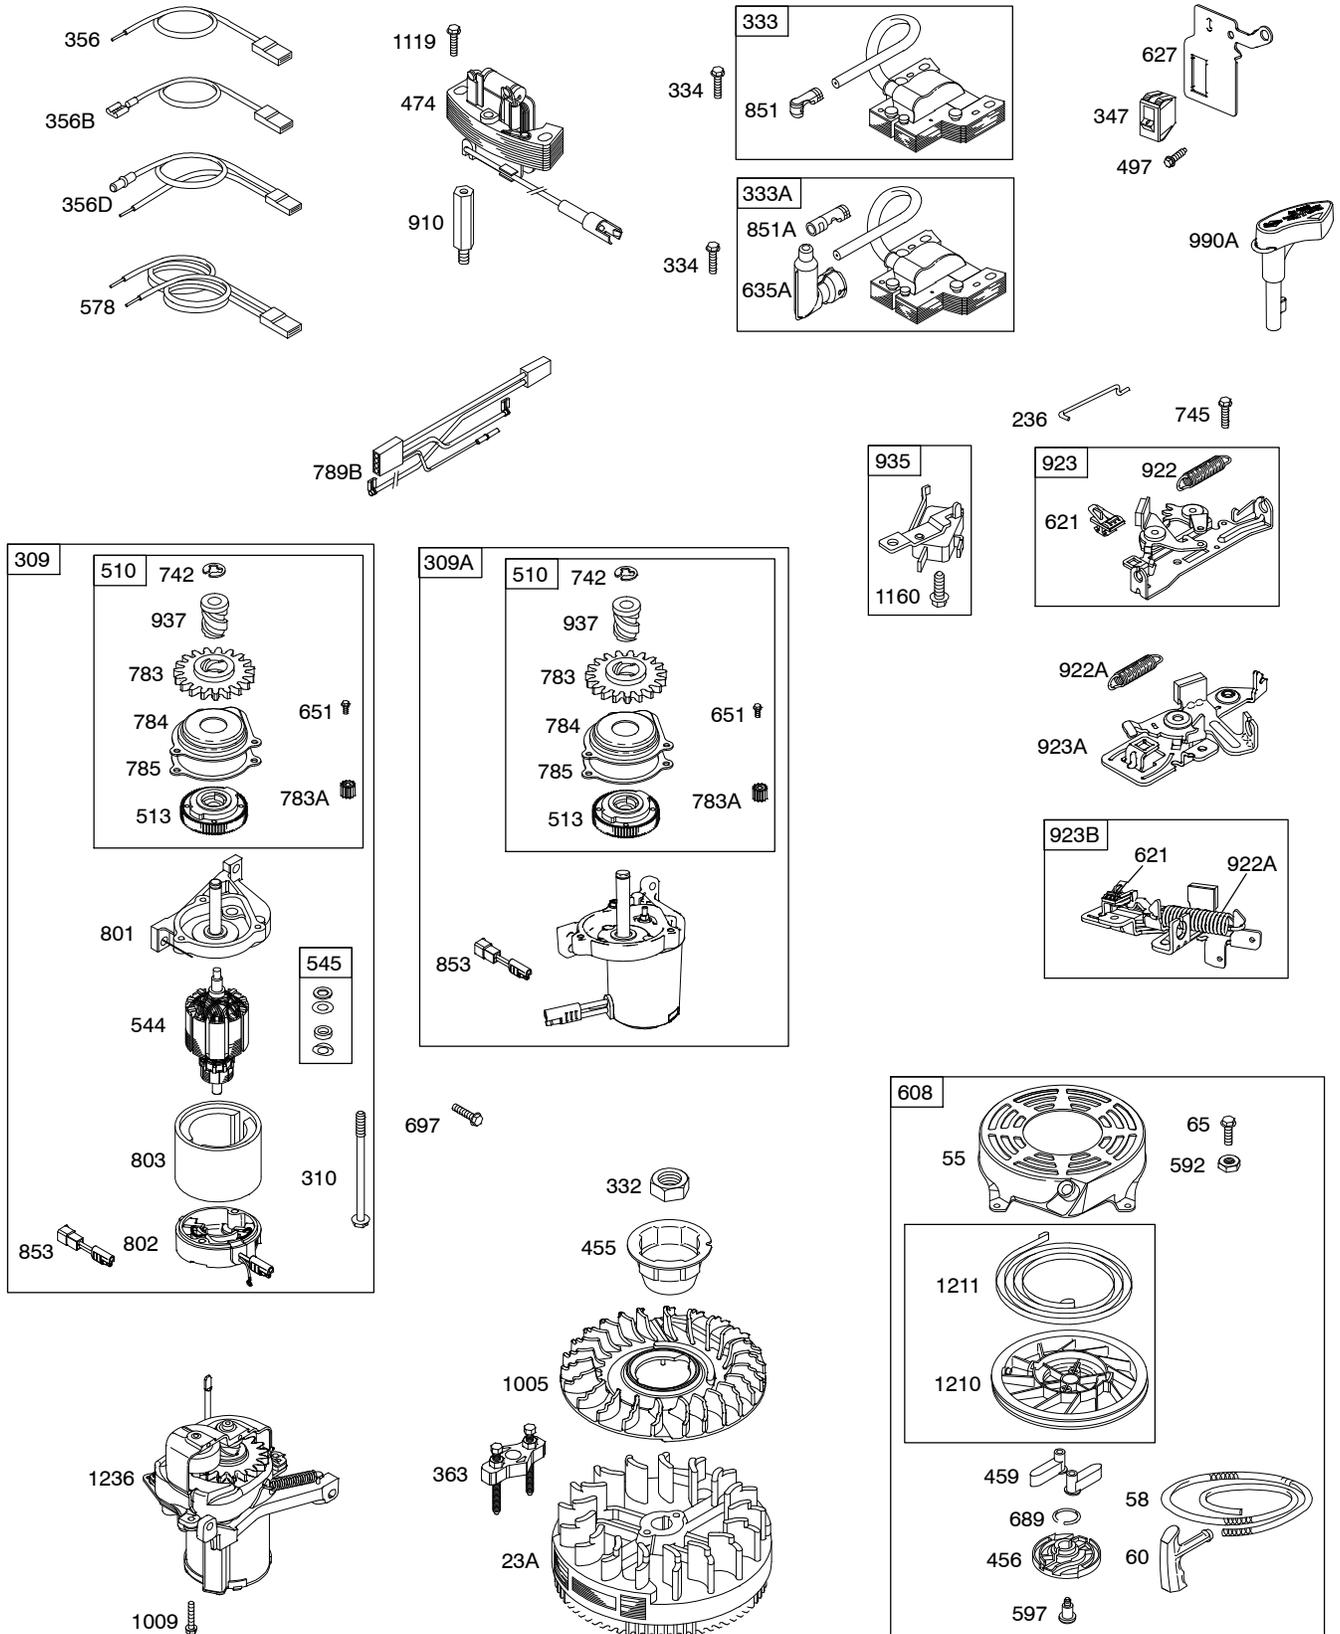

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.  
5054-6 Assemblies include all parts shown in frames. 07/09/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	697322	Cylinder Assembly	16	691450	Crankshaft	22	691092	Screw (Crankcase Cover/ Sump)
2	399269	Kit-Bushing/Seal (Magneto Side)			----- <b>Note</b> -----			
3	★299819S	Seal-Oil (Magneto Side)			<b>691451</b> Crankshaft Used on Type No(s). 0015, 0060, 0062, 0107, 0116, 0117, 0120, 0121, 0127, 0139, 0145, 0147, 0181, 0183, 0184, 0185, 0193, 0194, 0195, 0196, 0197, 0208, 0209, 0210, 0217, 0218, 0222, 0223, 0224, 0225, 0226, 0230, 0231, 0232, 0235, 0237, 0239, 0244, 0261, 0266, 0271, 0273, 0277, 0283, 0307, 0336, 0515, 0560, 0615.	23A	691987	Flywheel
4	493279	Sump-Engine ----- <b>Note</b> ----- <b>696294</b> Sump-Engine Used on Type No(s). 0121, 0194, 0244. <b>498983</b> Sump-Engine Used on Type No(s). 0131, 0134, 0138.						----- <b>Note</b> ----- <b>691992</b> Flywheel Used on Type No(s). 0005, 0113, 0130, 0131, 0132, 0134, 0137, 0138, 0156, 0236, 0238, 0269, 0509. <b>696291</b> Flywheel Used on Type No(s). 0121, 0194, 0244.
5	691160	Head-Cylinder						
7	★∅692249	Gasket-Cylinder Head						
8	695250	Breather Assembly						
9	★∅696125	Gasket-Breather						
10	691125	Screw (Breather Assembly)						
11	691781	Tube-Breather						
12	★692232	Gasket-Crankcase						
13	690912	Screw (Cylinder Head)						
15	691680	Plug-Oil Drain (Square Socket)						
					<b>696009</b> Crankshaft Used on Type No(s). 0114. <b>691455</b> Crankshaft Used on Type No(s). 0018, 0126, 0131, 0134, 0138, 0219, 0230, 0234, 0238, 0243, 0289, 0518. <b>694849</b> Crankshaft Used on Type No(s). 0005, 0137, 0156, 0236, 0269. <b>694478</b> Crankshaft Used on Type No(s). 0240, 0332. <b>696290</b> Crankshaft Used on Type No(s). 0113, 0130. <b>694850</b> Crankshaft Used on Type No(s). 0132, 0509.			
			20	★399781S	Seal-Oil (PTO Side)			
								<b>24</b> <b>222698S</b> Key-Flywheel
								<b>25</b> <b>795429</b> Piston Assembly (Standard) (Used After Code Date 07090300). ----- <b>Note</b> ----- <b>791097</b> Piston Assembly (Standard) (Used Before Code Date 07090400). <b>795430</b> Piston Assembly (.020" Oversize) (Used After Code Date 07090300). <b>791326</b> Piston Assembly (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07040400). <b>697341</b> Piston Assembly (.020" Oversize) (Used Before Code Date 04102200). (.010" Oversize)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5054-7

Assemblies include all parts shown in frames.

07/09/2008

# 123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	795431	Ring Set (Standard) (Used After Code Date 07090300). ----- <b>Note</b> ----- 791098 Ring Set (Standard) (Used After Code Date 04031400 and Before Code Date 07090400). 499425 Ring Set (Standard) (Used Before Code Date 04031500). 795432 Ring Set (.020" Oversize) (Used After Code Date 07090300). 791324 Ring Set (.020" Oversize) (Used After Code Date 04102100 and Before Code Date 07090400). 499427 Ring Set (.020" Oversize) (Used Before Code Date 04102200).	50	497465	Manifold-Intake	117	498978	Jet-Main (Standard) ----- <b>Note</b> ----- 494870 Jet-Main (Standard) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 1027, 3717.
28	499423	Pin-Piston (Standard)	51	★272199S	Gasket-Intake	117A	498978	Jet-Main (Standard) ----- <b>Note</b> ----- 498981 Jet-Main (Standard) Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.
29	499424	Rod-Connecting (Standard)	54	691650	Screw (Intake Manifold)	117B	697355	Jet-Main (Standard)
32	691664	Screw (Connecting Rod)	55	691421	Housing-Rewind Starter	118	497466	Jet-Main (High Altitude) ----- <b>Note</b> ----- 497315 Jet-Main (High Altitude) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 1027, 3717.
32A	695759	Screw (Connecting Rod)	58	697316	Rope-Starter (Cut To Required Length)	118A	497466	Jet-Main (High Altitude) ----- <b>Note</b> ----- 494870 Jet-Main (High Altitude) Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.
33	262651S	Valve-Exhaust	60	281434S	Grip-Starter Rope	118B	692677	Jet-Main (High Altitude)
34	262652S	Valve-Intake	65	690837	Screw (Rewind Starter)			
35	691270	Spring-Valve (Intake)	78	691108	Screw (Flywheel Guard)			
36	691270	Spring-Valve (Exhaust)	81	691740	Lock-Muffler Screw			
37	694086	Guard-Flywheel	95	691636	Screw (Throttle Valve)			
40	692194	Retainer-Valve	97	493267	Shaft-Throttle (Metal) ----- <b>Note</b> ----- 696565 Shaft-Throttle (Plastic)			
43	691997	Slinger-Governor/Oil	104	●691242	Pin-Float Hinge			
45	690548	Tappet-Valve	108	691182	Valve-Choke			
46	691449	Camshaft	108A	795935	Valve-Choke (Used After Code Date 08031200). ----- <b>Note</b> ----- 790844 Valve-Choke (Used Before Code Date 08031300). 109A 498593 Shaft-Choke 109B 795936 Shaft-Choke (Used After Code Date 08031200). ----- <b>Note</b> ----- 790843 Shaft-Choke (Used Before Code Date 08031300).			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5054-8

Assemblies include all parts shown in frames.

07/09/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
121	498260	Kit-Carburetor Overhaul	188	693399	Screw (Control Bracket)	222	790143	Bracket-Control (Remote/Manual Friction)(Primer)
125	498170	Carburetor (Primer System)	190	690940	Screw (Fuel Tank)	222C	692150	Bracket-Control (Variable Speed) (5 Postion Manual Choke)
		----- <b>Note</b> -----	202	691829	Link-Mechanical Governor	222E	692982	Bracket-Control (Manual Friction, 5 Postion Manual Choke)
		<b>790821</b> Carburetor (Primer System) Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0666, 0717, 1027, 3717.	209B	699056	Spring-Governor	222D	692467	Bracket-Control (Fixed Speed)
125A	499059	Carburetor (Choke System)			----- <b>Note</b> -----			----- <b>Note</b> -----
		----- <b>Note</b> -----			<b>691292</b> Spring-Governor Used on Type No(s). 0114, 0116, 0117, 0125, 0237, 0243, 0277, 0301, 0302, 0307, 0311, 0337, 0338, 0347, 0424, 0425, 0438, 0440, 0484, 0490, 0511, 0513.			<b>791128</b> Bracket-Control (Fixed Speed) Used on Type No(s). 0145, 0154, 0478, 0479, 0481, 0576, 0582, 0587, 0589, 0592, 0609, 0611, 0613, 0618, 0630, 0631, 0639, 0657, 0664, 0665, 0666, 0674, 0717, 0887, 1027, 3717.
		<b>792253</b> Carburetor (Choke System) Used on Type No(s). 0005, 0113, 0130, 0131, 0134, 0137, 0138, 0236, 0238, 0240, 0269, 0332, 0509.			<b>691851</b> Spring-Governor Used on Type No(s). 0119, 0122, 0123, 0124, 0135, 0141, 0153, 0154, 0156.			
125B	790845	Carburetor (Autochoke System)			<b>691852</b> Spring-Governor Used on Type No(s). 0121,0142.	227	690783	Lever-Governor Control
127	694468	Plug-Welch			<b>691290</b> Spring-Governor Used on Type No(s). 0005, 0134, 0138, 0145, 0236, 0269.	231	691636	Screw (Choke Valve)
130	696564	Valve-Throttle			<b>691291</b> Spring-Governor Used on Type No(s). 0113, 0126, 0130, 0131, 0132, 0137, 0240, 0332, 0509.	236	691826	Link-Lockout
130A	691203	Valve-Throttle			<b>790944</b> Spring-Governor Used on Type No(s). 0238.	240	298090S	Filter-Fuel
133	398187	Float-Carburetor				265	690798	Clamp-Casing
134	398188	Kit-Needle/Seat				267	691044	Screw (Casing Clamp)
137	693981	Gasket-Float Bowl				268	691025	Casing-Control Wire (Cut to Required Length)
146	690979	Key-Timing				269	691026	Wire-Control (Cut to Required Length)
159	691753	Bracket-Air Cleaner Primer				270	691027	Nut (Control Wire Casing)
163	272653	Gasket-Air Cleaner						
187	791766	Line-Fuel (Cut to Required Length)						
187A	791873	Line-Fuel (Molded)						
187B	791891	Line-Fuel (Includes Filter) (Used After Code Date 05063000).						
		----- <b>Note</b> -----						
		<b>692042</b> Line-Fuel (Includes Filter) (Used Before Code Date 05070100).						
187C	791875	Line-Fuel (Molded)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5054-9

Assemblies include all parts shown in frames.

07/09/2008

# 123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
271	691028	Lever-Control	304	695892	Housing-Blower	309	695550	Motor-Starter (Used Before Code Date 07052900).
276	◆271716	Washer-Sealing (Main Jet)			----- <b>Note</b> -----	309A	795092	Motor-Starter (Used After Code Date 07052800). (Cylinder Shield)
287	690940	Screw (Dipstick Tube)			493293 Housing-Blower Used on Type No(s). 0015, 0018, 0025, 0060, 0062, 0107, 0113, 0114, 0117, 0120, 0127, 0130, 0131, 0132, 0134, 0138, 0147, 0153, 0184, 0210, 0218, 0223, 0225, 0302, 0330, 0515, 0518, 0525, 0560, 0562, 0587, 0589, 0611, 0717, 3717.	310	692327	Bolt (Starter Motor)
291	790830	Thermostat			493294 Housing-Blower Used on Type No(s). 0005, 0126, 0134, 0137, 0156, 0236, 0238, 0240, 0269, 0332, 0509.	332	690662	Nut (Flywheel)
300	692038	Muffler			696298 Housing-Blower Used on Type No(s). 0121, 0194, 0244.	333	802574	Armature-Magneto ----- <b>Note</b> ----- 790817 Armature-Magneto Used on Type No(s). 0336, 0515, 0518, 0525, 0560, 0562, 0563, 0615, 0625, 0666, 0717, 1027, 3717.
		----- <b>Note</b> ----- 790828 Muffler Used on Type No(s). 0478, 0479, 0481, 0592, 0611, 0615, 0625, 0630, 0664, 0665, 0674, 0887.			790826 Housing-Blower Used on Type No(s). 0479, 0481, 0592, 0615, 0625, 0630, 0664, 0665, 0887.	333A	793353	Armature-Magneto
300B	694048	Muffler (Super Lo Tone Catalyst)			790983 Housing-Blower Used on Type No(s). 0478, 0674.	334	691061	Screw (Magneto Armature)
					694092 Housing-Blower Used on Type No(s). 0145.	337	802592S	Plug-Spark (Resistor) ----- <b>Note</b> ----- 697451 Plug-Spark (EMS)
			305	691108	Screw (Blower Housing)	347	691396	Switch-Rocker
			306	690450	Shield-Cylinder	356	692390	Wire-Stop
			306A	790836	Shield-Cylinder	356B	693010	Wire-Stop
			307	690345	Screw	356D	496381	Wire-Stop
						358	497316	Gasket Set-Engine
						363	19069	Flywheel Puller
						365	691688	Screw (Carburetor)
						383	89838S	Wrench-Spark Plug
						404	690272	Washer (Governor Crank)
						425A	690670	Screw (Air Cleaner Cover)
						443A	692523	Screw (Air Cleaner Primer Base)
						445A	491588S	Filter-Air Cleaner Cartridge

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5054-10

Assemblies include all parts shown in frames.

07/09/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
455	791960	Cup-Flywheel	613	691340	Screw (Muffler)	689	691855	Spring-Friction
456	692299	Plate-Pawl Friction				692	690572	Spring-Detent
459	281505S	Plate-Ratchet			----- <b>Note</b> -----	697	691127	Screw (Drive Cap)
467	790842	Knob-Air Cleaner			<b>790833</b> Screw (Muffler)	718	690959	Pin-Locating
474	691991	Alternator			Used on Type No(s). 0478, 0479, 0481, 0592, 0611, 0615, 0625, 0630, 0664, 0665, 0674, 0887.	741	795755	Gear-Timing (Plastic)
497	690664	Screw (Stopswitch Bracket)						----- <b>Note</b> -----
505	691251	Nut (Governor Control Lever)						<b>794388</b> Gear-Timing (Use Without Woodruff Key)
510	795093	Drive-Starter	613B	691114	Screw (Muffler)			(Used After Code Date 07093000).
513	692358	Clutch-Drive	615	690340	Retainer-Governor Shaft			<b>790345</b> Gear-Timing (Use Without Woodruff Key)
523	499621	Dipstick	616	698801	Crank-Governor			(Used Before Code Date 07100100).
524	★692296	Seal-Dipstick Tube	617★◆	270344	Seal-O Ring (Intake Manifold)			<b>691830</b> Gear-Timing (Uses Woodruff Key)
525	495265	Tube-Dipstick	621	692310	Switch-Stop			
529	691923	Grommet	627	692872	Bracket-Stopswitch			
544	690786	Armature-Starter			----- <b>Note</b> -----	742	93941	Retainer-E Ring
545	492919	Washer Set			<b>792565</b> Bracket-Stop Switch	745	691648	Screw (Brake)
562	92613	Bolt (Governor Control Lever)			Used on Type No(s). 0156, 0238, 0509.	783	691918	Gear-Pinion
564	690664	Screw (Control Cover)	633	◆691321	Seal-Choke/Throttle Shaft	783A	691269	Gear-Pinion
564A	691142	Screw (Control Cover)	633A	◆693867	Seal-Choke/Throttle Shaft	784	795095	Cover-Starter Gear
564B	698589	Screw (Control Cover)				785	692352	Gasket-Starter Cover
578	398153	Wire Assembly				789B	696547	Harness-Wiring
584	697734	Cover-Breather Passage	635	66538S	Boot-Spark Plug	801	690782	Cap-Drive
585	★691879	Gasket-Breather Passage	635A	793351	Boot-Spark Plug	802	695267	Cap-End
592	690800	Nut (Rewind Starter)	651	691660	Screw (Starter Gear Cover)	803	695266	Housing-Starter
597	691696	Screw (Pawl Friction Plate)	668	★493823	Spacer	832	499034	Guard-Muffler
601	791850	Clamp-Hose	670	692294	Spacer-Fuel Tank	832B	497683	Guard-Muffler (Super Lo Tone Catalyst)
601A	691038	Clamp-Hose	676	396548	Deflector-Muffler (Louvered)	836	690664	Screw (Muffler Guard)
604	691757	Cover-Control	676C	493871	Deflector-Muffler (Side Out) (Extended)	836B	691147	Screw (Muffler Guard)
604A	691344	Cover-Control				842	★691031	Seal-O Ring (Dipstick Tube)
604B	790703	Cover-Control	677	690661	Screw (Muffler Deflector)	843	691884	Sleeve-Lever (Control Bracket)
604C	792418	Cover-Control	684	690345	Screw (Breather Passage Cover)	843A	691895	Sleeve-Lever (Choke)
608	497680	Starter-Rewind						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5054-11

Assemblies include all parts shown in frames.

07/09/2008

# 123K00

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
847	692047	Dipstick/Tube Assembly	923	691994	Brake	925	795403	Cover-Linkage (Used After Code Date 07072200).
851	493880S	Terminal-Spark Plug	923A	695891	Brake			----- <b>Note</b> -----
851A	692424	Terminal-Spark Plug			<b>695891</b> Brake			----- <b>Note</b> -----
853	695268	Adapter-Wire			(Used Before Code Date 08050100).			<b>690595</b> Cover-Linkage
868	697338	Seal-Valve			Used on Type No(s). 0101, 0116, 0123, 0124, 0125, 0139, 0141, 0142, 0154, 0193, 0197, 0208, 0219, 0230, 0231, 0232, 0239, 0258, 0261, 0283, 0289, 0301, 0312, 0315, 0336, 0347, 0424, 0425, 0438, 0440, 0444, 0447, 0450, 0454, 0456, 0479, 0481, 0484, 0490, 0498, 0501, 0507, 0508, 0511, 0513, 0541, 0547, 0563, 0564, 0576, 0582, 0592, 0609, 0613, 0615, 0618, 0625, 0630, 0631, 0639, 0657, 0664, 0665, 0666.		(Used Before Code Date 07072300).	
869	691155	Seat-Valve (Intake)				930	691919	Guard-Rewind (Round)
870	690380	Seat-Valve (Exhaust)				930A	691345	Guard-Rewind (Tear Drop)
871	262001	Bushing-Valve Guide (Exhaust)				935	499421	Switch-Interlock
		----- <b>Note</b> -----				937	691325	Spline-Starter
		<b>63709</b> Bushing-Valve Guide (Intake)				957A	692046	Cap-Fuel Tank (Plastic)
883	★ <del>691881</del>	Gasket-Exhaust				957B	699985	Cap-Fuel Tank (Plastic)
910	691094	Stud (Alternator)				966A	496116	Base-Air Cleaner Primer
921A	695886	Cover-Blower Housing				966B	792040	Base-Air Cleaner Primer
921B	692931	Cover-Blower Housing				967A	493537S	Filter-Pre Cleaner
921C	695889	Cover-Blower Housing				968B	692298	Cover-Air Cleaner
921E	696262	Cover-Blower Housing				969	690700	Screw (Blower Housing Cover)
921F	697343	Cover-Blower Housing				969A	691138	Screw (Blower Housing Cover)
921G	790701	Cover-Blower Housing				970	691669	Screw (Air Cleaner Primer Bracket)
921J	790036	Cover-Blower Housing				972	699392	Tank-Fuel (Plastic)
921K	699984	Cover-Blower Housing				972B	699374	Tank-Fuel (Plastic)
921L	791026	Cover-Blower Housing						----- <b>Note</b> -----
921N	792675	Cover-Blower Housing	923B	796136	Brake (Used After Code Date 08043000).			<b>699387</b> Tank-Fuel (Plastic)
922	691831	Spring-Brake			Used on Type No(s). 0101, 0116, 0123, 0124, 0125, 0139, 0141, 0142, 0154, 0193, 0197, 0208, 0219, 0230, 0231, 0232, 0239, 0258, 0261, 0283, 0289, 0301, 0312, 0315, 0336, 0347, 0424, 0425, 0438, 0440, 0444, 0447, 0450, 0454, 0456, 0479, 0481, 0484, 0490, 0498, 0501, 0507, 0508, 0511, 0513, 0541, 0547, 0563, 0564, 0576, 0582, 0592, 0609, 0613, 0615, 0618, 0625, 0630, 0631, 0639, 0657, 0664, 0665, 0666.		Used on Type No(s). 0121, 0194, 0244.	
922A	692135	Spring-Brake						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

⊘ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5054-12

Assemblies include all parts shown in frames.

07/09/2008

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
975	493640	Bowl-Float	1059	692311	Kit-Screw/Washer	1211	498144	Pulley/Spring
976	694395	Primer-Carburetor			----- <b>Note</b> -----			Assembly
977	498261	Gasket Set-Carburetor			696293 Kit-Screw/			(Spring)
990A	695951	Key Set			Washer	1236	695959	Starter-Machanical
1005	691346	Fan-Flywheel			(Touch N Mow)			(Touch N Mow)
1009	696255	Screw	1095	498528	Gasket Set-Valve			(Do Not Service
		(Starter Motor)	1119	692979	Screw			Individual Parts, Only
1019	494256	Kit-Label			(Alternator)			As A Whole)
		----- <b>Note</b> -----	1160	690345	Screw	1319	794467	Label-Warning
		790231 Kit-Label			(Interlock Switch)	1330	270962	Manual-Repair
		(Touch N Mow)	1210	498144	Pulley/Spring	1386	790848	Vane-Air
1036		Label-Emissions			Assembly			(Autochoke System)
		(Available From A			(Pulley)	1387	790849	Spring-Air Vane
		Briggs & Statton				1388	790850	Screw
		Authorized Dealer)						(Air Vane)
1058	277039	Operator's Manual						
		----- <b>Note</b> -----						
		277101 Operator's						
		Manual						
		(Touch N Mow)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

∅ Included in Valve Gasket Set-Ref. No 1095.

**Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.**

5054-13

Assemblies include all parts shown in frames.

07/09/2008

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>